


1. Read the document before operation

Due to network reasons, the installation and configuration process of JupyterLab takes a lot of time. For this reason, we have specially prepared a mirror with the environment configured for you, and set it to the boot-up auto-start mode.

Access instructions:

1. You need to prepare a computer, and the computer and the motherboard are connected to the same LAN.
2. Open the computer's browser, enter the motherboard's IP address: 8888 in the URL bar, and press Enter.

For example: The IP address of the motherboard is 192.168.2.89, as shown in the figure below:

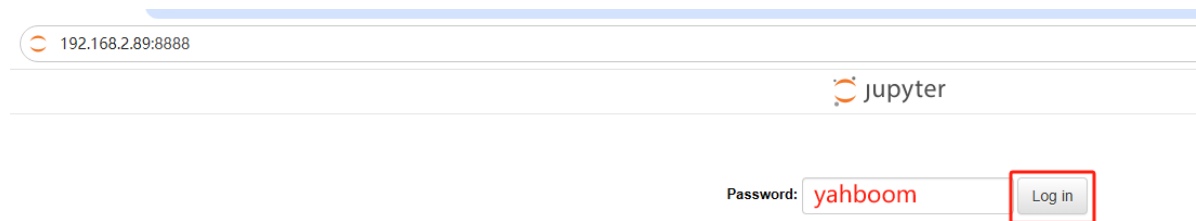

3. Enter the password yahboom and click [Log in] to access the content of JupyterLab.

