


System startup

1. Jetson Nano motherboard startup system

The system of Jetson Nano is saved on the USB flash drive. Please confirm that the USB flash drive has the factory image system, and then insert the USB flash drive into the USB port of Jetson Nano.

The Jetson Nano motherboard is powered by a DC 5V power adapter. Simply insert the DC 5V power adapter into the DC port of Jetson Nano power supply to start the machine.

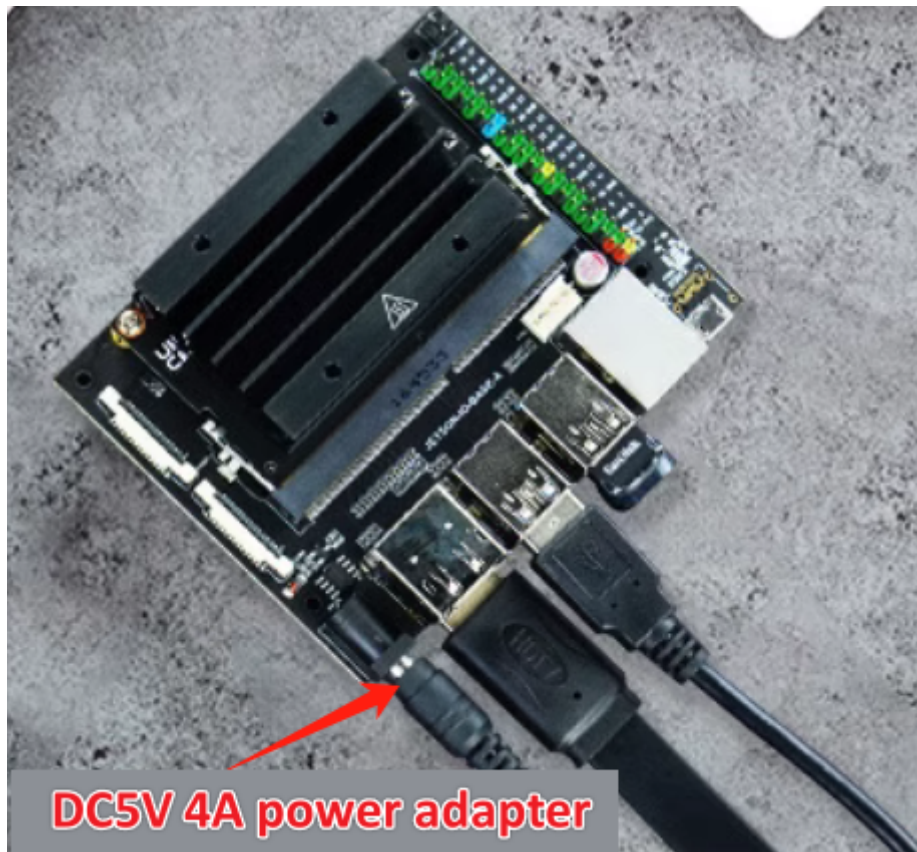

2. Jetson Orin NX motherboard startup system

The system of Jetson Orin NX is saved on the SSD. Please confirm that the SSD has the factory image system, and then install the SSD into the M.2 SSD port of Jetson Orin NX.

The Jetson Orin NX motherboard is powered by a DC 19V power adapter. Simply plug the DC 19V power adapter into the Jetson Orin NX power DC interface to start the system.



3. Jetson Orin Nano motherboard boot system

The Jetson Orin Nano system is saved on the SSD. Please confirm that the SSD already has a factory image system, and then install the SSD to the M.2 SSD interface of the Jetson Orin Nano.

The Jetson Orin Nano motherboard is powered by a DC 19V power adapter. Simply plug the DC 19V power adapter into the Jetson Orin Nano power DC interface to start the system.

