

## 5. Install the serial port driver library

---

### 5. Install the serial port driver library

#### 5.1 install pyserial library


#### 5.2 View the version number of the pyserial library

The factory image has already installed the pyserial library, so there is no need to reinstall it.

### 5.1 install pyserial library

Open the terminal of the Raspberry Pi and enter the following command to install the pyserial library.


```
pip3 install pyserial
```



```
pi@yahboom:~$ pip3 install pyserial
```

### 5.2 View the version number of the pyserial library

```
pip3 list | grep pyserial
```

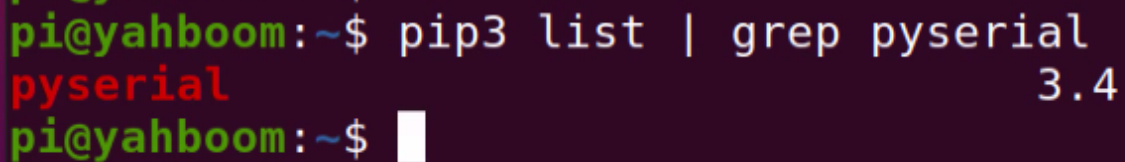

```
pi@yahboom:~$ pip3 list | grep pyserial
pyserial 3.4
pi@yahboom:~$
```