


After the program is downloaded, we need to turn the power switch to **ON**, as shown below.

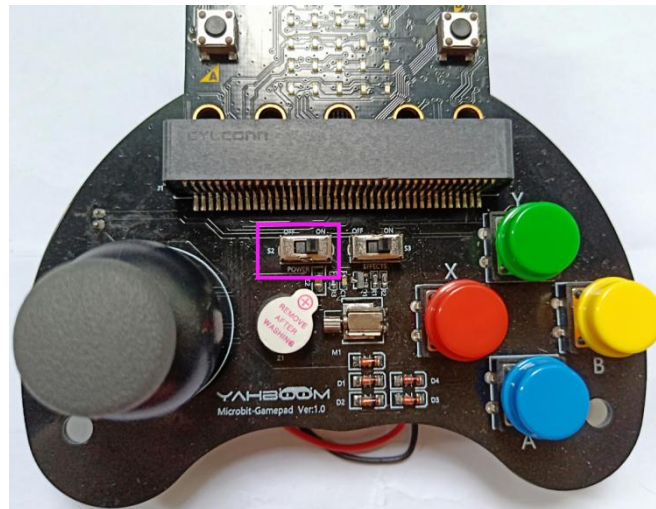

After the program is downloaded, change the direction of the snake head by the joystick to eat the food (the food is red dot), if you need to play again, you need to press the reset button.

Reset button is the restart button

