


After the program is downloaded, we need to turn the power switch to **ON**, as shown below.

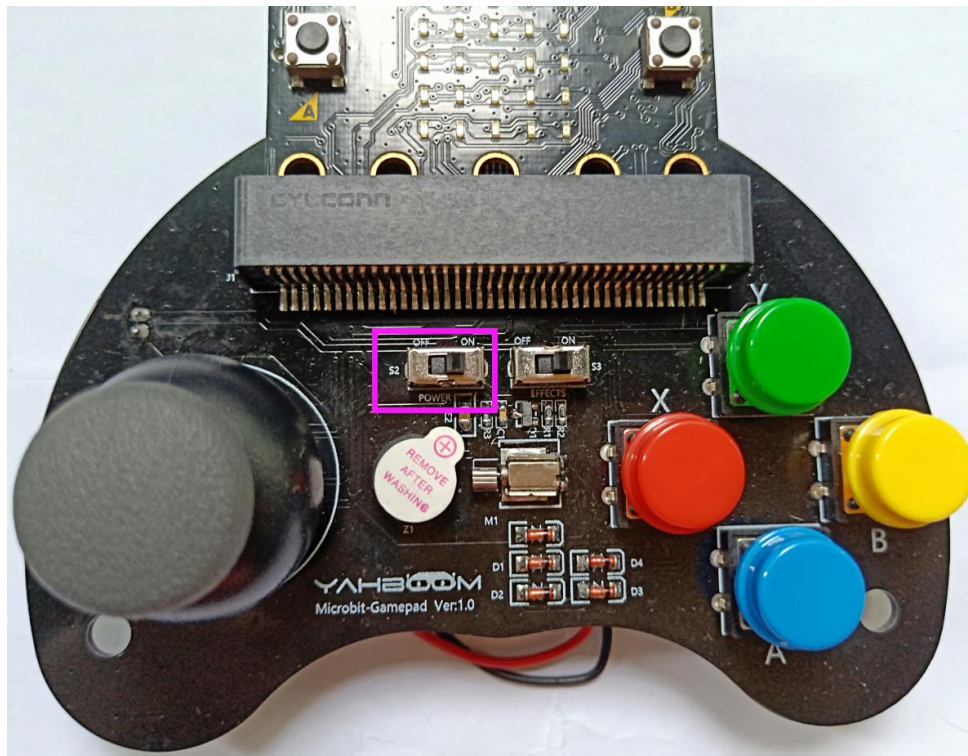

The LED dot matrix is not illuminated by default, and the rocker can be operated to control the display direction. When the rocker is up, the pattern shown below will be displayed on the LED dot matrix.



When the rocker is down, the pattern shown below will be displayed on the LED dot matrix.



When the rocker is left, the pattern shown below will be displayed on the LED dot matrix.



When the rocker is right, the pattern shown below will be displayed on the LED dot matrix.



Reset button is the restart button.

Press the rocker button, press the reset button, after downloading the program, the interface shown below will appear.

