


# Use Jupyterlab to access the docker container

The factory system image of the robot will automatically start the Jupyterlab service in the Docker container when it is turned on.

Open the browser on the computer, enter the IP address of the motherboard: 8889, press Enter, enter the password yahboom, and then click [Log in] to access it.

For example:

192.168.1.70:8889

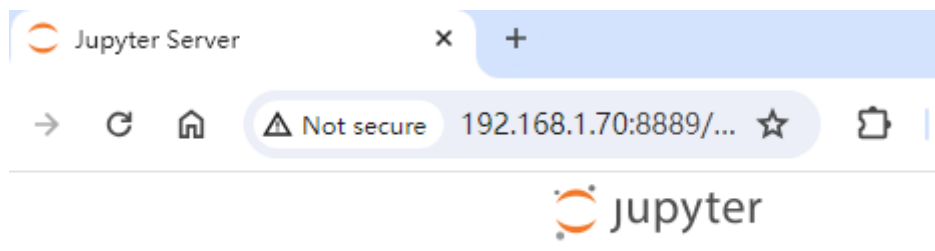

Password:

yahboom

Log in

Note: Jetson Orin NX and Jetson Orin Nano use Docker containers, so the default port number of jupyterlab is 8889. Jetson Nano does not use Docker containers, so the default port number of jupyterlab is 8888.