


Tutorial of burning in the second time


For SD cards that have already been mirrored, sometimes these SD cards cannot be recognized by the computer system, which will cause us do not to burn the images to these SD cards again.

Normally, the win7 system does not recognize the SD card drive that has been burned Ubuntu system, and win10 system will recognizes an SD card as multiple drive letters.

1.Determine if the Card Reader recognizes the SD card.

Click the computer right button and select **【Manage】** , select **【stroage】** --- **【Disk Management】** , find out if there is a removable disk, and the size is the size of the SD card.

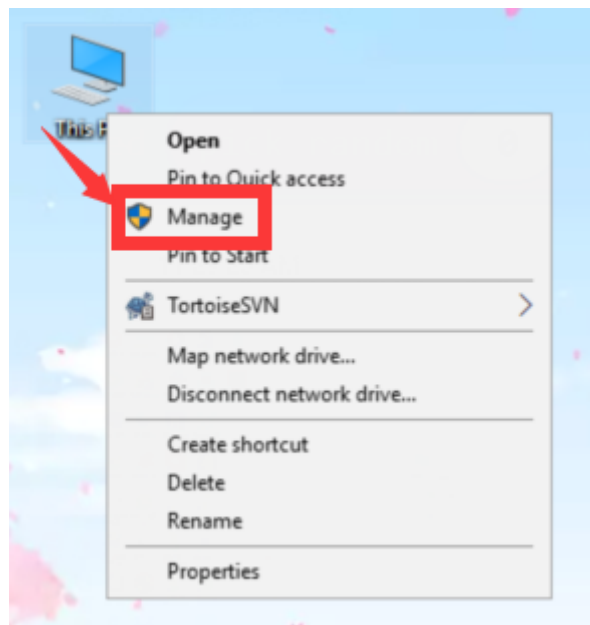

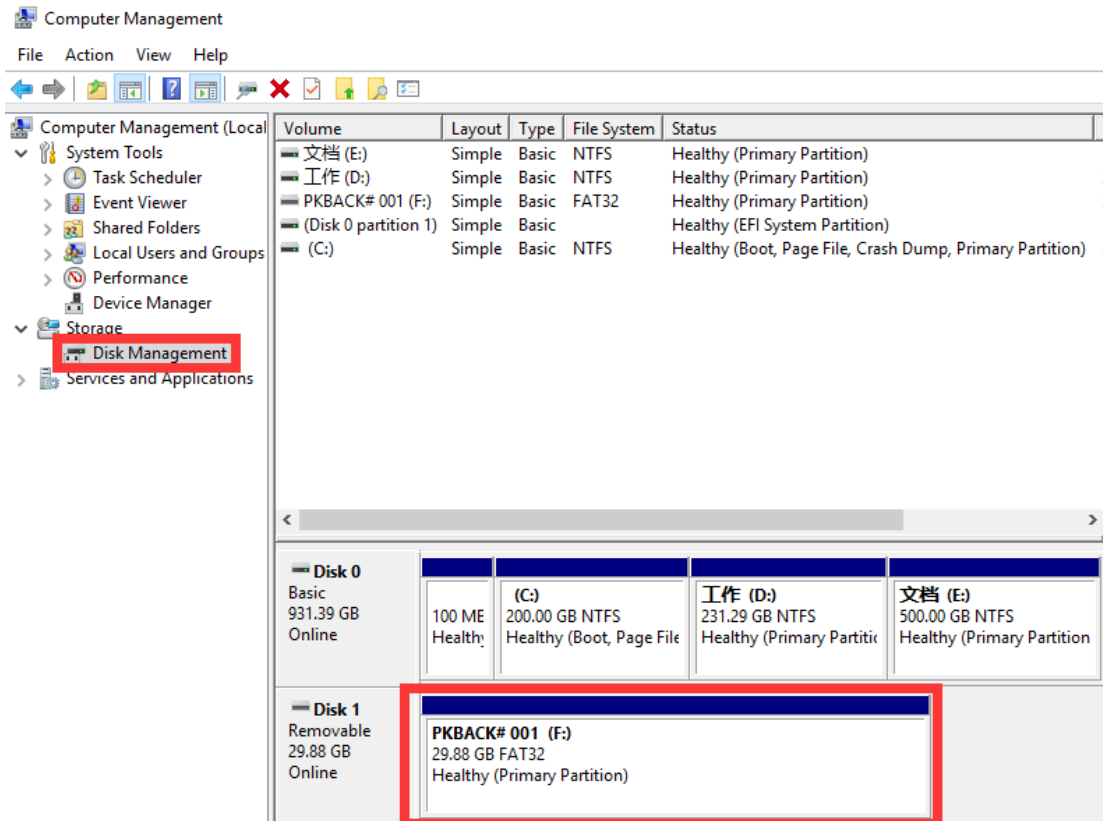

2. We can use DiskGenius to delete SD card all partitions, about 10 all partitions, then we can format Disk.
Then the SD cards can be recognized by the computer system.