


Tutorial of burning in the second time

For SD cards that have already been wrote, sometimes these SD cards cannot be recognized by the computer system.

Normally, the win7 system does not recognize the SD card drive that has been burned Ubuntu system, and win10 system will recognizes an SD card as multiple drive letters.

1.Determine if the Card Reader recognizes the SD card.

Click the computer right button and select **【Manage】** , select **【stroage】 --- 【Disk Management】**, find out if there is a removable disk, and the size is the size of your SD card. As shown below.

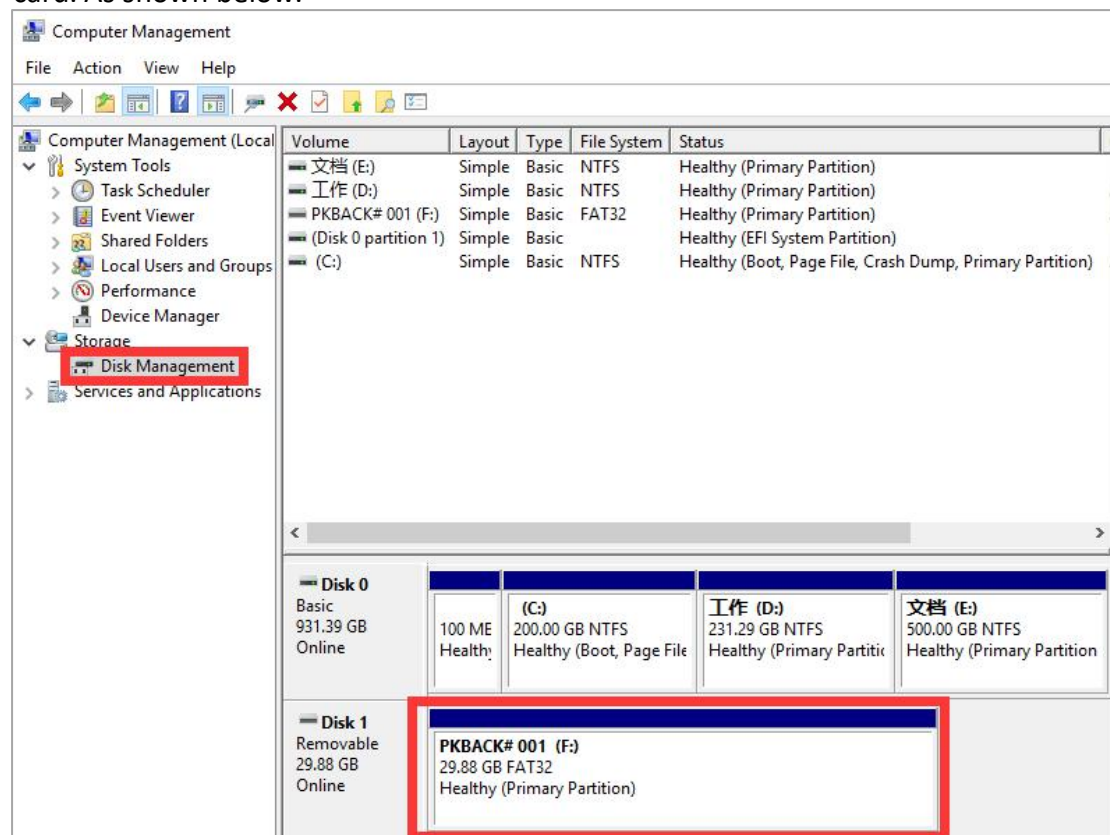

2.Delete all the partitions of the SD card disk, and then create a new partition. Your computer will recognize SD card.