

# SSH Remote Login & File Transfer

**Tip:** The configured image has a username of jetson, and the original password is: yahboom

## 1.Remote Login Tutorial


1、 First, determine the IP address of your board.

Method 1: Directly during the system installation process, through the interface  
Ctrl+Alt+T Open the Command Prompt and enter ifconfig


Find the IP address of the corresponding wired network card eth0. If you have purchased a wireless network card, please refer to the address under wlan.

Method 2: You can log in to the wireless router management system and find the IP address of the board.


2. Open PuttY and enter the IP address and port number below. By default, the SSH service has been enabled in the system.

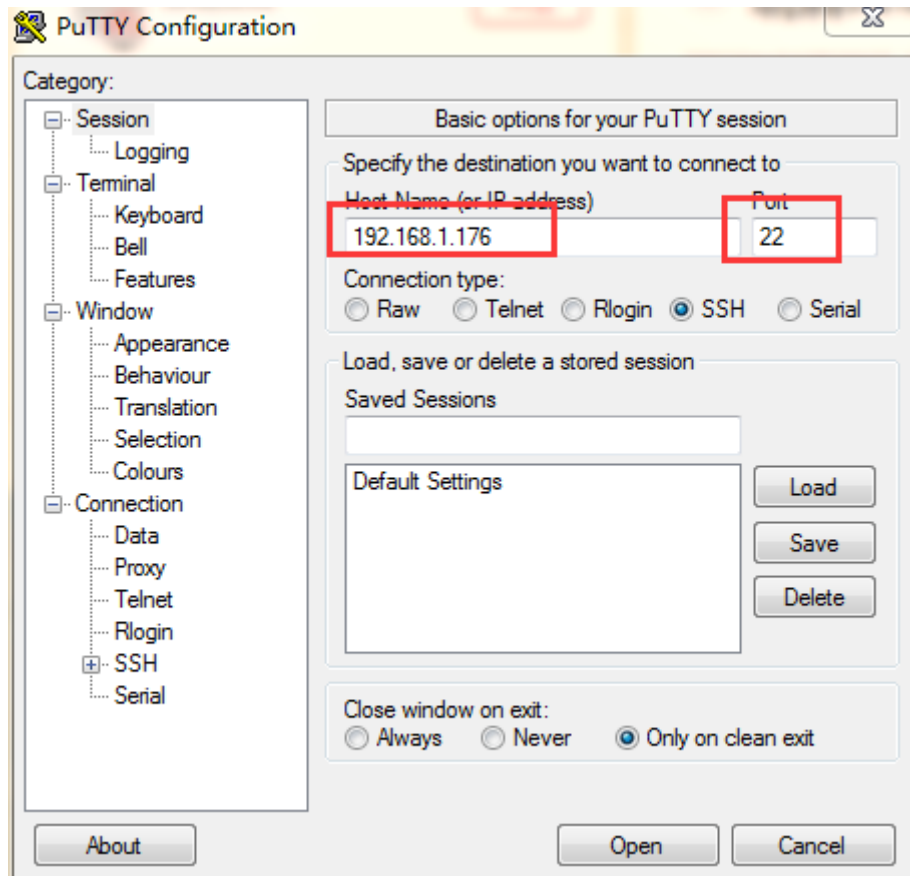

Finally, open Open and click Yes when prompted.

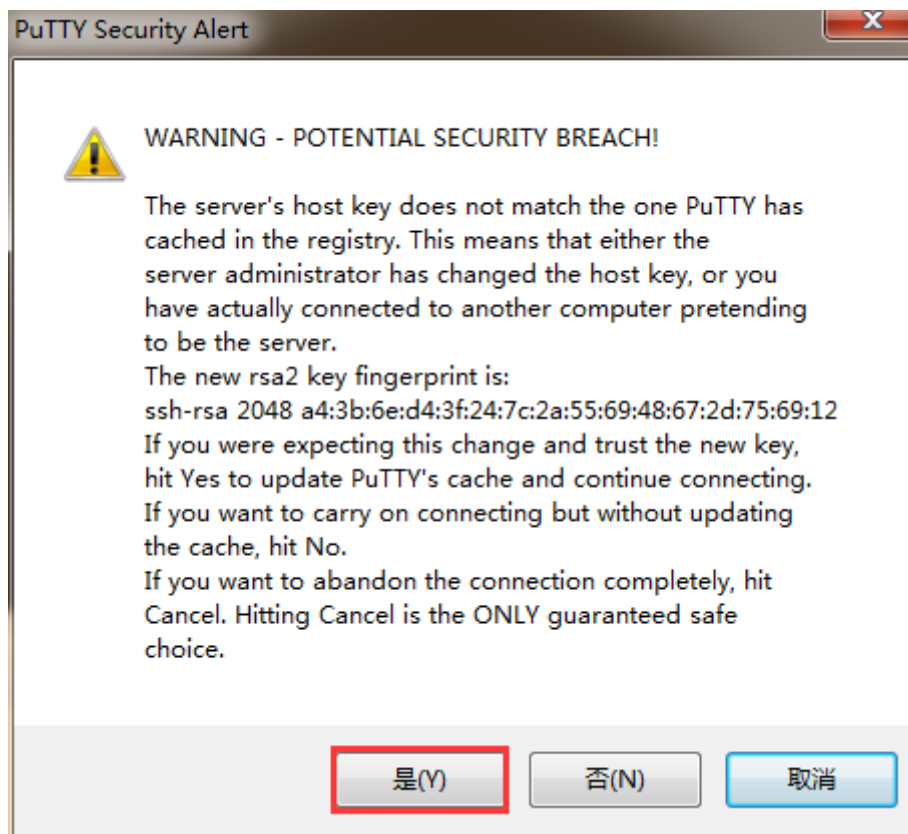

3. Enter the login name we entered in the installation system, assuming this is Orin NX.

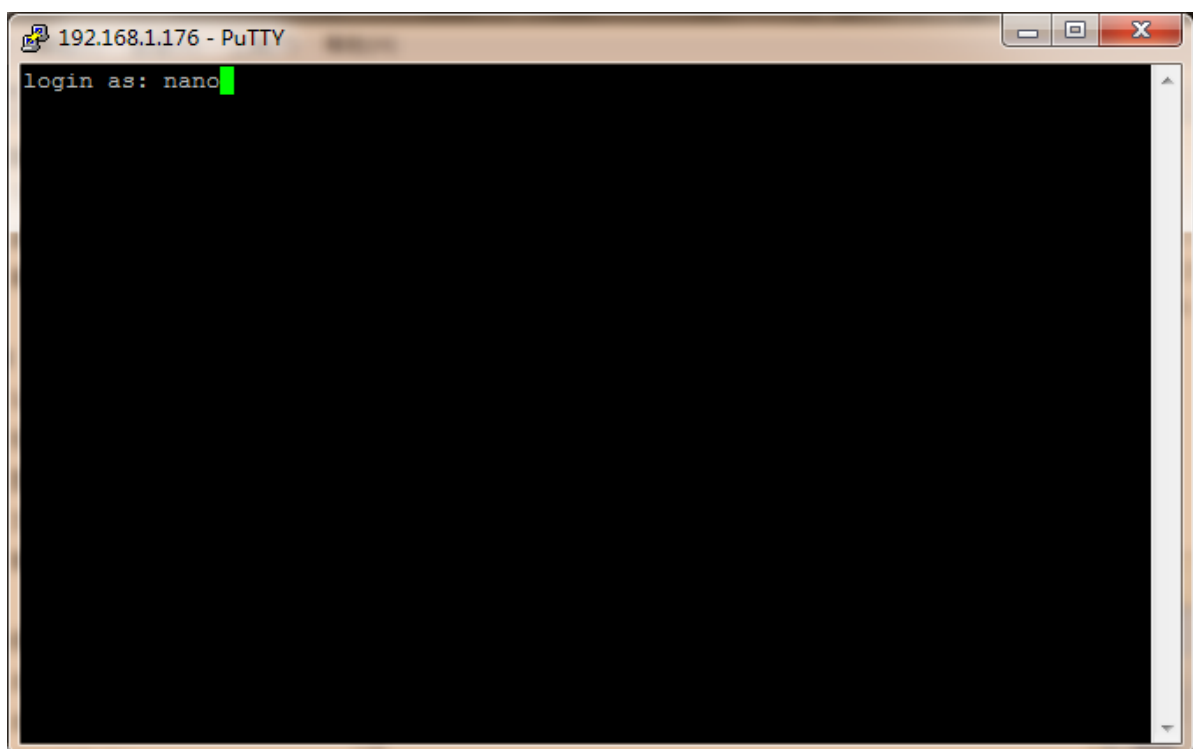

Then enter the password and enter terminal mode.

**Note: Enter the password here. The password you entered is hidden. After entering it, simply press Enter**

```
nano@nano-desktop: ~
login as: nano
nano@192.168.1.176's password:
Welcome to Ubuntu 18.04.2 LTS (GNU/Linux 4.9.140-tegra aarch64)

* Documentation:  https://help.ubuntu.com
* Management:    https://landscape.canonical.com
* Support:        https://ubuntu.com/advantage
This system has been minimized by removing packages and content that are
not required on a system that users do not log into.

To restore this content, you can run the 'unminimize' command.

0 个可升级软件包。
0 个安全更新。

The programs included with the Ubuntu system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Ubuntu comes with ABSOLUTELY NO WARRANTY, to the extent permitted by
applicable law.


To run a command as administrator (user "root"), use "sudo <command>".
See "man sudo_root" for details.

nano@nano-desktop:~$
nano@nano-desktop:~$
nano@nano-desktop:~$ ls
Desktop  examples.desktop  公共的  模板  视频  图片  文档  下载  音乐
nano@nano-desktop:~$
```

## 2. Remote File Transfer Tutorial

Sometimes we need to transfer files between two different systems, Windows and Linux. As these are two different file systems, we need to use the so-called SSH service to transfer files across systems. Here I use WinSCP software for transmission, which is simple and easy to use.


Enter the IP address, username, and password for the new site and click to log in. If the above information is not modified much, you can save it directly and enter the corresponding user system next time.

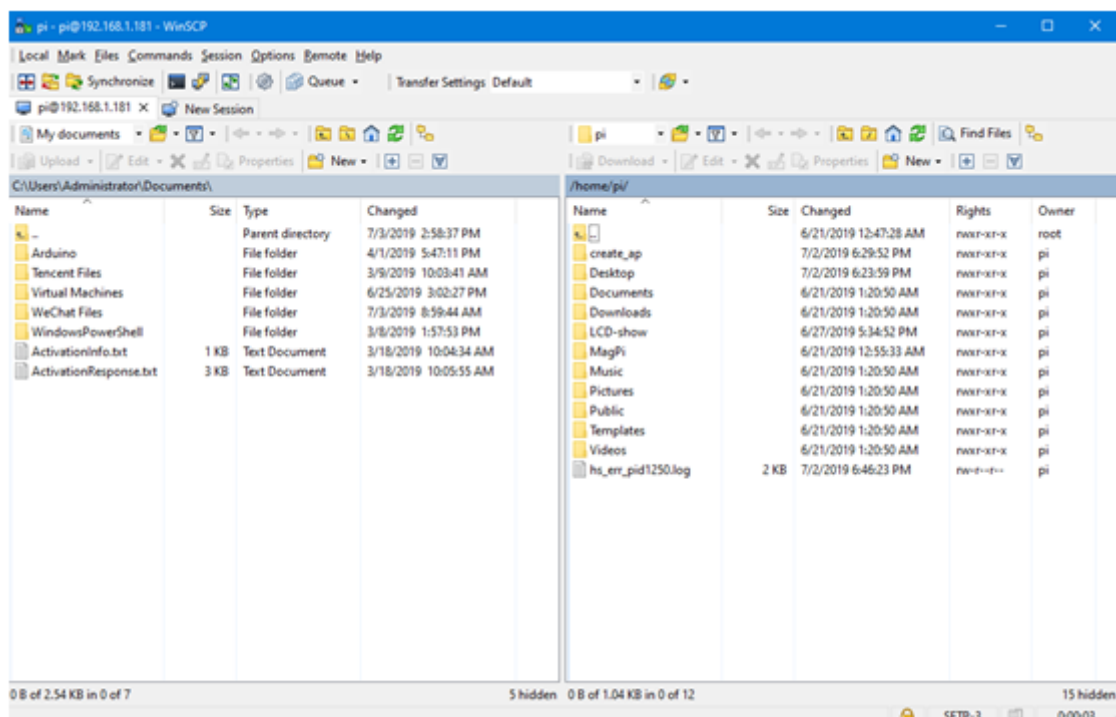

The following interface appears to indicate successful login

The left side is the window side, and the right side is the Linux system side. You can directly drag and drop files to the other end for file transfer, or right-click the file to select the corresponding operation, such as moving, deleting, etc.


After successfully logging in by clicking on Login, the following interface will be displayed. The folder on the left is the Win computer folder, and the folder on the right is the Orin NX folder.

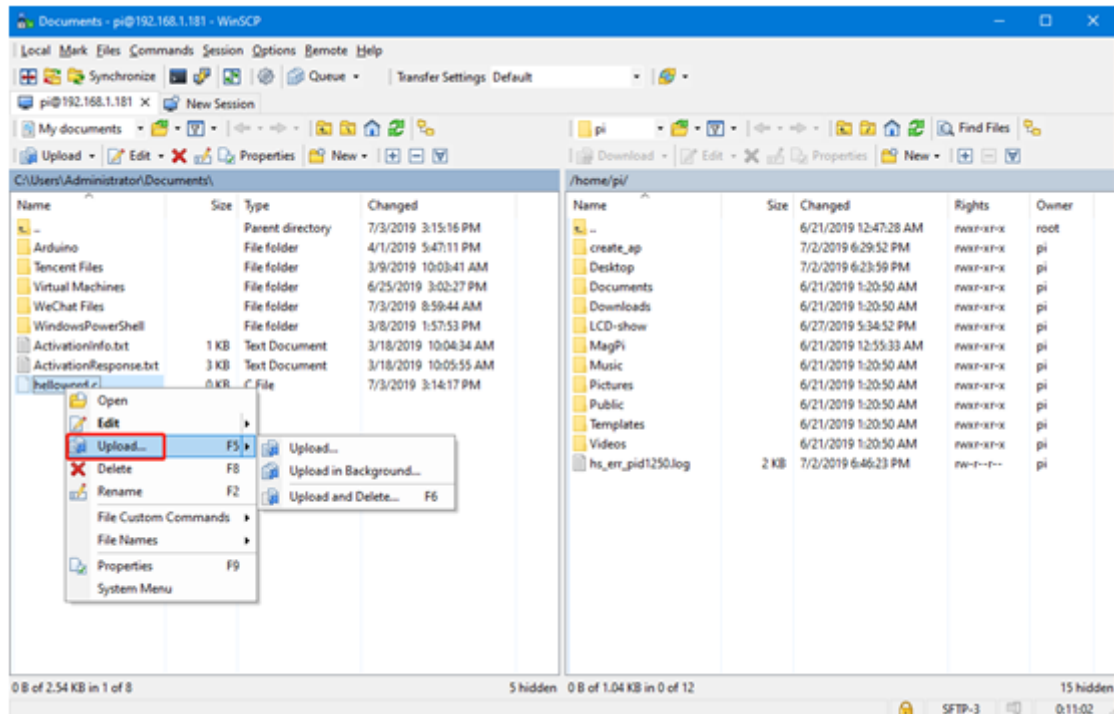


There are three operation methods for file transfer. The first one is to directly drag the file from left to right, or from right to left, and the system will automatically copy a file and transfer it.

The second method is to select a file with the mouse and press the F5 key once, and the selected file will be copied to the other side.

The third method is to select the file and click the right mouse button. If it is transferred from a win computer to Orin NX, click upload

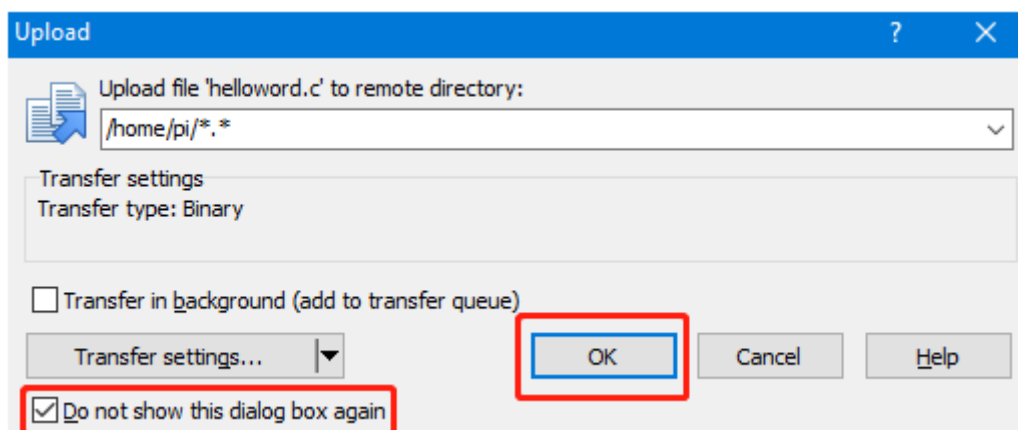

A prompt will pop up, you can choose not to prompt again, and click OK to automatically transfer the file.

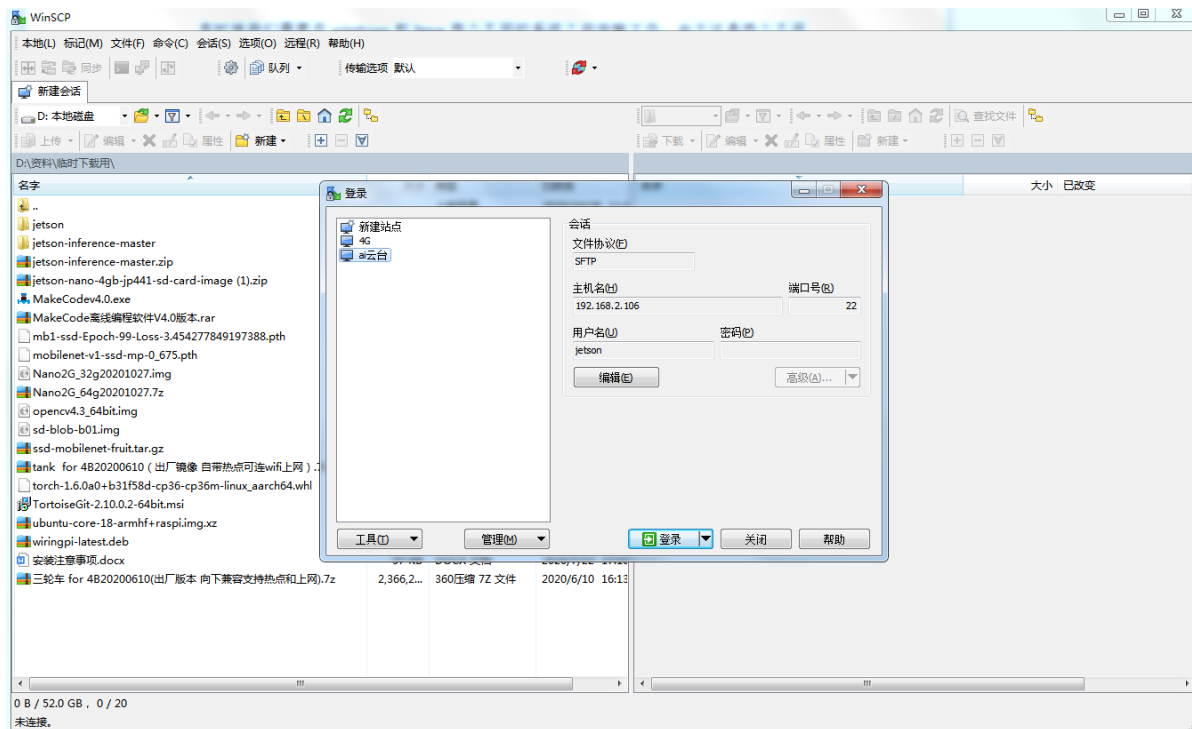

If transferring files from Orin NX to a win computer, right-click to select the file and select Download

