


5. Create a navigation task and run it in app


Function operation

Continue the operation in Section 4. The connection and login operation of the vehicle will not be repeated here. Please refer to the documents in the previous sections.


After selecting the map and setting the initialization point successfully. Click the navigation button in the status bar, and the navigation interface will pop up on the left. As shown in the figure below.

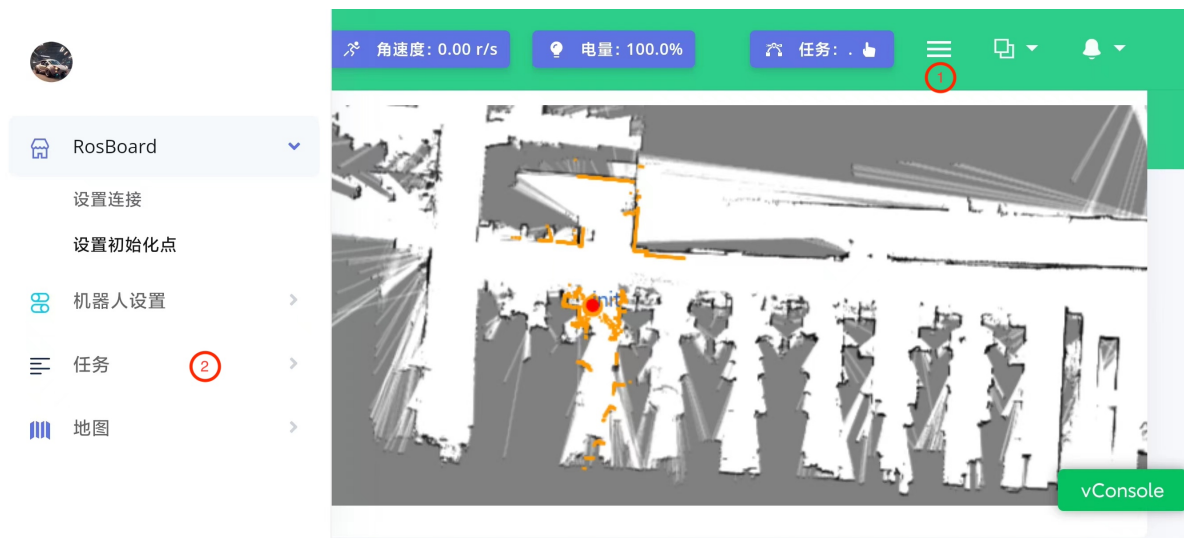


Then click the Add Point interface.

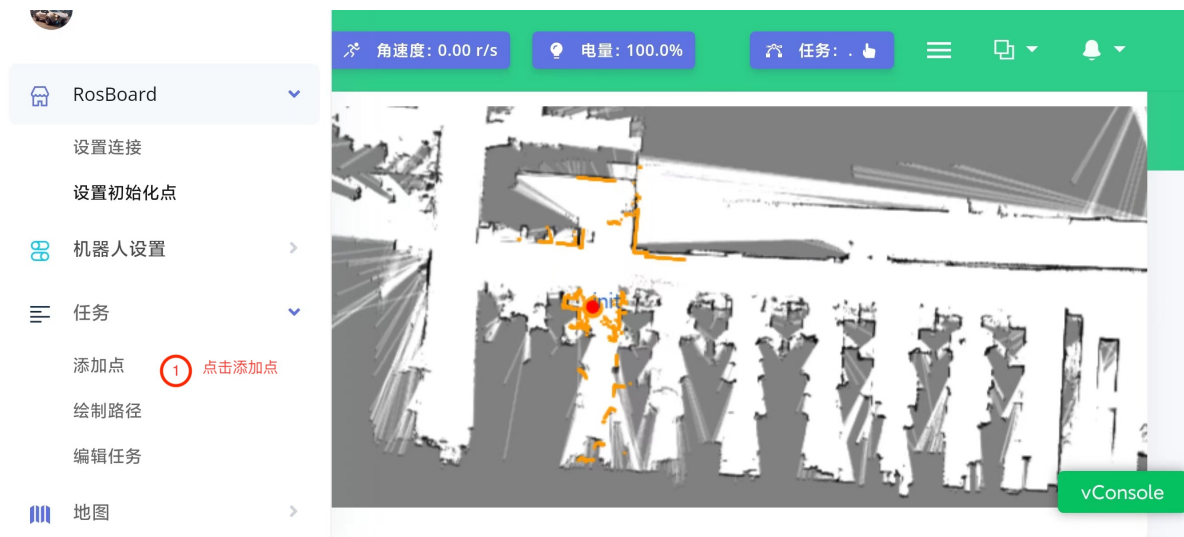

After entering the Add Point interface, we click the button in the upper right corner to select a target point in the pop-up point list and click Run. The vehicle will start to plan the path and run.

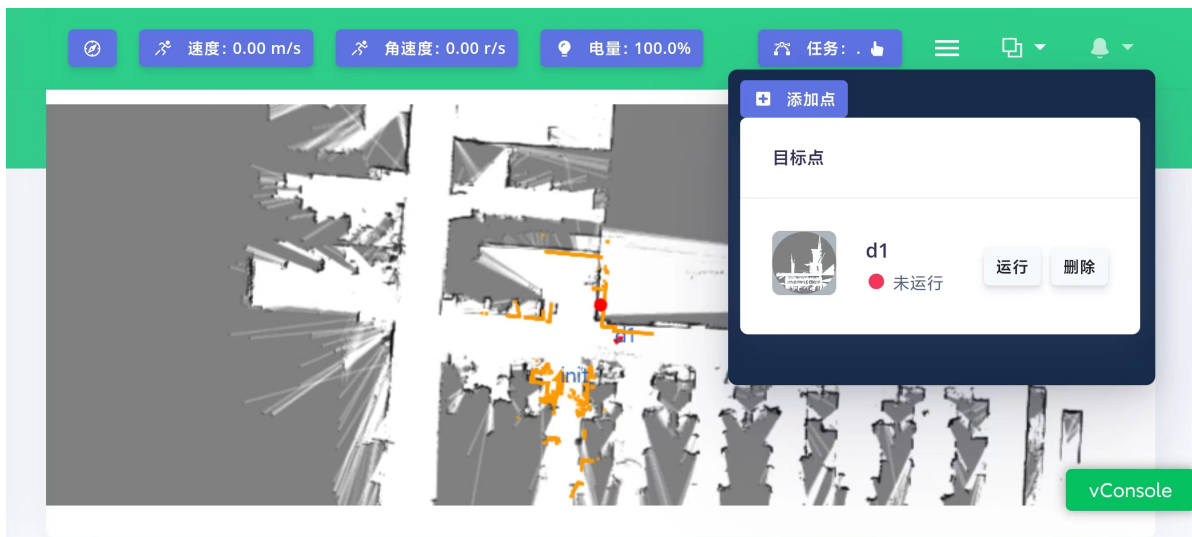

At this time, the status bar will display the name of the current task and the target point of the current operation.

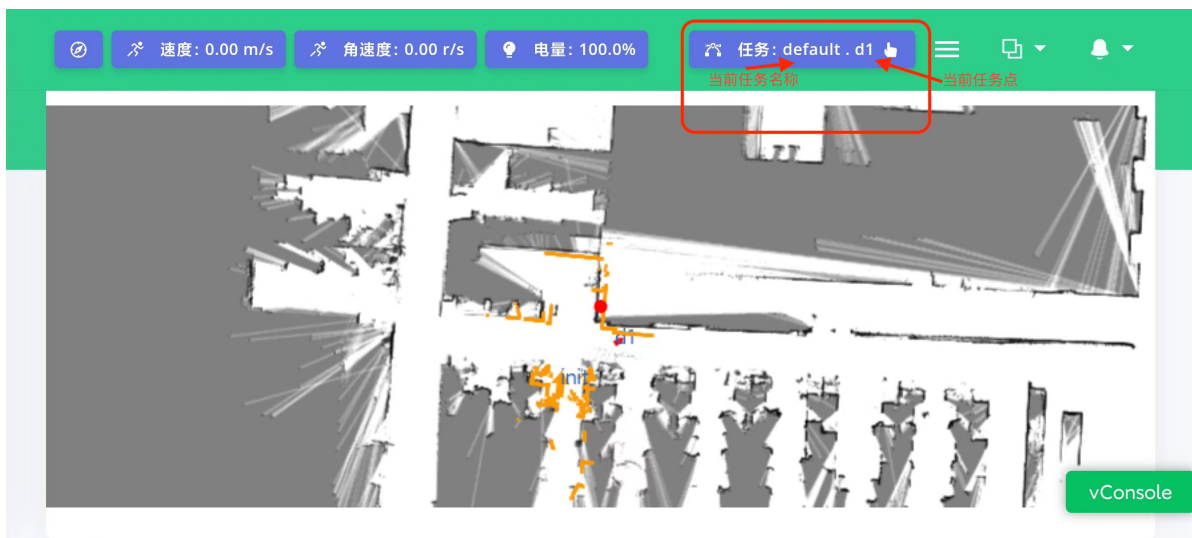

After the task is completed normally, the task information in the status bar will automatically disappear.

When there is a task, click the task button and you will see two buttons, as shown in the figure below. Click the delete button to delete the current task, and click pause to stop the current task.

