



1.2 Interface Description

Introduction to the location and functions of Raspberry Pi PICO components

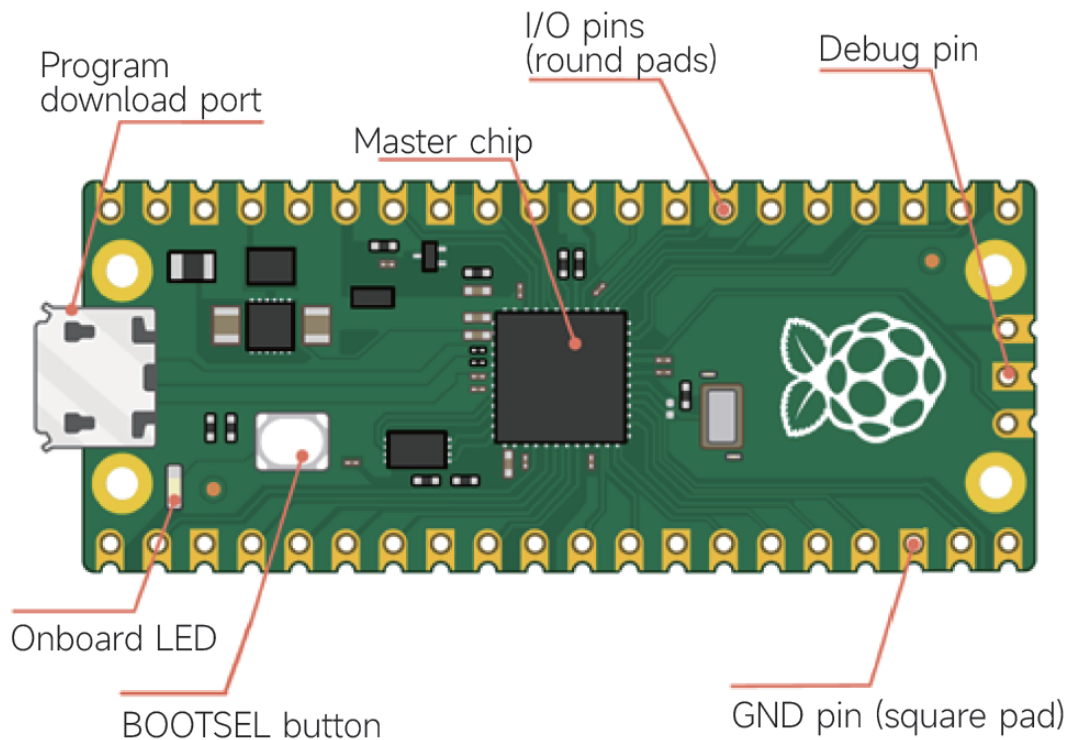


We can connect Raspberry Pi Pico to computer by Micro USB cable to download code.


Introduction to the location and functions of Raspberry Pi PICO 2 components

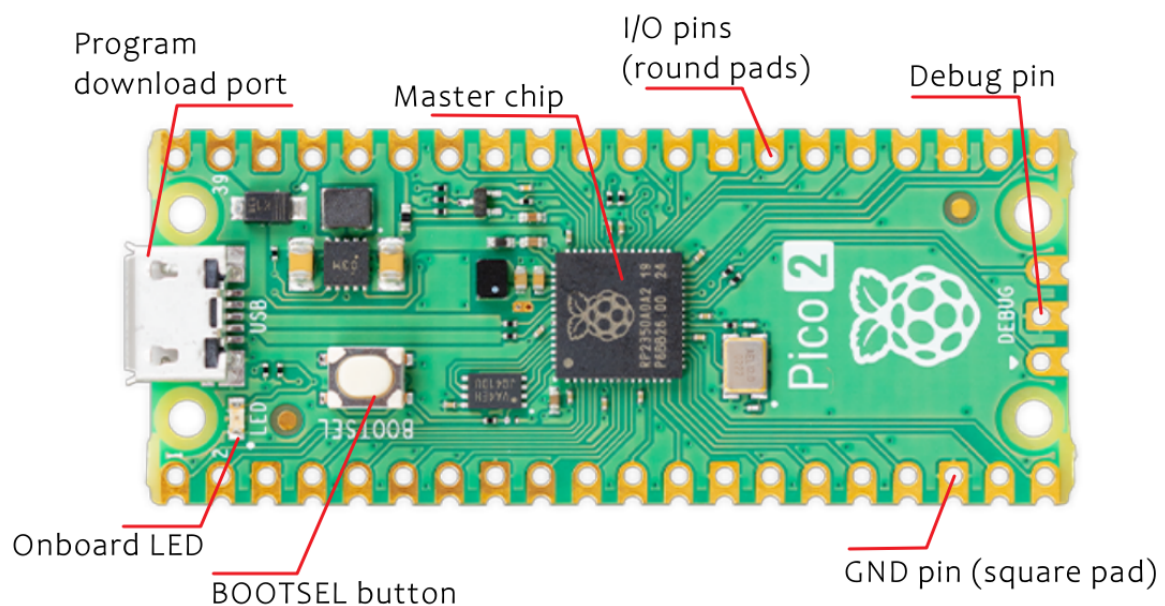

We can connect Raspberry Pi Pico 2 to computer by MicroUSB cable to download code.


Introduction to the location and function of expansion board components

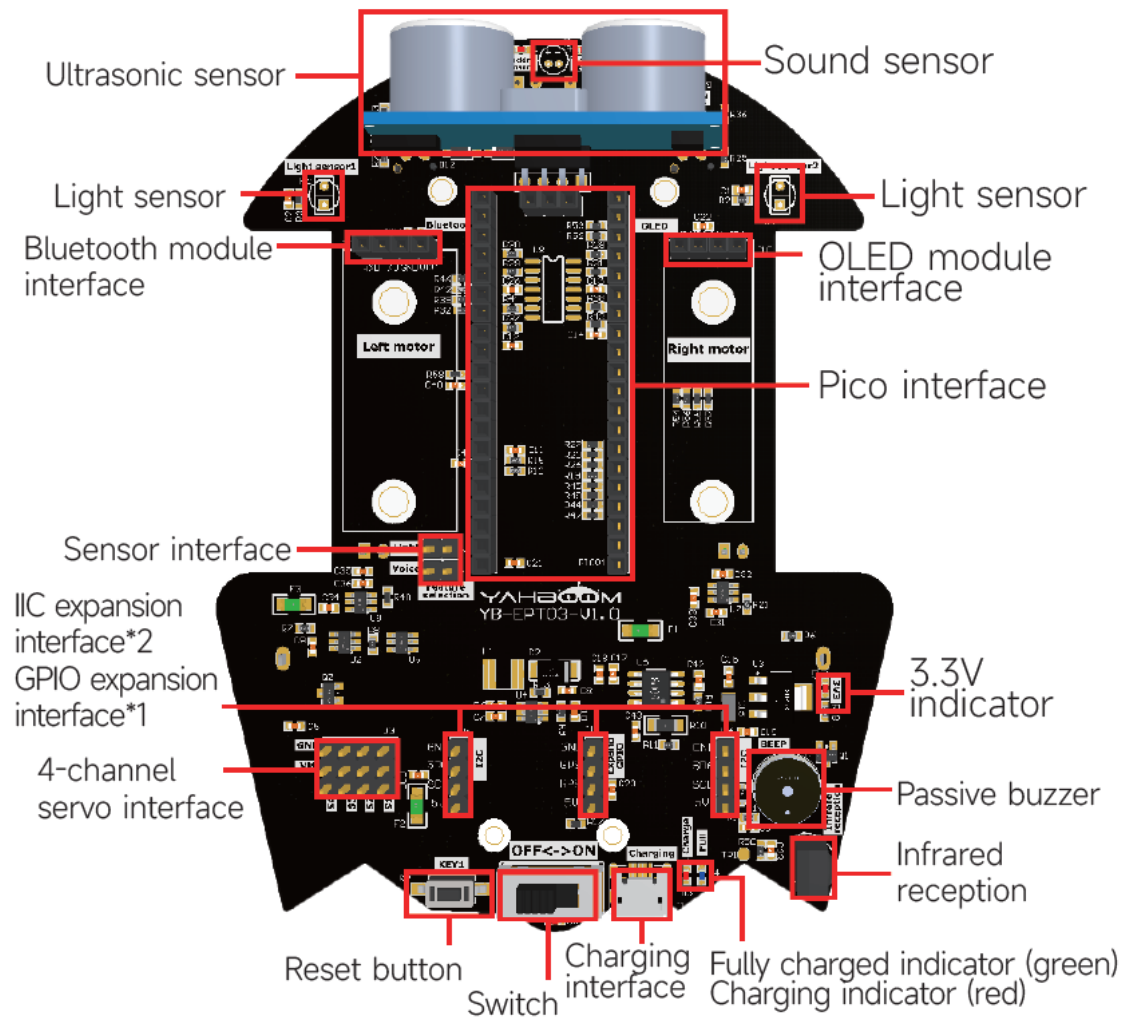


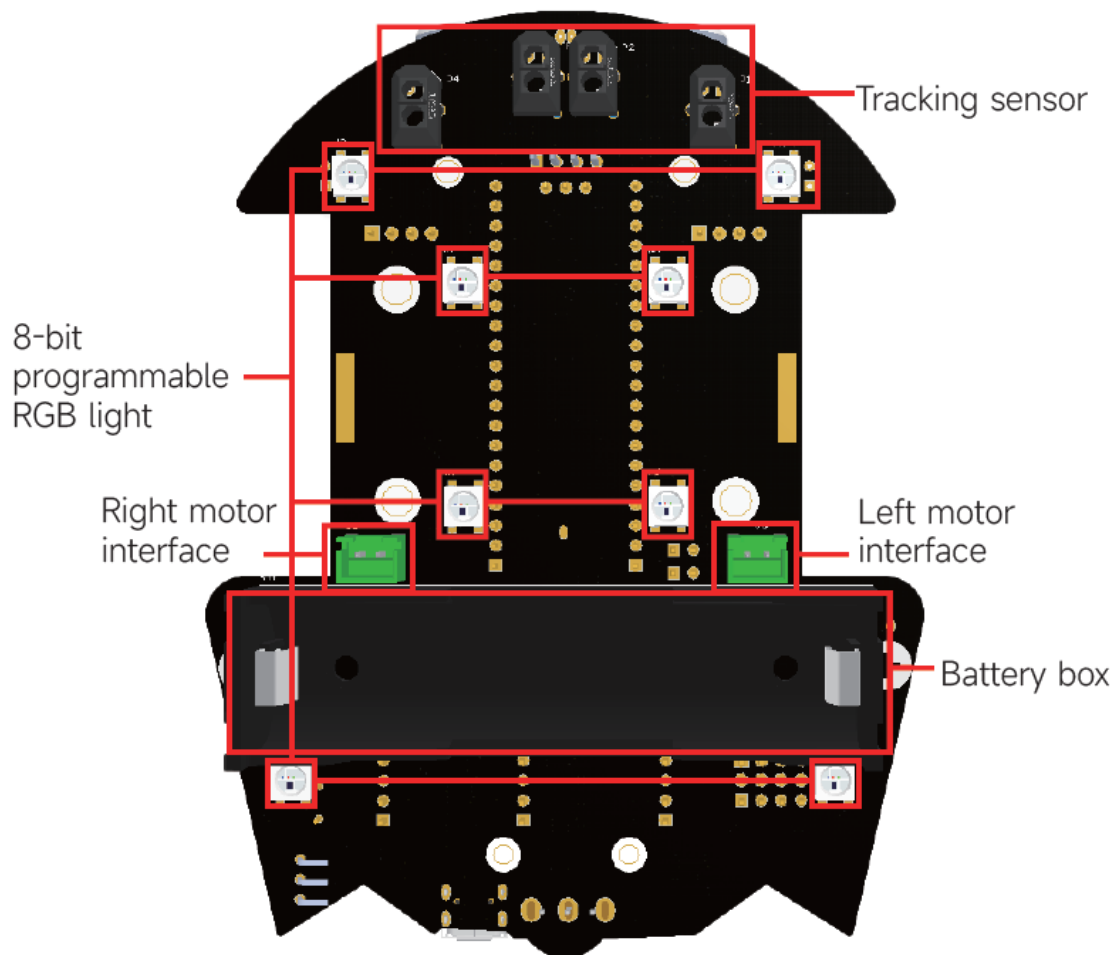

Note: The charging interface is on the expansion board, and the charging voltage is 5V.

Actual wiring diagram

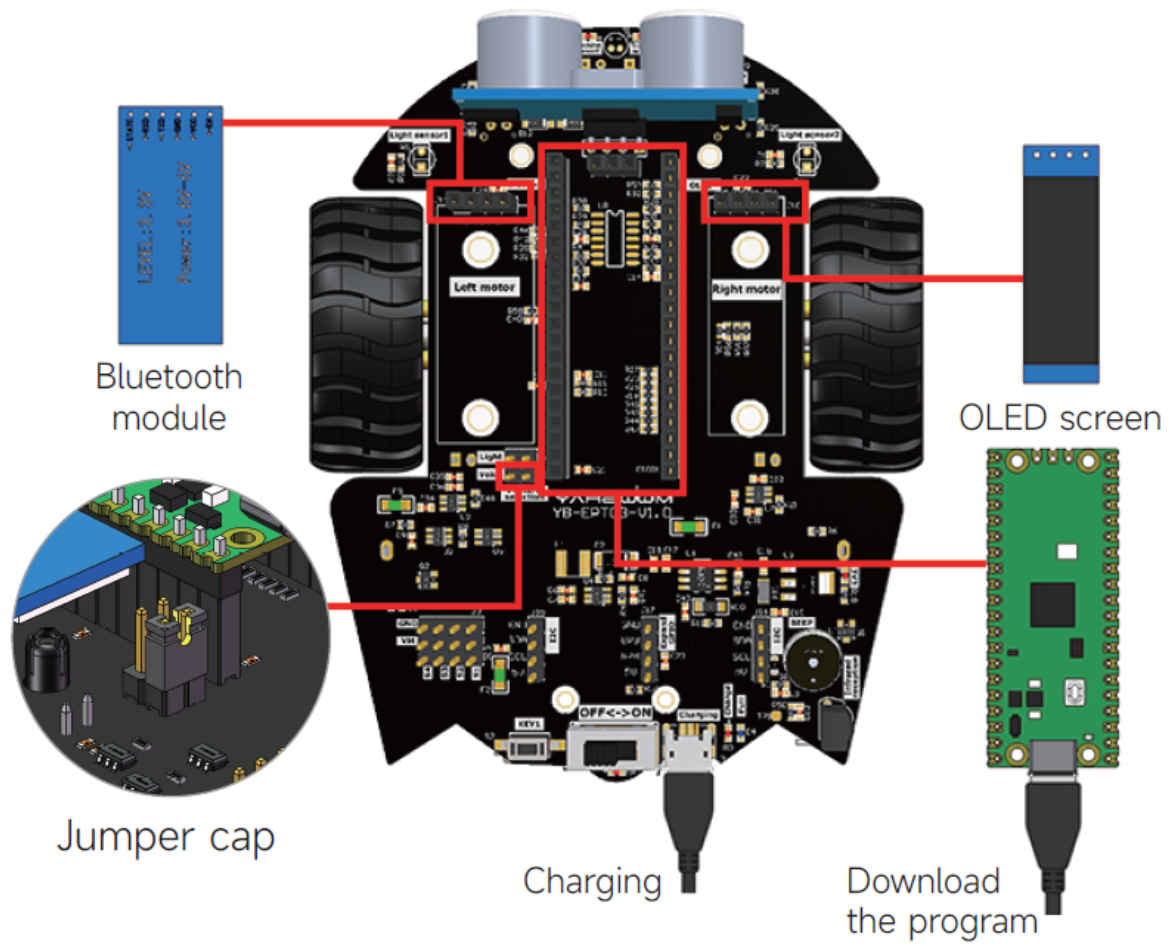

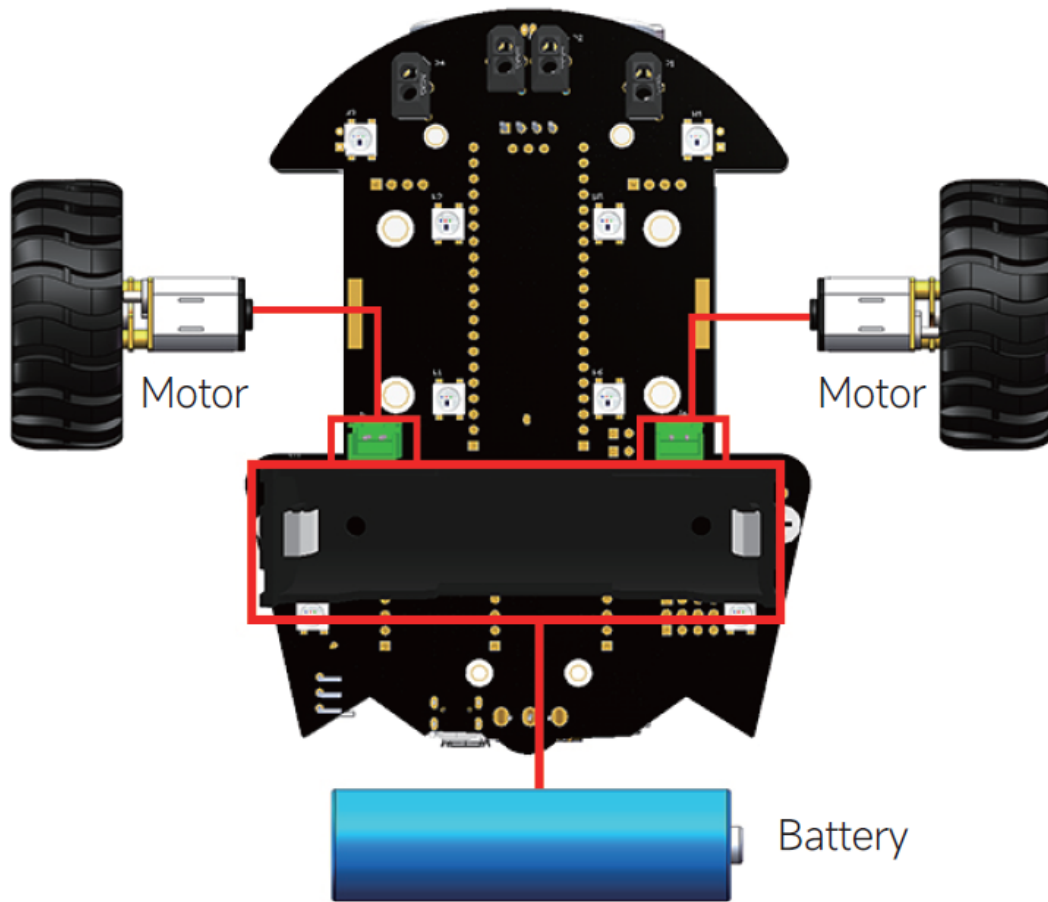

Note: Please connect each component correctly according to the wiring diagram.