


Instructions for using the PS2 handle


1. Installation of receiver

There are positive and negative differences in the installation of receivers.

If the installation direction is incorrect, the red indicator light on the receiver will keep on after power on.

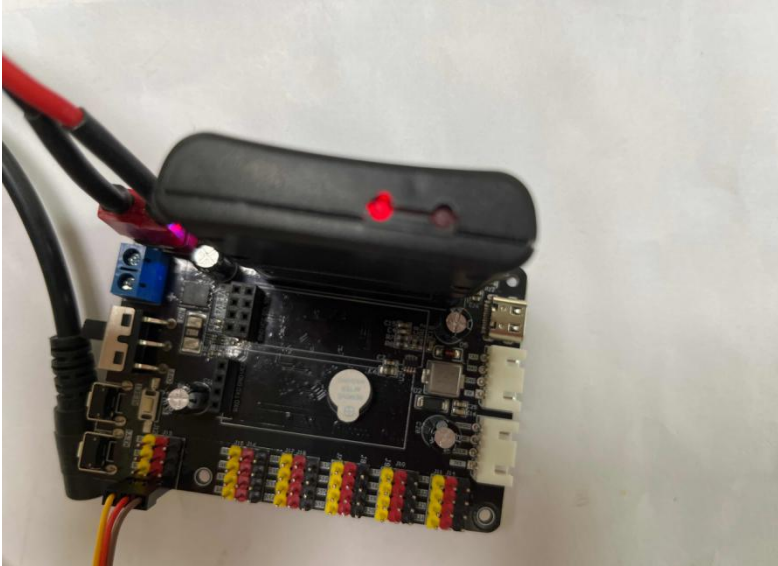

After proper installation, the indicator light on the receiver remains red and blinks green. As shown below.

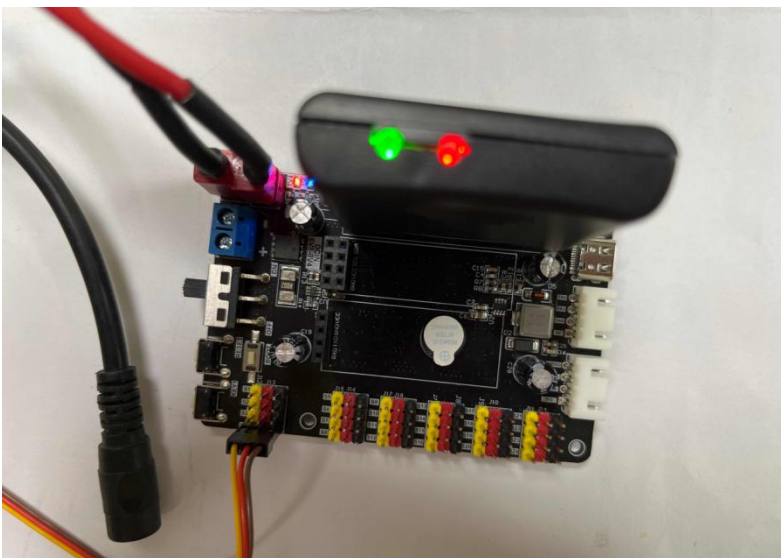

2. Mode switching

There are two modes of handle control:

1) Button mode

Insert the receiver, and the handle indicator light will always light up in red. As shown below.



2) Rocker mode

You can switch modes by long pressing the "MODE" button on the handle. (Press and hold the 'MODE' button for 3 seconds.)

The red and green indicator lights will switch between flashing quickly and constantly on.



Precautions:

When using the handle control, if it is not possible to control normally in any mode, you can press and hold the "MODE" key to switch modes.