

## 2. VNC remote login to desktop

### [2. VNC remote login to desktop](#)

#### [2.1 Get the IP address of Raspberry Pi](#)

#### [2.2 VNC Remote Desktop](#)

VNC remote login to desktop requires that the host computer and Raspberry Pi are in the same LAN to work properly.

If you are not using the factory image, you need to configure the VNC environment in advance before you can remotely log in to the desktop.

### 2.1 Get the IP address of Raspberry Pi

When you boot the factory image for the first time, you need to configure the network connection in the boot program, then enter the remote control interface, press the button in the lower right corner of the Rider-pi screen, and you can query the corresponding IP address.






## 2.2 VNC Remote Desktop

Please download and install the VNC-Viewer software on your computer first.

VNC-Viewer download website:

<https://www.realvnc.com/en/connect/download/viewer/>

Double-click to open the VNC-Viewer software, enter the IP address of the Raspberry Pi, and press Enter to confirm.

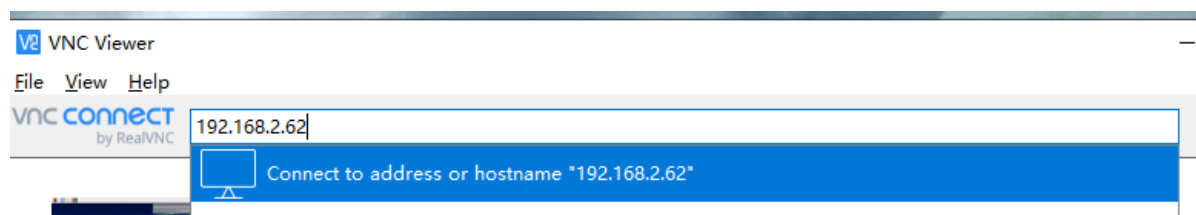

Then enter the VNC password (yahboom) and press OK to enter the desktop. Check Remember password to record the password for easy login next time.

