


Case 1-- How to import superbit Python library

If you need to import the Python library file for Superbit.

You can see **SuperbitPython_libaray.hex** file.

- 1.We need to send or copy this hex file to the micro:bit drive letter.
- 2.Click the [REPL] button of the Python programming interface to import this library file.
- 3.After importing, we can see the text prompt as shown in the figure below on the Mu interface.

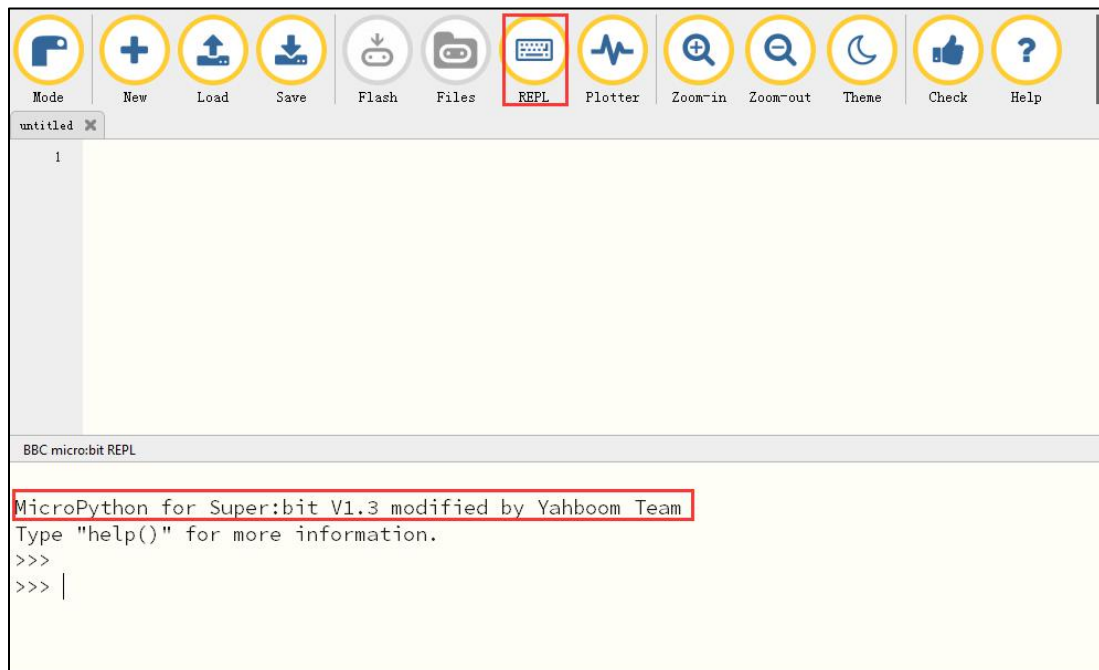

Case 2-- How to import Tinybit Python library

If you need to import the Python library file for Tinybit.

You can see **TinybitPython_Library.hex** file.

1. We need to send or copy this hex file to the micro:bit drive letter.
2. Click the [REPL] button of the Python programming interface to import this library file.
3. After importing, we can see the text prompt as shown in the figure below on the Mu interface.

