

## Changing Face APP control

### 1.Learning goals

In this course, we mainly learn how to use handle control Changing Face.


### 2.Building block assembly steps

For the building block construction steps, please refer to the installation manual or building block installation picture of [Assembly course]-[Changing face].

### 3.Wiring of servo


Building block servo insert into the Super: bit expansion board S1 interface, and the orange wiring connect the yellow pin of S1.

As shown below:

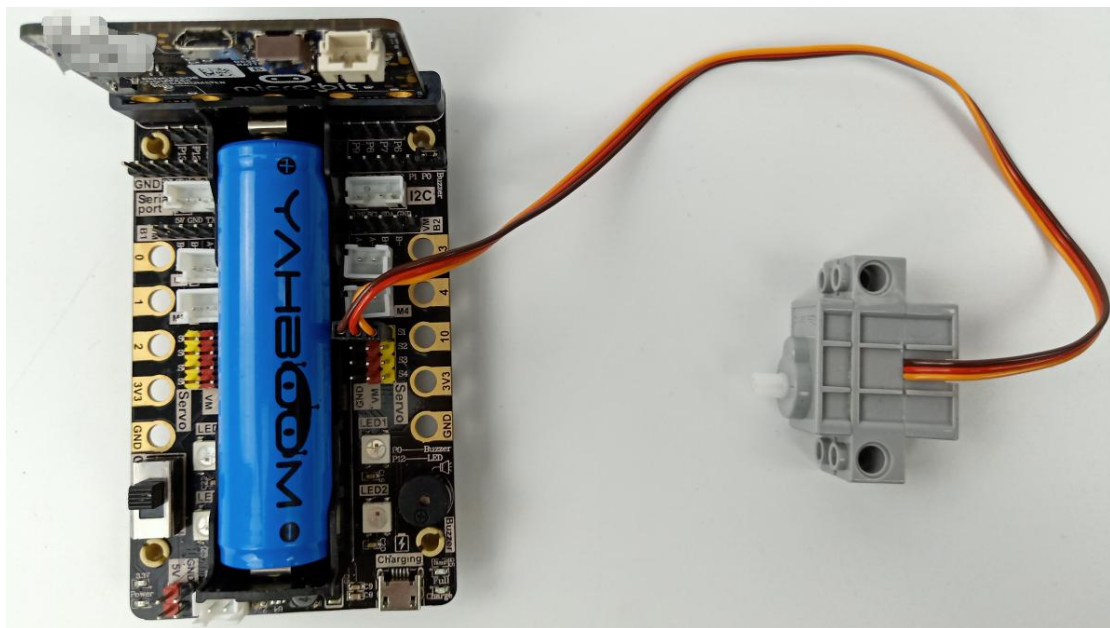

#### Note:

For the first course related to building block servo, we need to remove the gear on the servo and upload the program of this course to micro: bit. Then, turn on the power switch of the Super:bit expansion board and wait for the building block servo turn to the initial position. Next, we can turn off the power, and adjust the changing face mask to be off. Finally, install the servo. (If you have used programs related to clip robot before, you can skip this step)

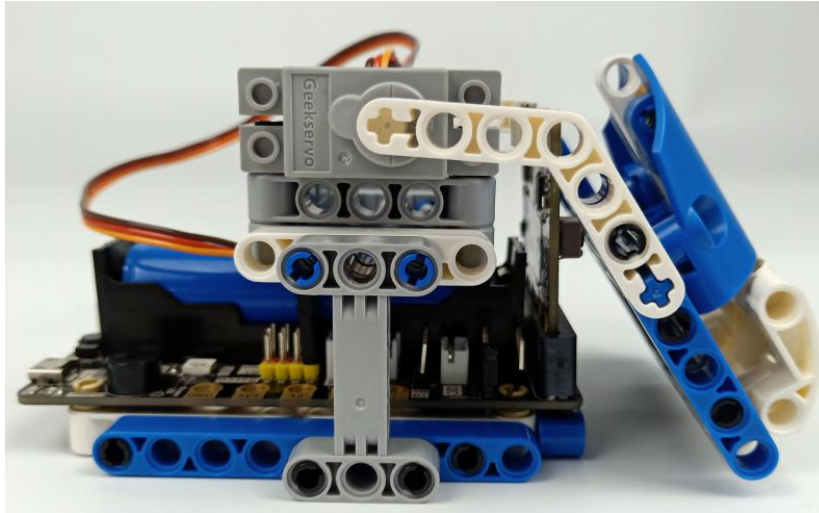

#### 4. Programming method

**Mode 1 online programming:** First, we need to connect the micro:bit to the computer by USB cable. The computer will pop up a USB flash drive and click on the URL in the USB flash drive: <http://microbit.org/> to enter the programming interface. Add the Yahboom package <https://github.com/lzty634158/SuperBit> to program.

**Mode 2 offline programming:** We need to open the offline programming software. After the installation is complete, enter the programming interface, click 【New Project】 , add Yahboom package: <https://github.com/lzty634158/SuperBit>, you can program.

#### 5.About code

The summary program of this course can be viewed by opening the hex we provided on the MakeCode programming interface.

#### 6.Download APP

Android users scan the following QR code by browser to download APP;  
iOS users scan the following QR code by camera or search "Mbit" in App Store to download APP.



iOS




Android

**Note:** If there are any prompts on the phone during installation, please select "Allow".

## 7.APP remote control

1) After the program is downloaded successfully, turn on the power switch of the car, the micro: bit dot matrix will display the "S" pattern, as shown below, this is the state of Bluetooth not connected.

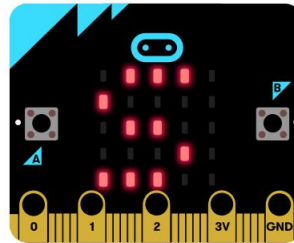


2) Open the Bluetooth of your mobile phone, and open the Bluetooth APP. You can see the interface as shown below. At the same time, you can see the Bluetooth signal in the upper left corner.




3) Mobile phone close to robot Bluetooth automatic connection. If Bluetooth can't connect automatically, you need to click **【CONNECT】** to connect the Bluetooth between the phone and the robot.



After Bluetooth connection successfully, micro:bit dot matrix will display a smile pattern. If Bluetooth disconnect, it will display a cry pattern.

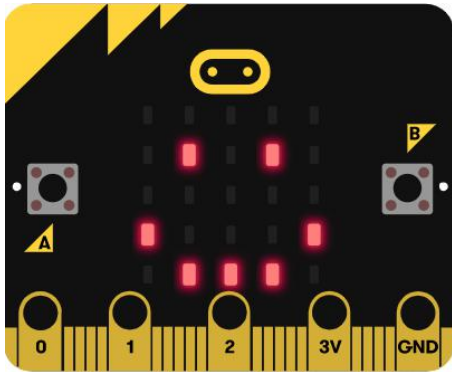


【Bluetooth be connected】

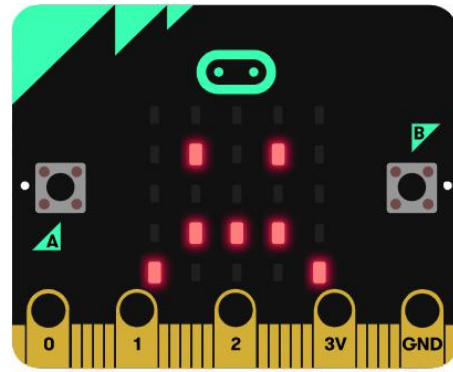


【Bluetooth disconnect】

Main control interface:


- The forward button controls the changing face mask to open
- Back button controls the changing face mask to close
- Turn left, right, left and right to control the dot matrix to display different patterns.
- Press the piano keys to make buzzer play different tones.

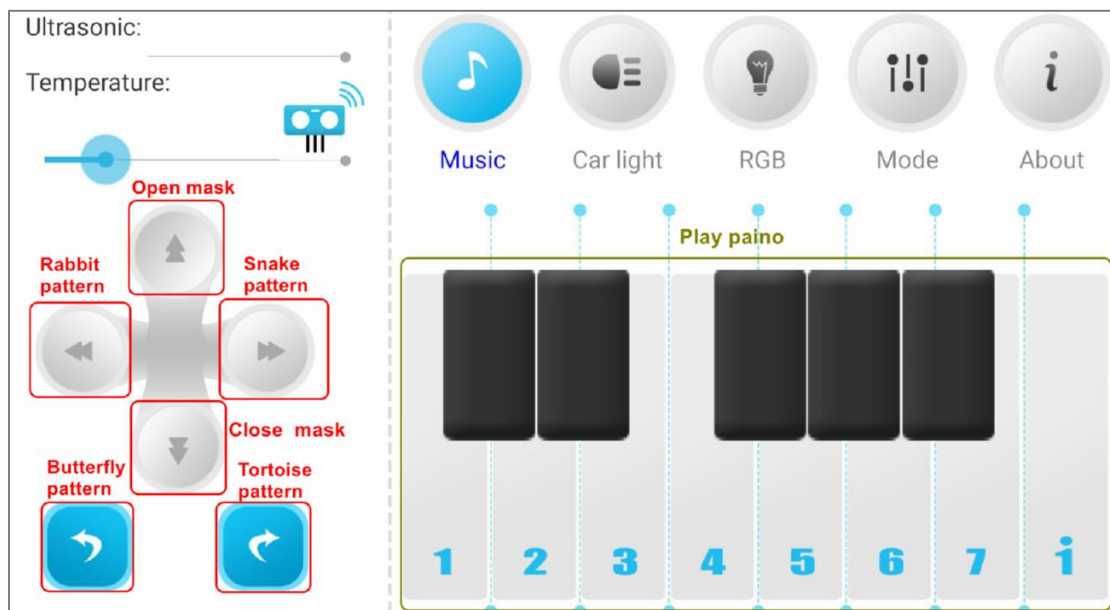

Car light interface

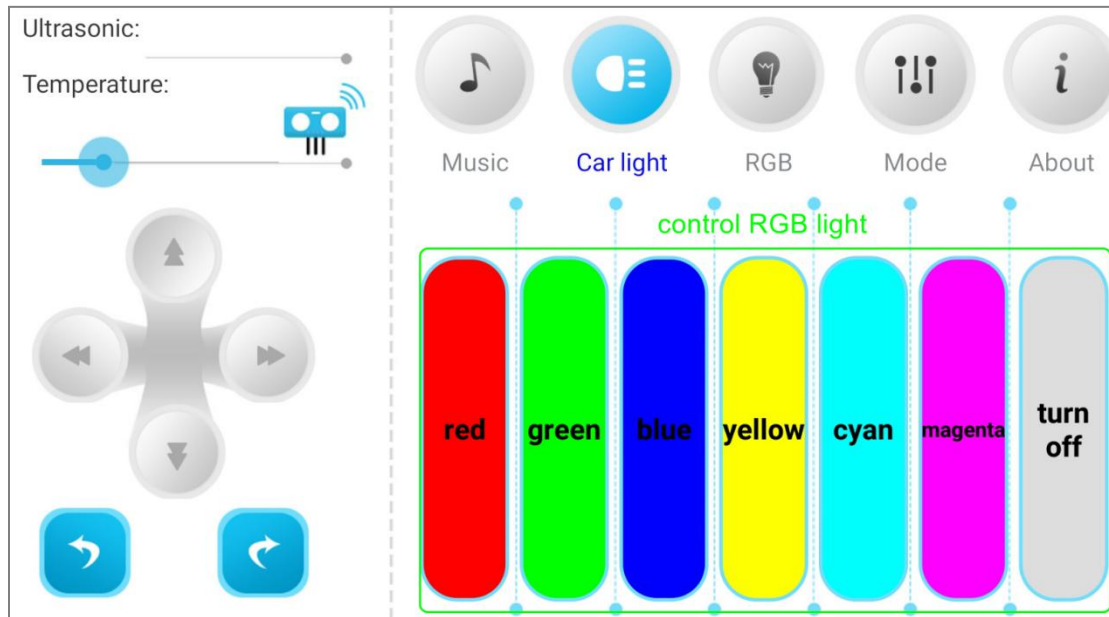

### RGB interface

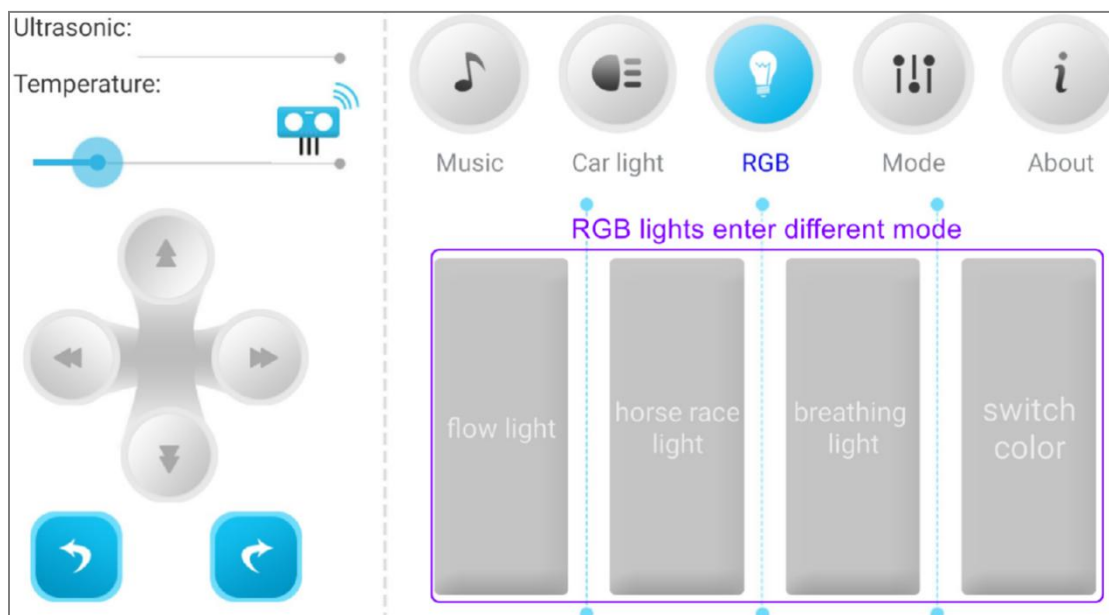

**!Note: Mode option is unavailable.**