

YN-232I

# Magnetically Isolated USB to RS-232 Converter


## Driver Installation

## Driver Installation


In order to use a PC to control serial RS-232 device connected to the YN-232I. Following are the installation instructions to set up the YN-232I on Windows 7 64 bit system.

Almost all types of systems are supported by YN232I. The newest driver and supported systems can be found at <http://www.ftdichip.com/Drivers/VCP.htm>


Step1: Insert driver CD into the CD-ROM drive on the host PC and unzip **CDM 2.08.30 WHQL Certified Windows.zip** file from the link of **driver\FT232** folder. Double click "CDM v2.08.30 WHQL Certified.exe".

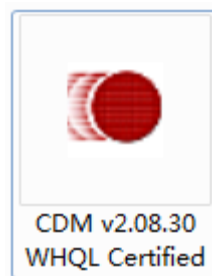


Step 2: Click "Extract" to extract the driver package.

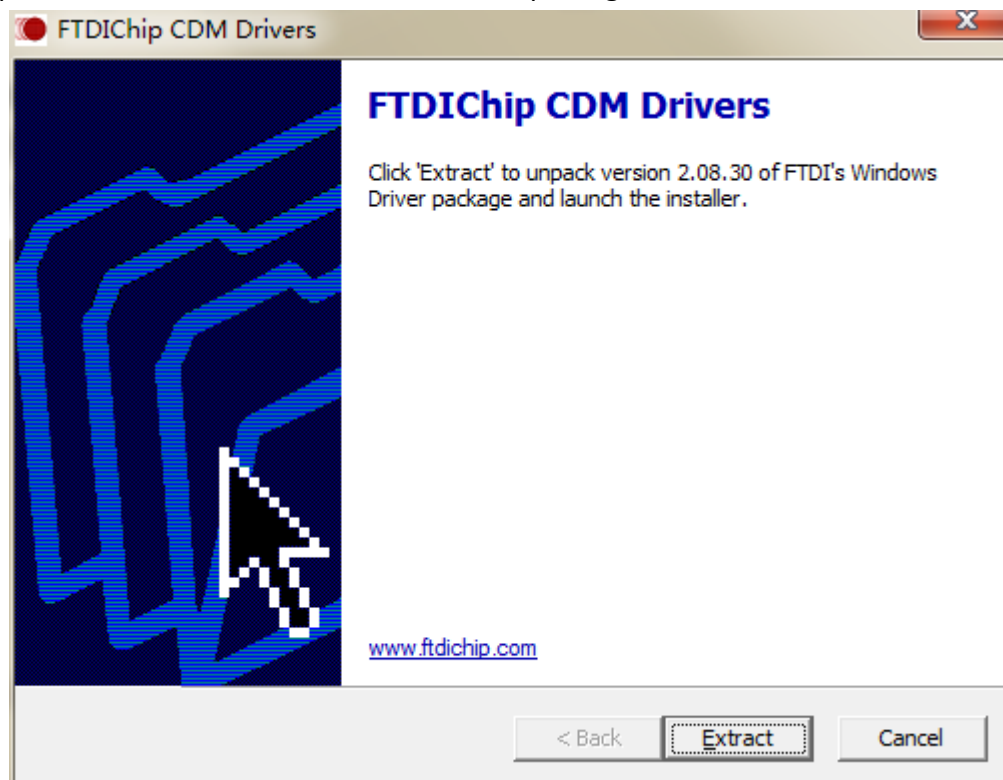

Step3: Click “Next” to continue the installation.


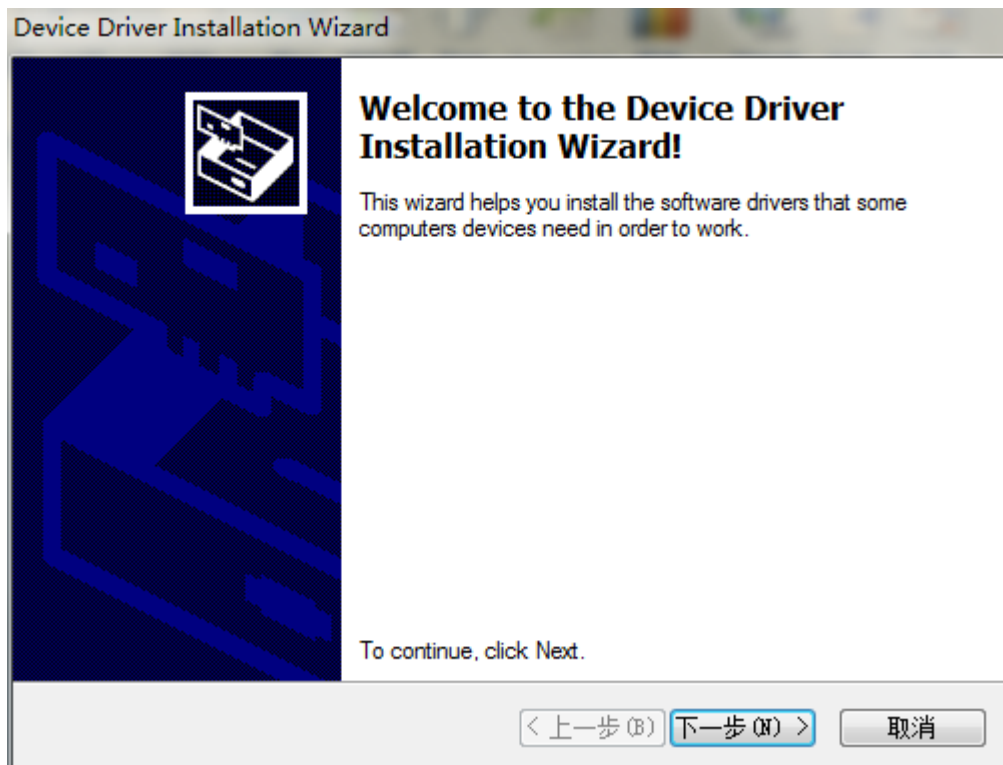


Step4: Click “OK” to finish the installation.

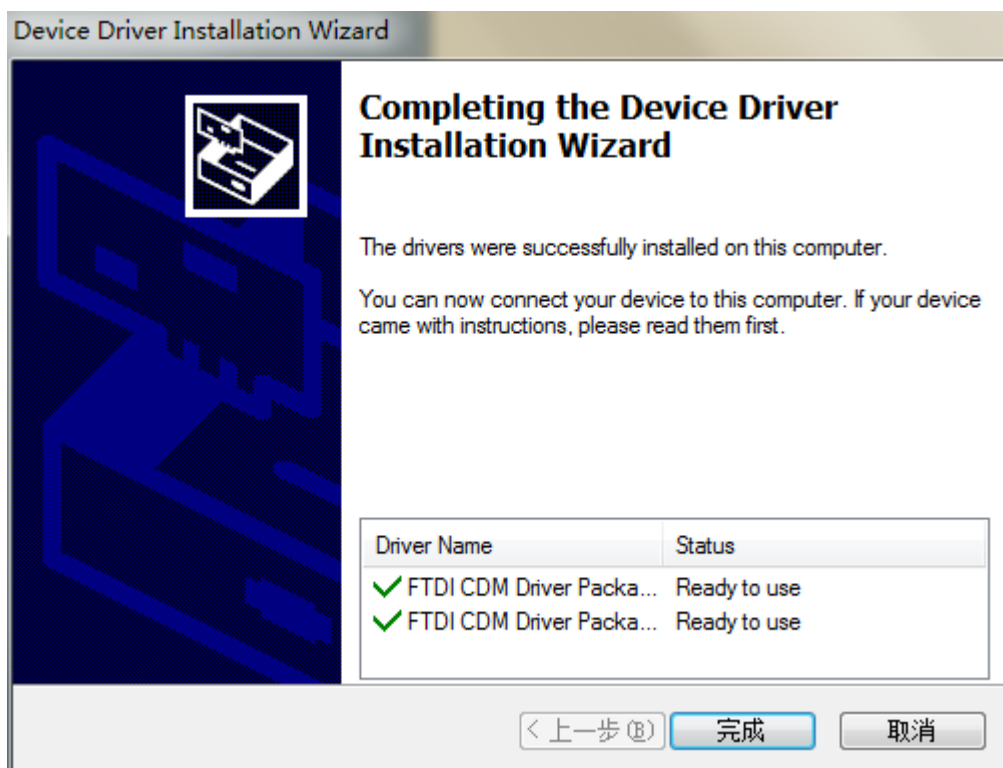

Step5: Plug the YN-232I to USB port. The green LED will flash and the driver will be installed automatically.

In the Hardware Device Manager in the system, you will see device “USB Serial Port (COM##)” in Ports category. Then YN-2321 is working normally.

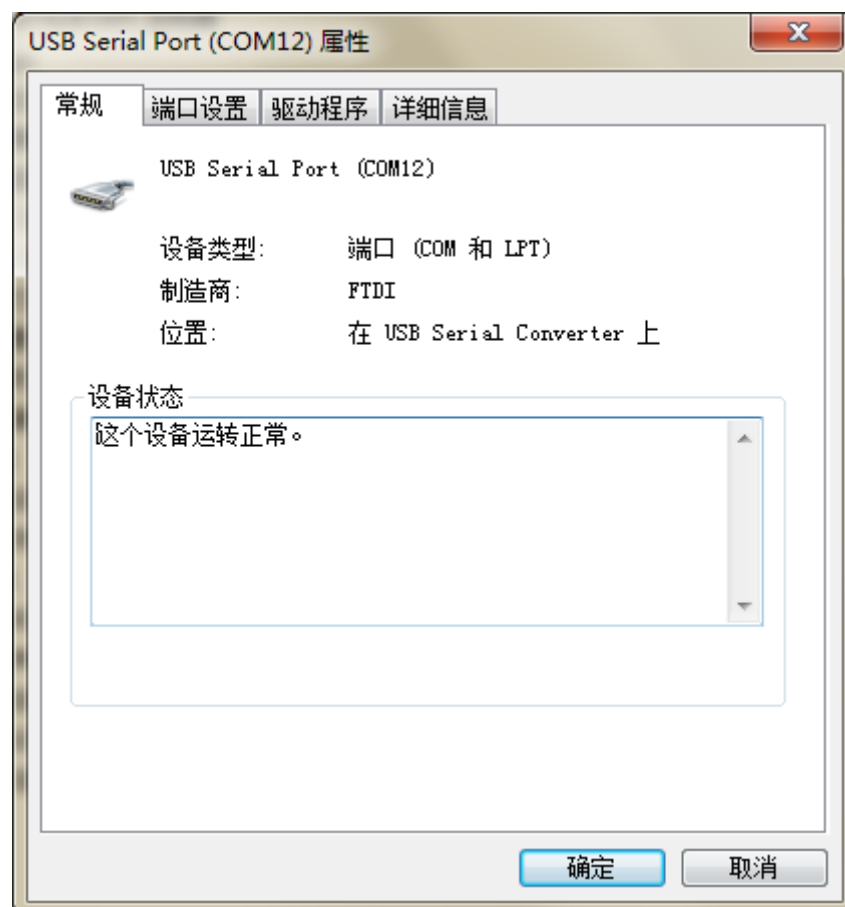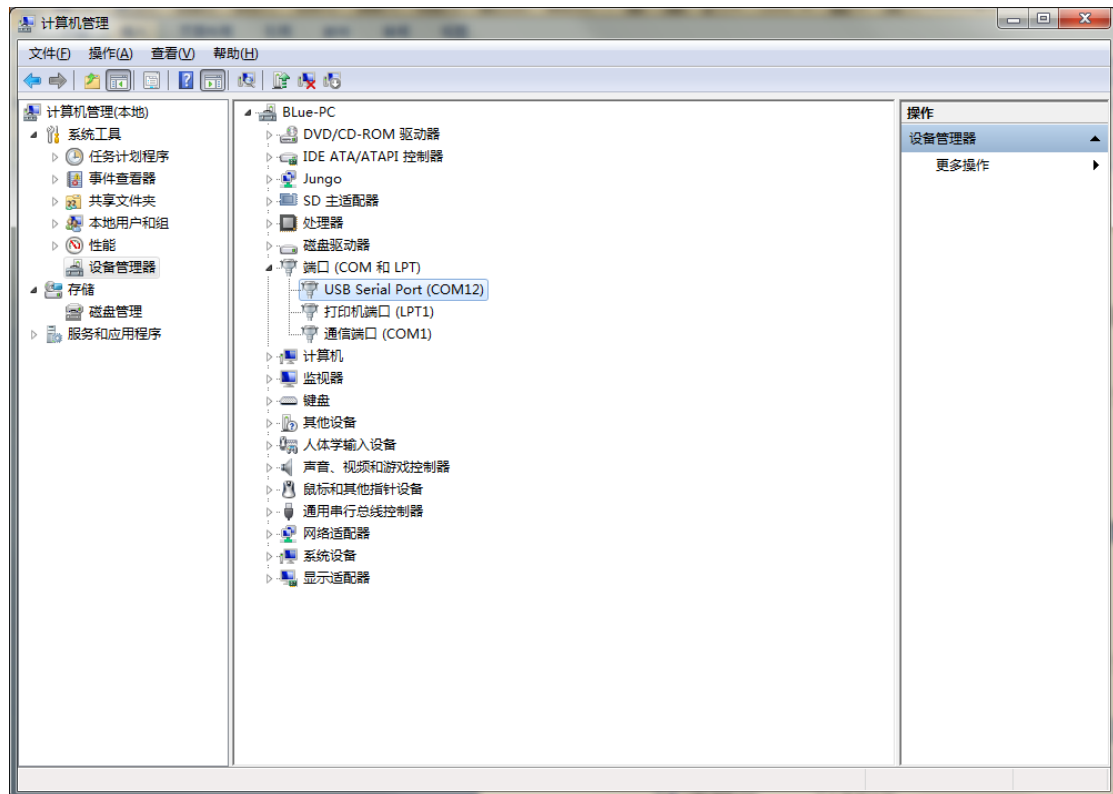

Revision History:

Date	Version	Revision
2014-7-14	1.0	Initial release for YN232I.