



# TFT-LCD 3.5INCH Touch Screen

## Mobile Control User Guide

- 深圳众视达创新科技有限公司



官方网站



速卖通官方店铺



# ◆ Modify the WiFi Settings on TFT-LCD

## Set the MKS\_config.txt file

### 1 Open the config file(mks\_config.txt)



### 2 Find out WiFi function lines and modify as below

```
#-----  
##### WIFI Function #####  
#wifi type(MKS HLK_WIFI:1; MKS TFT_WIFI:0)  
>cfg_wifi_type:0  
  
#wifi mode(AP:1; STA:0)  
>cfg_wifi_mode:0  
  
#wifi name and password  
>cfg_wifi_ap_name:ZONESTAR  
>cfg_wifi_key_code:zonestar123
```

Modify to 0

SSID of your WiFi

Password of your WiFi

### 3 Copy file to the root directory of SD card and insert to the TFT-LCD and reset

RESET



### 4 Check if WiFi connected successfully in "Setting>>WiFi"

网络操作需要用到



## ◆ Install APP to mobile

### 5 Connect to WiFi

Ensure it is the same WiFi




### 6 Install APP to mobile

Scan this QRcode to install



### 7 Login in

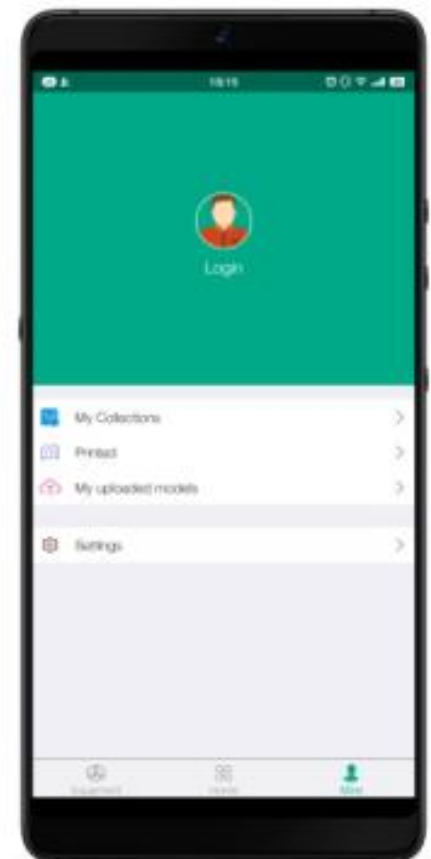

# ◆ Operate the 3d printer from mobile

**8 Find out the 3D printer**



**9 Fill WiFi information**



The same with step 4

**10 Control your printer**

