

Upgrade firmware of DWIN LCD


Step 1: Open the box of DWIN-LCD



Pull out the knob



Remove these screws and
take down the backplane

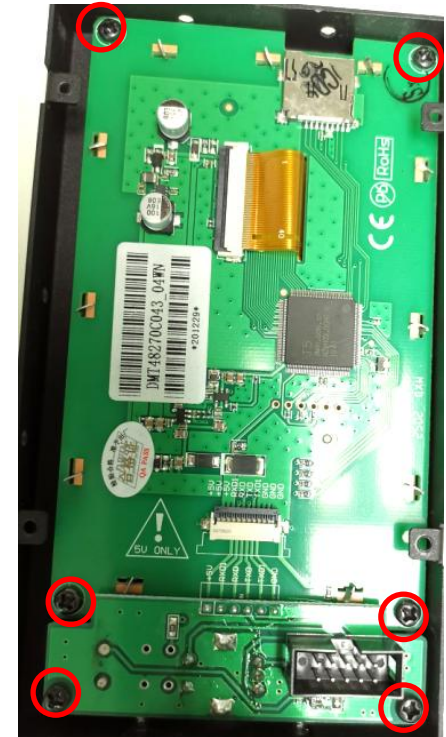


Remove these screws
to fix the PCBA

Upgrade firmware of DWIN LCD


Step 2: Format the Micro-SD card, MUST BE “**FAT32**” format and “**4096** bytes”

Step 3: Copy “DWIN_SET” directory into the root directory of Micro-SD card.

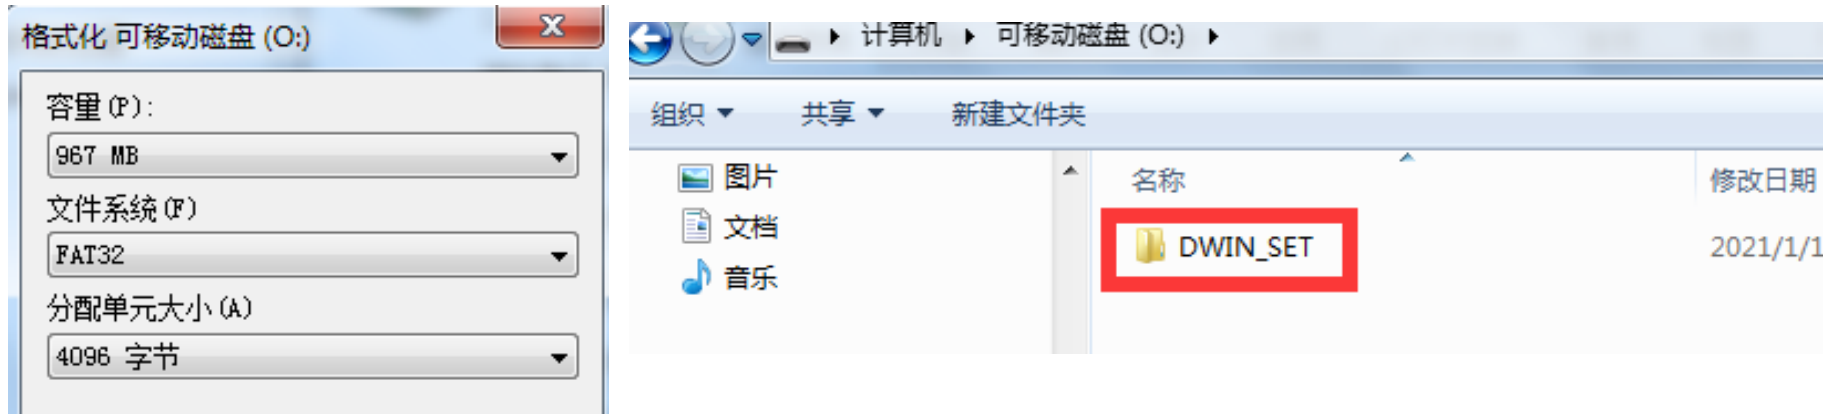

Step 4: Plug the micro-SD card into the card socket of LCD screen, and then connect the LCD cable. The LCD screen will show “Blue” and then “Red”.

Step 5: Remove the Micro-SD card.

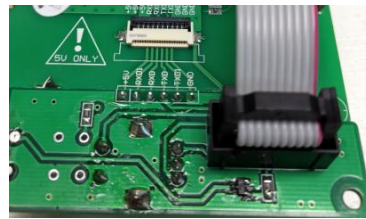

Insert SD card

Connect
LCD cable

Show Blue

Show Red

Pull out SD
card