


ZONESTAR

How Install laser engine

40M 1U2C911 1926L 6U81U6


Laser Engine Type 1

Install the laser kit to the print head, usually we can install it to the right side of housing of the hot end.

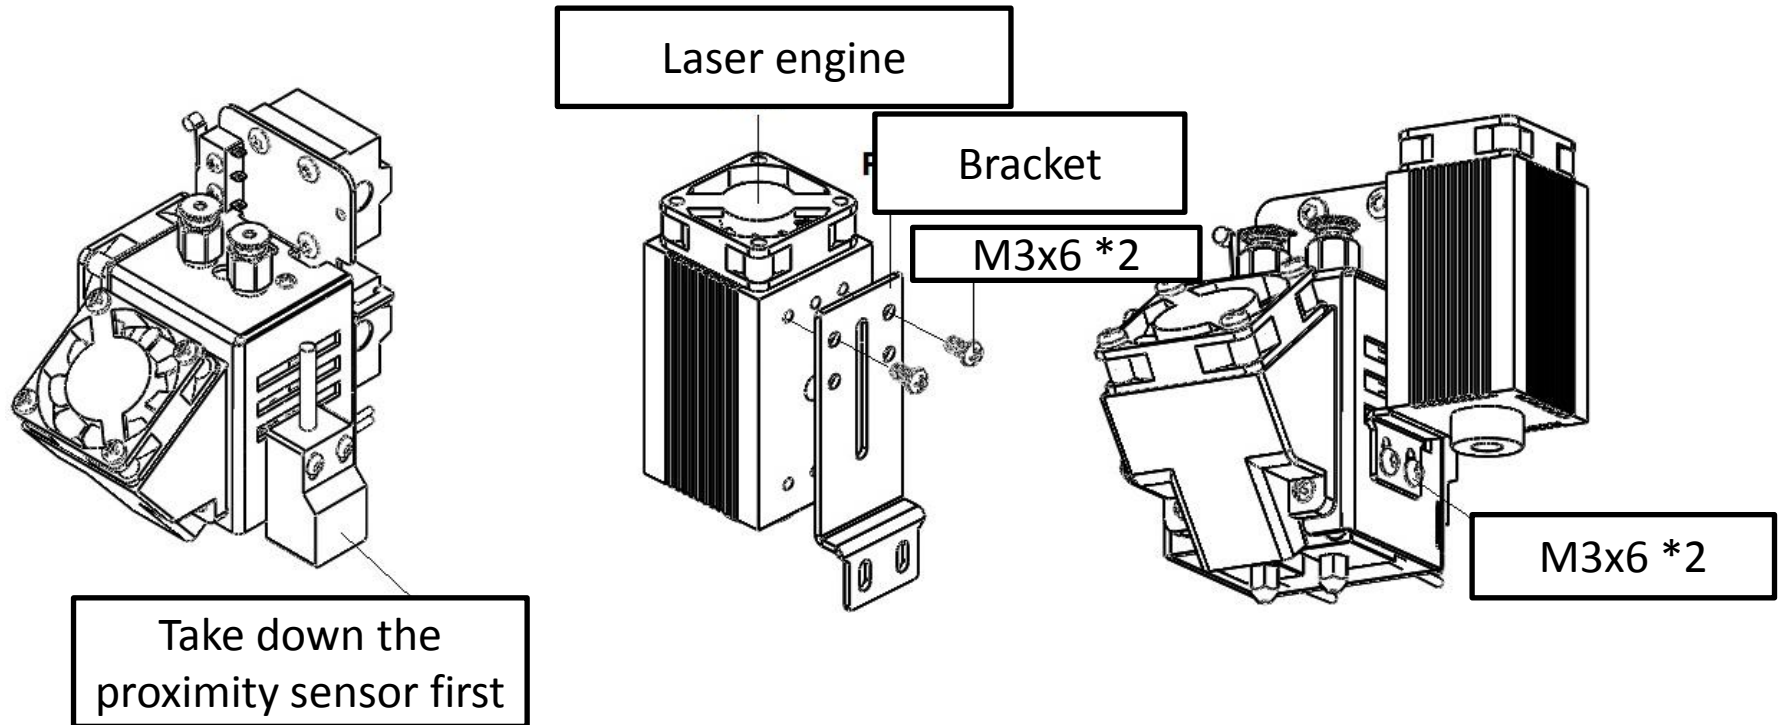

Laser Engine Type 2


Install the laser kit to the print head, usually we can install it to the right side of housing of the hot end.

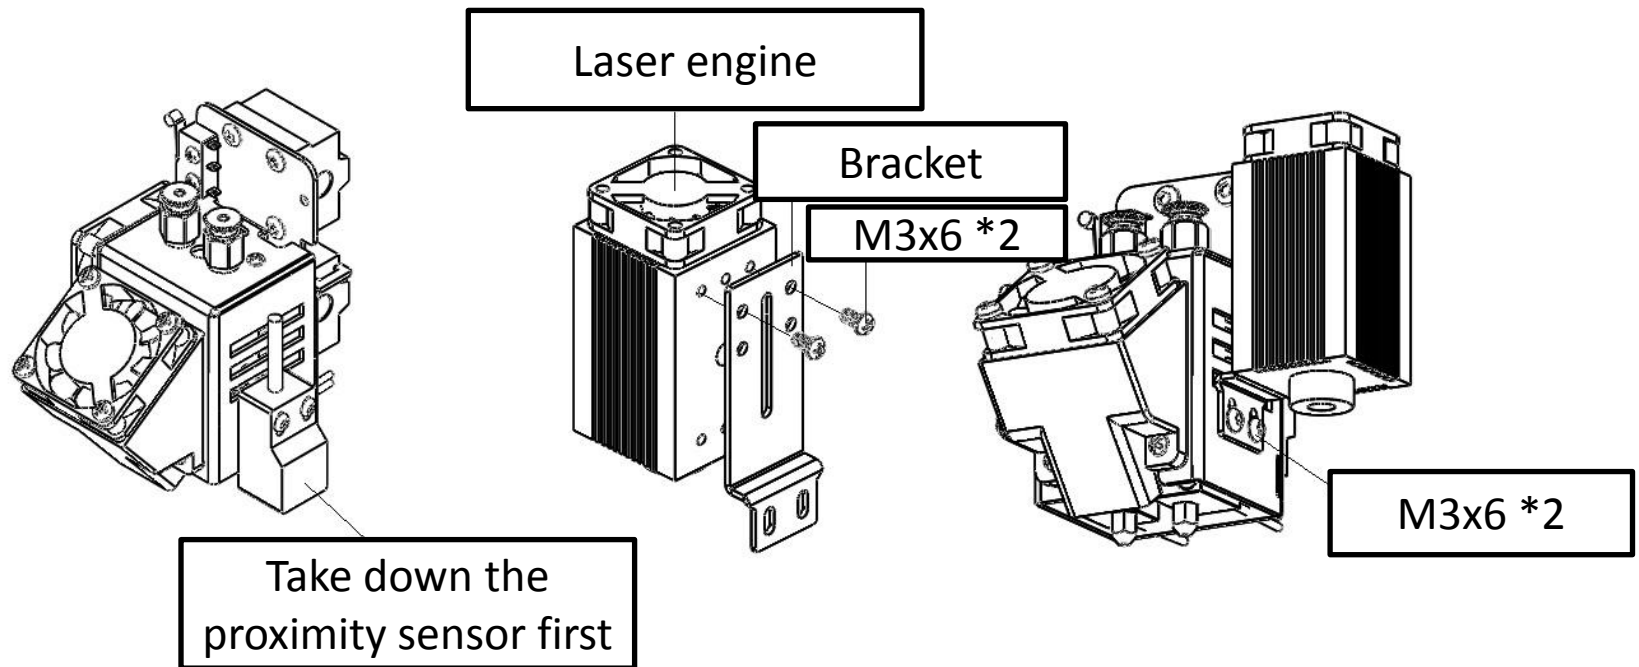


Laser Engine Type 3

For different versions and models of printers, we also made some STL files as a bracket to install the laser engine, please refer to the pictures to install the laser engine.


Stl file Directory: Bracket stl file for install laser kit

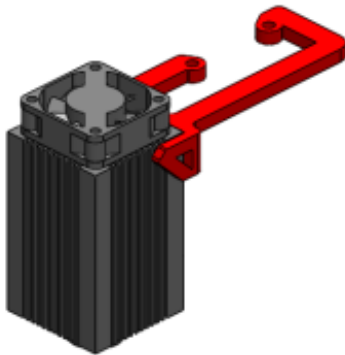


For Z9

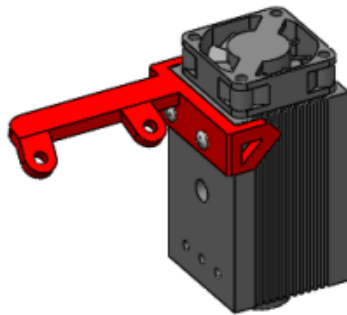


For D805S

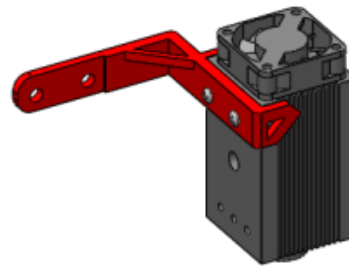


For P802C

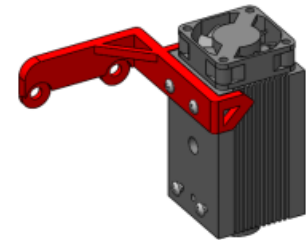

For P802N/M

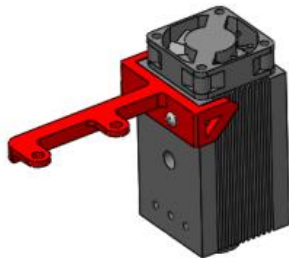

For P802Q(older version)

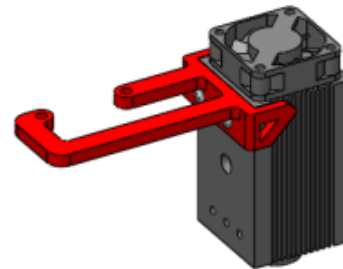

For Dual Extruder hotend