

How to adjust drive current of motor

WARNING!! Please pay attention to the direction of the motor driver module, incorrect direction will damage the control board and module!!!!

NOTE!! We have set the drive current when the printer kit left factory, usually you don't need to adjust it again.

If you want to adjust the current of the motor driver module, please measure the voltage (**Vref**) on the potentiometer with a multimeter.


Recommended current of stepper motors:

X & Z: 0.8A

Y & Extruder: 10.~1.2A

For **4988** motor drive module.

I motor = Vref * 1.25

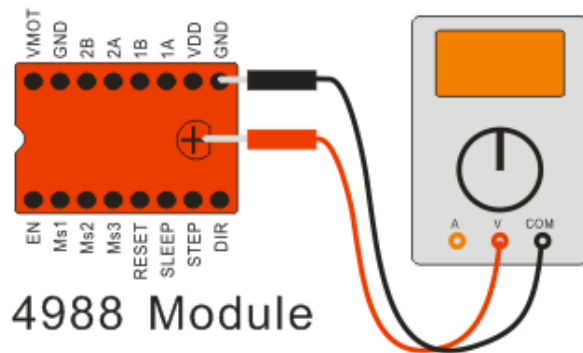

For **8825** motor drive module.

I motor = Vref * 2

