



How to un-assemble M4 printhead

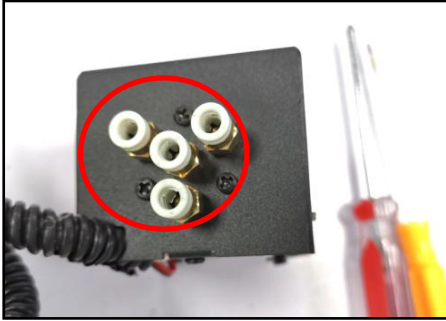


Take down fittings and
the screws which fixed the hotend

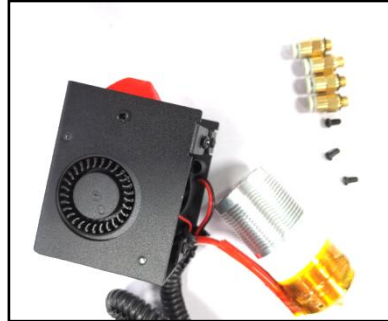


Take down the hotend




Take down the screws which
fixed the cooler FAN

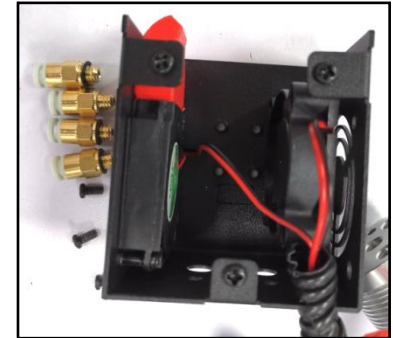

Take down the cooler FAN

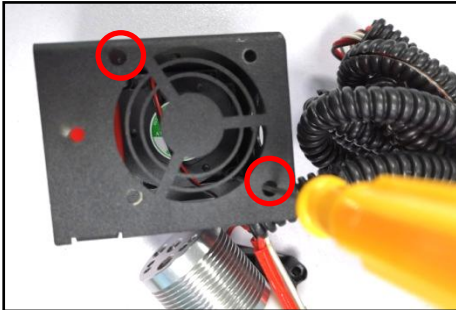

Take down the screws which fixed
extruder FAN

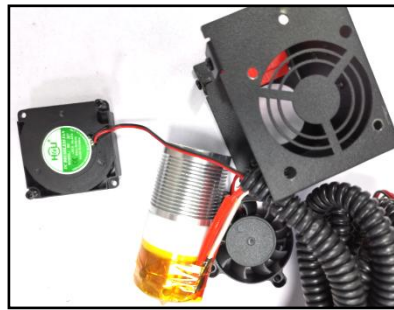

Take down the extruder FAN