



How to set auto shutdown function

V1.0

How to set auto shutdown function

Set 15 minutes automatic shutdown function, can save electricity and reduce electricity safety, prolong the service life of the printer.


The following operation flow can be followed to perform the auto shutdown function.



Enabled auto shutdown,
from OFF to ON



The first case: Auto shutdown in
non printing state.

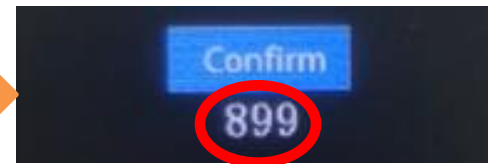

The second case: Auto
shutdown after printing.

Note:Detailed process can refer to the video <Auto_shutdown.mp4>.