


Liberty 370


Quick reference guide

Your flat number is mentioned in this area

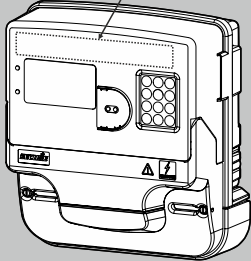

Note: This smart prepayment meter has treasure of information, please download the mobile app for your comfort, alternatively read this guide.

1 Display details



- A** Parameter name
- B** Parameter value
- C** Unit display
- D** Switch status OFF ON
- E** Glows - for all money related parameters

Note: Display backlight flashes during DG changeover.

2 Keypad functions*

Cost of energy used

ABC code, total cash

Accounting and tariff

DG/ Mains powered, Days left, load cost, Prepayment/ Credit mode

Token history

Monthly energy expenses

Enter token and backspace

Load, load cost and maximum demand

Refund, settlement code


Energy consumption

Enter

Home, Electrical parameters, meter serial number, meter terminal adaptor serial number and connection status

Note: Refer appendix I for more details.

3 Account balance (applicable for prepayment mode)

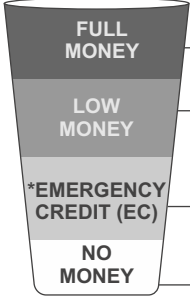

Account balance	Electricity supply
FULL MONEY	✓
LOW MONEY	✓
*EMERGENCY CREDIT (EC)	✗
NO MONEY	✗

You have sufficient balance.

Low balance, recharge your meter soon.


You have no balance. Your meter is running on emergency credit. Recharge immediately (using mobile app) to avoid disconnection.

You have no balance. EC also used, recharge immediately to reconnect supply.

Note: In case of Credit mode, 'No data' will be shown on account balance display.

* EMERGENCY-CREDIT (EC)- credit available for limited duration when you have no balance in your account. This is deducted when you recharge next.


4 Buy electricity (applicable for prepayment mode)

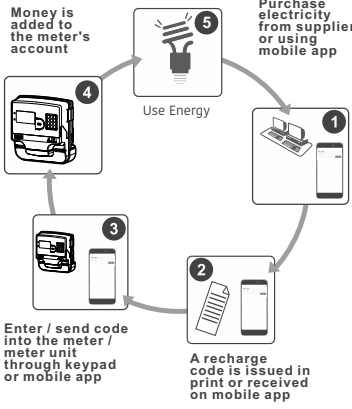

Note: In case of Credit mode, 'No data' will be shown on account balance display.

5 Connect to the meter

A. Login to mobile app

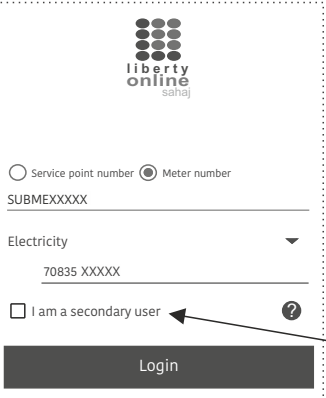


Service point number SUBMEXXXXX

Electricity 70835 XXXXX

☐ I am a secondary user

Login

B. Enter OTP

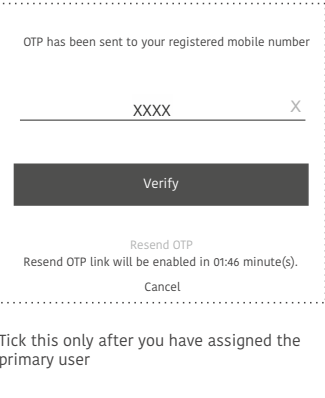

OTP has been sent to your registered mobile number

XXXX


Verify

Resend OTP link will be enabled in 01:46 minute(s).

Cancel


Tick this only after you have assigned the primary user

C. Press Connect button

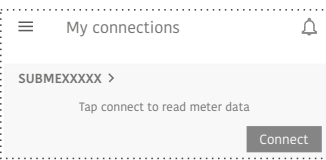

Notes:


To connect with meter, the mobile app device must be in 20(line of sight) meters range.



Scan to download Liberty online app (Android/iOS supported) Refer to the Liberty online (user mobile app) user manual for details.

6 Reducing supply/Prevent misuse

Use **edit** option on Load configuration page in mobile app to reduce mains or DG supply

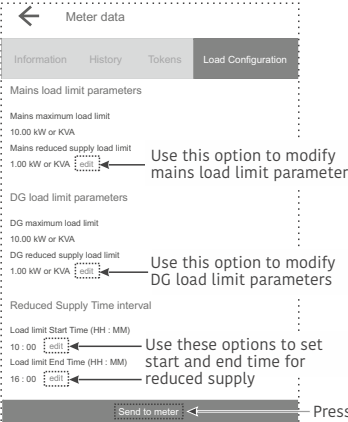

Mains load limit parameters

Mains maximum load limit 10.00 kW or KVA

Mains reduced supply load limit 1.00 kW or KVA

DG load limit parameters

DG maximum load limit 10.00 kW or KVA

DG reduced supply load limit 1.00 kW or KVA

Reduced Supply Time interval

Load limit Start Time (HH : MM)

Load limit End Time (HH : MM)

Send to meter

7 Manual recharge method

Press **START EDIT** and enter the digits of recharge code

15379 21865 31294 57140

If required, press **START EDIT** to delete an incorrect entry else press **SUBMIT**.

Accepted Or Rejected

If a code is rejected one of the following messages appears:


dg kb faulty

used already

over flow cash

i For unknown errors, contact your electricity supplier

8 Reducing overloads

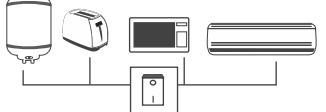

Over Load x

DC Over Load x

In case of overloading, the meter will sound an audible alarm, along with display message, and disconnect supply.

Switch OFF unnecessary appliances to reduce the load.

Next press button **0** to reconnect supply.

i If reconnection fails, contact electricity supplier

9 What to do when you hear an alarm

Message	Action on alarm
Low money	1. Press Submit button to acknowledge. 2. Recharge soon.
No money	1. Your supply is disconnected. Press Submit button to enable emergency credit and temporarily restore your supply. 2. Recharge immediately.
Emergency Credit	1. You are using Emergency credit. 2. Recharge your meter immediately to avoid disconnection.

10 Setting alarms

Alarm on Low money ₹

Enter 00000-0xxxx-7 (xxxx denotes ₹ from 0000 to 9999)

Alarm is set to the desired value

No alarm period

Enter 0HHMM-0HHMM-6

HHMM denotes time in hours and minutes

Alarm will not ring during the set time.

11 *Know the cost of electricity used

Press button **2** (repeat to scroll through sequence)

Mains supply displays

DG (backup) supply displays

This is an example only. Displays on right side show cost of energy used

12 *Know the cost of electricity used

Press button **2** (repeat to scroll through sequence)

Mains supply displays

DG (backup) supply displays

This is an example only. Displays on right side show cost of energy used

13 *Know the cost of electricity used

Press button **2** (repeat to scroll through sequence)

Mains supply displays

DG (backup) supply displays

This is an example only. Displays on right side show cost of energy used

***Note:** The displays, keypad functions, Friendly Credit (FC) and Emergency Credit (EC) may vary as per your RWA.

SECURE

www.securemeters.com

Copyright 2022, SIHPL