

RE01 1500KB, 256KB Group

CMSIS Driver R_SPI Specifications

Summary

This document describes the detailed specifications of the SPI driver provided in the RE01 1500KB and 256KB Group CMSIS software package (hereinafter called the SPI driver).

Target Device

RE01 1500KB Group

RE01 256KB Group

Contents

1. Overview	4
2. Driver Configuration	4
2.1 File Configuration	4
2.2 Driver APIs	6
2.3 Pin Configuration	11
2.4 Communication Control and NVIC Interrupt Setting	12
2.5 Communication Control (Interrupt/DMAC/DTC) Configuration Procedure	14
2.6 Macro and Type Definitions	15
2.6.1 SPI Control Command Definitions	15
2.6.2 SPI-Specific Error Code Definitions	18
2.6.3 SSL Signal Definitions	19
2.6.4 SPI Event Code Definitions	19
2.7 Structure Definitions	20
2.7.1 ARM_SPI_STATUS Structure	20
2.7.2 ARM_SPI_CAPABILITIES Structure	20
2.8 State Transitions	21
3. Descriptions of Driver Operations	23
3.1 Master Mode	23
3.1.1 Initial Setting Procedure for Master Mode	23
3.1.2 Transmission in Master Mode	24
3.1.3 Reception in Master Mode	28
3.1.4 Transmission and Reception in Master Mode	32
3.2 Slave Mode	36
3.2.1 Initial Setting Procedure for Slave Mode	36
3.2.2 Transmission in Slave Mode	37
3.2.3 Reception in Slave Mode	41
3.2.4 Transmission and Reception in Slave Mode	45
3.3 Configurations	49
3.3.1 Transmission Control Setting	49
3.3.2 Reception Control Setting	49
3.3.3 SPTI Interrupt Priority Level	49
3.3.4 SPRI Interrupt Priority Level	50
3.3.5 SPII Interrupt Priority Level	50
3.3.6 SPEI Interrupt Priority Level	50
3.3.7 SPTEND Interrupt Priority Level	50
3.3.8 Definition of Software-Controlled SSL Pin	51
3.3.9 Function Allocation to RAM	51
4. Detailed Information of Driver	52
4.1 Function Specifications	52
4.1.1 ARM_SPI_GetVersion Function	52
4.1.2 ARM_SPI_GetCapabilities Function	53
4.1.3 ARM_SPI_Initialize Function	54
4.1.4 ARM_SPI_Uninitialize Function	56

4.1.5	ARM_SPI_PowerControl Function.....	58
4.1.6	ARM_SPI_Send Function	60
4.1.7	ARM_SPI_Receive Function	63
4.1.8	ARM_SPI_Transfer Function	66
4.1.9	ARM_SPI_GetDataCount Function	69
4.1.10	ARM_SPI_Control Function.....	70
4.1.11	ARM_SPI_GetStatus Function	75
4.1.12	spi_set_init_master Function	76
4.1.13	spi_set_init_slave Function.....	78
4.1.14	spi_set_init_common Function	79
4.1.15	rspi_baud_set Function.....	82
4.1.16	spi_set_regs_clear Function	84
4.1.17	spi_init_register Function	85
4.1.18	spi_interrupt_disable Function.....	86
4.1.19	spi_ir_flag_clear Function	88
4.1.20	check_tx_available Function.....	90
4.1.21	check_rx_available Function.....	93
4.1.22	spi_transmit_stop Function	96
4.1.23	spi_send_setting Function	98
4.1.24	spi_receive_setting Function	101
4.1.25	dma_config_init Function	103
4.1.26	spti_handler Function.....	104
4.1.27	spri_handler Function	106
4.1.28	spii_handler Function	107
4.1.29	spei_handler Function.....	108
4.1.30	sptend_handler Function	110
4.2	Macro and Type Definitions	111
4.2.1	Macro Definition List	111
4.3	Structure Definitions.....	113
4.3.1	st_spi_resources_t Structure	113
4.3.2	st_spi_transfer_info_t Structure	114
4.3.3	st_spi_info_t Structure	115
4.3.4	st_spi_reg_buf_t Function.....	116
4.4	Data Table Definitions.....	116
4.4.1	Data Table for Bit Rate Division Setting	116
4.5	Calling External Functions	117
5.	Usage Notes	119
5.1	Registering SPI Interrupts with NVIC	119
5.2	Pin Configuration.....	119
5.3	SSL Pin Control Using Control Function.....	123
5.4	Timeout for clearing interrupt enable bit 0	123
5.5	Power supply open control register (VOCR) setting	124
5.6	Resuming communication in slave mode and CPHA0	124
5.7	SSL signal control during multiple data communication	125
5.8	Notes on using DTC.....	126

6. Reference Documents.....	127
Revision History.....	128

1. Overview

This is an SPI driver for RE01 1500KB and 256KB Group devices and is compliant with the ARMS's basic CMSIS software standard. This driver uses the following peripheral functions.

Table 1-1 Peripheral functions used by the R_SPI driver

Peripheral functions	Description
Serial peripheral interface (SPI)	Uses SPI to achieve SPI communication (4-wire) or clock synchronous communication (3-wire)
Data transfer controller (DTC) (Note)	When DTC control is selected, DTC is used to write data to the SPI data register (SPDR) and read data from the SPDR.
DMA controller (DMAC) (Note)	When DMAC control is selected, DMAC is used to write data to the SPI data register (SPDR) and read data from the SPDR.

Note. Used only when DMAC or DTC is specified for communication control. For details, refer to "2.4 Communication Control and NVIC Interrupt Setting".

2. Driver Configuration

This chapter describes the information required for using this driver.

2.1 File Configuration

The SPI driver conforms to the CMSIS driver package specification and consists of six files: "Driver_SPI.h" in the ARM CMSIS file storage directory, "r_spi_cmsis_api.c", "r_spi_cmsis_api.h", "r_spi_cfg.h", "pin.c", and "pin.h", in the vendor-specific file storage directory. The functions of the files are shown in Table 2-1, and the file configuration is shown in Figure 2-1.

Table 2-1 Functions of R_SPI Driver Files

File Name	Description
Driver_SPI.h	CMSIS Driver standard header file.
r_spi_cmsis_api.c	Driver source file. This provides the main function of the driver. To use the SPI driver, you must build this file.
r_spi_cmsis_api.h	Driver header file. The macro, type, and prototype declarations used in the driver are defined here.
r_spi_cfg.h	Configuration definition file. This provides the configuration definitions that can be modified by the user.
pin.c	Pin setting file. This provides pin assignment processing for the driver.
pin.h	Pin setting header file.

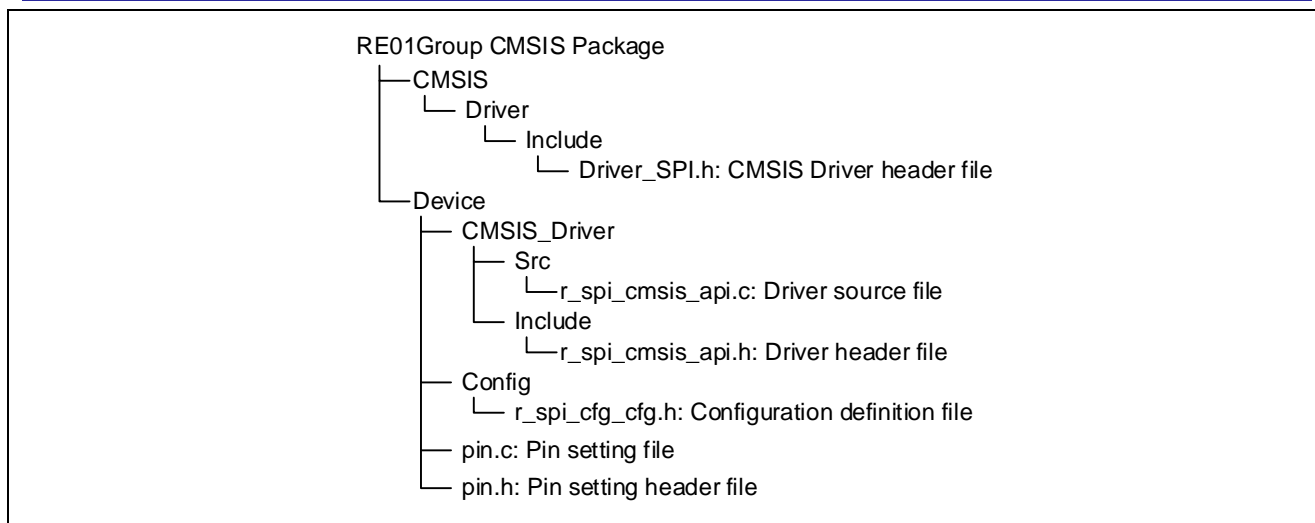


Figure 2-1 File Configuration of SPI Driver

2.2 Driver APIs

The SPI driver provides channel-specific instances. To use this driver, access APIs by using function pointers to each instance. The list of the SPI driver instances, examples of instance declaration, and the APIs contained in the instance are shown in Table 2-2, Figure 2-2, and Table 2-3. Examples of access to the SPI driver are shown in Figure 2-3 and Figure 2-4.

Table 2-2 List of SPI Driver Instances

Instance	Description
ARM_DRIVER_SPI Driver_SPI0	Instance for using SPI0
ARM_DRIVER_SPI Driver_SPI1	Instance for using SPI1

```
#include "R_Driver_SPI.h"

// SPI driver instance ( SPI0 )
extern ARM_DRIVER_SPI Driver_SPI0;
ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0;
```

Figure 2-2 Example of SPI Driver Instance Declaration

Table 2-3 SPI Driver APIs

API	Description	Reference
Initialize	Initializes the SPI driver (initializes RAM, registers interrupts with NVIC, and releases resource lock). When the DMA is used for transmission/reception, It also initializes the DMA module.	4.1.3
Uninitialize	Releases the SPI driver (releases the pins and transitions to the module stop state) It will also cause a transition to the module stop state if the SPI is not in the state after transitioning to the module start state, then initializing registers and releasing pins. It will also release the DMA driver if the DMA is used for transmission/reception.	4.1.4
PowerControl	Releases the SPI from the module stop state or causes a transition to the state.	4.1.5
Send	Starts transmission.	4.1.6
Receive	Starts reception.	4.1.7
Transfer	Starts transmission/reception.	4.1.8
GetDataCount	Obtains transmit/receive data count.	4.1.9
Control	Executes the control commands of the SPI. For the control commands, see section 2.4.1, SPI Control Command Definitions.	4.1.10
GetStatus	Obtains the status of the SPI.	4.1.11
GetVersion	Obtains the version of the SPI driver.	4.1.1
GetCapabilities	Obtains the capabilities of the SPI driver.	4.1.2

Table 2-4 List of SPI Control Command Capability Setting Definitions

Command	Description
ARM_SPI_MODE_INACTIVE	Causes the SPI to transition to the inactive state, and configures the pins. Initializes the SPI settings.
ARM_SPI_MODE_MASTER	Initializes the SPI in master mode, and configures the pins. Should be specified in combination with an SS operation selection definition, frame format definition, data length definition, and bit order definition. Specify a baud rate for the second argument.
ARM_SPI_MODE_SLAVE	Initializes the SPI in slave mode, and configures the pins. Should be specified in combination with an SS operation selection definition, frame format definition, data length definition, and bit order definition.
ARM_SPI_SET_BUS_SPEED	Sets the transfer speed. Specify a baud rate as the second argument.
ARM_SPI_GET_BUS_SPEED	Obtains the transfer speed.
ARM_SPI_SET_DEFAULT_TX_VALUE	Sets the transmit data (default data) to be output during reception. Set the default data value as the second argument.
ARM_SPI_CONTROL_SS	Controls the SSL0 pin. Set either of the following values as the second argument. ARM_SPI_SS_INACTIVE: SSL0 pin = inactive ARM_SPI_SS_ACTIVE: SSL0 pin = active
ARM_SPI_ABORT_TRANSFER	Aborts communication.
ARM_SPI_MODE_MASTER_SIMPLEX	Disabled (Note)
ARM_SPI_MODE_SLAVE_SIMPLEX	Disabled (Note)

Note: Not supported by the SPI driver. If this definition is specified in the Control function, ARM_DRIVER_ERROR_UNSUPPORTED will be returned.

All the capabilities required for initializing the SPI in master or slave mode should be specified when setting the mode by using the Control function.

Example:

Initializes the SPI in master mode with the following settings:

SPI operation: Slave select control output controlled by hardware
 Clock polarity: RSPCK is low in idle state
 Clock phase: Data sampling on rising edge
 Data change on falling edge
 8-bit data length
 MSB first
 100 kbps

```
spi0Drv -> Control(ARM_SPI_MODE_MASTER | ARM_SPI_SS_MASTER_HW_OUTPUT |
ARM_SPI_MSB_LSB | ARM_SPI_CPOLO_CPHA0 | ARM_SPI_DATA_BITS(8), 100000);
```

Table 2-5 to Table 2-8 list the capabilities that can be specified with the SPI, and Figure 2-3 and Figure 2-4 show the coding examples for accessing the SPI in each mode. If the capability is not specified, default value will be effective for the capability.

Table 2-5 List of SS Operation Definitions

Definition	Description
ARM_SPI_SS_MASTER_UNUSED (default)	Does not use the SSL signals during master operation.
ARM_SPI_SS_MASTER_SW	During master operation, uses slave select control through software control.
ARM_SPI_SS_MASTER_HW_OUTPUT	During master operation, outputs slave select control through hardware control.
ARM_SPI_SS_MASTER_HW_INPUT	Disabled (Note)
ARM_SPI_SS_SLAVE_HW	During slave operation, monitors slave select input through hardware control.
ARM_SPI_SS_SLAVE_SW	During slave operation, monitors slave select input through software control.

Note: Not supported by the RE01 SPI driver.

Table 2-6 List of SPI Frame Format Definitions

Definition	Description
ARM_SPI_CPOL0_CPHA0 (default)	Clock polarity (0): RSPCK is low in idle state. Clock phase (0): Data is sampled on rising edge, and changes on falling edge.
ARM_SPI_CPOL0_CPHA1	Clock polarity (0): RSPCK is low in idle state. Clock phase (1): Data changes on rising edge, and is sampled on falling edge.
ARM_SPI_CPOL1_CPHA0	Clock polarity (1): RSPCK is high in idle state. Clock phase (0): Data is sampled on rising edge, and changes on falling edge.
ARM_SPI_CPOL1_CPHA1	Clock polarity (1): RSPCK is high in idle state. Clock phase (1): Data changes on rising edge, and is sampled on falling edge.
ARM_SPI_TI_SSI	Disabled (Note)
ARM_SPI_MICROWIRE	Disabled (Note)

Note: Not supported by the RE01 SPI driver.

Table 2-7 List of Data Length Definitions

Definition	Description
ARM_SPI_DATA_BITS (n)	For n, specify the data length in bits to be used. Data length can be selected from among 8 to 16, 20, 24, and 32.

Table 2-8 List of Bit Order Definitions

Definition	Description
ARM_SPI_MSB_LSB (default)	MSB first
ARM_SPI_LSB_MSB	LSB first


```

#include "Driver_SPI.h"

static void spi_callback (uint32_t event);

// SPI driver instance ( SPI0 )
extern ARM_DRIVER_SPI Driver_SPI0;
ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0;

// Receive Buffer

static uint8_t tx_data[3] = {0x01, 0x02, 0x03};
static uint8_t rx_data[3];
main()
{
    (void)spi0Drv->Initialize(spi_callback);           /* Initialize the SPI driver */
    (void)spi0Drv->PowerControl(ARM_POWER_FULL);      /* Release the SPI from module stop state */
    /*
    (void)spi0Drv->Control(ARM_SPI_MODE_MASTER |      /* Master mode */
                        ARM_SPI_CPOL0_CPHA0 |        /* Clock polarity: 0, clock phase: 0 */
                        ARM_SPI_LSB_MSB |            /* LSB first */
                        ARM_SPI_SS_MASTER_HW_OUTPUT | /* Slave select control by HW */
                        ARM_SPI_DATA_BITS(8) ,       /* Data length: 8 bits */
                        100000);                     /* Transfer rate: 100kbps */
    (void)spi0Drv->Transfer (&tx_data[0], &rx_data[0], 3); /* Start 3-byte transmission/reception */

    while(1);
}

/*****
* callback function
*****/
static void spi_callback(uint32_t event)
{
    switch( event )
    {
        case ARM_SPI_EVENT_TRANSFER_COMPLETE:
        {
            /* Describe the processing to be performed when communication terminates normally */
        }
        break;

        case ARM_SPI_EVENT_DATA_LOST:
        //case ARM_SPI_EVENT_MODE_FAULT:
        default:
        {
            /* Describe the processing to be performed when a communication error occurs (Note) */
        }
        break;
    }
}

} /* End of function spi_callback() */

```

Figure 2-3 Example of Access to SPI Driver (Master Mode)

Note: An ARM_SPI_EVENT_MODE_FAULT event does not occur for this driver.

```

#include "Driver_SPI.h"

static void spi_callback (uint32_t event);

// SPI driver instance ( SPI0 )
extern ARM_DRIVER_SPI Driver_SPI0;
ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0;

// Receive Buffer

static uint8_t tx_data[3] = {0x01, 0x02, 0x03};
static uint8_t rx_data[3];
main()
{
    (void)spi0Drv->Initialize(spi_callback);           /* Initialize the SPI driver */
    (void)spi0Drv->PowerControl(ARM_POWER_FULL);      /* Release the SPI from module stop state */
    /*
    (void)spi0Drv->Control(ARM_SPI_MODE_SLAVE |        /* Slave mode */
                        ARM_SPI_CPOL0_CPHA0 |        /* Clock polarity: 0, clock phase: 0 */
                        ARM_SPI_LSB_MSB |            /* LSB first */
                        ARM_SPI_SS_SLAVE_HW |        /* Monitor the slave select input controlled
by HW */
                        ARM_SPI_DATA_BITS(8) ,        /* Data length: 8 bits */
                        100000);                     /* Transfer rate: 100kbps */
    (void)spi0Drv->Transfer (&tx_data[0], &rx_data[0], 3) /* Start 3-byte
transmission/reception */

    while(1);
}

/*****
* callback function
*****/
static void spi_callback(uint32_t event)
{
    switch( event )
    {
        case ARM_SPI_EVENT_TRANSFER_COMPLETE:
        {
            /* Describe the processing to be performed when communication terminates normally */
        }
        break;

        case ARM_SPI_EVENT_DATA_LOST:
        //case ARM_SPI_EVENT_MODE_FAULT:
        default:
        {
            /* Describe the processing to be performed when a communication error occurs (Note) */
        }
        break;
    }
}

} /* End of function spi_callback() */

```

Figure 2-4 Example of Access to SPI Driver (Slave Mode)

Note: An ARM_SPI_EVENT_MODE_FAULT event does not occur for this driver.

2.3 Pin Configuration

The pins to be used by this driver are set and released with the `R_RSPI_Pinset_CHn` ($n=0, 1$) and `R_RSPI_Pinclr_CHn` functions in `pin.c`. The `R_RSPI_Pinset_CHn` function is called when transmission or reception is enabled by the Control function. The `R_RSPI_Pinclr_CHn` function is called when transmission or reception is disabled by the Control, PowerControl or Uninitialize function.

Select the pin to be used by editing the `R_RSPI_Pinset_CHn` and `R_RSPI_Pinclr_CHn` ($n = 0, 1$) functions of `pin.c`. For details on pin settings, see "5.2 Pin Configuration".

Pin names of SPI function have added `_A`, `_B`, `_C`, and `_D` suffixes. When assigning SPI functions, select the functional pins with the same suffix. (note)

Note. In the case of SPI function, the same signal names are present with the suffixes "`_A`", "`_B`", "`_C`" and "`_D`" attached. These indicate groups in terms of timing adjustment, and signals from different groups cannot be used at the same time. The exceptions are the `RSPCKA_C` and `MOSIA_C` signals for the SPI and the `SSLB0_D` signal, which can be used at the same time as signals from group B.

2.4 Communication Control and NVIC Interrupt Setting

The SPI driver uses the interrupt handling process by default for transmission control (writing transmit data to the transmit buffer) and reception control (storing receive data in the specified buffer). Changing the set values of the transmission/reception control definition in `r_spi_cfg.h` allows the use of the DMAC or DTC to control transmission and reception.

Table 2-10 lists the definitions to set the transmission and reception control methods, and Table 2-11 lists the definitions of the transmission/reception control methods.

Table 2-9 Definitions to Set Transmission/Reception Control Methods (n = 0, 1)

Definition	Initial Value	Description
<code>SPIn_TRANSMIT_CONTROL</code>	<code>SPI_USED_INTERRUPT</code>	SPIn transmission control (Initial value: interrupt)
<code>SPIn_RECEIVE_CONTROL</code>	<code>SPI_USED_INTERRUPT</code>	SPIn reception control (Initial value: interrupt)

Table 2-10 Definitions of Transmission/Reception Control Methods

Definition	Value	Description
<code>SPI_USED_INTERRUPT</code>	(0)	Uses an interrupt for transmission/reception control.
<code>SPI_USED_DMACH0</code>	(1<<0)	Uses DMACH0 for transmission/reception control.
<code>SPI_USED_DMACH1</code>	(1<<1)	Uses DMACH1 for transmission/reception control.
<code>SPI_USED_DMACH2</code>	(1<<2)	Uses DMACH2 for transmission/reception control.
<code>SPI_USED_DMACH3</code>	(1<<3)	Uses DMACH3 for transmission/reception control.
<code>SPI_USED_DTC</code>	(1<<15)	Uses DTC for transmission/reception control.

It is necessary to register the interrupts used for communication control with the nested vectored interrupt controller (hereinafter referred to as NVIC) in `r_system_cfg.h`. For details, refer to "Interrupt Control" in the RE01 1500KB, 256KB Group Getting Started Guide to Development Using CMSIS Package.

Table 2-12 shows the definition of NVIC registration for each intended use. Figure 2-5 shows the coding example for registering the interrupts with the NVIC.

Table 2-11 Definitions of NVIC Registration for Each Intended Use (n = 0, 1, m = 0 to 3)

Mode	Intended Use	Definition of NVIC Registration
Master	Transmission only	[When interrupts or DTC is used for transmission control] SYSTEM_CFG_EVENT_NUMBER_SPIn_SPTI
		[When DMAC is used for transmission control] SYSTEM_CFG_EVENT_NUMBER_DMAMc_INT
		SYSTEM_CFG_EVENT_NUMBER_SPIn_SPII
	Transmission and reception, or reception only (Note)	[When interrupts or DTC is used for transmission control] SYSTEM_CFG_EVENT_NUMBER_SPIn_SPTI
		[When DMAC is used for transmission control] SYSTEM_CFG_EVENT_NUMBER_DMAMc_INT
		[When interrupts or DTC is used for reception control] SYSTEM_CFG_EVENT_NUMBER_SPIn_SPRI
		[When DMAC is used for reception control] None
Slave	Transmission only	[When interrupts or DTC is used for transmission control] SYSTEM_CFG_EVENT_NUMBER_SPIn_SPTI
		[When DMAC is used for transmission control] SYSTEM_CFG_EVENT_NUMBER_DMAMc_INT
		SYSTEM_CFG_EVENT_NUMBER_SPIn_SPTEND SYSTEM_CFG_EVENT_NUMBER_SPIn_SPEI
	Transmission and reception, or reception only (Note)	[When interrupts or DTC is used for transmission control] SYSTEM_CFG_EVENT_NUMBER_SPIn_SPTI
		[When DMAC is used for transmission control] SYSTEM_CFG_EVENT_NUMBER_DMAMc_INT
		[When interrupts or DTC is used for reception control] SYSTEM_CFG_EVENT_NUMBER_SPIn_SPRI
		[When DMAC is used for reception control] SYSTEM_CFG_EVENT_NUMBER_DMAMc_INT
		SYSTEM_CFG_EVENT_NUMBER_SPIn_SPEI

Note: Since dummy data is transmitted even when used for reception only, transmission-side settings are also necessary.

```

. . .
#define SYSTEM_CFG_EVENT_NUMBER_SCI0_AM
    (SYSTEM_IRQ_EVENT_NUMBER_NOT_USED)    /*!< Numbers 0/4/8/12/16/20/24/28 only */
#define SYSTEM_CFG_EVENT_NUMBER_SPI0_SPRI
    (SYSTEM_IRQ_EVENT_NUMBER0)            /*!< Numbers 0/4/8/12/16/20/24/28 only */
#define SYSTEM_CFG_EVENT_NUMBER_SOL_DH
    (SYSTEM_IRQ_EVENT_NUMBER_NOT_USED)    /*!< Numbers 0/8/16/24 only */
. . .
#define SYSTEM_CFG_EVENT_NUMBER_SCI0_TXI
    (SYSTEM_IRQ_EVENT_NUMBER_NOT_USED)    /*!< Numbers 1/5/9/13/17/21/25/29 only */
#define SYSTEM_CFG_EVENT_NUMBER_SPI0_SPTI
    (SYSTEM_IRQ_EVENT_NUMBER1)            /*!< Numbers 1/5/9/13/17/21/25/29 only */
#define SYSTEM_CFG_EVENT_NUMBER_SOL_DL
    (SYSTEM_IRQ_EVENT_NUMBER_NOT_USED)    /*!< Numbers 1/9/17/25 only */
. . .
#define SYSTEM_CFG_EVENT_NUMBER_SCI0_TEI
    (SYSTEM_IRQ_EVENT_NUMBER_NOT_USED)    /*!< Numbers 2/6/10/14/18/22/26/30 only */
#define SYSTEM_CFG_EVENT_NUMBER_SPI0_SPII
    (SYSTEM_IRQ_EVENT_NUMBER2)            /*!< Numbers 2/6/10/14/18/22/26/30 only */
#define SYSTEM_CFG_EVENT_NUMBER_SPI0_SPTEND
    (SYSTEM_IRQ_EVENT_NUMBER6)            /*!< Numbers 2/6/10/14/18/22/26/30 only */
#define SYSTEM_CFG_EVENT_NUMBER_USBFS_USBI
    (SYSTEM_IRQ_EVENT_NUMBER_NOT_USED)    /*!< Numbers 2/10/18/26 only */
. . .

```

Figure 2-5 Example of registering an interrupt to NVIC in r_system_cfg.h (SPI0 used)

2.5 Communication Control (Interrupt/DMAC/DTC) Configuration Procedure

The setting procedure for communication control in this driver is shown in Table 2-12. For details on the interrupt settings required for transmission control and interrupt control, refer to "2.4 Communication Control and NVIC Interrupt Setting".

Table 2-12 Communication control setting procedure

Step	modified file	When using Interrupt	When using DMAC	When using DTC	Reference
1	r_spi_cfg.h	<p>Set the use of Interrupt or DMAC or DTC</p> <p>Set the following macro value to SPI_USED_INTERRUPT (Interrupt) (Note 1)</p> <ul style="list-style-type: none"> ● SPIn_TRANSMIT_CONTROL SPI_USED_INTERRUPT ● SPIn_RECEIVE_CONTROL SPI_USED_INTERRUPT <p>(n=0,1)</p>	<p>Set the following macro value to SPI_USED_DMACH (Note 1)</p> <ul style="list-style-type: none"> ● SPIn_TRANSMIT_CONTROL SPI_USED_DMACH ● SPIn_RECEIVE_CONTROL SPI_USED_DMACH <p>(n=0,1) (x=0-3) (y =0-3, Excluding the value of x)</p>	<p>Set the following macro value to SPI_USED_DTC (DTC) (Note 1)</p> <ul style="list-style-type: none"> ● SPIn_TRANSMIT_CONTROL SPI_USED_DTC ● SPIn_RECEIVE_CONTROL SPI_USED_DTC <p>(n=0,1)</p>	Table 2-9 Table 2-10
2	r_system_cfg.h	<p>Set the IRQ number (Note 2) to be registered to the ARM NVIC</p> <p>Set the IRQ number to the macro value shown below. The following table shows the interrupts required for master or slave communication.</p> <p>[For master communication]</p> <ul style="list-style-type: none"> ● SYSTEM_CFG_EVENT_NUMBER_SPI <p>[For slave communication]</p> <ul style="list-style-type: none"> ● SYSTEM_CFG_EVENT_NUMBER_SPI <p>In addition to the above settings, the following interrupts should be set for receive or transmit operations.</p> <p>[For Receive communication]</p> <ul style="list-style-type: none"> ● SYSTEM_CFG_EVENT_NUMBER_SPI ● SYSTEM_CFG_EVENT_NUMBER_SPI ● SYSTEM_CFG_EVENT_NUMBER_SPI <p>[For Send communication]</p> <ul style="list-style-type: none"> ● SYSTEM_CFG_EVENT_NUMBER_SPI <p>For slave transmission, set the following interrupts in addition to the above settings.</p> <p>[For Slave Send communication]</p> <ul style="list-style-type: none"> ● SYSTEM_CFG_EVENT_NUMBER_SPI 	<p>Set the IRQ number to the macro value of the NVIC registration of the DMAC selected in step 1 (Note 3). SYSTEM_CFG_EVENT_NUMBER_DMACH_INT (m=0-3)</p> <p>Set the IRQ number to the macro value shown below.</p> <p>[For master communication]</p> <ul style="list-style-type: none"> ● SYSTEM_CFG_EVENT_NUMBER_DMACH_INT <p>[For slave communication]</p> <ul style="list-style-type: none"> ● SYSTEM_CFG_EVENT_NUMBER_DMACH_INT <p>[For Slave Send communication]</p> <p>SYSTEM_CFG_EVENT_NUMBER_DMACH_INT</p>	Make the same settings as for "When using Interrupt".	Table 2-11
3	main.c	<p>Call the API of each SPI driver</p> <p>Common (content does not change depending on conditions)</p>			-

Note 1. It is possible to set different settings for sending and receiving.
Example: Interrupt for transmission, DTC for reception.

Note 2. IRQ number refers to the "SYSTEM_IRQ_EVENT_NUMBERz" (z = 0 - 31) macro definition.
For details, refer to "Interrupt Control" in "RE01 1500KB,256KB Group Getting Started Guide to Development Using CMSIS Package R01AN4660".

Note 3. When using multiple channels of DMAC, please register NVIC for each channel to be used.

2.6 Macro and Type Definitions

For the SPI driver, the macro and types that can be referenced by the user are defined in the Driver_SPI.h file.

2.6.1 SPI Control Command Definitions

The SPI control commands contain the SPI mode and capability definitions used as the first arguments of the Control function.

Each control command is a combination of the capability setting definition, and/or data length setting definition, SS operation selecting definition, bit order setting definition, and frame format setting definition. When using capability setting to set the SPI communication mode, also set the data length, SS operation, bit order, and frame format.

Figure 2-6 shows the structure of the SPI control command containing various definitions, and Table 2-13 to Table 2-17 show the setting definitions of each capability.

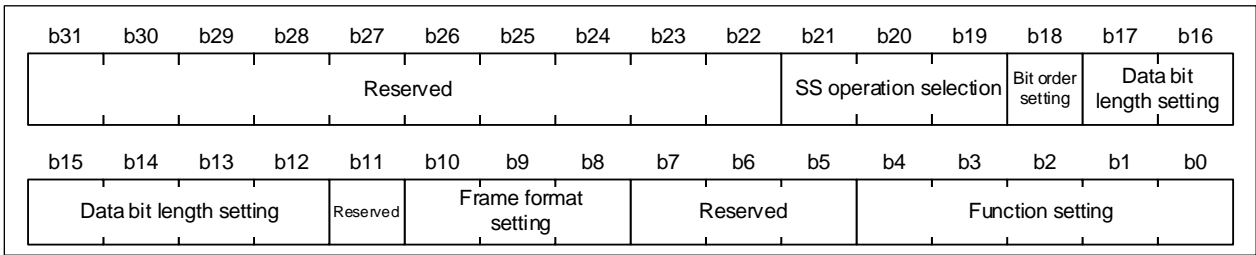


Figure 2-6 Structure of SPI Control Command Containing Definitions

Table 2-13 SPI Control Command Capability Setting Definitions

Definition	Value	Description
ARM_SPI_MODE_INACTIVE	(0x00UL << ARM_SPI_CONTROL_Pos)	Sets SPI inactive mode.
ARM_SPI_MODE_MASTER	(0x01UL << ARM_SPI_CONTROL_Pos)	Sets SPI master mode.
ARM_SPI_MODE_SLAVE	(0x02UL << ARM_SPI_CONTROL_Pos)	Sets SPI slave mode.
ARM_SPI_SET_BUS_SPEED	(0x10UL << ARM_SPI_CONTROL_Pos)	Sets bus speed.
ARM_SPI_GET_BUS_SPEED	(0x11UL << ARM_SPI_CONTROL_Pos)	Obtains bus speed.
ARM_SPI_SET_DEFAULT_TX_VALUE	(0x12UL << ARM_SPI_CONTROL_Pos)	Sets default data.
ARM_SPI_CONTROL_SS	(0x13UL << ARM_SPI_CONTROL_Pos)	Sets SSL0 pin control.
ARM_SPI_ABORT_TRANSFER	(0x14UL << ARM_SPI_CONTROL_Pos)	Aborts communication.
ARM_SPI_MODE_MASTER_SIMPLEX	(0x03UL << ARM_SPI_CONTROL_Pos)	Disabled (Note)
ARM_SPI_MODE_SLAVE_SIMPLEX	(0x04UL << ARM_SPI_CONTROL_Pos)	Disabled (Note)

Note: This definition is not supported by the RE01 SPI driver. If it is specified by the Control function, ARM_SPI_ERROR_MODE will be returned.

Table 2-14 SPI Control Command SS Operation Selecting Definitions

Definition	Value	Description
ARM_SPI_SS_MASTER_UNUSED	(0UL << ARM_SPI_SS_MASTER_MODE_Pos)	Does not use the SSL signals during master operation.
ARM_SPI_SS_MASTER_SW	(1UL << ARM_SPI_SS_MASTER_MODE_Pos)	Uses slave select control through software control during master operation.
ARM_SPI_SS_MASTER_HW_OUTPUT	(2UL << ARM_SPI_SS_MASTER_MODE_Pos)	Outputs slave select control through HW control during master operation.
ARM_SPI_SS_MASTER_HW_INPUT	(3UL << ARM_SPI_SS_MASTER_MODE_Pos)	Disabled (Note)
ARM_SPI_SS_SLAVE_HW	(0UL << ARM_SPI_SS_SLAVE_MODE_Pos)	Monitors slave select input through HW control.
ARM_SPI_SS_SLAVE_SW	(1UL << ARM_SPI_SS_SLAVE_MODE_Pos)	Monitors slave select input through software control during slave operation.

Note: This definition is not supported by the RE01 SPI driver. If it is specified by the Control function, ARM_SPI_ERROR_SS_MODE will be returned.

Table 2-15 SPI Control Command Frame Format Setting Definitions

Definition	Value	Description
ARM_SPI_CPOL0_CPHA0	(0UL << ARM_SPI_FRAME_FORMAT_Pos)	Clock polarity: 0 Clock phase: 0
ARM_SPI_CPOL0_CPHA1	(1UL << ARM_SPI_FRAME_FORMAT_Pos)	Clock polarity: 0 Clock phase: 1
ARM_SPI_CPOL1_CPHA0	(2UL << ARM_SPI_FRAME_FORMAT_Pos)	Clock polarity: 1 Clock phase: 0
ARM_SPI_CPOL1_CPHA1	(3UL << ARM_SPI_FRAME_FORMAT_Pos)	Clock polarity: 1 Clock phase: 1
ARM_SPI_TI_SSI	(4UL << ARM_SPI_FRAME_FORMAT_Pos)	Disabled (Note)
ARM_SPI_MICROWIRE	(5UL << ARM_SPI_FRAME_FORMAT_Pos)	Disabled (Note)

Note: This definition is not supported by the RE01 SPI driver. If it is specified by the Control function, ARM_SPI_ERROR_FRAME_FORMAT will be returned.

Table 2-16 SPI Control Command Data Length Setting Definition

Definition	Value	Description
ARM_SPI_DATA_BITS (n)	((n) & 0x3F) << ARM_SPI_DATA_BITS_Pos)	Sets data length in bits. (n = 8 to 16, 20, 24 or 32)

Note: This definition is not supported by the RE01 SPI driver. If it is specified by the Control function, ARM_SPI_ERROR_DATA_BITS will be returned.

Table 2-17 SPI Control Command Bit Order Setting Definitions

Definition	Value	Description
ARM_SPI_MSB_LSB	(0UL << ARM_SPI_BIT_ORDER_Pos)	MSB first
ARM_SPI_LSB_MSB	(1UL << ARM_SPI_BIT_ORDER_Pos)	LSB first

2.6.2 SPI-Specific Error Code Definitions

These are the error code definitions specific to the SPI.

Table 2-18 List of SPI-Specific Error Code Definitions

Definition	Value	Description
ARM_SPI_ERROR_MODE	(ARM_DRIVER_ERROR_SPECIFIC - 1)	The specified mode is not supported.
ARM_SPI_ERROR_FRAME_FORMAT	(ARM_DRIVER_ERROR_SPECIFIC - 2)	The specified frame format is not supported.
ARM_SPI_ERROR_DATA_BITS	(ARM_DRIVER_ERROR_SPECIFIC - 3)	The specified data length is not supported.
ARM_SPI_ERROR_BIT_ORDER	(ARM_DRIVER_ERROR_SPECIFIC - 4)	The specified bit order is not supported.
ARM_SPI_ERROR_SS_MODE	(ARM_DRIVER_ERROR_SPECIFIC - 5)	The specified slave select mode is not supported.

2.6.3 SSL Signal Definitions

These are the SSL signal control definitions used by the ARM_SPI_CONTROL_SS command of the Control function.

Table 2-19 List of Modem Control Definitions

Definition	Value	Description
ARM_SPI_SS_INACTIVE	(0)	Deactivates the SSL0 output ("H").
ARM_SPI_SS_ACTIVE	(1)	Activates the SSL0 output ("L").

2.6.4 SPI Event Code Definitions

These are the definitions of the events to be notified by callback functions.

Table 2-20 List of SPI Event Codes

Definition	Value	Description
ARM_SPI_EVENT_TRANSFER_COMPLETE	(1UL << 0)	Communication was completed.
ARM_SPI_EVENT_DATA_LOST	(1UL << 1)	Transmit/receive data was lost due to overrun error or underrun error.
ARM_SPI_EVENT_MODE_FAULT (Note)	(1UL << 2)	Mode fault error occurred.

Note: This definition is not supported by this driver.

2.7 Structure Definitions

For the SPI driver, the structures that can be referenced by the user are defined in the Driver_SPI.h file.

2.7.1 ARM_SPI_STATUS Structure

This structure is used when the GetStatus function returns the SPI status.

Table 2-21 ARM_SPI_STATUS Structure

Element Name	Type	Description
busy	uint32_t:1	Shows communication status. 0: Waiting for communication 1: Communication in progress (busy)
data_lost	uint32_t:1	Shows overrun/underrun error status. 0: No overrun/underrun error has occurred. 1: An overrun/underrun error has occurred.
mode_fault	uint32_t:1	Unused (fixed at 0)
reserved	uint32_t:29	Reserved area

2.7.2 ARM_SPI_CAPABILITIES Structure

This structure is used when the GetCapabilities function returns the capabilities of the SPI.

Table 2-22 ARM_SPI_CAPABILITIES Structure

Element Name	Type	Description	Value
simplex	uint32_t:1	Enables or disables simplex mode (master/slave).	0 (disabled)
ti_ssi	uint32_t:1	Enables or disables TI synchronous serial interface.	0 (disabled)
microwire	uint32_t:1	Enables or disables Microwire interface.	0 (disabled)
event_mode_fault	uint32_t:1	Signal mode fault event: Enables or disables ARM_SPI_EVENT_MODE_FAULT.	0 (disabled)
reserved	uint32_t:29	Reserved area	-

2.8 State Transitions

The state transition diagram of the SPI driver is shown in Figure 2-7, and state-specific events and actions are shown in Table 2-23.

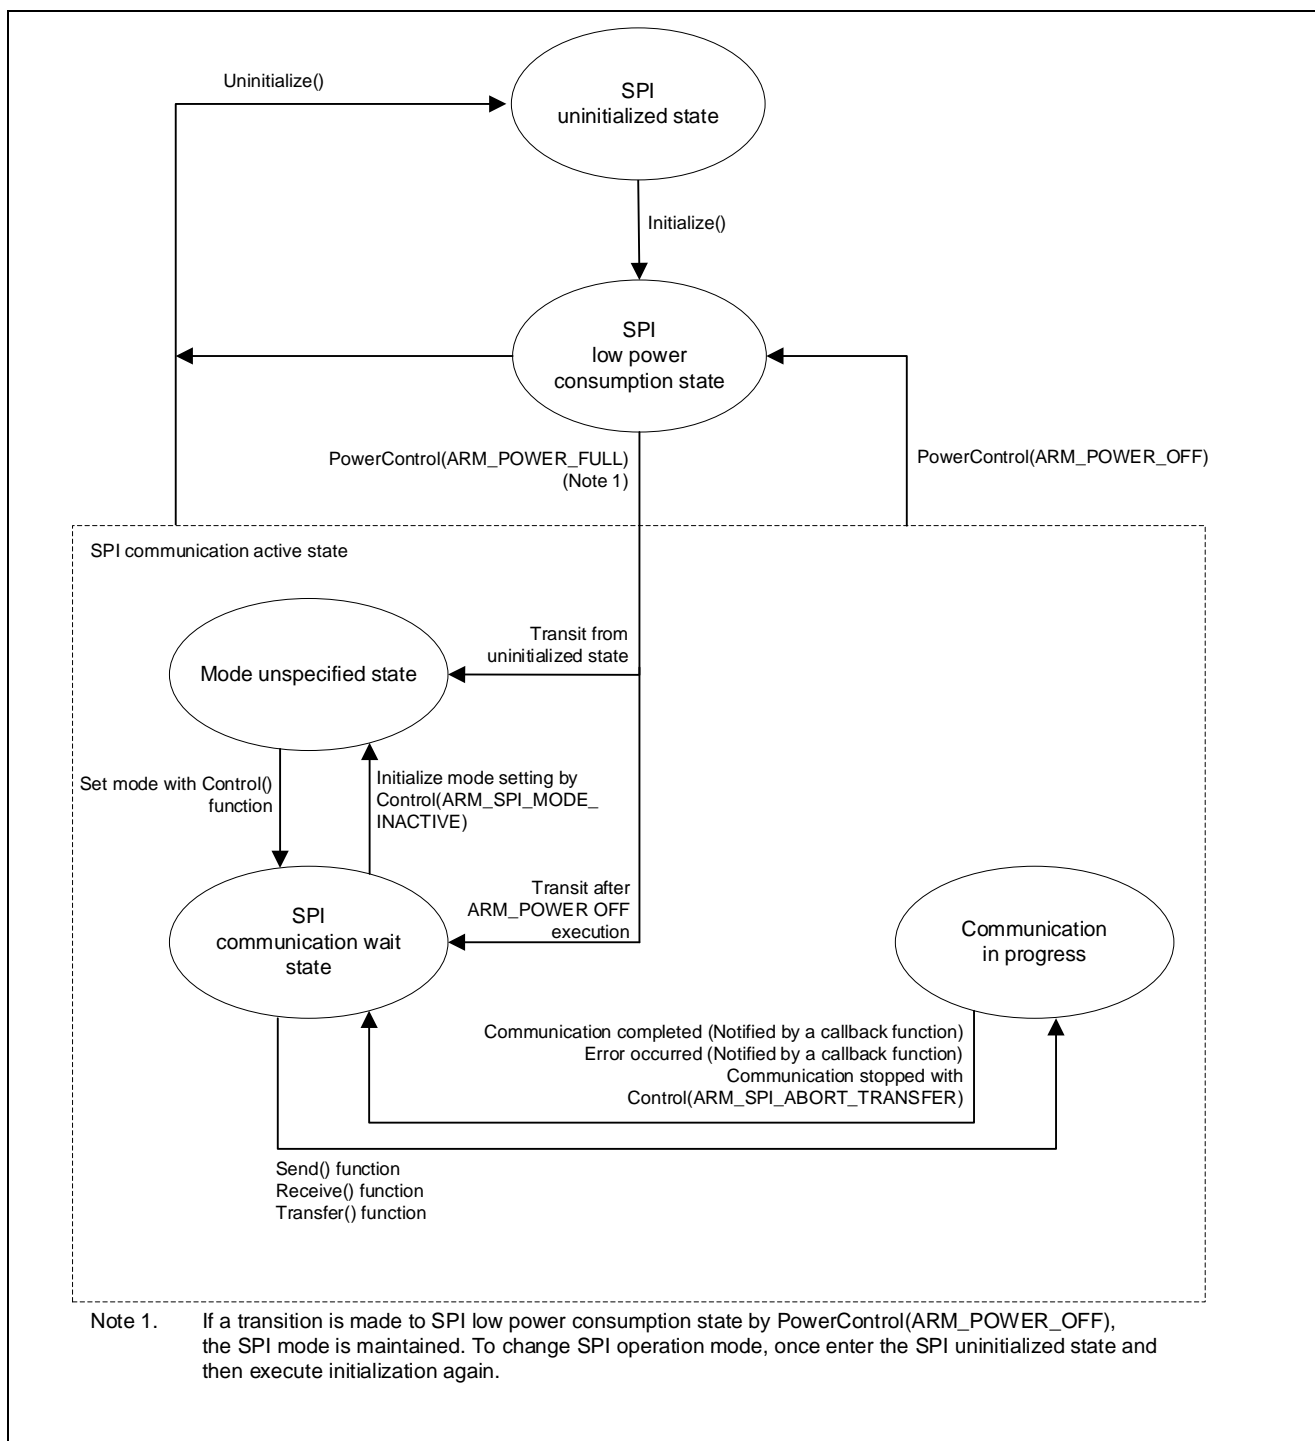


Figure 2-7 State Transitions of SPI Driver

Table 2-23 Events and Actions Specific to SPI Driver State (Note 1)

State	Overview	Event	Action
SPI uninitialized state	State of the SPI driver after reset clear	Executing the Initialize() function	Enters the SPI low power consumption state.
SPI low power consumption state	State in which no clock is supplied to the SPI module	Executing the Uninitialize() function	Enters the SPI uninitialized state.
		Executing the PowerControl(ARM_POWER_FULL) function	Enters the mode unspecified state or the SPI communication wait state. (Note 2)
Mode unspecified state	State in which SPI mode is unspecified	Executing the Control(ARM_SPI_MODE_XXX) function (Note 3)	Enters the SPI communication wait state.
		Executing the Uninitialize() function	Enters the SPI uninitialized state.
		Executing the PowerControl(ARM_POWER_OFF) function	Enters the SPI low power consumption state.
SPI communication wait state	State in which the SPI is waiting for communication	Executing the Uninitialize() function	Enters the SPI uninitialized state.
		Executing the PowerControl(ARM_POWER_OFF) function	Enters the SPI low power consumption state.
		Executing the Send function	Enters the communicating state (Starts transmission).
		Executing the Receive function	Enters the communicating state (Starts reception).
		Executing the Transfer function	Enters the communicating state (Starts transmission/reception).
		Executing the Control(ARM_SPI_CONTROL_SS) function	Controls the SSL pin. (Note 4)
		Executing the Control(ARM_SPI_MODE_INACTIVE) function	Enters the mode unspecified state.
Communicating state	State in which SPI communication is in progress	Executing the Uninitialize() function	Enters the SPI uninitialized state.
		Executing the PowerControl(ARM_POWER_OFF) function	Enters the SPI low power consumption state.
		Terminating communication	Enters the SPI communication enabled state and calls the callback function. (Note 5)
		Error occurrence	Enters the SPI communication enabled state and calls the callback function. (Note 5)
		Disabling transmission/reception with Control() function	Enters the SPI communication wait state.
		Executing the Control(ARM_SPI_ABORT_TRANSFER) function	Aborts communication and enters the SPI communication enabled state.

Note 1. The GetVersion, GetCapabilities, and GetDataCount functions can be executed in any state.

Note 2. Enters the mode unspecified state from the SPI uninitialized state if the SPI mode has not been set.

Note 3. XXX indicates either of the following:

MASTER: master mode

SLAVE: slave mode

Note 4. Effective only if the SSL pin has been set in r_spi_cfg.h and the software slave selection control has been set to be used when the mode has been set.

Note 5. Only if a callback function is specified when the Initialize function is executed, the callback function will be called

3. Descriptions of Driver Operations

The SPI driver provides the SPI operation (3-wire) and clock synchronous operation (4-wire).

In SPI mode (4-wire) master mode, SSL signal output is controlled by hardware, and in slave mode, SSL signal input is monitored by hardware. For clock synchronous operation (3-wire), the SSL signal is controlled and monitored by software.

This chapter describes the procedures for initializing the SPI driver in each mode.

3.1 Master Mode

3.1.1 Initial Setting Procedure for Master Mode

The initial setting procedure for master mode is shown in Figure 3-1.

When enabling transmission and reception, register the interrupts to use with NVIC in r_system_cfg.h. For details, see section 2.4, Communication Control and NVIC Interrupt Setting.

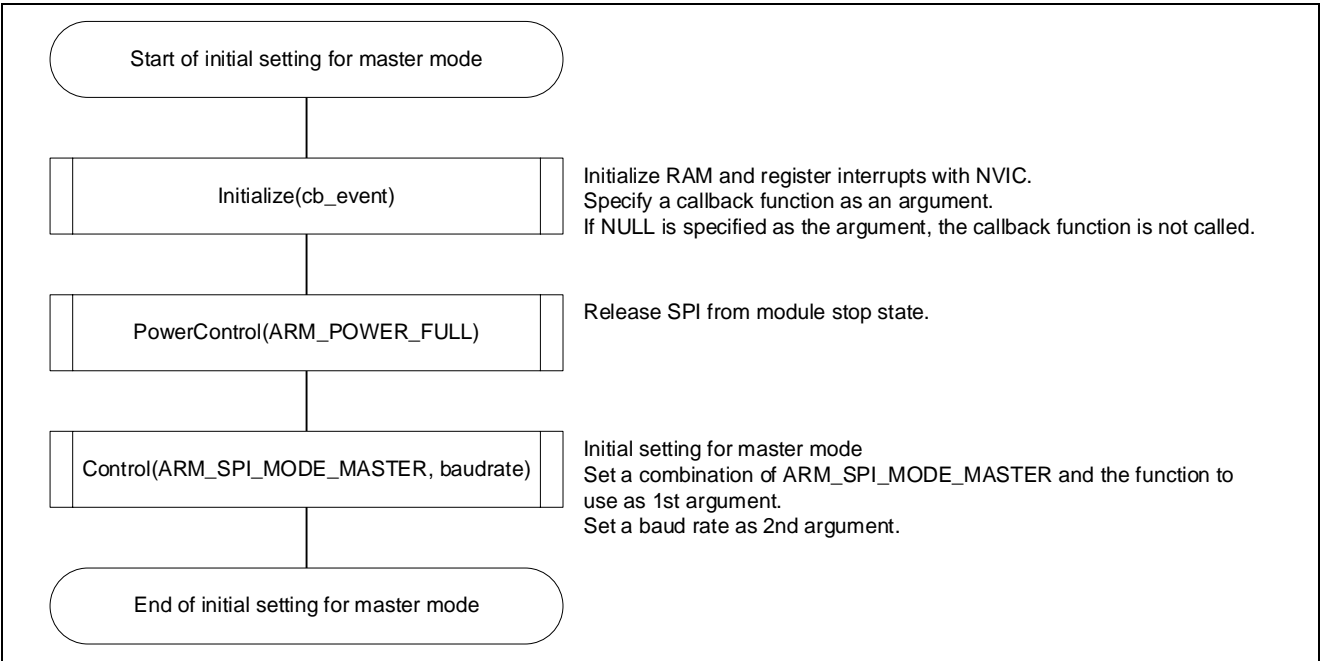


Figure 3-1 Master Mode Initialization Procedure

3.1.2 Transmission in Master Mode

The transmission procedure in master mode is shown in Figure 3-2.

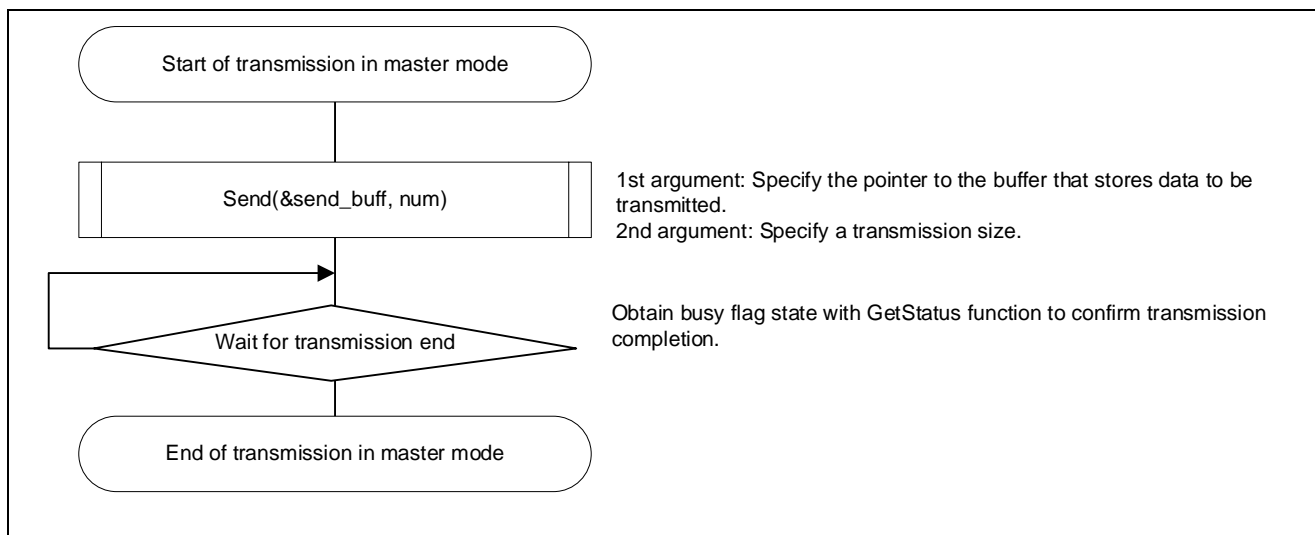


Figure 3-2 Transmission Procedure in Master Mode

If a callback function has been set, it is called using `ARM_SPI_EVENT_TRANSFER_COMPLETE` as an argument when transmission is completed.

The specific transmit operation in master mode is different depending on what method is used for communication control: the interrupt, DMAC, or DTC. Figure 3-3 shows the transmit operation when the interrupt is used for communication control. Figure 3-4 and Figure 3-5 respectively show the operations when the DMAC and the DTC are used for communication control.

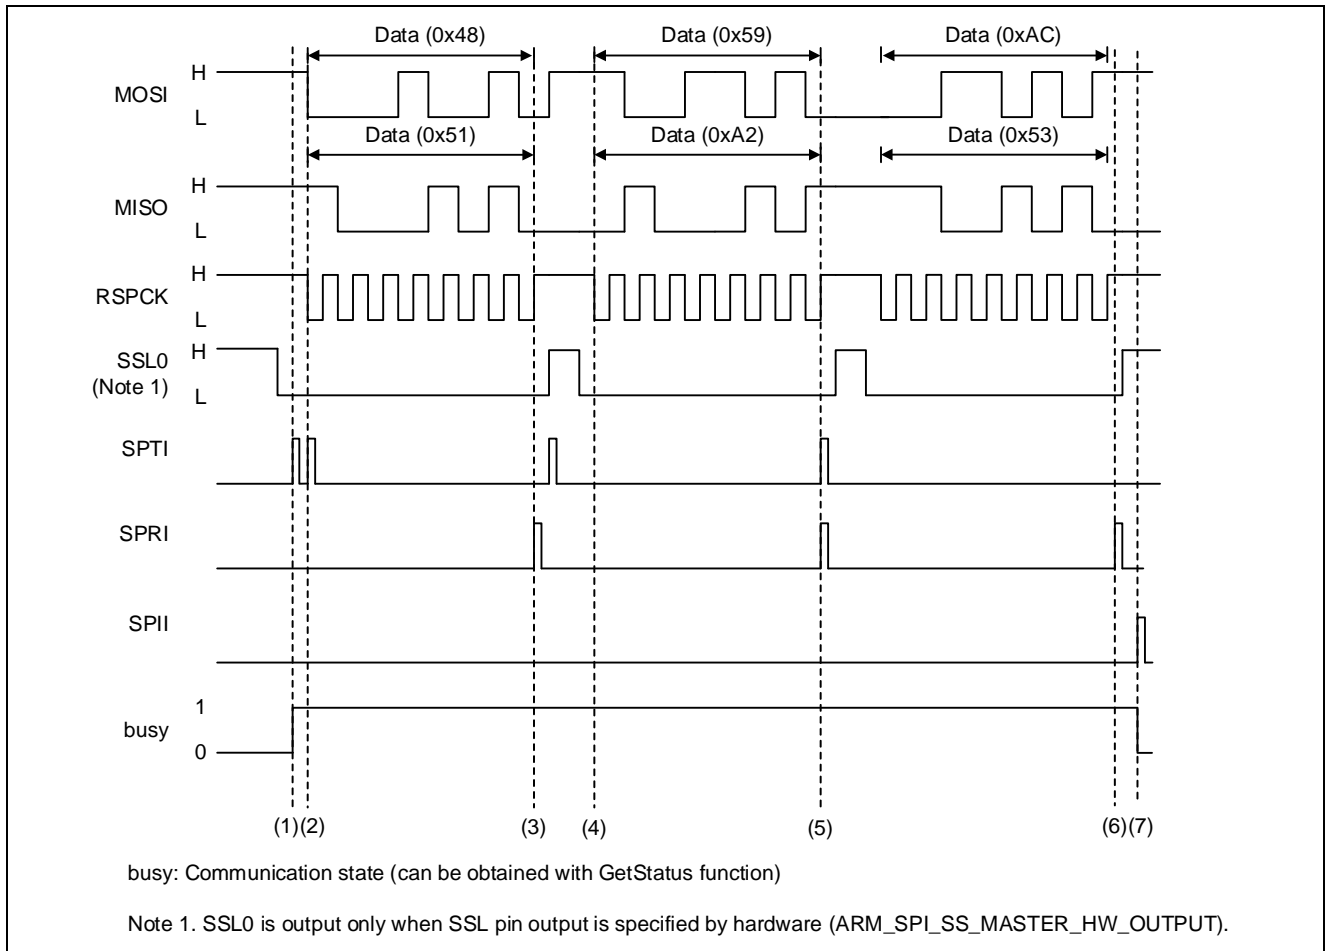


Figure 3-3 Transmit Operation Using Interrupt for Control (3 bytes transmitted)

- (1) When the Send function is executed, the busy flag is set to "1" (communicating state). The SPTI interrupt is also generated and the first byte of data is written to the transmit data register (SPDR).
- (2) At the second SPTI interrupt, the second byte of the transmit data is written to the SPDR register.
- (3) At the third SPTI interrupt, the last transmit data is written to SPDR.
- (4) The second byte of the data written in step 2 is output.
- (5) At the SPTI interrupt after the last data written in step 3 was output, the SPTI interrupt is disabled, and the SPII interrupt is enabled.
- (6) When transmission of all data is completed, the SPII interrupt occurs and the busy flag is cleared to "0" (communication wait state). In the SPII interrupt handling process, all the interrupts used for SPI control are disabled. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument.

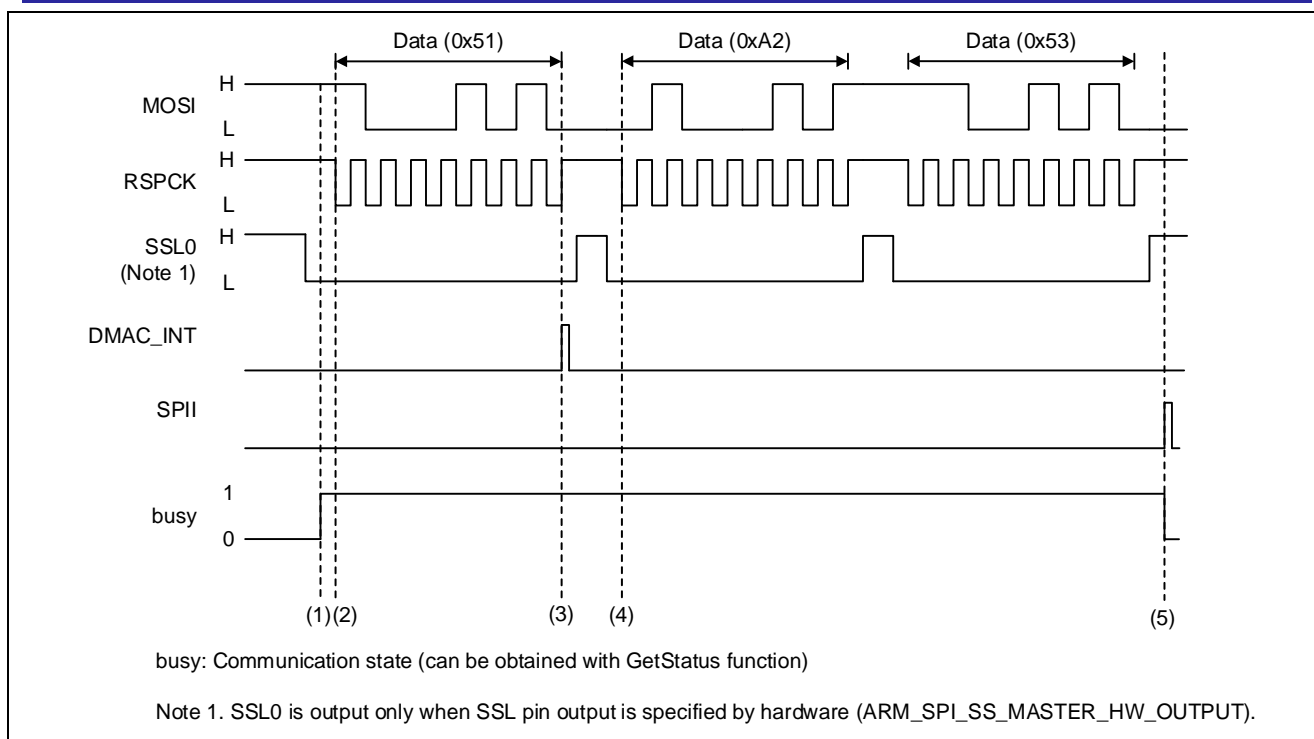


Figure 3-4 Transmit Operation Using DMAC for Control (3 bytes transmitted)

- (1) When the Send function is executed, the busy flag is set to "1" (communicating state), and the SPTI interrupt is set as a DMAC transfer factor. The first byte of transmit data is DMA-transferred to the SPDR register.
- (2) The second byte of the transmit data is DMA-transferred to the SPDR register.
- (3) The last data is DMA-transferred. A DMAC transfer end interrupt occurs, disabling the DMAC transfer end interrupt and enabling the SPII interrupt.
- (4) After the second byte of the data is output, the last data written in step 3 is output.
- (5) When transmission of all data is completed, the SPII interrupt occurs and the busy flag is cleared to "0" (communication wait state). In the SPII interrupt handling process, all the interrupts used in SPI control are disabled. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument.

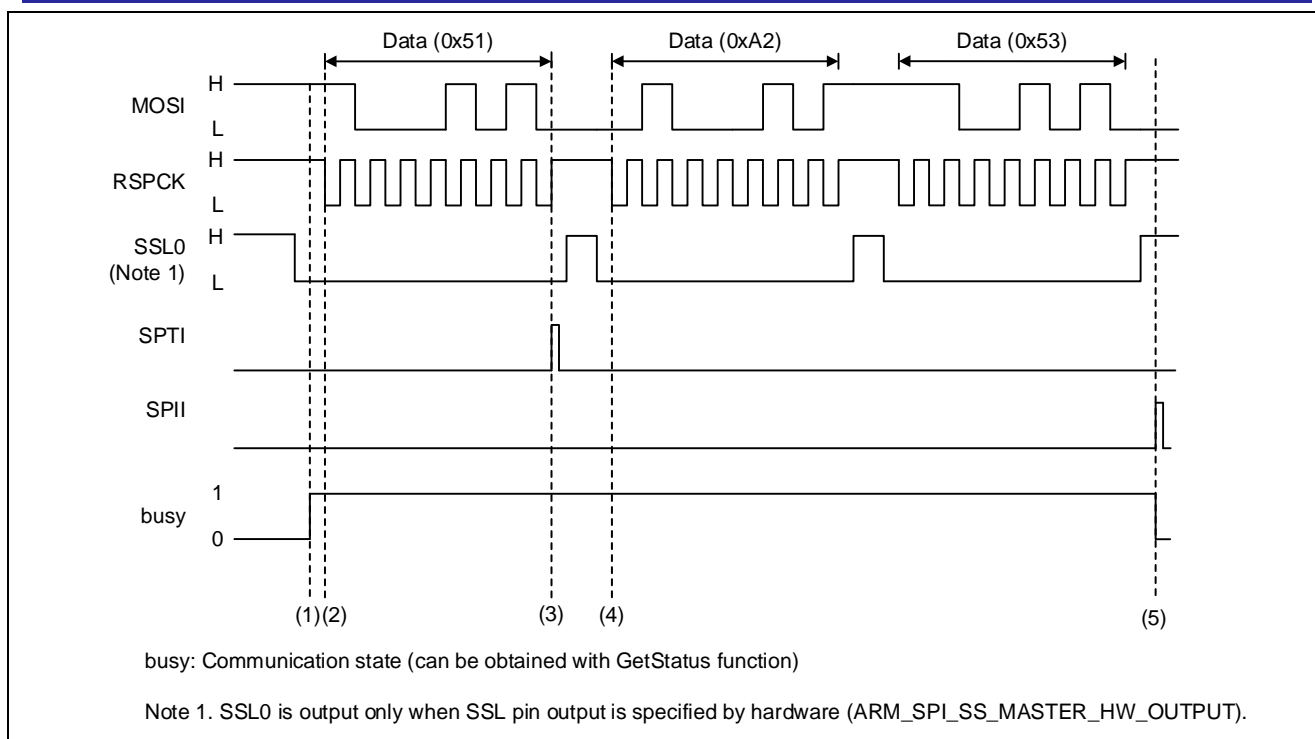


Figure 3-5 Transmit Operation Using DTC for Control (3 bytes transmitted)

- (1) When the Send function is executed, the busy flag is set to "1" (communicating state) and the SPTI interrupt is set as a DTC transfer factor. The first byte of transmit data is DMA-transferred to the SPDR register.
- (2) The second byte of the transmit data is DMA-transferred to the SPDR register.
- (3) The last data is DMA-transferred. The SPTI interrupt occurs, disabling the SPTI interrupt and enabling the SPII interrupt.
- (4) After the second byte of the data is output, the last data written in step 3 is output.
- (5) When transmission of all data is completed, the SPII interrupt occurs and the busy flag is cleared to "0" (communication wait state). In the SPII interrupt handling process, all the interrupts used for SPI control are disabled. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument.

3.1.3 Reception in Master Mode

The reception procedure in master mode is shown in Figure 3-6.

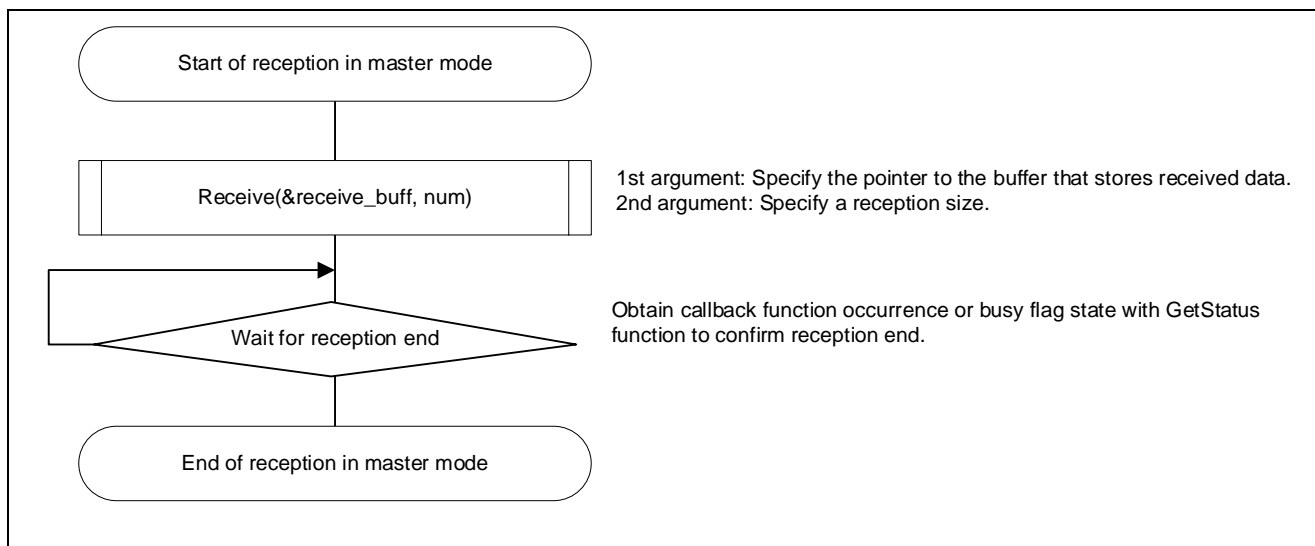



Figure 3-6 Reception Procedure in Master Mode

If a callback function has been set, it is called using `ARM_SPI_EVENT_TRANSFER_COMPLETE` as an argument when reception is completed.

When a reception error occurs, a callback function is called using `ARM_SPI_EVENT_DATA_LOST` as an argument and receive processing is completed.

The specific receive operation in master mode is different depending on what method is used for communication control: the interrupt, DMAC, or DTC. In the transmission-enabled state, dummy data is written to the transmit buffer in order that the clock be output. The dummy data to be output can be modified by the `ARM_SPI_SET_DEFAULT_TX_VALUE` command.

Figure 3-3 shows the operation when the interrupt is used for communication control. Figure 3-4 and Figure 3-5 respectively show the operations when the DMAC and the DTC are used for communication control.

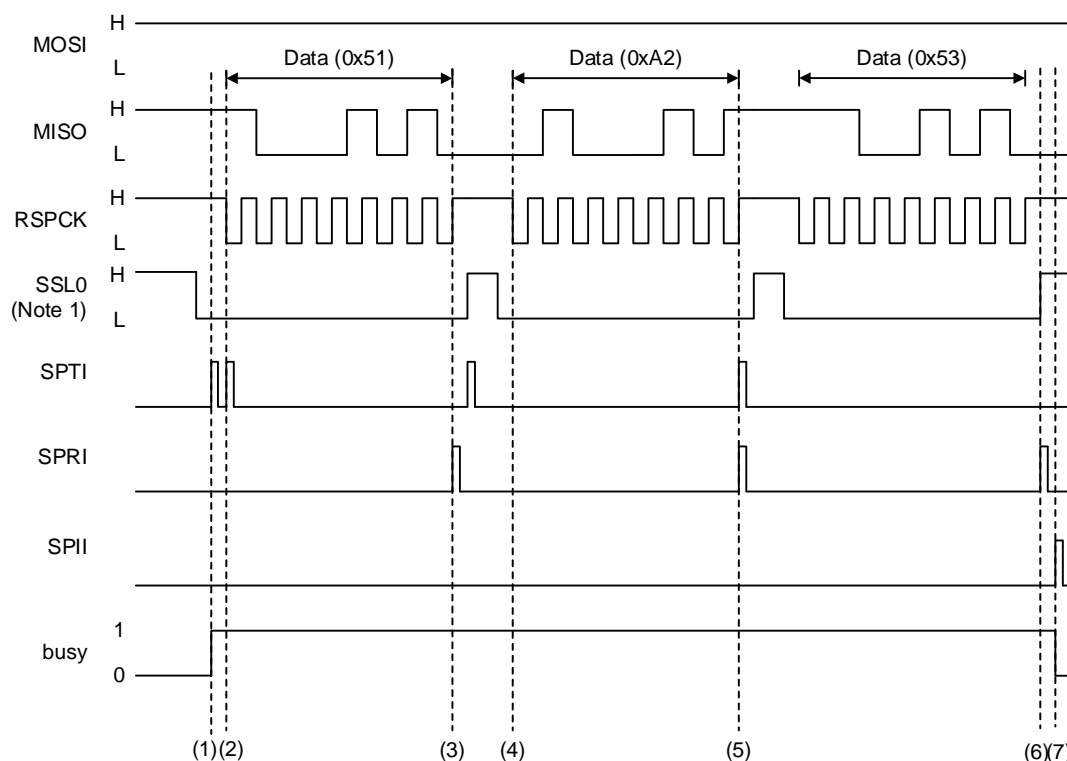

busy: Communication state (can be obtained with GetStatus function)

Note 1. SSL0 is output only when SSL pin output is specified by hardware (ARM_SPI_SS_MASTER_HW_OUTPUT).

Figure 3-7 Receive Operation Using Interrupt for Control (3 bytes received, dummy data: 0xFF)

- (1) When the Receive function is executed, the busy flag is set to "1" (communicating state). The SPTI interrupt is generated and dummy data is written to the data register (SPDR).
- (2) At the second SPTI interrupt, the second byte of dummy data is written to the SPDR register.
- (3) When data is received through the MISO pin, the SPRI interrupt occurs and the value of the data register (SPDR) is read into the specified buffer.
- (4) At the SPTI interrupt generated when the specified number of bytes have been written, the SPTI interrupt is disabled, and the SPII interrupt is enabled.
- (5) The SPRI interrupt occurs upon completion of reception of each byte, and the received data is read from the SPDR register.
- (6) Disable SPTI interrupt and enable SPII interrupt by SPTI interrupt by the output of the last dummy data written in (4).
- (7) At the SPRI interrupt generated when the last data is read, the SPRI interrupt is disabled.
- (8) When reception of all data is completed, the SPII interrupt occurs and the busy flag is cleared to "0" (communication wait state). In the SPII interrupt handling process, all the interrupts used for SPI control are disabled. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note)

Note: When a reception error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

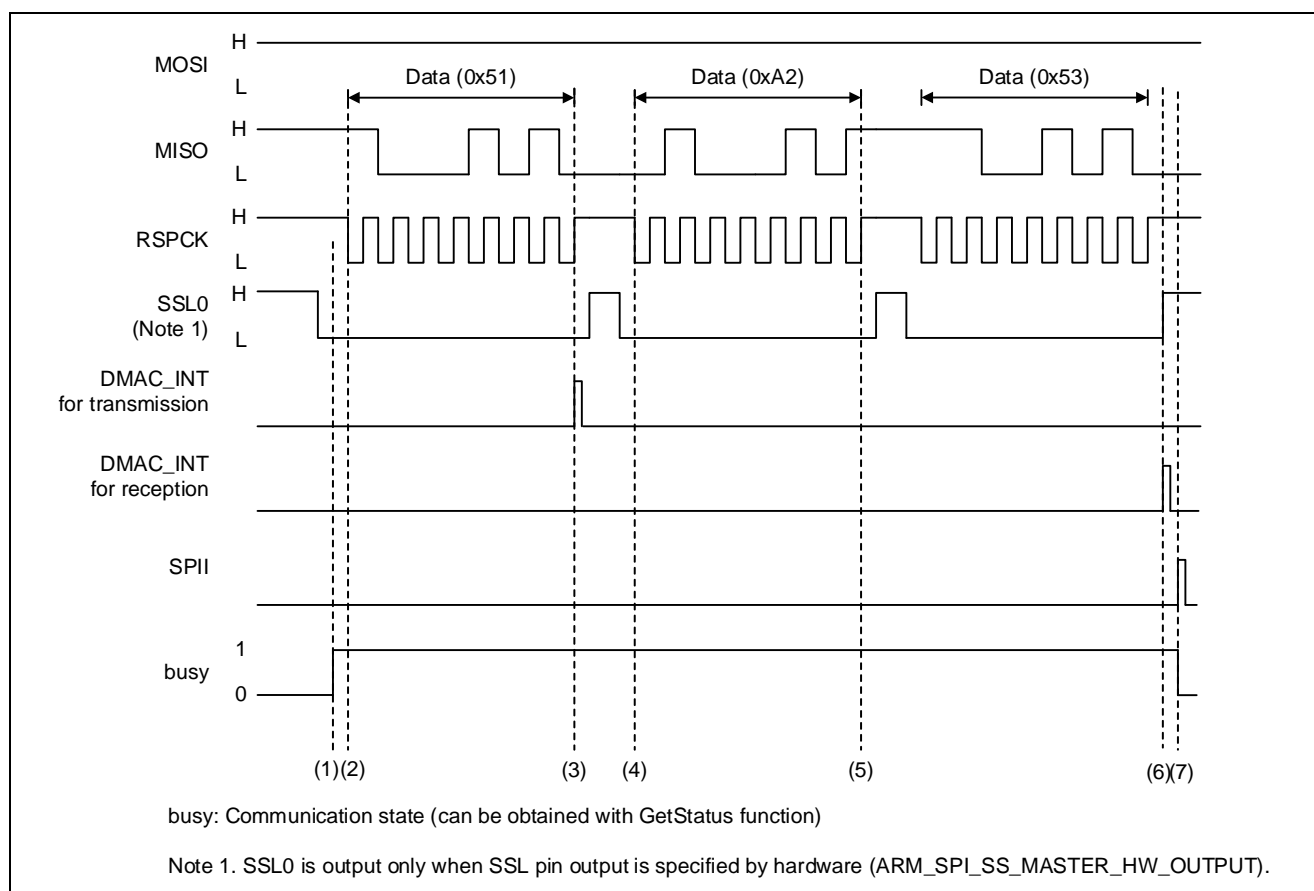


Figure 3-8 Receive Operation Using DMAC for Control (3 bytes received, dummy data: 0xFF)

- (1) When the Receive function is executed, the busy flag is set to "1" (communicating state) and the SPTI and SPRI interrupts are set as DMAC transfer factors. Dummy data is DMA-transferred to the data register (SPDR).
- (2) The second byte of the dummy data is DMA-transferred to the SPDR register.
- (3) When data is received through the MISO pin, the value of the data register (SPDR) is DMA-transferred to the specified buffer.
- (4) At the DMAC transfer end interrupt generated when the specified number of bytes have been written, the DMAC transfer end interrupt is disabled, and the SPII interrupt is enabled.
- (5) Each time reception of one byte is completed, the receive data in the SPDR register is DMA-transferred to the specified buffer.
- (6) At the DMAC transfer end interrupt generated when reception of the final data has been completed, the DMAC transfer end interrupt is disabled.
- (7) When reception of all data is completed, the SPII interrupt occurs and the busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note)

Note: When a reception error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

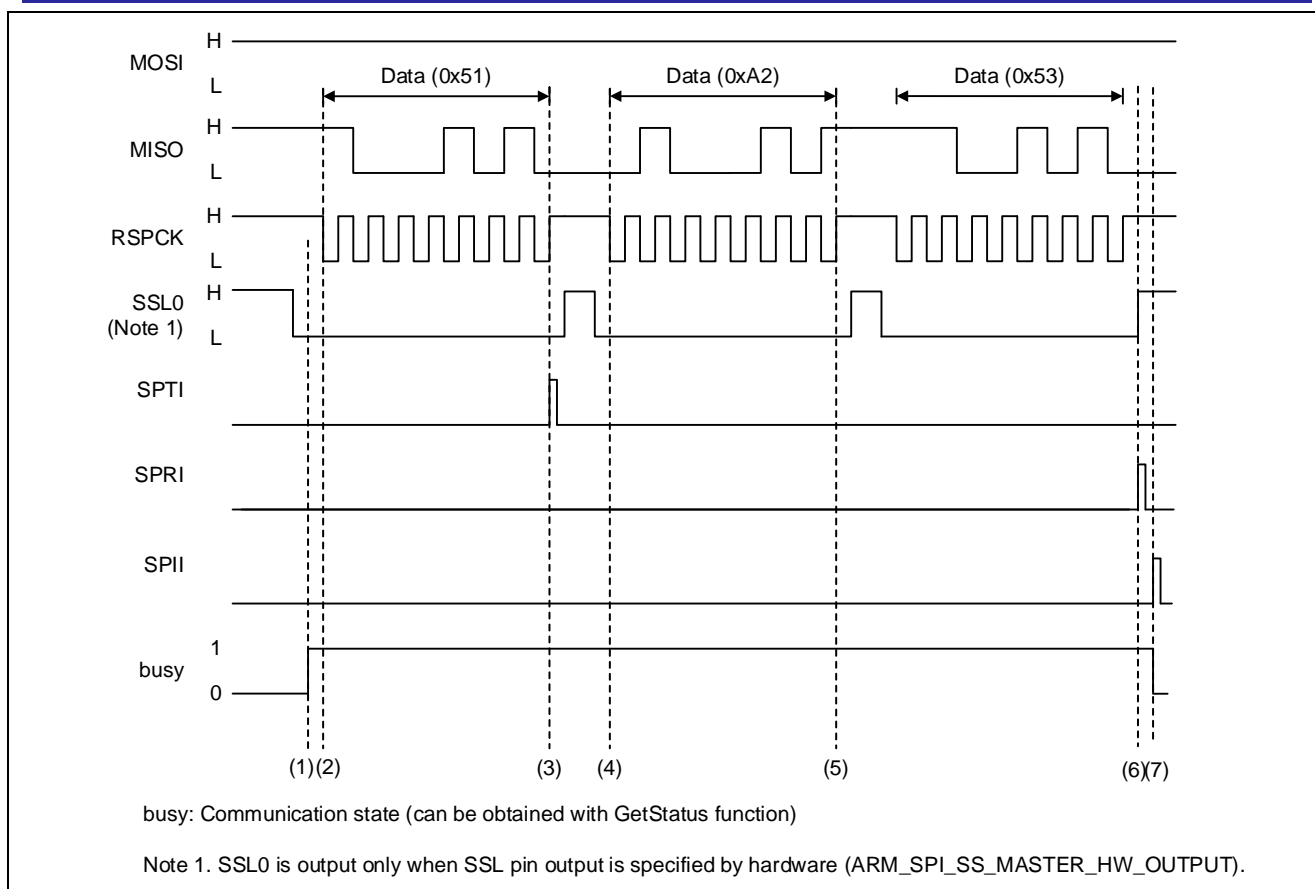


Figure 3-9 Receive Operation Using DTC for Control (3 bytes received, dummy data: 0xFF)

- (1) When the Receive function is executed, the busy flag is set to "1" (communicating state) and the SPTI and SPRI interrupts are set as DTC transfer factors. Dummy data is DMA-transferred to the data register (SPDR).
- (2) The second byte of the dummy data is DMA-transferred to the SPDR register.
- (3) When data is received through the MISO pin, the value of the data register (SPDR) is DMA-transferred to the specified buffer.
- (4) At the SPTI interrupt generated when the specified number of bytes have been written, the SPTI interrupt is disabled, and the SPII interrupt is enabled.
- (5) Each time reception of one byte is completed, the receive data in the SPDR register is DMA-transferred to the specified buffer.
- (6) At the SPRI interrupt generated when reception of the last data has been completed, the SPRI interrupt is disabled.
- (7) When reception of all data is completed, the SPII interrupt occurs and the busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note)

Note: When a reception error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

3.1.4 Transmission and Reception in Master Mode

The transmission and reception procedure in master mode is shown in Figure 3-10.

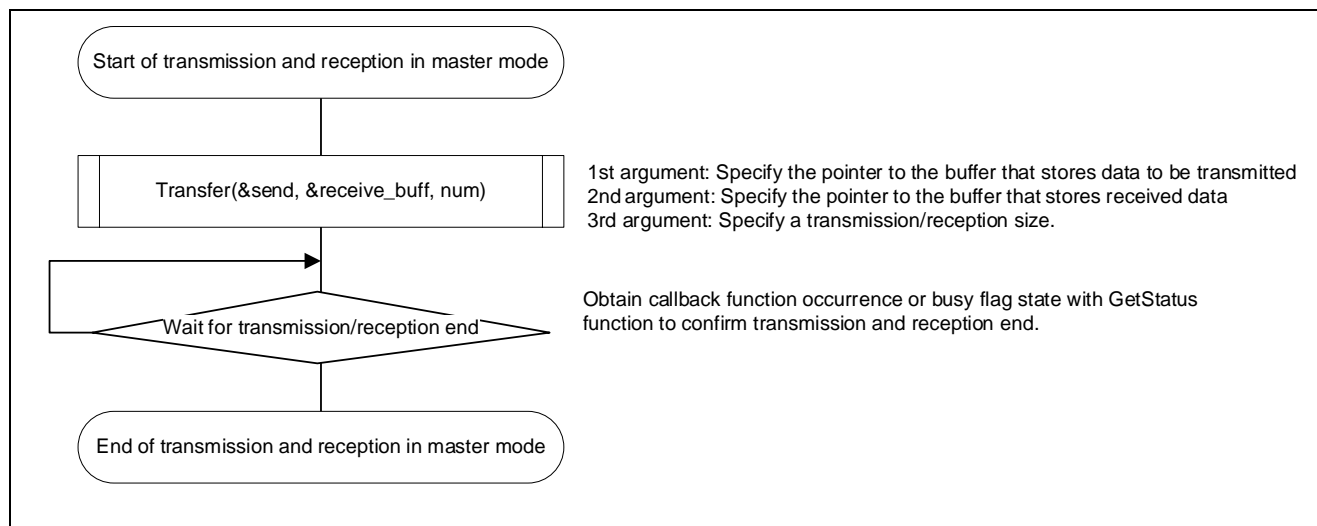


Figure 3-10 Transmission and Reception Procedure in Master Mode

If a callback function has been set, it is called using `ARM_SPI_EVENT_TRANSFER_COMPLETE` as an argument when transmission/reception is completed.

When a transmission/reception error occurs, a callback function is called with `ARM_SPI_EVENT_DATA_LOST` as an argument and transmission and reception are terminated.

The specific transmit and receive operation in master mode is different depending on what method is used for communication control: the interrupt, DMAC, or DTC. Figure 3-3 shows the operation when the interrupt is used for communication control. Figure 3-4 and Figure 3-5 respectively show the operations when the DMAC and the DTC are used for communication control.

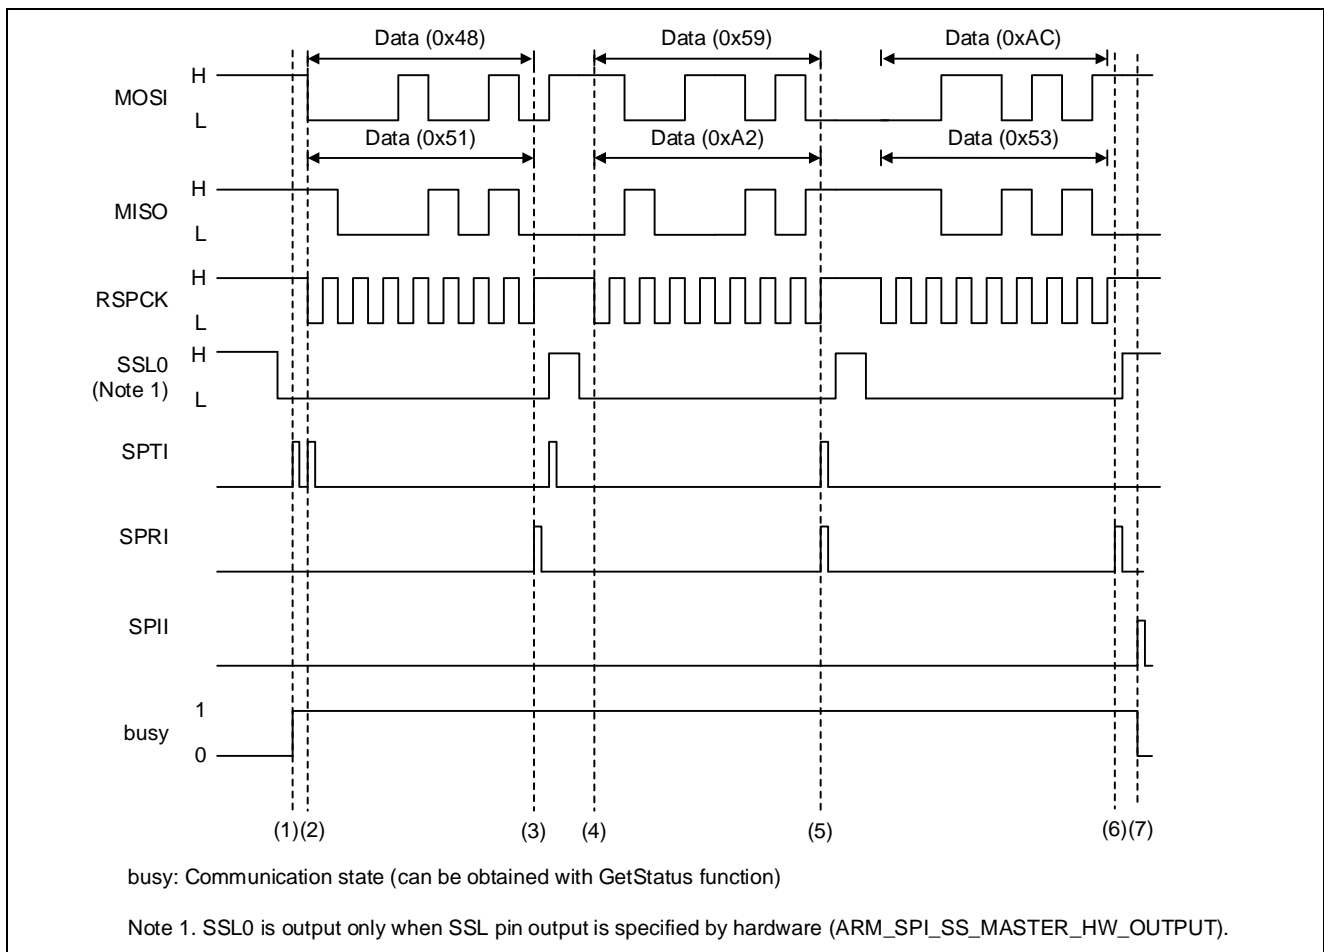


Figure 3-11 Transmit and Receive Operation Using Interrupt for Control (3 bytes received)

- (1) When the Transfer function is executed, the busy flag is set to "1" (communicating state). The SPTI interrupt is generated and transmit data is written to the data register (SPDR).
- (2) At the second SPTI interrupt, the second byte of the transmit data is written to the SPDR register.
- (3) When data is received through the MISO pin, the SPRI interrupt occurs and the value of the data register (SPDR) is read into the specified buffer.
- (4) At the SPTI interrupt generated when the specified number of bytes have been written, the SPTI interrupt is disabled, and the SPII interrupt is enabled.
- (5) Each time reception of one byte is completed, the SPRI interrupt occurs and the received data is read from the SPDR register.
- (6) At the SPRI interrupt generated when the last data is read, the SPRI interrupt is disabled.
- (7) When reception is completed, the SPII interrupt occurs and the busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note)

Note: When a reception error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

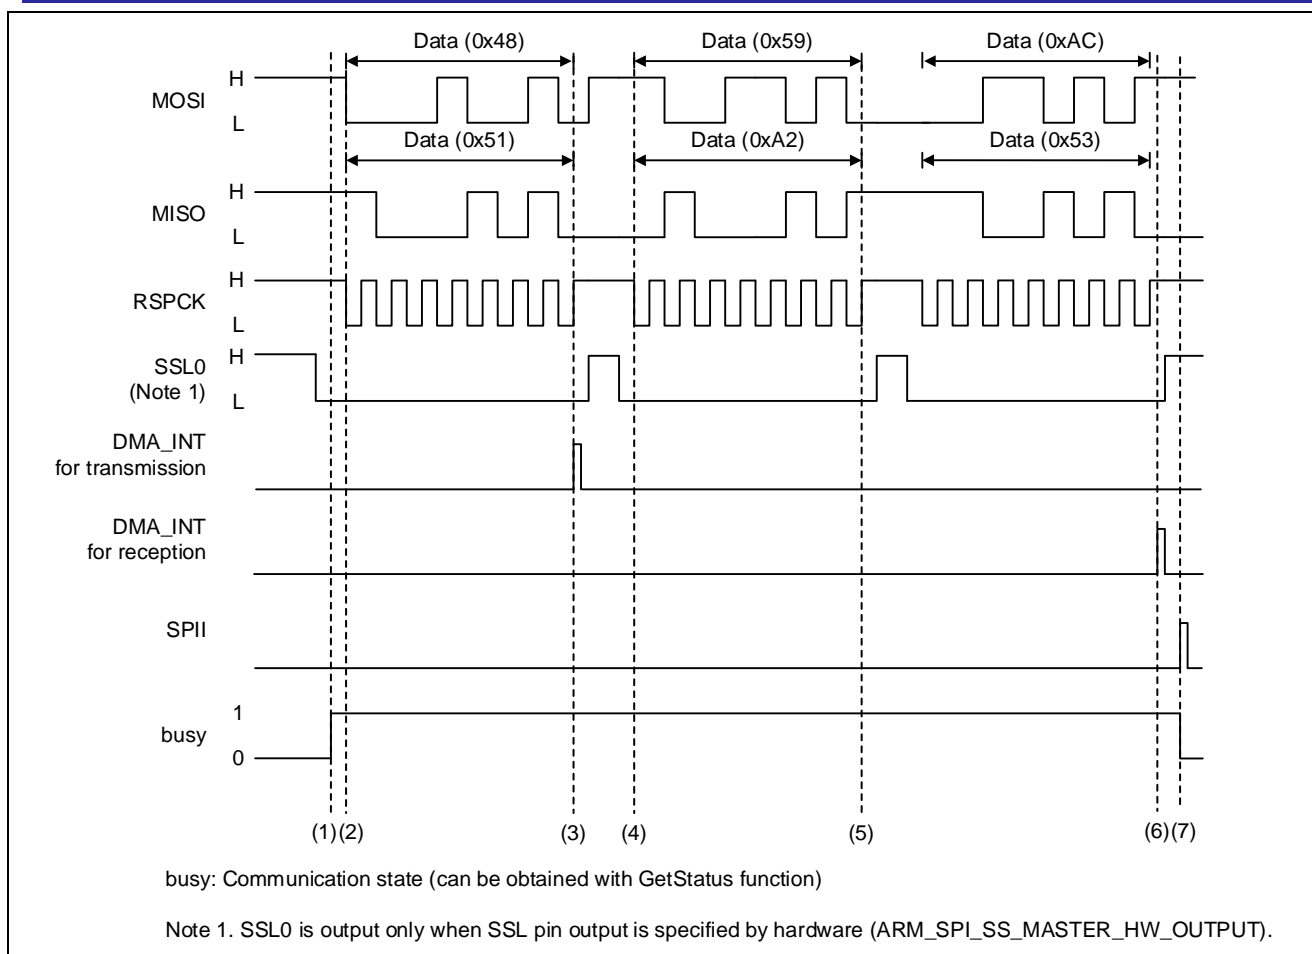


Figure 3-12 Transmit and Receive Operation Using DMAC for Control (3 bytes received)

- (1) When the Transfer function is executed, the busy flag is set to "1" (communicating state) and the SPTI and SPRI interrupts are set as DMAC transfer factors. Dummy data is DMA-transferred to the data register (SPDR).
- (2) The second byte of transmit data is DMA-transferred to the SPDR register.
- (3) When data is received through the MISO pin, the value of the data register (SPDR) is DMA-transferred to the specified buffer.
- (4) At the DMAC transfer end interrupt generated when the specified number of bytes have been written, the DMAC transfer end interrupt is disabled, and the SPII interrupt is enabled.
- (5) Each time reception of one byte is completed, the receive data in the SPDR register is DMA-transferred to the specified buffer.
- (6) At the DMAC transfer end interrupt generated when reception of the last data has been completed, the DMAC transfer end interrupt is disabled.
- (7) When reception is completed, the SPII interrupt occurs and the busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note)

Note: When a transmission/reception error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

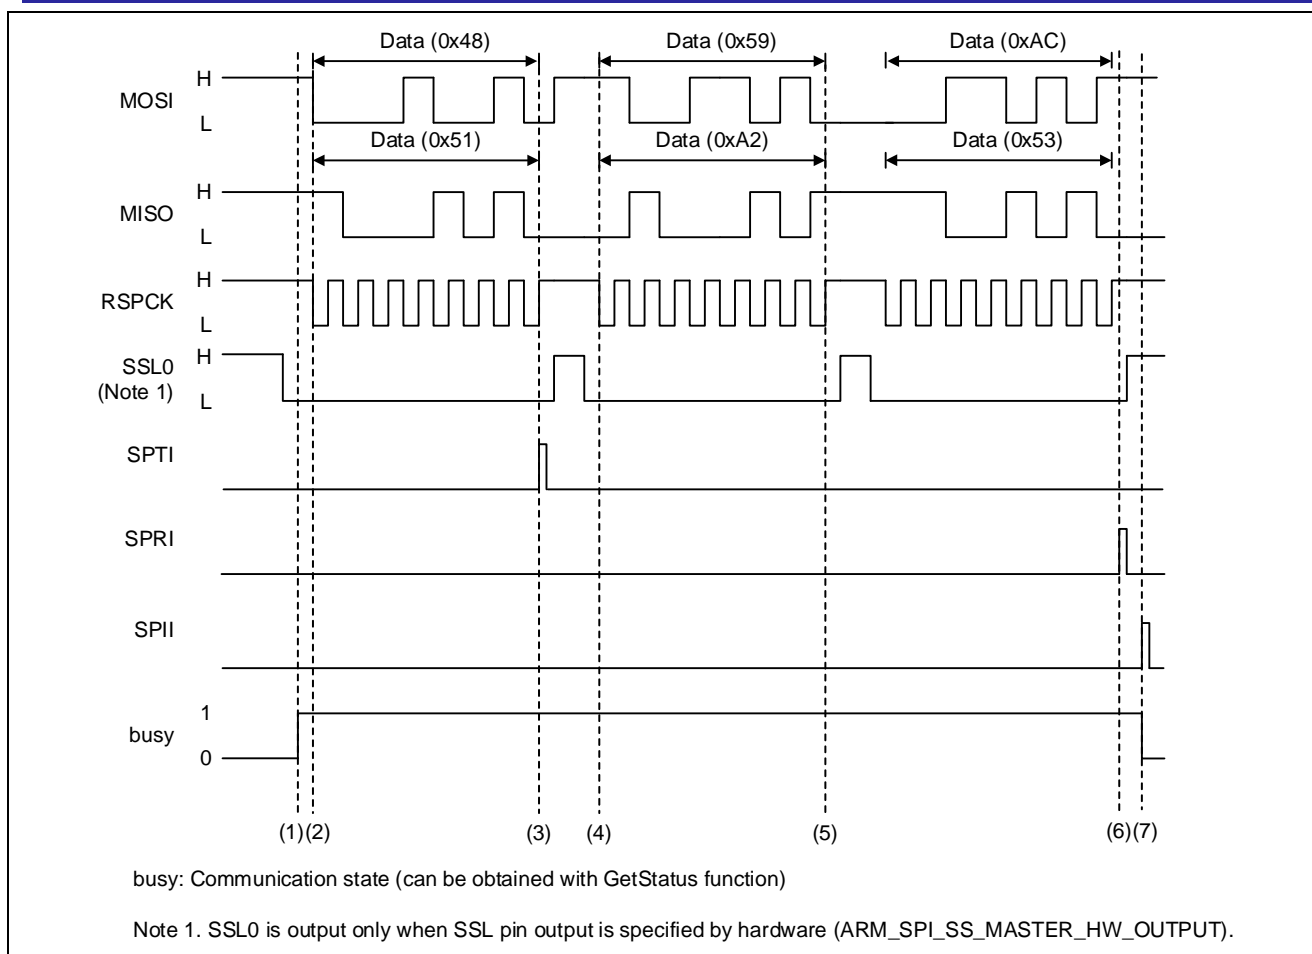


Figure 3-13 Transmit and Receive Operation Using DTC for Control (3 bytes received)

- (1) When the Transfer function is executed, the busy flag is set to "1" (communicating state) and the SPTI and SPRI interrupts are set as DMAC transfer factors. Dummy data is DMA-transferred to the data register (SPDR).
- (2) The second byte of transmit data is DMA-transferred to the SPDR register.
- (3) When data is received through the MISO pin, the value of the data register (SPDR) is DMA-transferred to the specified buffer.
- (4) At the SPTI interrupt generated when the specified number of bytes have been written, the SPTI interrupt is disabled, and the SPII interrupt is enabled.
- (5) Each time reception of one byte is completed, the receive data in the SPDR register is DMA-transferred to the specified buffer.
- (6) At the SPRI interrupt generated when reception of the last data has been completed, the SPRI interrupt is disabled.
- (7) When reception is completed, the SPII interrupt occurs and the busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note)

Note: When a transmission/reception error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

3.2 Slave Mode

3.2.1 Initial Setting Procedure for Slave Mode

The initial setting procedure for slave mode is shown in Figure 3-14.

When enabling transmission and reception, register the interrupts to use with NVIC in `r_system_cfg.h`. For details, see section 2.4, Communication Control and NVIC Interrupt Setting.

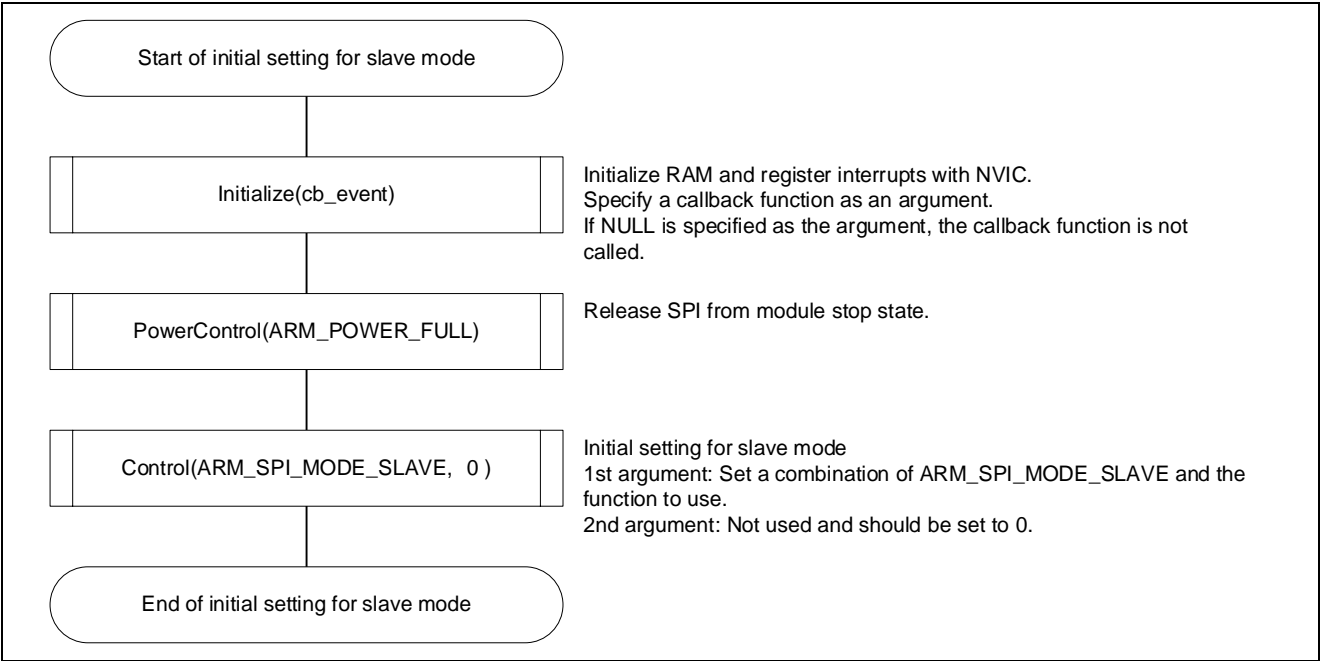


Figure 3-14 Slave Mode Initialization Procedure

3.2.2 Transmission in Slave Mode

The transmission procedure in slave mode is shown in Figure 3-15.

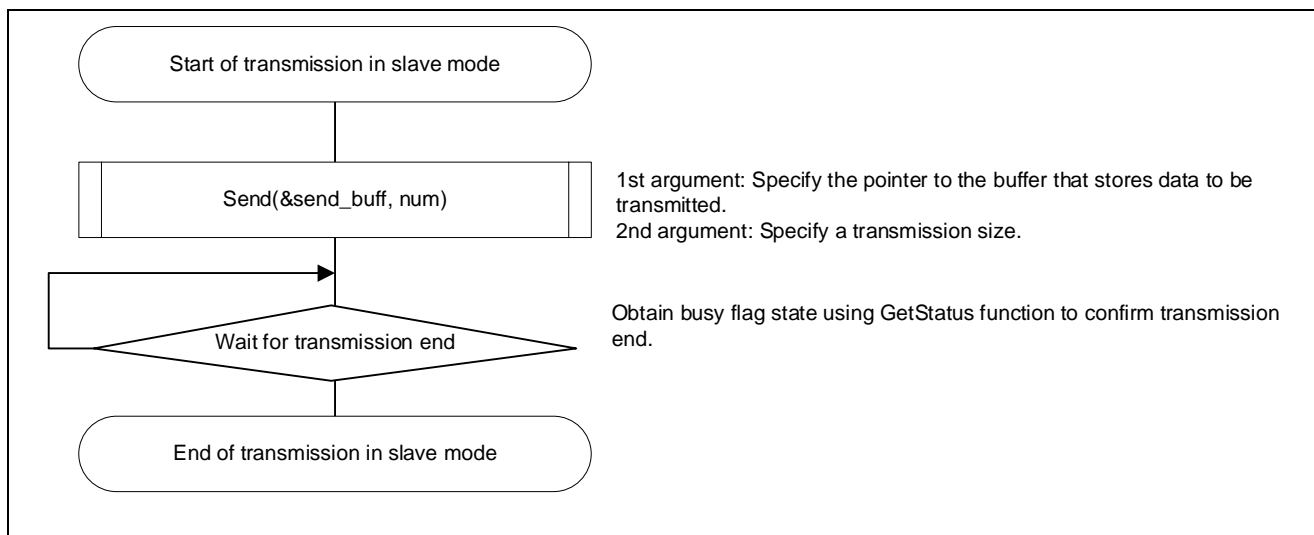


Figure 3-15 Transmission Procedure in Slave Mode

If a callback function has been set, it is called using `ARM_SPI_EVENT_TRANSFER_COMPLETE` as an argument when transmission is completed.

When a transmission error occurs, a callback function is called with `ARM_SPI_EVENT_DATA_LOST` as an argument and the transmission is terminated.

The specific transmit operation in slave mode is different depending on what method is used for communication control: the interrupt, DMAC, or DTC. Figure 3-3 shows the transmit operation when the interrupt is used for communication control. Figure 3-4 and Figure 3-5 respectively show the operations when the DMAC and the DTC are used for communication control.

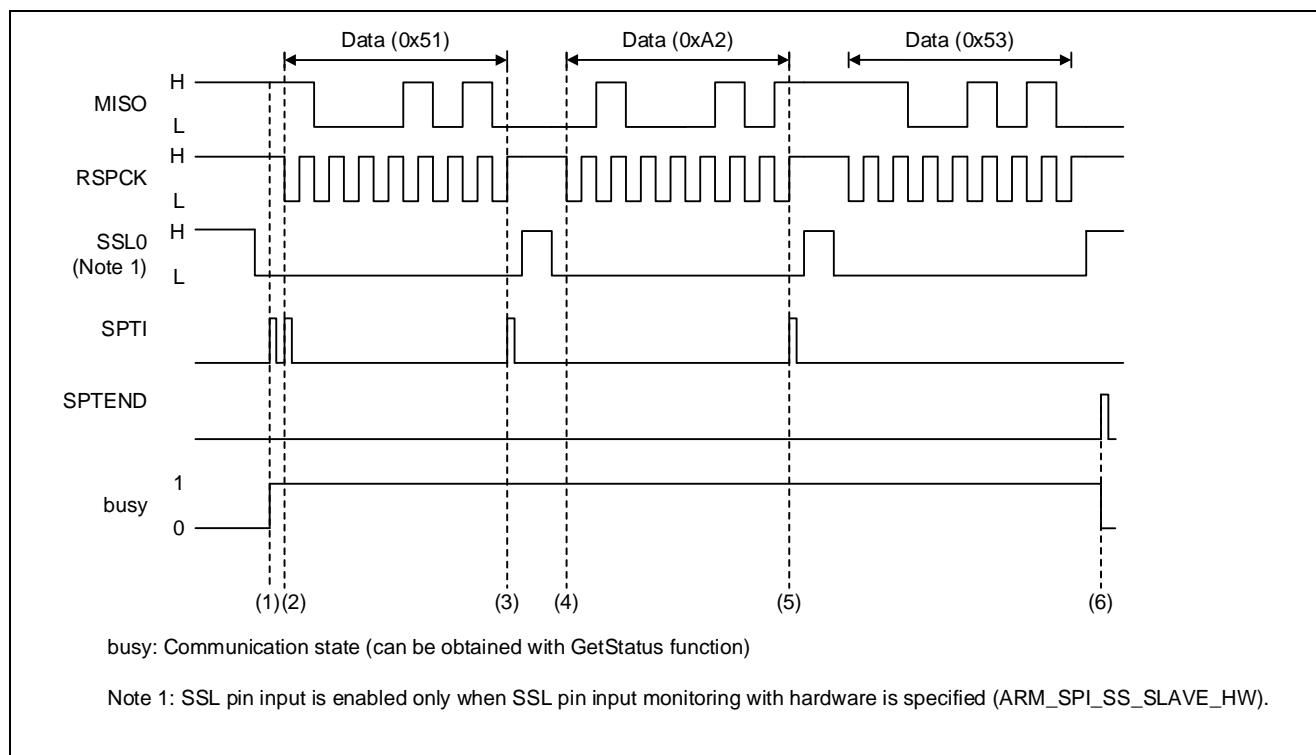


Figure 3-16 Transmit Operation Using Interrupt for Control (3 bytes transmitted)

- (1) When the Send function is executed, the busy flag is set to "1" (communicating state). The SPTI interrupt is generated and the first byte of data is written to the transmit data register (SPDR).
- (2) When the clock is input to the RSPCK pin, the first byte of data starts to be output from the MOSI pin, and the second SPTI interrupt occurs. In the interrupt handling processing, the second byte of transmit data is written to the SPDR register.
- (3) At the third SPTI interrupt, the last transmit data is written to SPDR.
- (4) At the SPTI interrupt generated after the last data has been written, the SPTI interrupt is disabled, and the SPTEND interrupt is enabled.
- (5) After the second byte of the data is output, the last data written in step 3 is output.
- (6) When transmission is completed, the SPTEND interrupt occurs and the busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note1) (Note2)

Note 1. When a transmission error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

Note 2. When CPHA = 0 is set, wait for half a RSPCK cycle in software before resuming communication. For details, see "5.6 Resuming communication in slave mode and CPHA0".

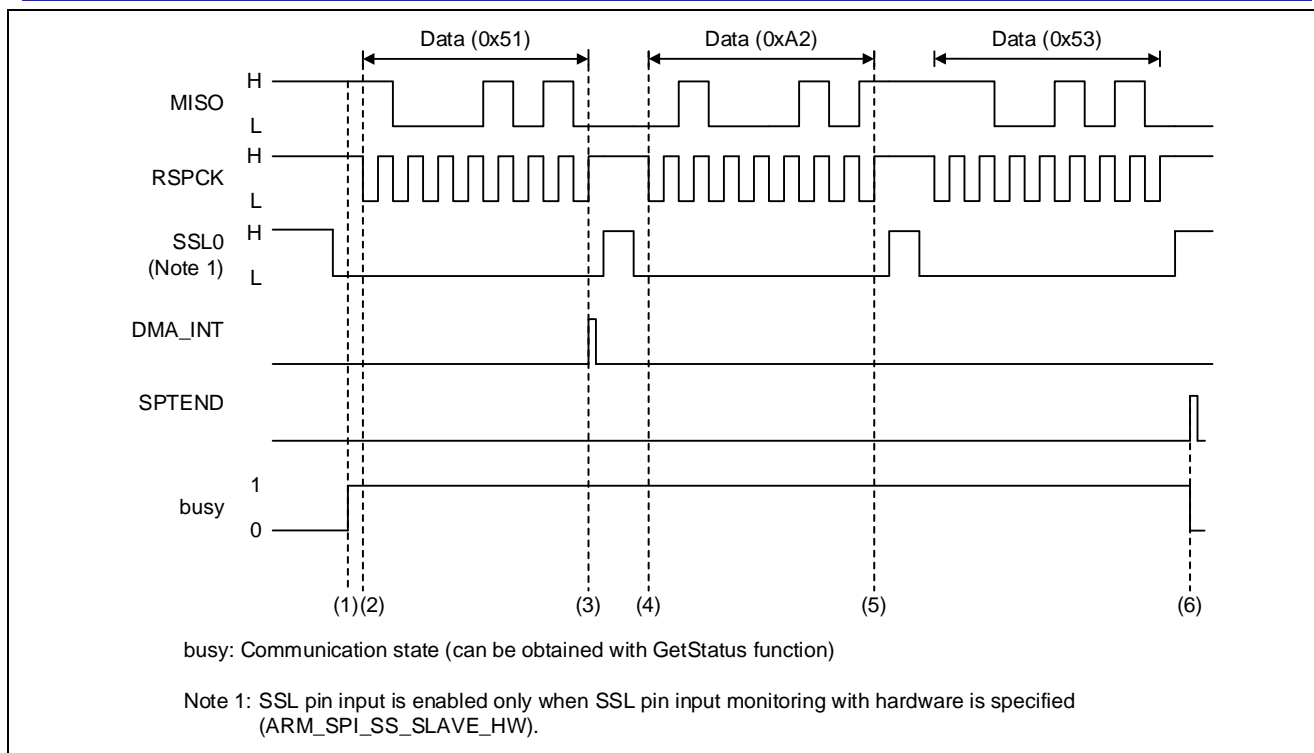


Figure 3-17 Transmit Operation Using DMAC for Control (3 bytes transmitted)

- (1) When the Send function is executed, the busy flag is set to "1" (communicating state) and the SPTI interrupt is set as a DMAC transfer factor. The first byte of transmit data is DMA-transferred to the SPDR register.
- (2) When the clock is input to the RSPCK pin, the first byte of data starts to be output from the MOSI pin, and the second byte of the transmit data is transferred to the SPDR register by the second DMA transfer.
- (3) The last transmit data is written to the SPDR register by the third DMA transfer.
- (4) At the DMAC transfer end interrupt generated after the last data has been written, the DMAC transfer end interrupt is disabled, and the SPTEND interrupt is enabled.
- (5) After the second byte of the data is output, the last data written in step 3 is output.
- (6) When transmission is completed, the SPTEND interrupt occurs and the busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note1) (Note2)

Note 1. If a transmission error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

Note 2. When CPHA = 0 is set, wait for half a RSPCK cycle in software before resuming communication. For details, see "5.6 Resuming communication in slave mode and CPHA0".

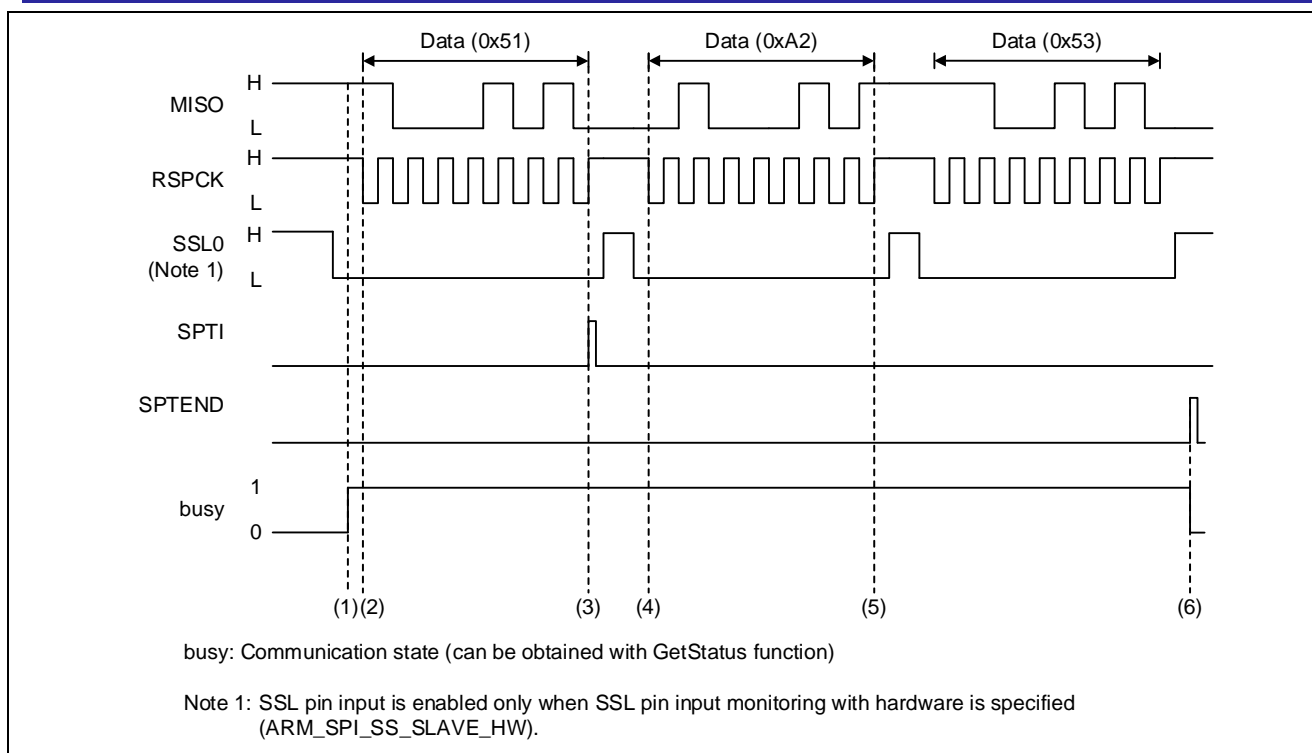


Figure 3-18 Transmit Operation Using DTC for Control (3 bytes transmitted)

- (1) When the Send function is executed, the busy flag is set to "1" (communicating state) and the SPTI interrupt is set as a DTC transfer factor. The first byte of transmit data is DMA-transferred to the SPDR register.
- (2) When the clock is input to the RSPCK pin, the first byte of data starts to be output from the MISO pin, and the second byte of the transmit data is transferred to the SPDR register by the second DMA transfer.
- (3) The last transmit data is written to the SPDR register by the third DMA transfer.
- (4) At the SPTI interrupt generated after the last data has been written, the SPTI interrupt is disabled, and the SPTEND interrupt is enabled.
- (5) After the second byte of the data is output, the last data written in step 3 is output.
- (6) When transmission is completed, the SPTEND interrupt occurs and the busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note)

Note: If a transmission error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

3.2.3 Reception in Slave Mode

The reception procedure in slave mode is shown in Figure 3-19.

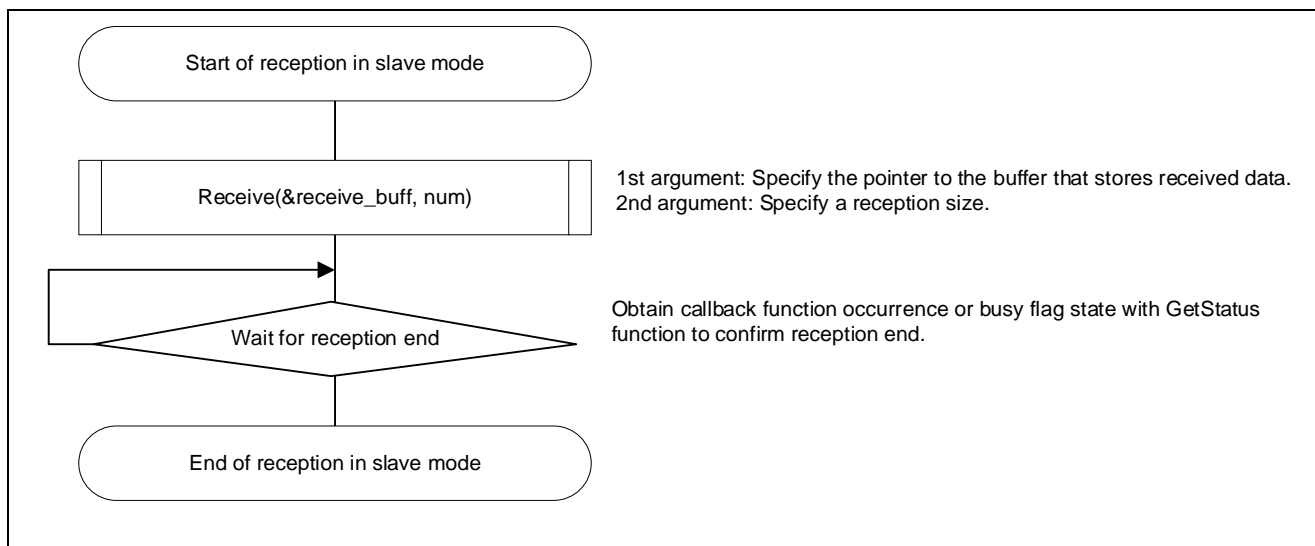


Figure 3-19 Reception Procedure in Slave Mode

If a callback function has been set, it is called using `ARM_SPI_EVENT_TRANSFER_COMPLETE` as an argument when reception is completed.

When a reception error occurs, a callback function is called with `ARM_SPI_EVENT_DATA_LOST` as an argument and receive processing is terminated.

The specific receive operation in slave mode is different depending on what method is used for communication control: the interrupt, DMAC, or DTC. In the transmission-enabled state, dummy data is written to the transmit buffer. The dummy data to be output can be modified by the `ARM_SPI_SET_DEFAULT_TX_VALUE` command.

Figure 3-3 shows the operation when the interrupt is used for communication control. Figure 3-4 and Figure 3-5 respectively show the operations when the DMAC and the DTC are used for communication control.

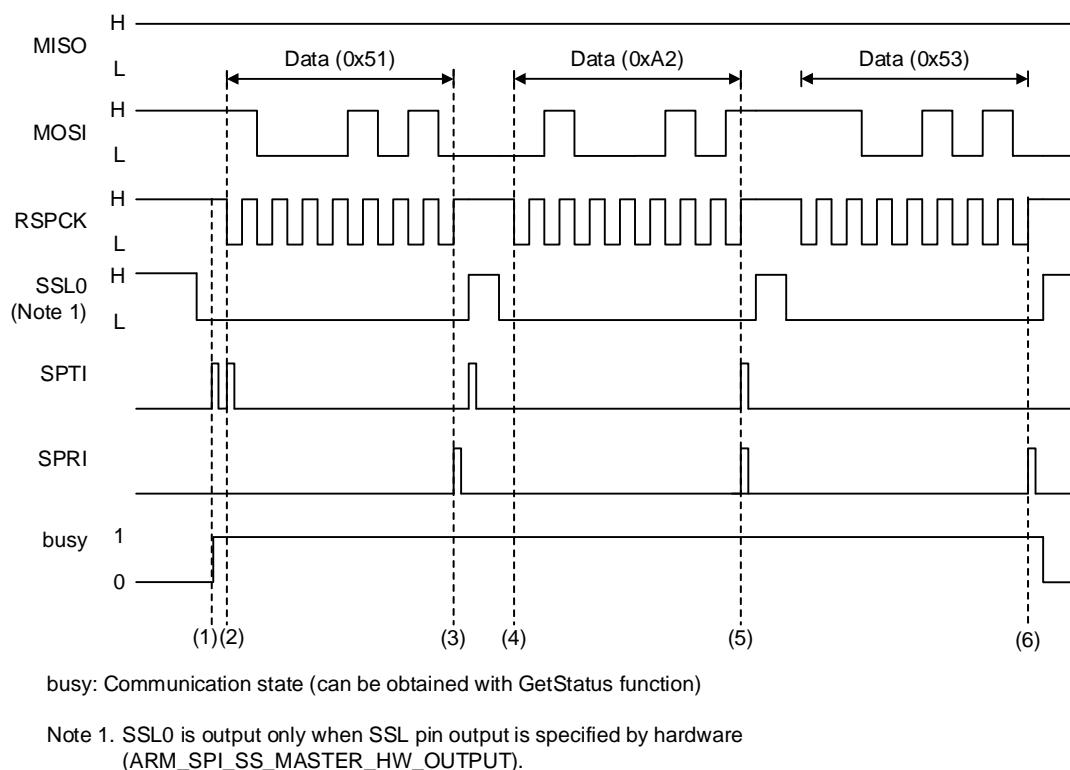


Figure 3-20 Receive Operation Using Interrupt for Control (3 bytes received, dummy data: 0xFF)

- (1) When the Receive function is executed, the busy flag is set to "1" (communicating state). The SPTI interrupt is generated and dummy data is written to the data register (SPDR).
- (2) When the clock is input to the RSPCK pin, the first byte of dummy data starts to be output from the MISO pin, and the second byte of the dummy data is written to the SPDR register at the second SPTI interrupt.
- (3) When data is received through the MOSI pin, the SPRI interrupt occurs and the value of the data register (SPDR) is read into the specified buffer.
- (4) At the SPTI interrupt generated when the specified number of bytes have been written, the SPTI interrupt is disabled, and the SPII interrupt is enabled.
- (5) The SPRI interrupt occurs upon completion of reception of each byte, and the received data is read from the SPDR register.
- (6) At the SPRI interrupt generated when the last data is read, the SPRI interrupt is disabled. The busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note1) (Note2)

Note 1. When a transmission/reception error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

Note 2. When CPHA = 0 is set, wait for half a RSPCK cycle in software before resuming communication. For details, see "5.6 Resuming communication in slave mode and CPHA0".

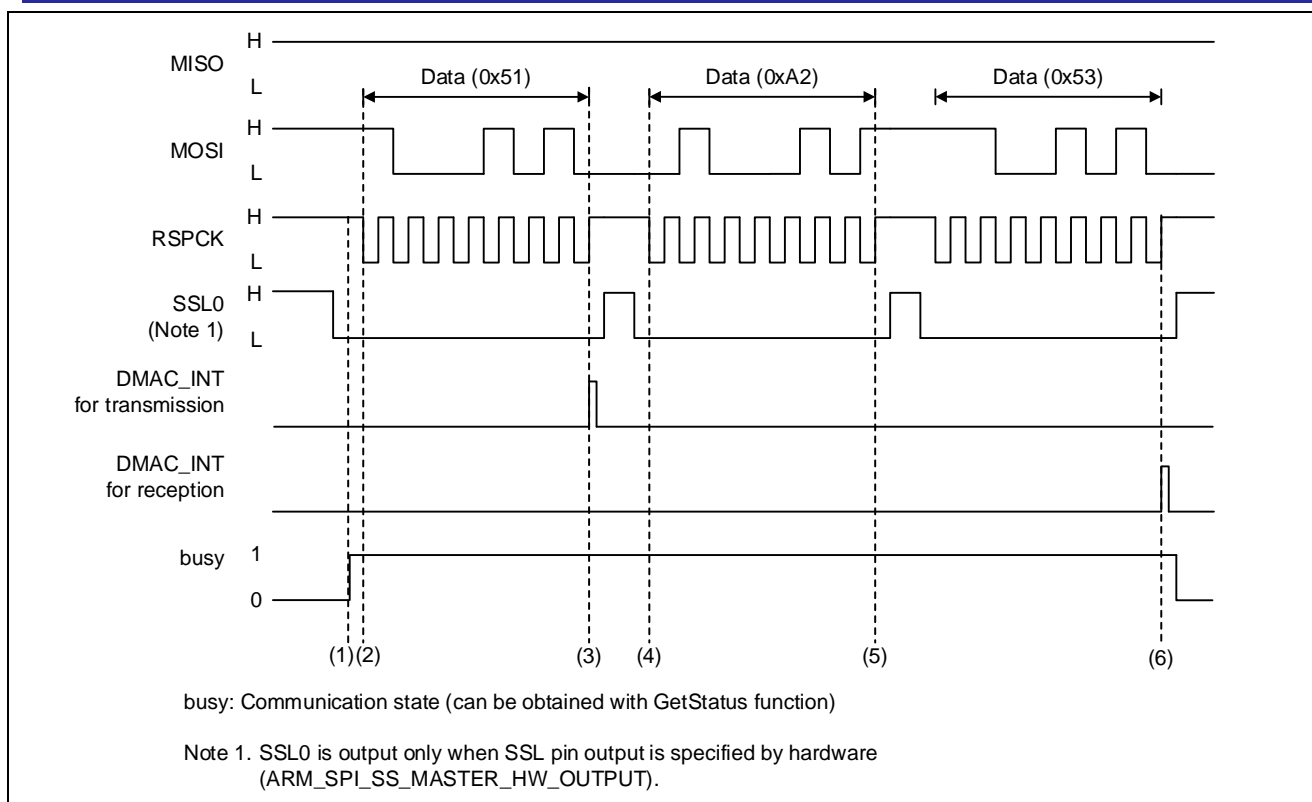


Figure 3-21 Receive Operation Using DMAC for Control (3 bytes received, dummy data: 0xFF)

- (1) When the Receive function is executed, the busy flag is set to "1" (communicating state) and the SPTI and SPRI interrupts are set as DMAC transfer factors. Dummy data is DMA-transferred to the data register (SPDR).
- (2) When the clock is input to the RSPCK pin, dummy data starts to be output from the MOSI pin, and the second and subsequent bytes of dummy data are DMA-transferred to the transmit data register (SPDR).
- (3) When data is received through the MOSI pin, the value of the receive data register (SPDR) is DMA-transferred to the specified buffer.
- (4) When the specified number of bytes have been written, a DMAC transfer end interrupt occurs on the transmission side.
- (5) Each time reception of one byte is completed, the value of the SPDR register is DMA-transferred to the specified buffer.
- (6) After transfer of the specified size of data is completed, the DMAC transfer end interrupt occurs on the transmitting side. The rx_busy flag is cleared to "0" (communication wait state) in the interrupt handling process. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note1) (Note2)

Note 1. When a reception error occurs, the SPEI interrupt occurs, the rx_busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

Note 2. When CPHA = 0 is set, wait for half a RSPCK cycle in software before resuming communication. For details, see "5.6 Resuming communication in slave mode and CPHA0".

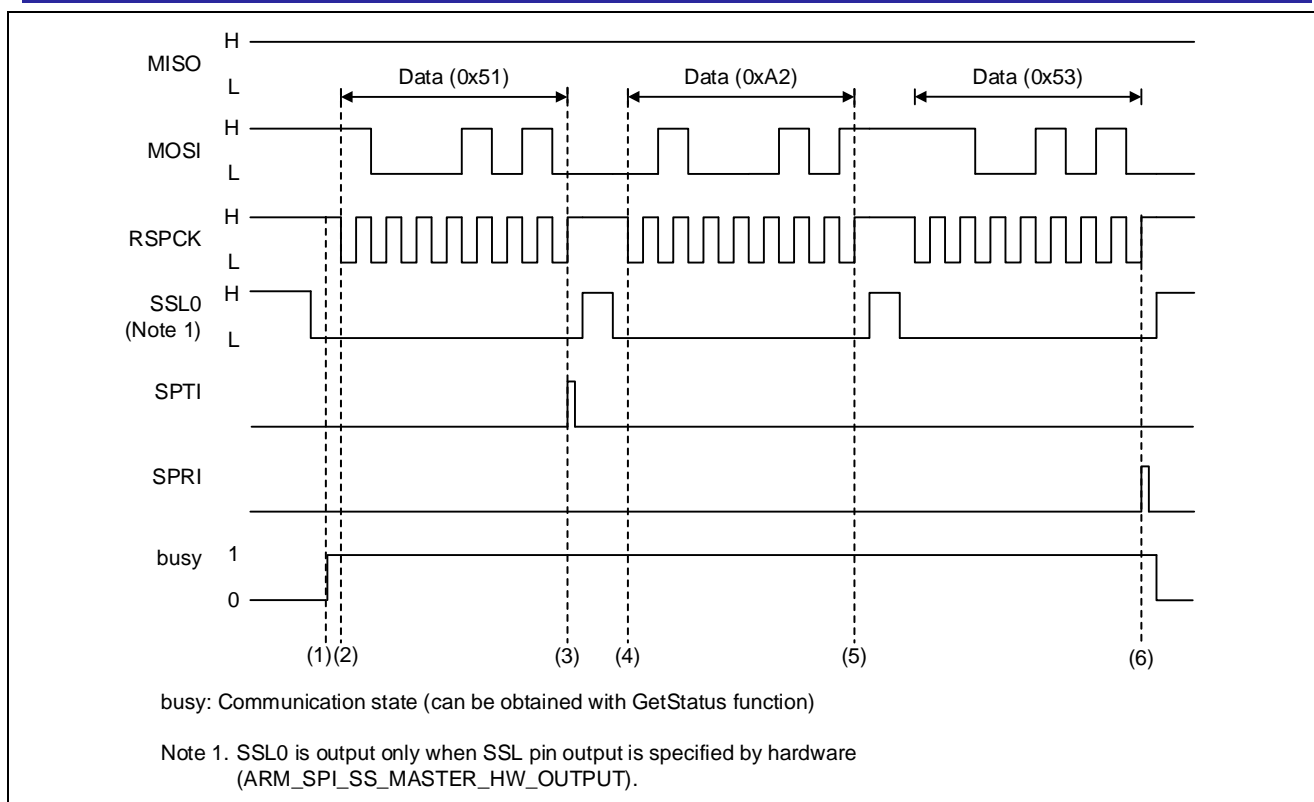


Figure 3-22 Receive Operation Using DTC for Control (3 bytes received, dummy data: 0xFF)

- (1) When the Receive function is executed, the busy flag is set to "1" (communicating state) and the SPTI and SPRI interrupts are set as DTC transfer factors. Dummy data is DMA-transferred to the data register (SPDR).
- (2) When the clock is input to the RSPCK pin, dummy data starts to be output from the MOSI pin, and the second and subsequent bytes of dummy data are DMA-transferred to the transmit data register (SPDR).
- (3) When data is received through the MOSI pin, the value of the receive data register (SPDR) is DMA-transferred to the specified buffer.
- (4) When the specified number of bytes have been written, the DMAC transfer end interrupt occurs on the transmission side.
- (5) Each time reception of one byte is completed, the value of the SPDR register is DMA-transferred to the specified buffer.
- (6) After transfer of the specified size of data is completed, the DMAC transfer end interrupt occurs. The rx_busy flag is cleared to "0" (communication wait state) in the interrupt handling process. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note1) (Note2)

Note 1. If a reception error occurs, the SPEI interrupt occurs, the rx_busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

Note 2. When CPHA = 0 is set, wait for half a RSPCK cycle in software before resuming communication. For details, see "5.6 Resuming communication in slave mode and CPHA0".

3.2.4 Transmission and Reception in Slave Mode

The transmission and reception procedure in slave mode is shown in Figure 3-23.

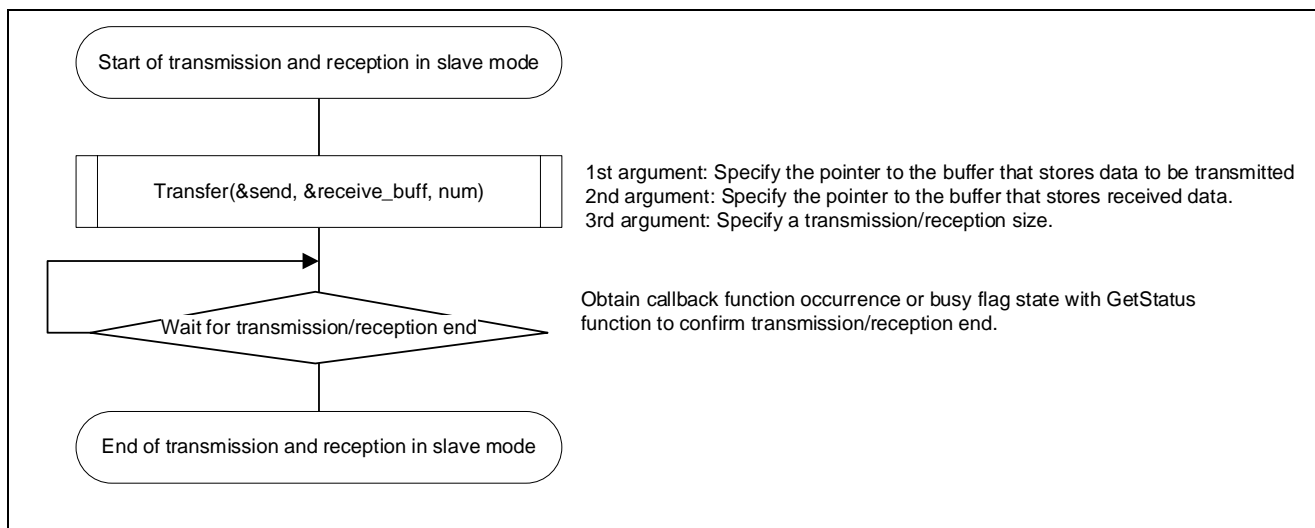


Figure 3-23 Transmission and Reception Procedure in Slave Mode

If a callback function has been set, the callback function is called using `ARM_SPI_EVENT_TRANSFER_COMPLETE` as an argument when reception is completed.

If a transmission/reception error occurs, a callback function is called with `ARM_SPI_EVENT_DATA_LOST` as an argument and transmit/receive processing is terminated.

The specific transmit and receive operation in slave mode is different depending on what method is used for communication control: the interrupt, DMAC, or DTC. Figure 3-3 shows the operation when the interrupt is used for communication control. Figure 3-4 and Figure 3-5 respectively show the operations when the DMAC and the DTC are used for communication control.

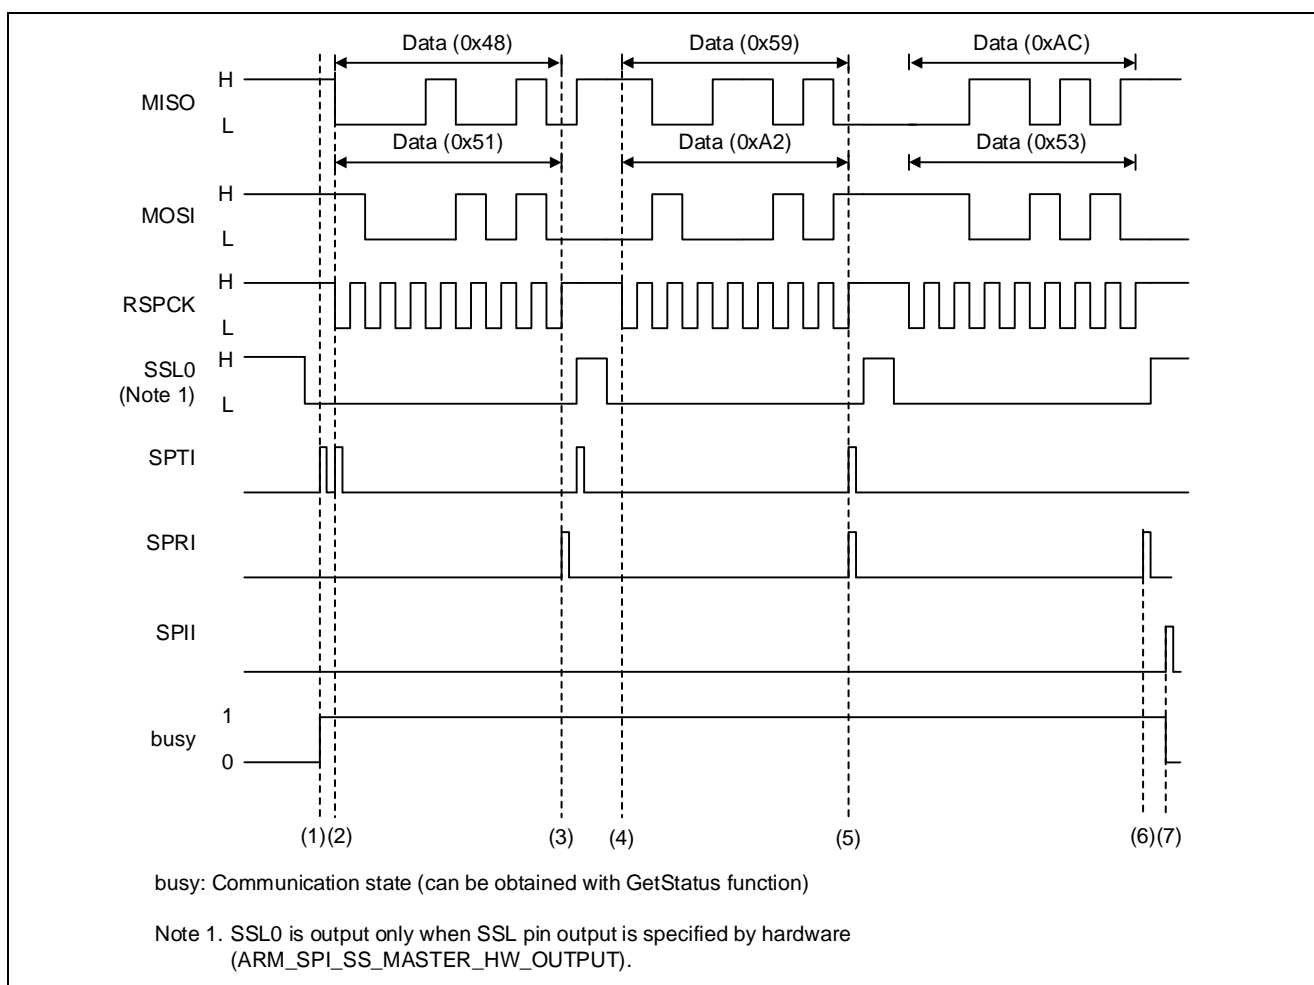


Figure 3-24 Transmit and Receive Operation Using Interrupt for Control (3 bytes received)

- (1) When the Transfer function is executed, the busy flag is set to "1" (communicating state). The SPTI interrupt is generated and the first transmit data is written to the data register (SPDR).
 - (2) When the clock is input to the RSPCK pin, the first byte of dummy data starts to be output from the MISO pin, and the second byte of the transmit data is written to the SPDR register at the second SPTI interrupt.
 - (3) When data is received through the MOSI pin, the SPRI interrupt occurs and the value of the data register (SPDR) is read into the specified buffer.
 - (4) At the SPTI interrupt generated when the specified number of bytes have been written, the SPTI interrupt is disabled, and the SPII interrupt is enabled.
 - (5) Each time reception of one byte is completed, the SPRI interrupt occurs and the received data is read from the SPDR register.
 - (6) At the SPRI interrupt generated when the last data has been read, the SPRI interrupt is disabled. The busy flag is cleared to "0" (communication wait state). Also disables all interrupts used for SPI control. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note)
- Note: If a transmission/reception error occurs, the SPEI interrupt occurs, the busy flag is cleared to "0" (communication wait state), and the error state is cleared. Also disables all interrupts used for SPI control. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

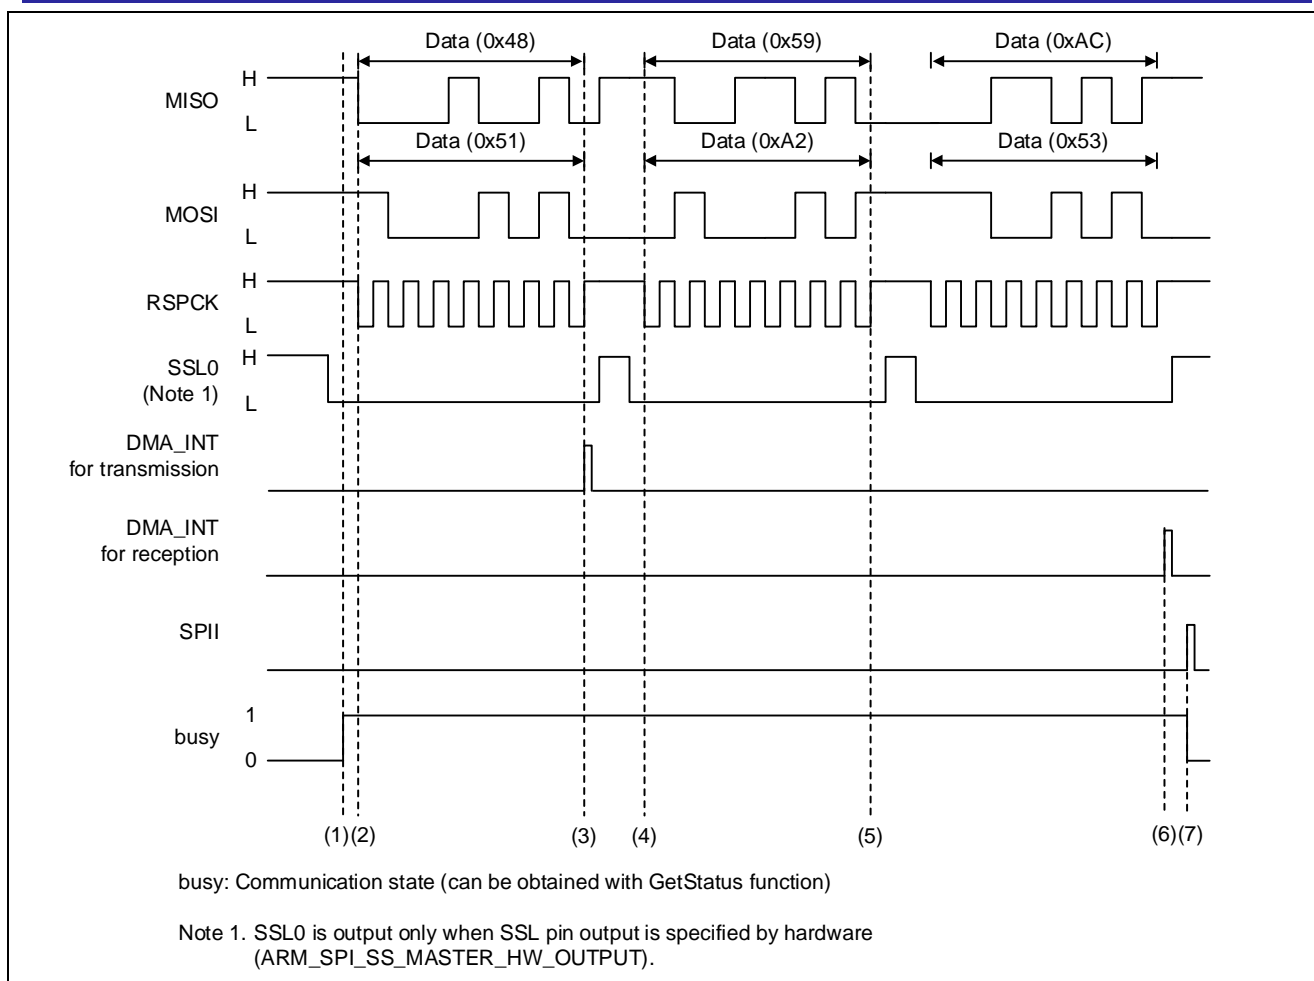


Figure 3-25 Transmit and Receive Operation Using DMAC for Control (3 bytes received)

- (1) When the Transfer function is executed, the busy flag is set to "1" (communicating state) and the SPTI and SPRI interrupts are set as DMAC transfer factors. Transmit data is DMA-transferred to the data register (SPDR).
- (2) When the clock is input to the RSPCK pin, the transmit data starts to be output from the MOSI pin, and the second and subsequent bytes of the transmit data are DMA-transferred to the transmit data register (SPDR).
- (3) When data is received through the MOSI pin, the value of the receive data register (SPDR) is DMA-transferred to the specified buffer.
- (4) When the specified number of bytes have been written, a DMAC transfer end interrupt occurs on the transmission side.
- (5) Each time reception of one byte is completed, the value of the SPDR register is transferred to the specified buffer.
- (6) After transfer of the specified size of data is completed, the DMAC transfer end interrupt occurs. The rx_busy flag is cleared to "0" (communication wait state) in the interrupt handling process. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note1) (Note2)

Note: If a transmission/reception error occurs, the SPEI interrupt occurs, the rx_busy flag is cleared to "0" (communication wait state), and the error state is cleared. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

Note 2. When CPHA = 0 is set, wait for half a RSPCK cycle in software before resuming communication. For details, see "5.6 Resuming communication in slave mode and CPHA0".

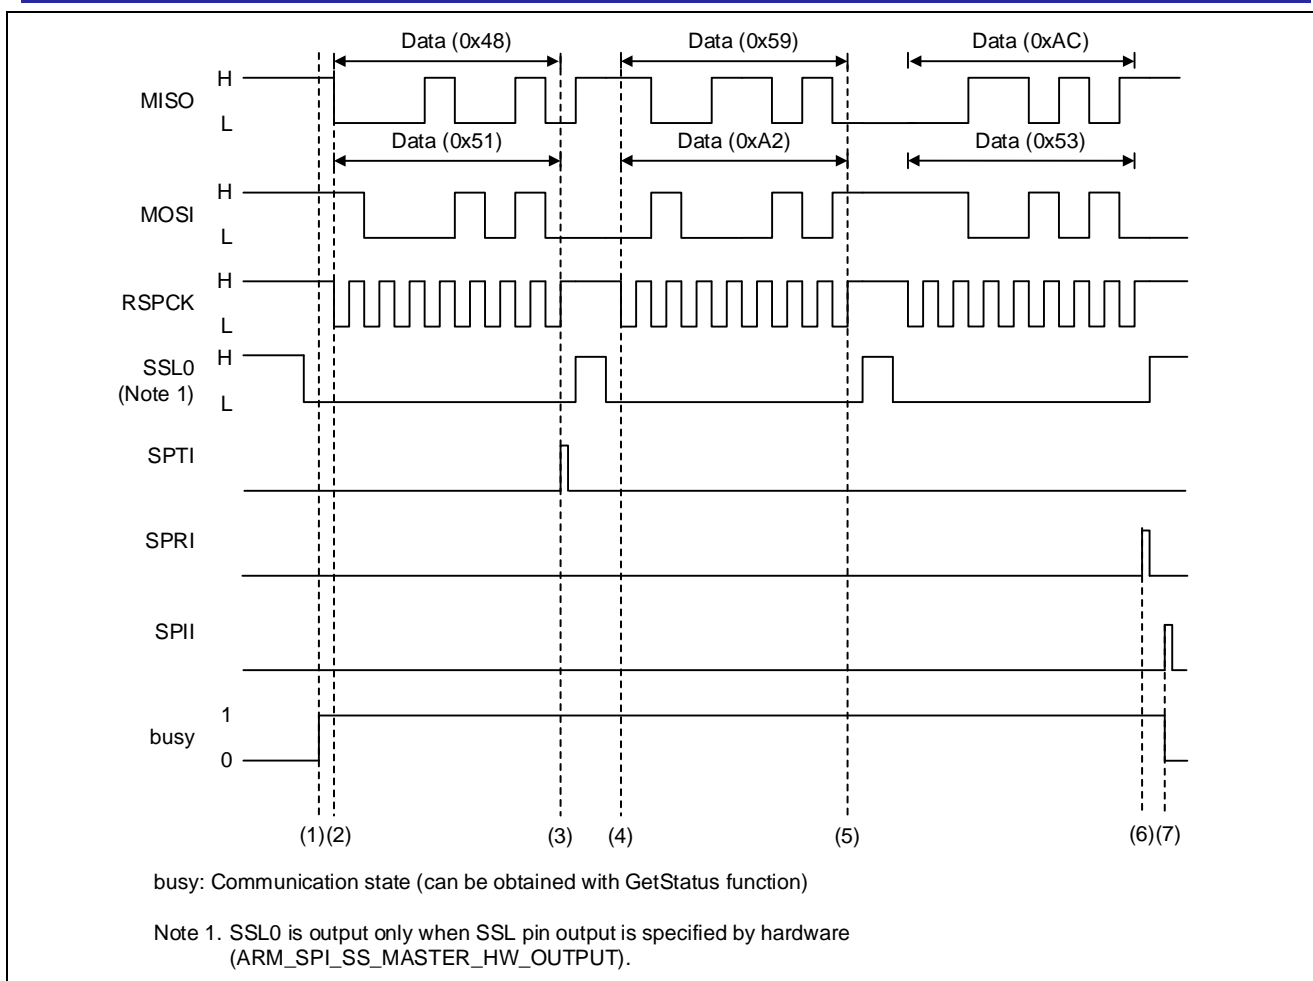


Figure 3-26 Transmit and Receive Operation Using DTC for Control (3 bytes received)

- (1) When the Transfer function is executed, the busy flag is set to "1" (communicating state) and the SPTI and SPRI interrupts are set as DTC transfer factors. Transmit data is DMA-transferred to the data register (SPDR).
- (2) When the clock is input to the RSPCK pin, the transmit data starts to be output from the MOSI pin, and the second and subsequent bytes of the transmit data are DMA-transferred to the transmit data register (SPDR).
- (3) When data is received through the MOSI pin, the value of the receive data register (SPDR) is DMA-transferred to the specified buffer.
- (4) When the specified number of bytes have been written, a DMAC transfer end interrupt occurs on the transmission side.
- (5) Each time reception of one byte is completed, the value of the SPDR register is transferred to the specified buffer.
- (6) After transfer of the specified data size is completed, the DMAC transfer end interrupt occurs. The rx_busy flag is cleared to "0" (communication wait state) in the interrupt handling process. If a callback function has been registered, the callback function is executed using ARM_SPI_EVENT_TRANSFER_COMPLETE as an argument. (Note1) (Note2)

Note: If a reception error occurs, the SPEI interrupt occurs, the rx_busy flag is cleared to "0" (communication wait state), and the error state is cleared. When a callback function is registered, the callback function is executed with ARM_SPI_EVENT_DATA_LOST as an argument.

Note 2. When CPHA = 0 is set, wait for half a RSPCK cycle in software before resuming communication. For details, see "5.6 Resuming communication in slave mode and CPHA0".

3.3 Configurations

For the SPI driver, configuration definitions that can be modified by the user are provided in the `r_spi_cfg.h` file.

3.3.1 Transmission Control Setting

This specifies the transmission control method.

Name: `SPIIn_TRANSMIT_CONTROL` (n = 0, 1)

Table 3-1 Settings of `SPIIn_TRANSMIT_CONTROL`

Setting	Description
<code>SPI_USED_INTERRUPT</code> (initial value)	Uses interrupts for transmission control.
<code>SPI_USED_DMACH0</code>	Uses DMACH0 for transmission control.
<code>SPI_USED_DMACH1</code>	Uses DMACH1 for transmission control.
<code>SPI_USED_DMACH2</code>	Uses DMACH2 for transmission control.
<code>SPI_USED_DMACH3</code>	Uses DMACH3 for transmission control.
<code>SPI_USED_DTC</code>	Uses DTC for transmission control

3.3.2 Reception Control Setting

This specifies the reception control method.

Name: `SPIIn_RECEIVE_CONTROL` (n = 0, 1)

Table 3-2 Settings of `SPIIn_RECEIVE_CONTROL`

Setting	Description
<code>SPI_USED_INTERRUPT</code> (initial value)	Uses interrupts for reception control.
<code>SPI_USED_DMACH0</code>	Uses DMACH0 for reception control.
<code>SPI_USED_DMACH1</code>	Uses DMACH1 for reception control.
<code>SPI_USED_DMACH2</code>	Uses DMACH2 for reception control.
<code>SPI_USED_DMACH3</code>	Uses DMACH3 for reception control.
<code>SPI_USED_DTC</code>	Uses DTC for reception control

3.3.3 SPTI Interrupt Priority Level

This specifies the priority level of the `SPTIn` interrupt. (n = 0, 1)

Name: `SPIIn_SPTI_PRIORITY`

Table 3-3 Settings of `SPIIn_SPTI_PRIORITY`

Setting	Description
0	Sets the interrupt priority level to 0. (highest priority)
1	Sets the interrupt priority level to 1.
2	Sets the interrupt priority level to 2.
3 (initial value)	Sets the interrupt priority level to 3.

3.3.4 SPRI Interrupt Priority Level

This specifies the priority level of the SPRIn interrupt. (n = 0, 1)

Name: SPIn_SPRI_PRIORITY

Table 3-4 Settings of SPIn_SPRI_PRIORITY

Setting	Description
0	Sets the interrupt priority level to 0. (highest priority)
1	Sets the interrupt priority level to 1.
2	Sets the interrupt priority level to 2.
3 (initial value)	Sets the interrupt priority level to 3.

3.3.5 SPII Interrupt Priority Level

This specifies the priority level of the SPIIn interrupt. (n = 0, 1)

Name: SPIn_SPII_PRIORITY

Table 3-5 Settings of SPIn_SPII_PRIORITY

Setting	Description
0	Sets the interrupt priority level to 0. (highest priority)
1	Sets the interrupt priority level to 1.
2	Sets the interrupt priority level to 2.
3 (initial value)	Sets the interrupt priority level to 3.

3.3.6 SPEI Interrupt Priority Level

This specifies the priority level of the SPEIn interrupt. (n = 0, 1)

Name: SPIn_SPEI_PRIORITY

Table 3-6 Settings of SPIn_SPEI_PRIORITY

Setting	Description
0	Sets the interrupt priority level to 0. (highest priority)
1	Sets the interrupt priority level to 1.
2	Sets the interrupt priority level to 2.
3 (initial value)	Sets the interrupt priority level to 3.

3.3.7 SPTEND Interrupt Priority Level

This specifies the priority level of the SPTENDn interrupt. (n = 0, 1)

Name: SPIn_SPTEND_PRIORITY

Table 3-7 Settings of SPIn_SPTEND_PRIORITY

Setting	Description
0	Sets the interrupt priority level to 0. (highest priority)
1	Sets the interrupt priority level to 1.
2	Sets the interrupt priority level to 2.
3 (initial value)	Sets the interrupt priority level to 3.

3.3.8 Definition of Software-Controlled SSL Pin

This defines the SSL pin to be used with software control.

Name: SPIn_SS_PORT (Note), SPIn_SS_PIN (n = 0, 1)

Table 3-8 Settings of SPIn_SS_PORT and SPIn_SS_PIN

Name	Initial Value	Description
SPIn_SS_PORT (Note)	(PORT0->PODR)	Selects PORT0 as the SSL pin.
SPIn_SS_PIN	(0)	Selects PORTi00 as the SSL pin. (i is the port specified with SPIn_SS_PORT)

Note: By default, this definition is commented out.

When using the software-controlled SSL pin, un-comment this definition.

3.3.9 Function Allocation to RAM

This initializes the settings for executing specific functions of the SPI driver RAM.

This configuration definition for setting function allocation to RAM has function-specific definitions.

Name: SPI_CFG_SECTION_xxx

A function name xxx should be written in all capital letters.

Example: ARM_SPI_INITIALIZE function → SPI_CFG_SECTION_ARM_SPI_INITIALIZE

Table 3-9 Settings of SPI_CFG_SECTION_xxx

Setting	Description
SYSTEM_SECTION_CODE	Does not allocate the function to RAM.
SYSTEM_SECTION_RAM_FUNC	Allocates the function to RAM.

Table 3-10 Initial State of Function Allocation to RAM

No.	Function Name	Allocation to RAM
1	ARM_SPI_GetVersion	
2	ARM_SPI_GetCapabilities	
3	ARM_SPI_Initialize	
4	ARM_SPI_Uninitialize	
5	ARM_SPI_PowerControl	
6	ARM_SPI_Send	
7	ARM_SPI_Receive	
8	ARM_SPI_Transfer	
9	ARM_SPI_GetDataCount	
10	ARM_SPI_Control	
11	ARM_SPI_GetStatus	
12	spin_spti_interrupt (n = 0, 1) (SPTI interrupt handling process)	✓
13	spin_spri_interrupt (n = 0, 1) (SPRI interrupt handling process)	✓
14	spin_spii_interrupt (n = 0, 1) (SPII interrupt handling process)	✓
15	spin_spei_interrupt (n = 0, 1) (SPEI interrupt handling process)	✓
16	spin_sptend_interrupt (n = 0, 1) (SPTEND interrupt handling process)	✓

4. Detailed Information of Driver

This chapter describes the detailed specifications implementing the functions of this driver.

4.1 Function Specifications

This section describes the specifications and processing flow of each function of the SPI driver.

The judgment, such as that for a conditional branch, is not always made as that described in the processing flow.

4.1.1 ARM_SPI_GetVersion Function

Table 4-1 ARM_SPI_GetVersion Function Specifications

Format	ARM_DRIVER_VERSION ARM_SPI_GetVersion(void)
Description	Acquires SPI driver version.
Argument	None
Return value	SPI driver version
Remarks	<p>[Example of calling function from instance]</p> <pre>// SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; main() { ARM_DRIVER_VERSION version; version = spi0Drv->GetVersion(); }</pre>

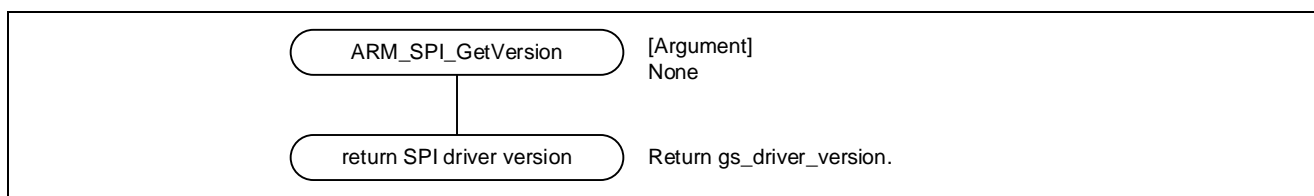


Figure 4-1 ARM_SPI_GetVersion Function Processing Flow

4.1.2 ARM_SPI_GetCapabilities Function

Table 4-2 ARM_SPI_GetCapabilities Function Specifications

Format	ARM_SPI_CAPABILITIES ARM_SPI_GetCapabilities(void)
Description	Acquires SPI driver functions.
Argument	None
Return value	Driver capabilities
Remarks	<div><div>[Example of calling function from instance]</div><div>// SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; main() { ARM_SPI_CAPABILITIES cap; cap = spi0Drv->GetCapabilities(); }</div></div>

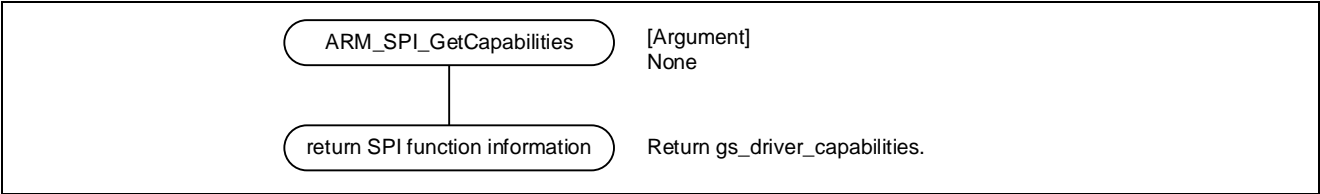


Figure 4-2 ARM_SPI_GetCapabilities Function Processing Flow

4.1.3 ARM_SPI_Initialize Function

Table 4-3 ARM_SPI_Initialize Function Specifications

Format	int32_t ARM_SPI_Initialize(ARM_SPI_SignalEvent_t cb_event, st_spi_resources_t * const p_spi)
Description	Initializes the SPI driver (initializes RAM, makes register settings, and registers interrupts with NVIC).
Argument	ARM_SPI_SignalEvent_t cb_event: Callback function Specifies the callback function to be executed when an event occurs. If NULL is set, the callback function will not be executed.
	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources to be initialized.
Return value	ARM_DRIVER_OK SPI initialization completed
	ARM_DRIVER_ERROR SPI initialization failed Initialization failure occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • If neither transmission nor reception can be used (due to an erroneous setting in communication control, NVIC registration, etc.) • If the resources of the SPI channel to be used are locked (If SPin is already locked by the R_SYS_ResourceLock function)
Remarks	When this function is accessed, specifying the SPI resources is not required. [Example of calling function from instance] static void callback(uint32_t event); // SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; main() { spi0Drv->Initialize(callback); }

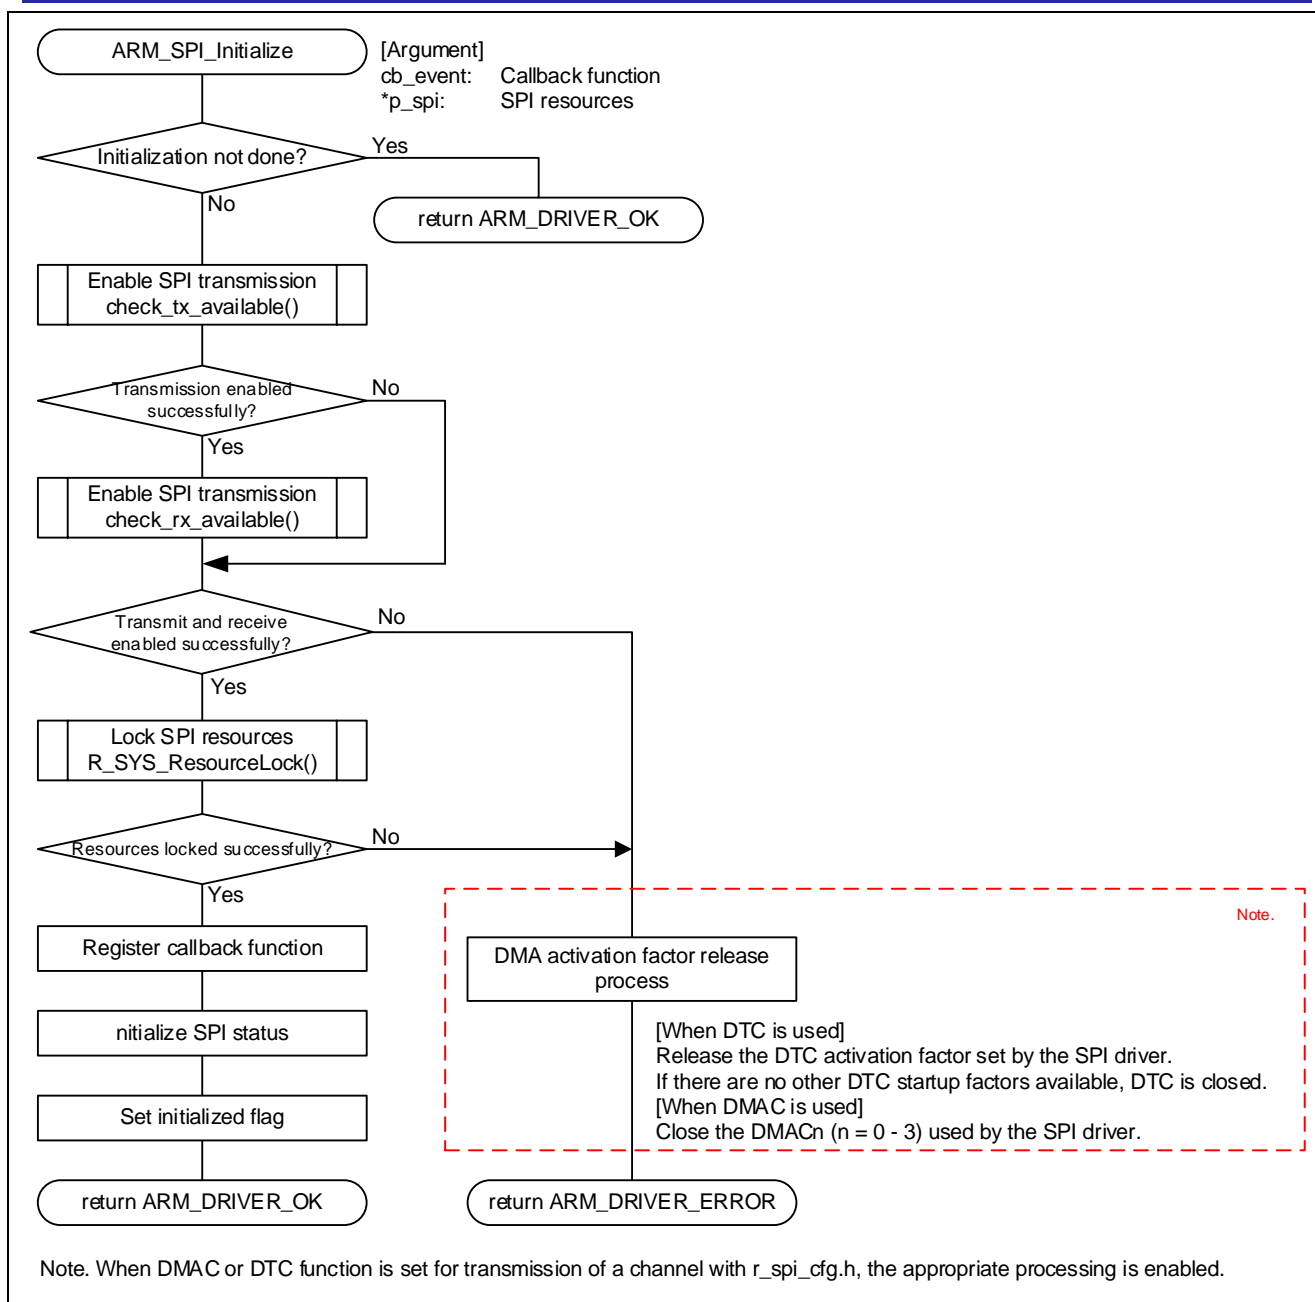


Figure 4-3 ARM_SPI_Initialize Function Processing Flow

4.1.4 ARM_SPI_Uninitialize Function

Table 4-4 ARM_SPI_Uninitialize Function Specifications

Format	int32_t ARM_SPI_Uninitialize(st_spi_resources_t * const p_spi)
Description	Releases the SPI driver.
Argument	st_spi_resources_t * const p_spi: SPI resources Specifies the SPI resources to be released.
Return value	ARM_DRIVER_OK SPI released normally
	ARM_DRIVER_ERROR SPI release failed When executed while in both the power-off state and module start state (when an error has occurred upon R_LPM_ModuleStart), SPI release fails.
Remarks	When this function is accessed, specifying the SPI resources is not required. [Example of calling function from instance] // SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; main() { spi0Drv->Uninitialize(); }

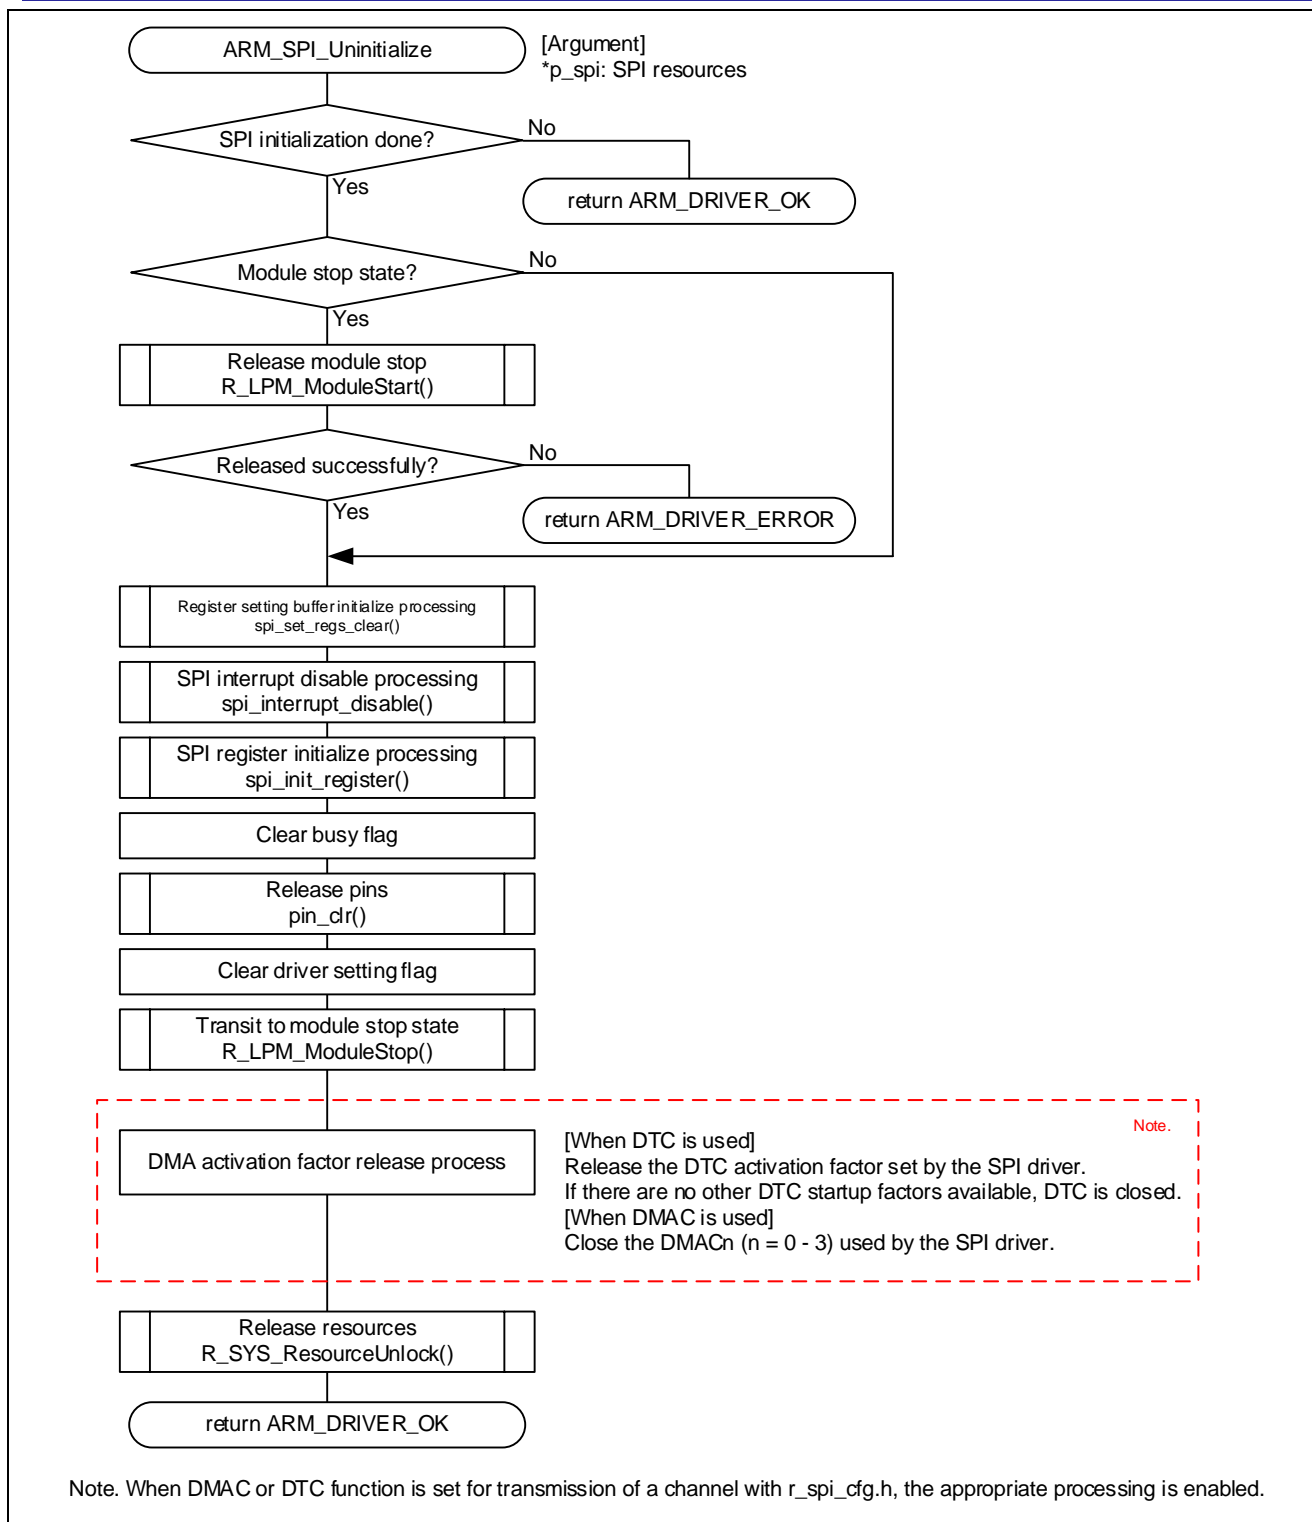


Figure 4-4 ARM_SPI_Uninitialize Function Processing Flow

4.1.5 ARM_SPI_PowerControl Function

Table 4-5 ARM_SPI_PowerControl Function Specifications

Format	int32_t ARM_SPI_PowerControl(ARM_POWER_STATE state, st_spi_resources_t * const p_spi)
Description	Releases the SPI from the module stop state, or causes a transition to the state.
Argument	ARM_POWER_STATE state : Power setting Set one of the following. ARM_POWER_OFF: Causes a transition to the module stop state. ARM_POWER_FULL: Releases the SPI from the module stop state. ARM_POWER_LOW: This setting is not supported.
	st_spi_resources_t * const p_spi: SPI resources Specifies the SPI resources to which power is supplied.
Return value	ARM_DRIVER_OK Power setting change completed
	ARM_DRIVER_ERROR Power setting change failed Power setting change failure occurs if one of the following conditions is detected. • If this function is executed with the SPI uninitialized • If transition to the module stop state has failed (An error has occurred in R_LPM_ModuleStart.)
	ARM_DRIVER_ERROR_UNSUPPORTED Specified power setting is not supported
Remarks	When this function is accessed, specifying the SPI resources is not required. [Example of calling function from instance] // SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; main() { spi0Drv-> PowerControl (ARM_POWER_FULL); }

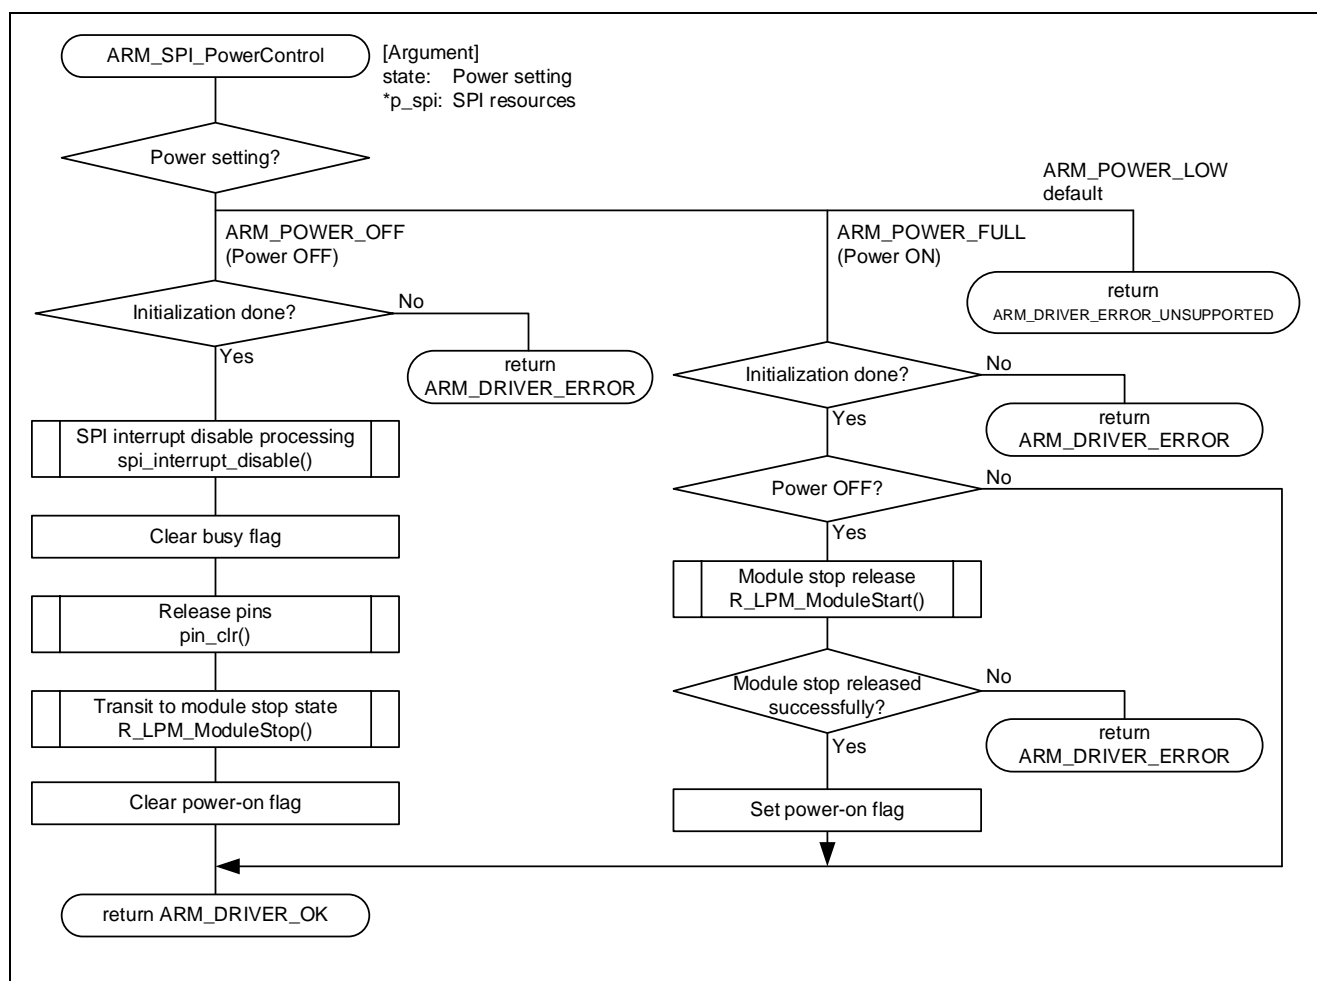


Figure 4-5 ARM_SPI_PowerControl Function Processing Flow

4.1.6 ARM_SPI_Send Function

Table 4-6 ARM_SPI_Send Function Specifications

Format	int32_t ARM_SPI_Send(void const * const p_data, uint32_t num, st_spi_resources_t * const p_spi)
Description	Starts transmission.
Argument	void const * const *p_data : Transmit data storage pointer Specifies the start address of the buffer where data to be transmitted is stored.
	uint32_t num : Transmission size Specifies the size of data to be transmitted.
	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources that transmit data.
Return value	ARM_DRIVER_OK Transmission started normally
	ARM_DRIVER_ERROR Transmission start failed Transmission start failure occurs if one of the following conditions is detected.
	<ul style="list-style-type: none"> • If this function is executed in the power OFF state • If this function is executed in the uninitialized state • If this function is executed with master mode set and moreover in master transmission disabled state • If this function is executed with slave mode set and moreover in slave transmission disabled state • If DMAC/DTC is specified for transmission and DMA driver setting has failed
	ARM_DRIVER_ERROR_BUSY Transmission failed due to a busy state When a communication-in-progress state is detected, transmission fails due to a busy state.
	ARM_DRIVER_ERROR_PARAMETER Parameter error A parameter error occurs if one of the following settings is specified.
	<ul style="list-style-type: none"> • The pointer to transmit data storage is set as NULL. • Transmit data size is set to 0.
Remarks	<p>When this function is accessed, specifying the SPI resources is not required.</p> <p>[Example of calling function from instance]</p> <pre>// SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; const uint8_t tx_data[2] = {0x51, 0xA2}; main() { spi0Drv->Send(&tx_data[0], 2); }</pre>

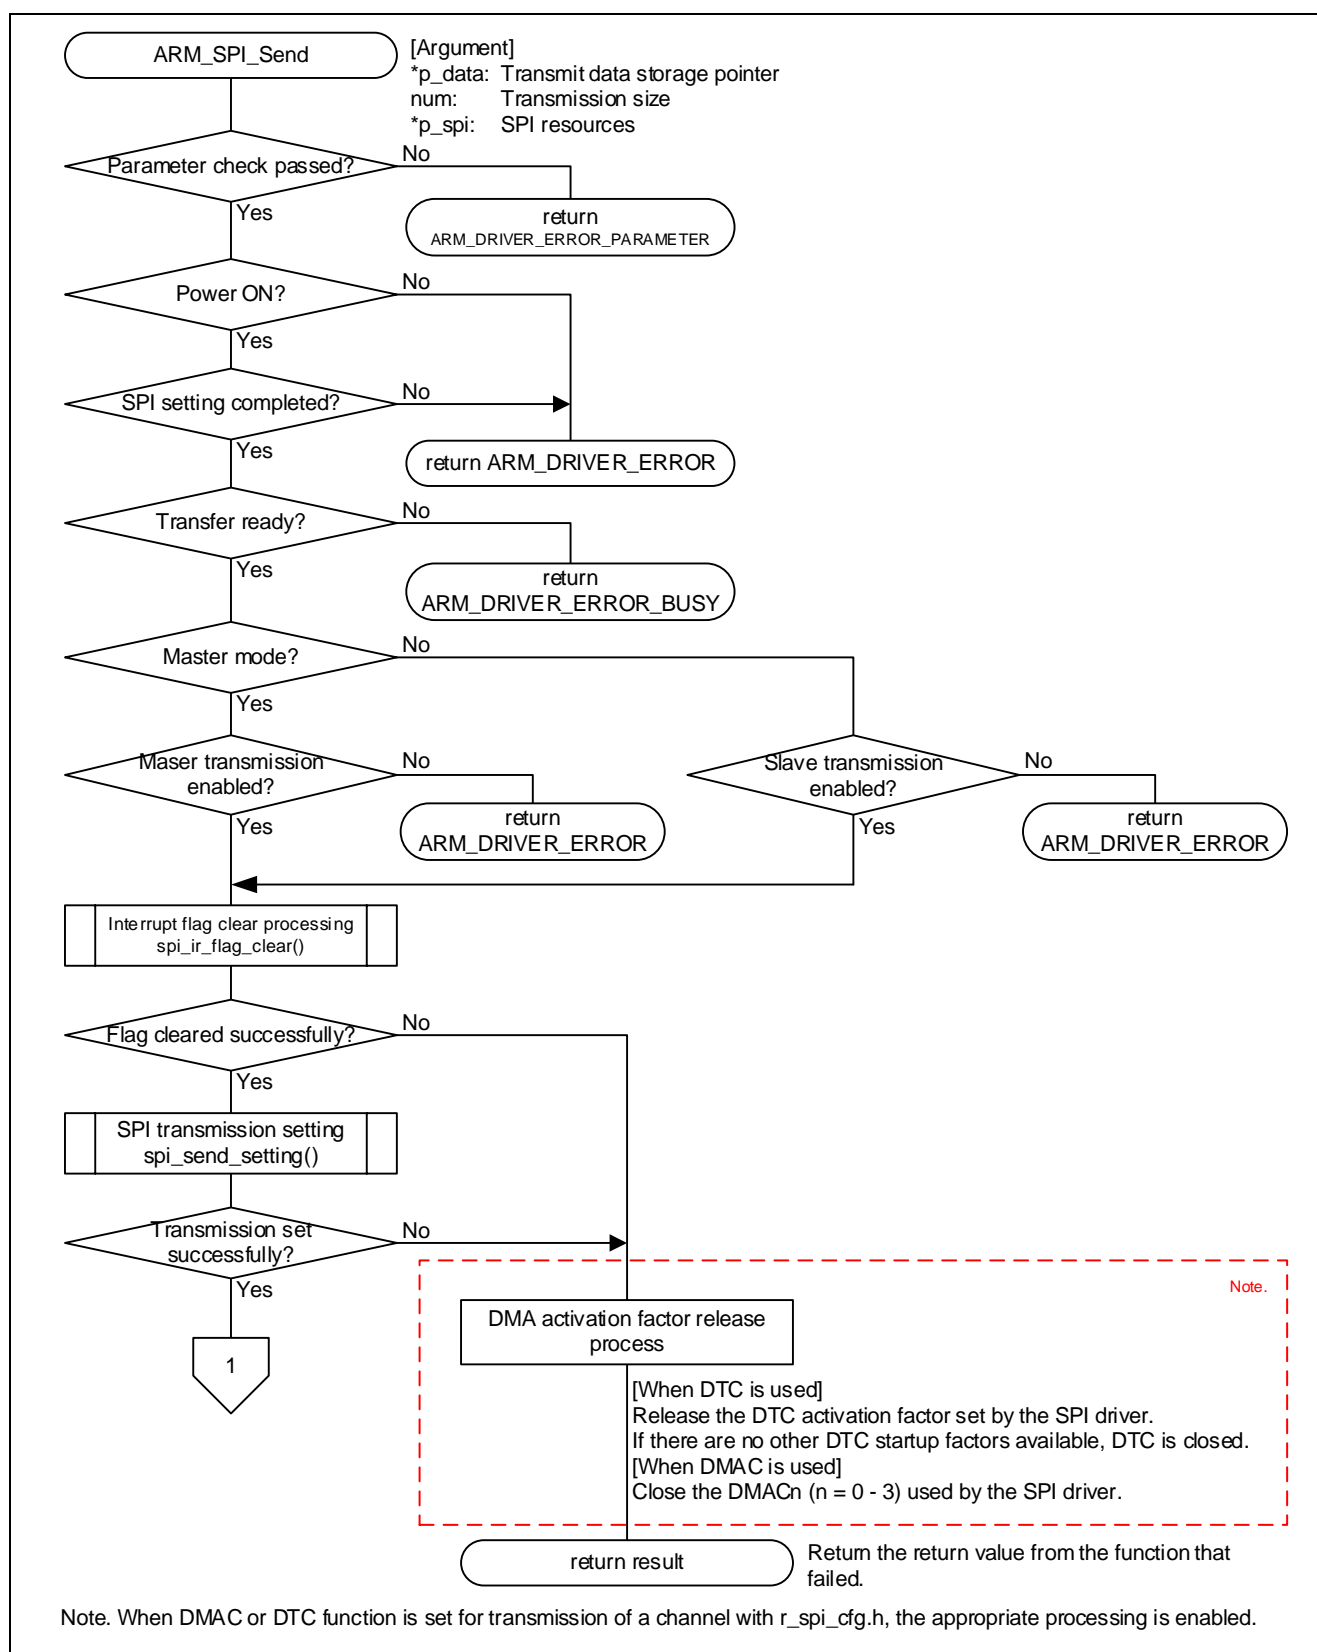


Figure 4-6 ARM_SPI_Send Function Processing Flow (1/2)

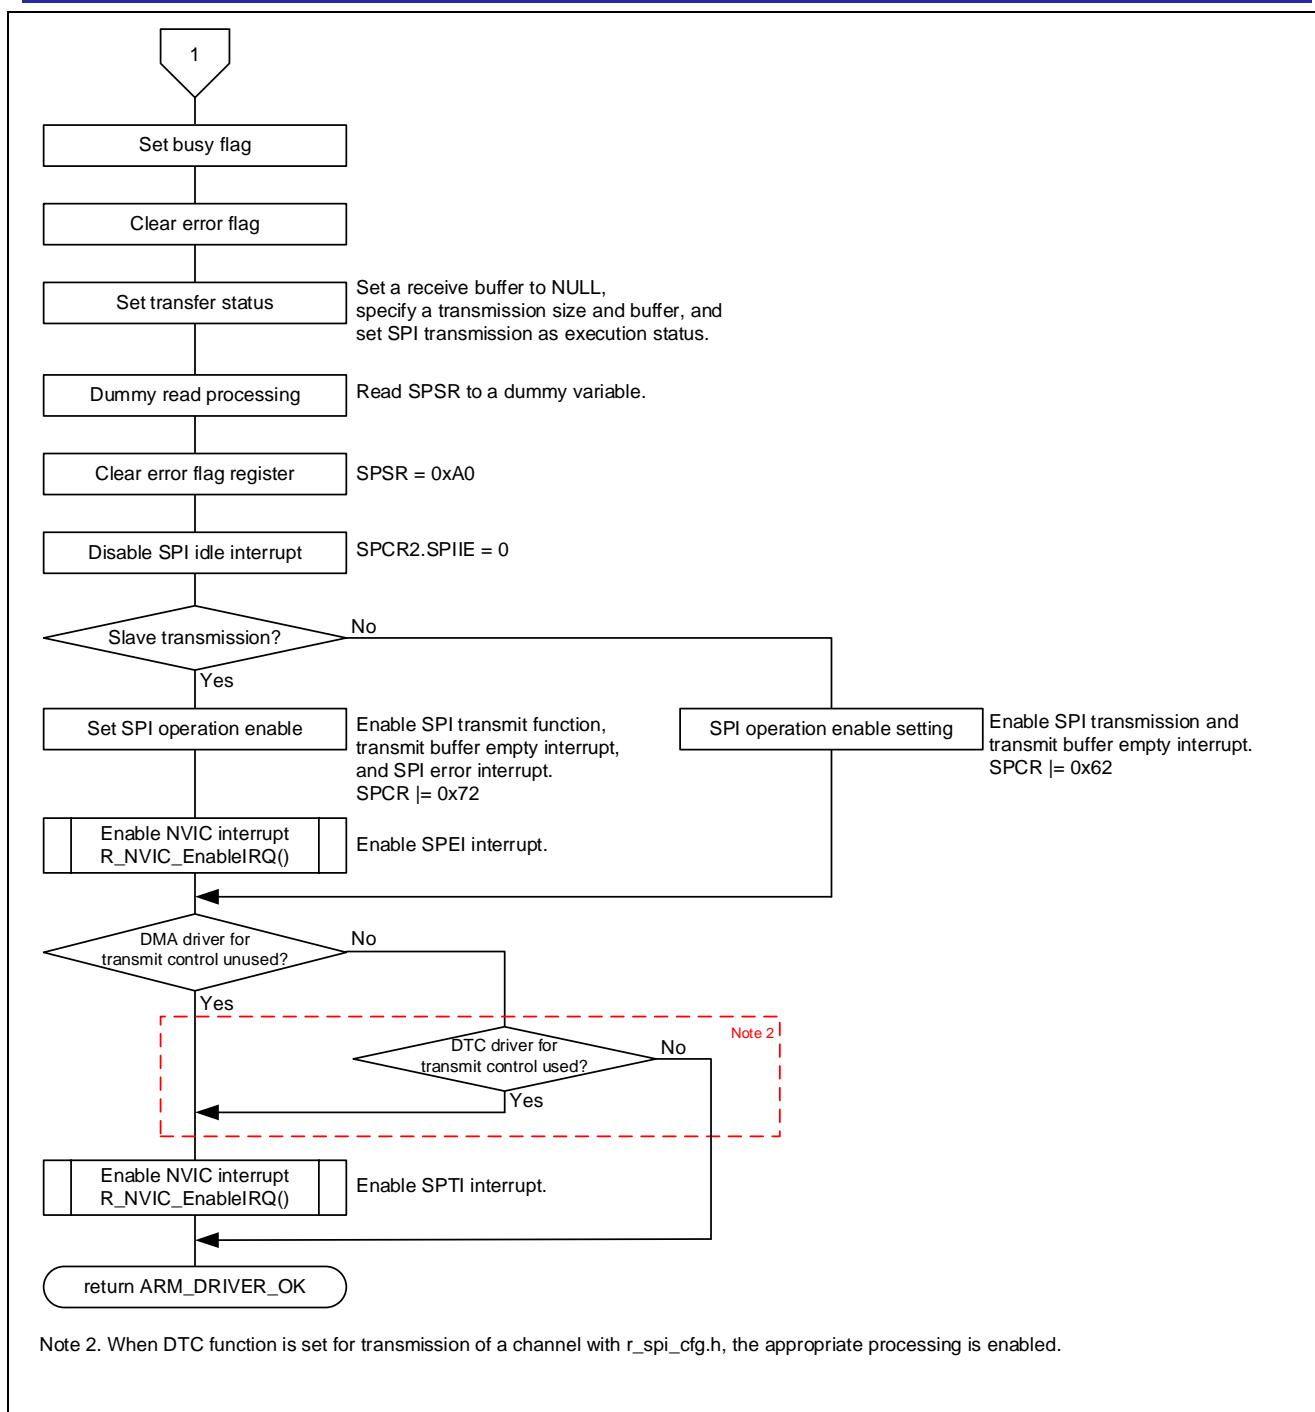


Figure 4-7 ARM_SPI_Send Function Processing Flow (2/2)

4.1.7 ARM_SPI_Receive Function

Table 4-7 ARM_SPI_Receive Function Specifications

Format	int32_t ARM_SPI_Receive(void * const p_data, uint32_t num, st_spi_resources_t * const p_spi)
Description	Starts reception.
Argument	void * const p_data: Receive data storage pointer Specifies the start address of the buffer where received data is to be stored.
	uint32_t num : Reception size Specifies the size of data to be received.
	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources that receive data.
Return value	ARM_DRIVER_OK Reception started normally
	ARM_DRIVER_ERROR Reception start failed Reception start failure occurs if one of the following conditions is detected.
	<ul style="list-style-type: none"> • If this function is executed in the power OFF state • If this function is executed in the uninitialized state • If this function is executed with master mode set and moreover in master reception disabled state • If this function is executed with slave mode set and moreover in slave reception disabled state • If DMAC/DTC is specified for transmission and reception and DMA driver setting has failed
	ARM_DRIVER_ERROR_BUSY Reception failed due to a busy state If a communication-in-progress state is detected, reception fails due to a busy state.
	ARM_DRIVER_ERROR_PARAMETER Parameter error A parameter error occurs if one of the following settings is specified.
	<ul style="list-style-type: none"> • The pointer to receive data storage is set as NULL. • Receive data size is set to 0.
Remarks	<p>When this function is accessed, specifying the SPI resources is not required.</p> <p>[Example of calling function from instance]</p> <pre>// SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; uint8_t rx_data[2]; main() { spi0Drv->Receive(&rx_data[0], 2); }</pre>

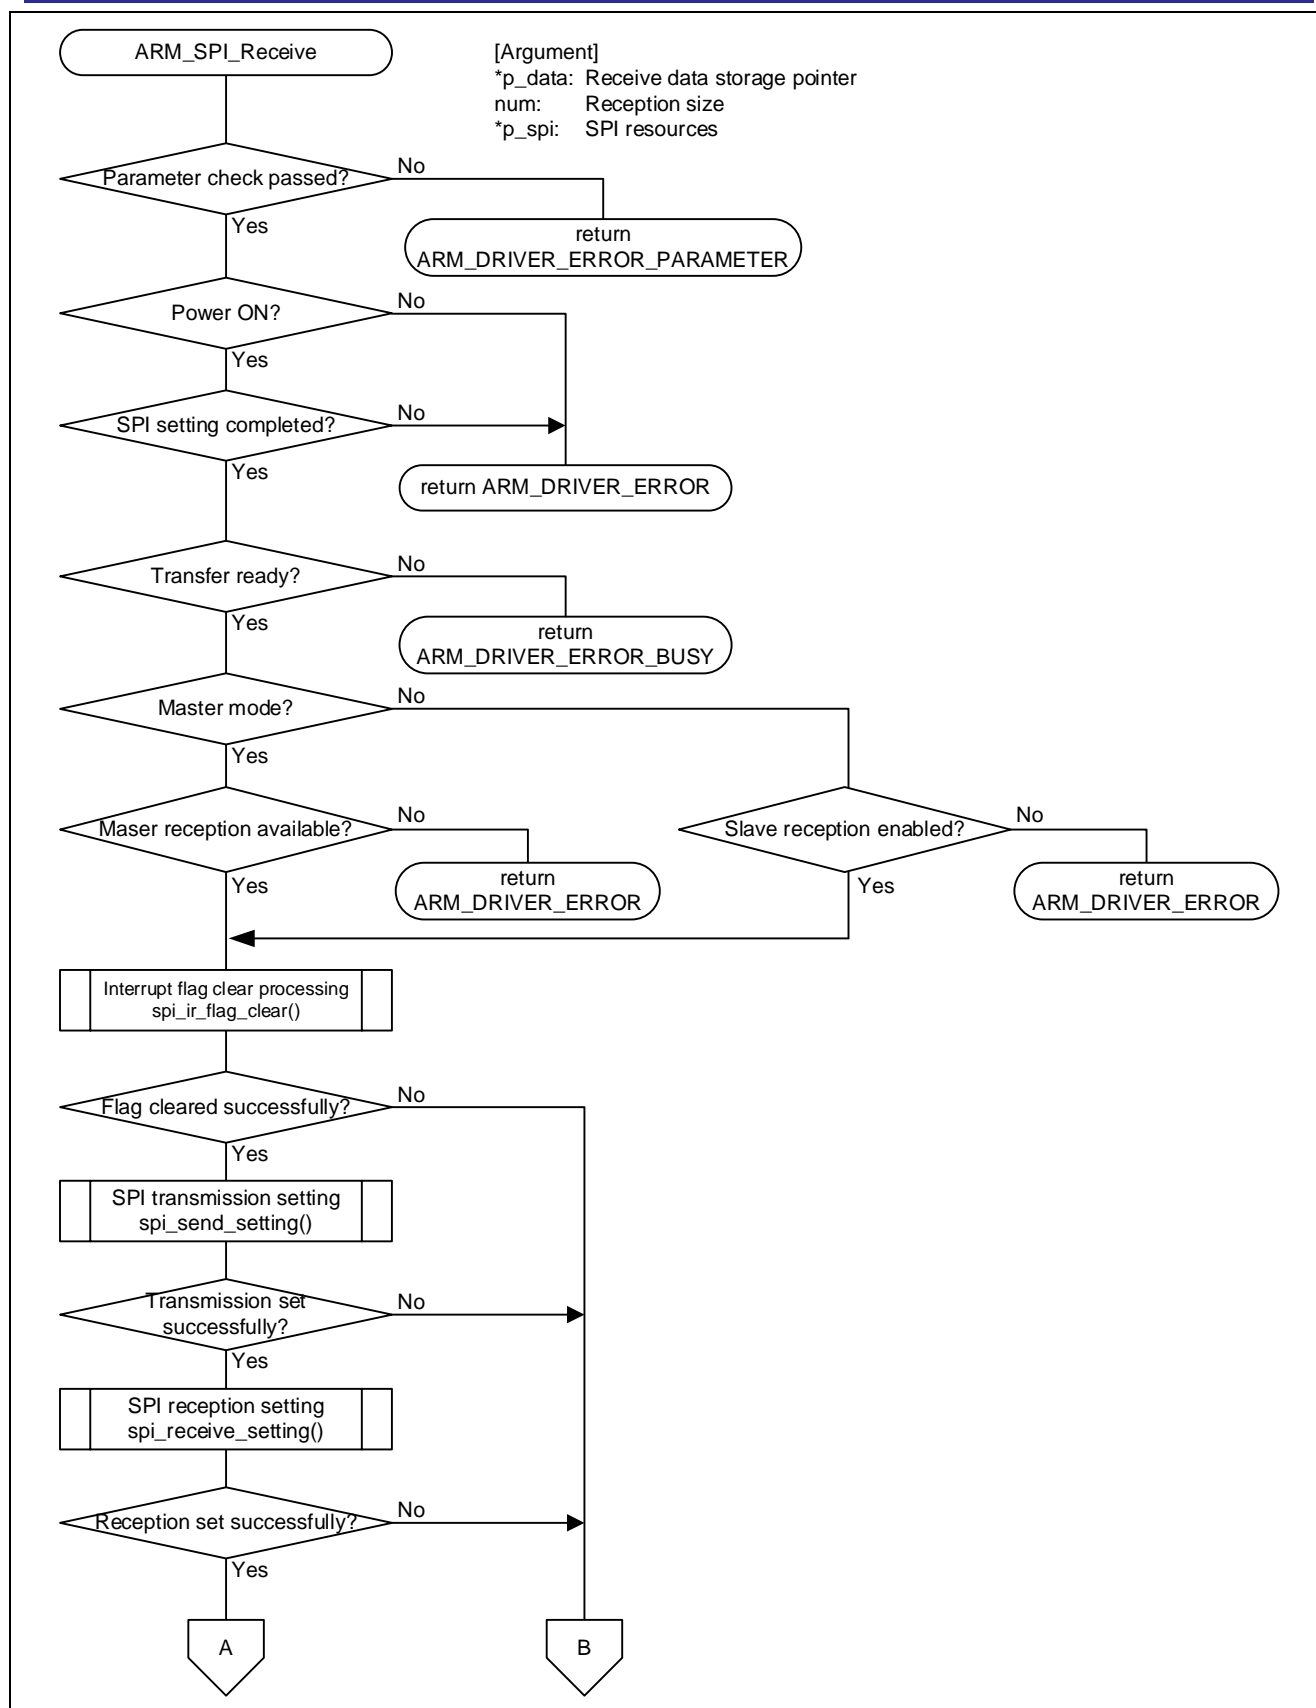


Figure 4-8 ARM_SPI_Receive Function Processing Flow (1/2)



4.1.8 ARM_SPI_Transfer Function

Table 4-8 ARM_SPI_Transfer Function Specifications

Format	int32_t ARM_SPI_Transfer(void const * const p_data_out, void * const p_data_in, uint32_t num, st_spi_resources_t * const p_spi)
Description	Starts transmission and reception.
Argument	void const * const p_data_out : Transmit data storage pointer Specifies the start address of the buffer where data to be transmitted is stored.
	void * const p_data_in : Receive data storage pointer Specifies the start address of the buffer where received data is to be stored.
	uint32_t num : Transmission/reception size Specifies the size of data to be transmitted and received.
	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources that receive data.
Return value	ARM_DRIVER_OK Transmission/reception started normally
	ARM_DRIVER_ERROR Transmission/reception start failed Transmission/reception start failure occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • If the function is executed in the power OFF state • If the function is executed in the uninitialized state • If this function is executed with master mode set and moreover in master reception disabled state • If this function is executed with slave mode set and moreover in slave reception disabled state • If DMAC/DTC is specified for transmission and reception and DMA driver setting has failed
	ARM_DRIVER_ERROR_BUSY Transmission/Reception failed due to a busy state If a communication-in-progress state is detected, transmission/reception fails due to a busy state.
	ARM_DRIVER_ERROR_PARAMETER Parameter error A parameter error occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • If transmission/reception size is set to 0 • If the pointer to transmit data storage is set as NULL • If the pointer to receive data storage is set as NULL
Remarks	When this function is accessed, specifying the SPI resources is not required. [Example of calling function from instance] <pre>// SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; uint8_t rx_data[2]; const uint8_t tx_data[2] = {0x51, 0xA2}; main() { spi0Drv->Transfer (&tx_data[0], &rx_data[0], 2); }</pre>

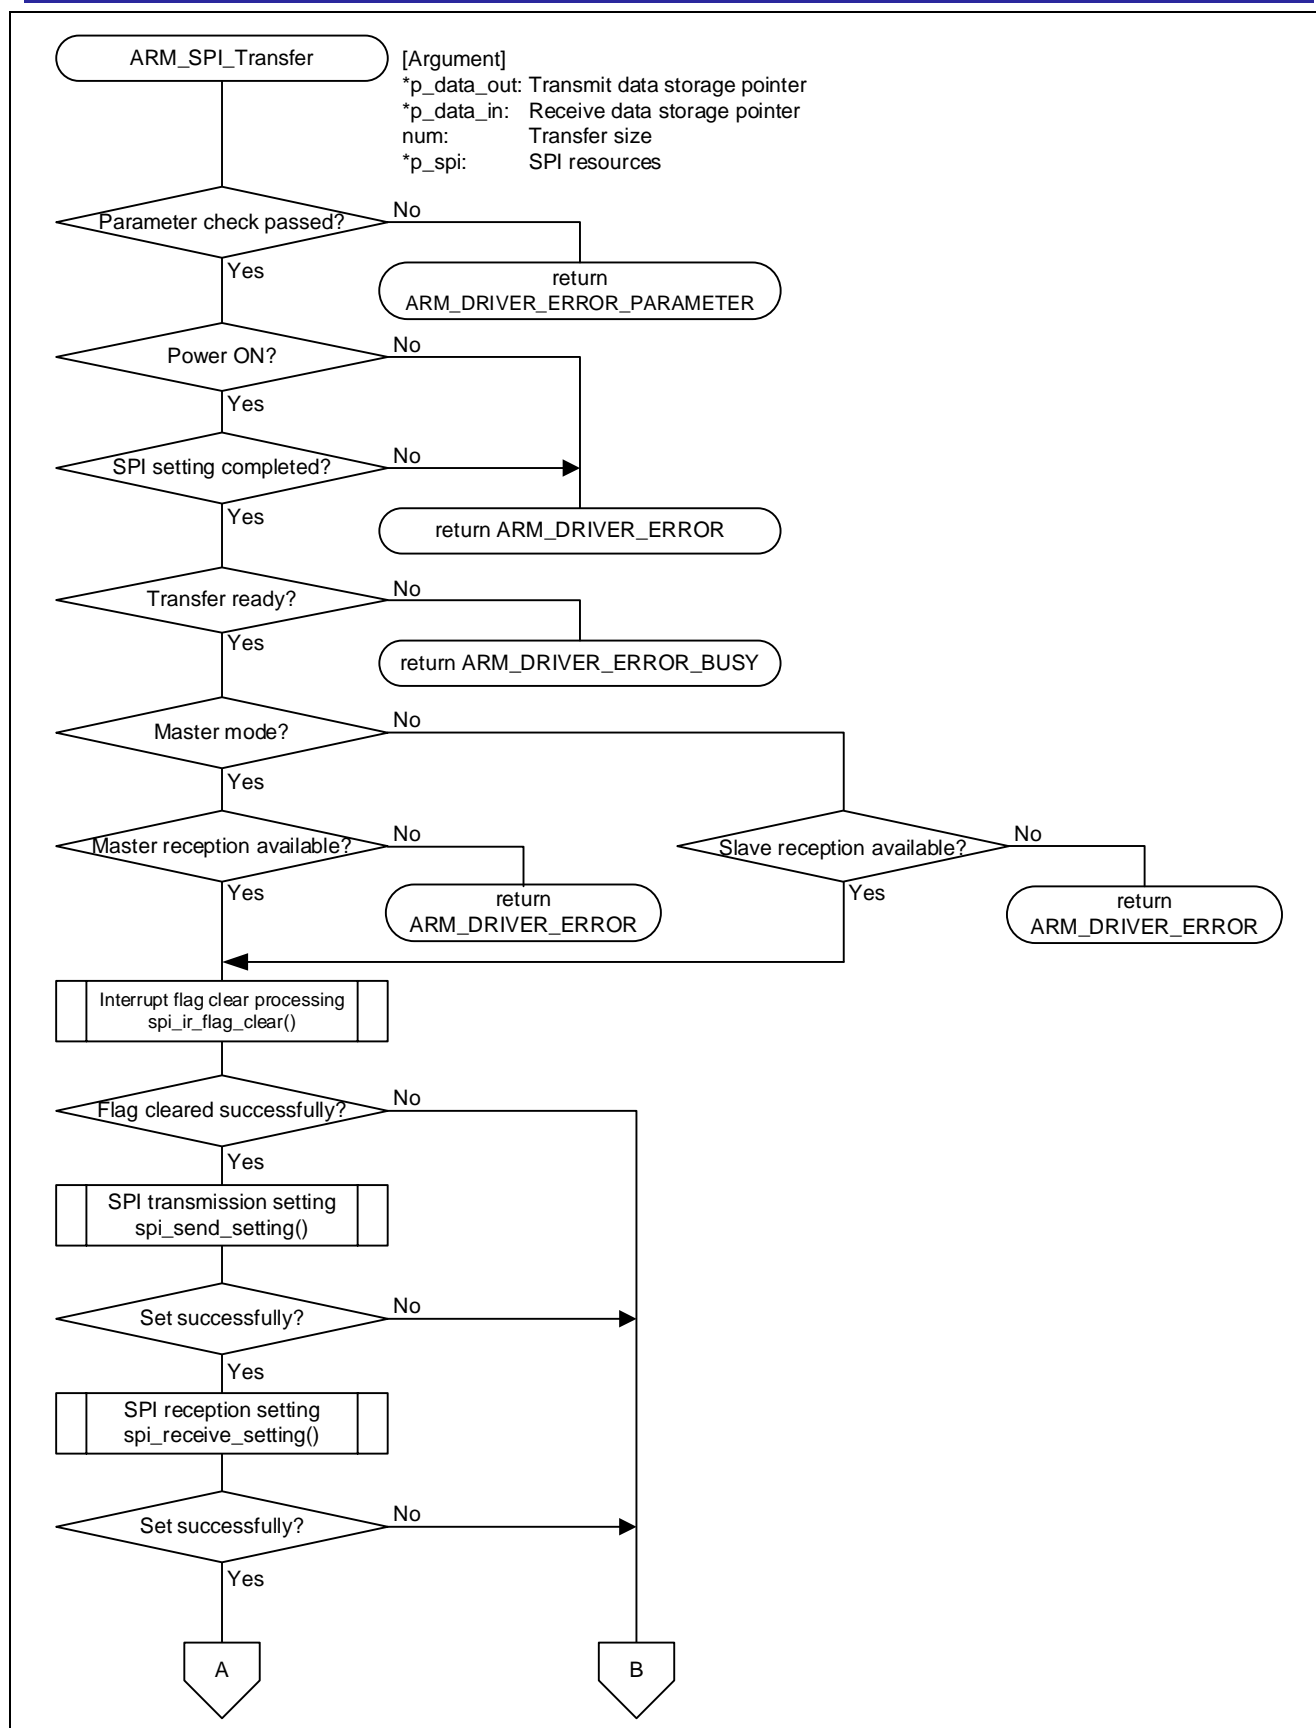


Figure 4-10 ARM_SPI_Transfer Function Processing Flow (1/2)

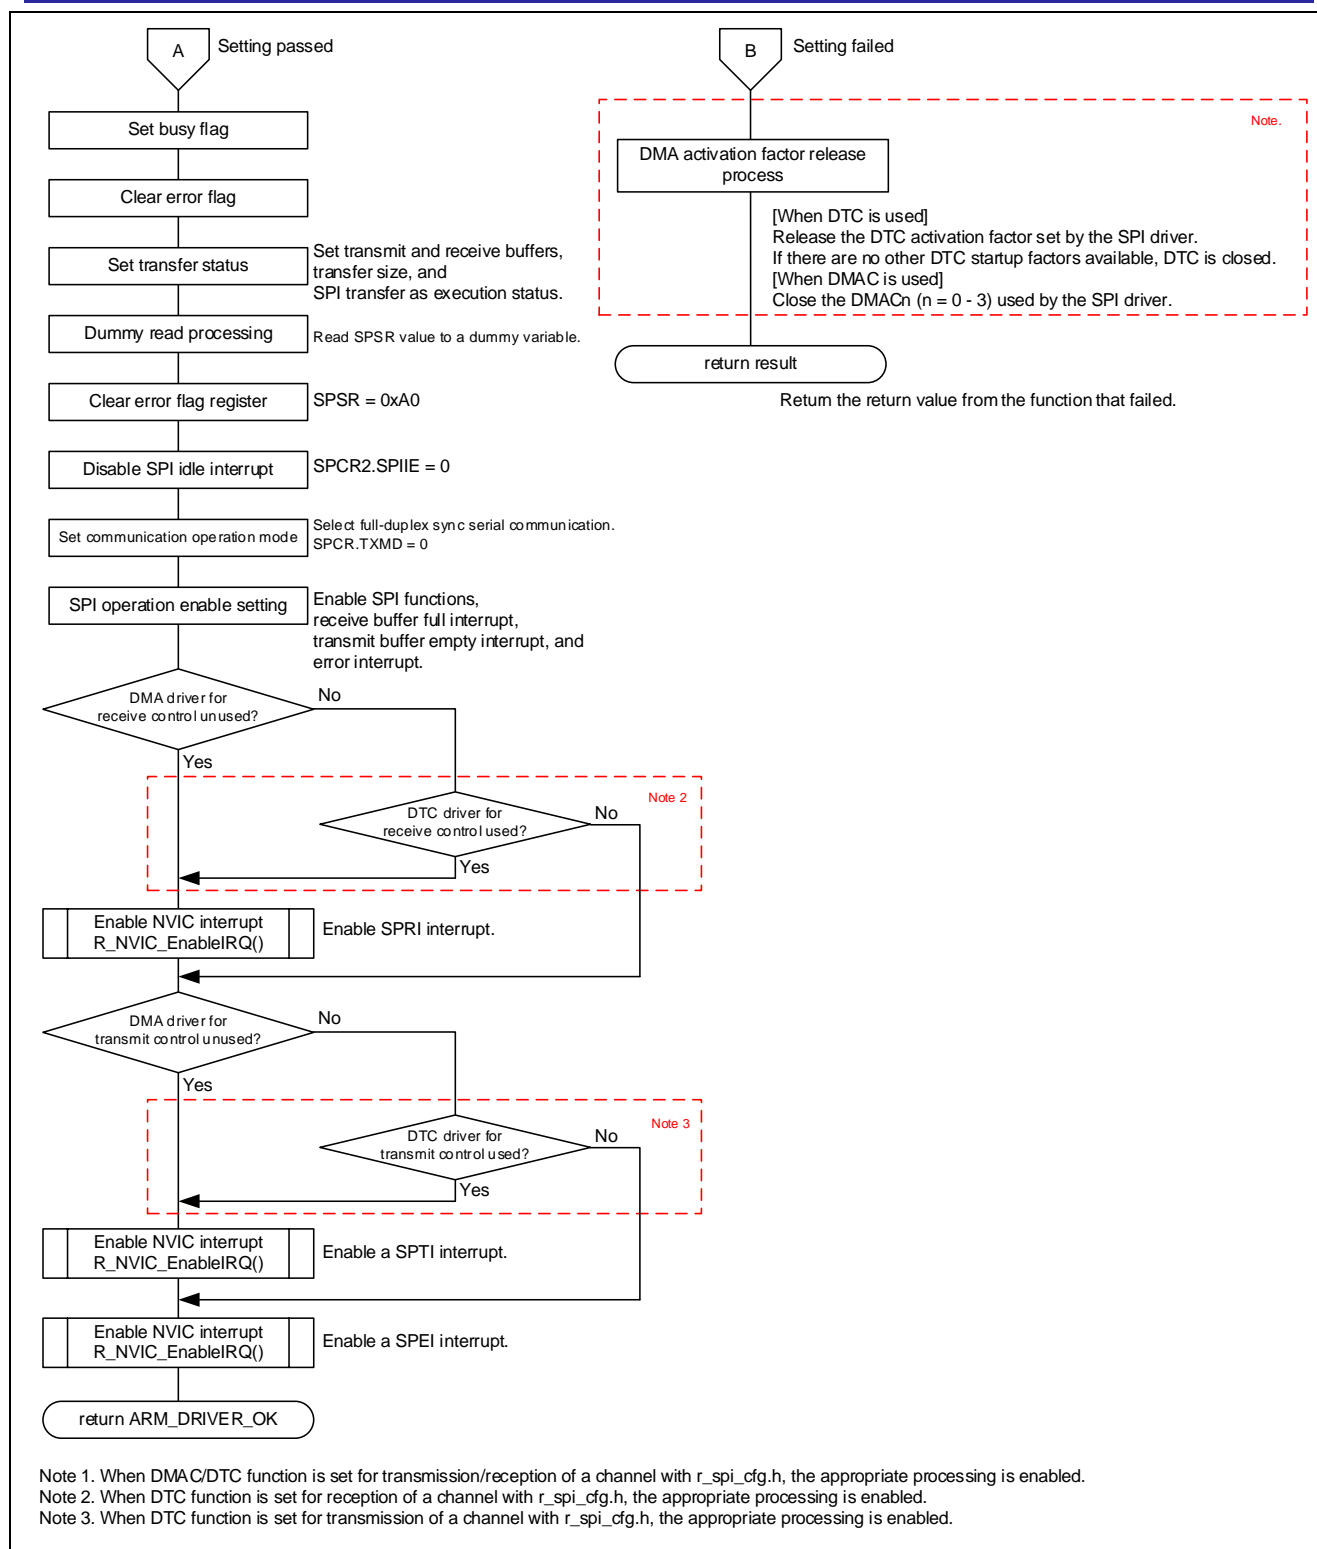


Figure 4-11 ARM_SPI_Transfer Function Processing Flow (2/2)

4.1.9 ARM_SPI_GetDataCount Function

Table 4-9 ARM_SPI_GetDataCount Function Specifications

Format	uint32_t ARM_SPI_GetDataCount(st_spi_resources_t const * const p_spi)
Description	Acquires the current transmission/reception count. When executed during a transmit operation, returns the transmitted data count; when executed during a receive operation or a transmit/receive operation, returns the received data count.
Argument	st_spi_resources_t * const p_spi : the SPI resources Specifies the resources of the SPI that get the transmission/reception count.
Return value	Transmission/reception count
Remarks	When this function is accessed, specifying the SPI resources is not required. [Example of calling function from instance] // SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; main() { uint32_t tx_count; tx_count = spi0Drv->GetDataCount(); }

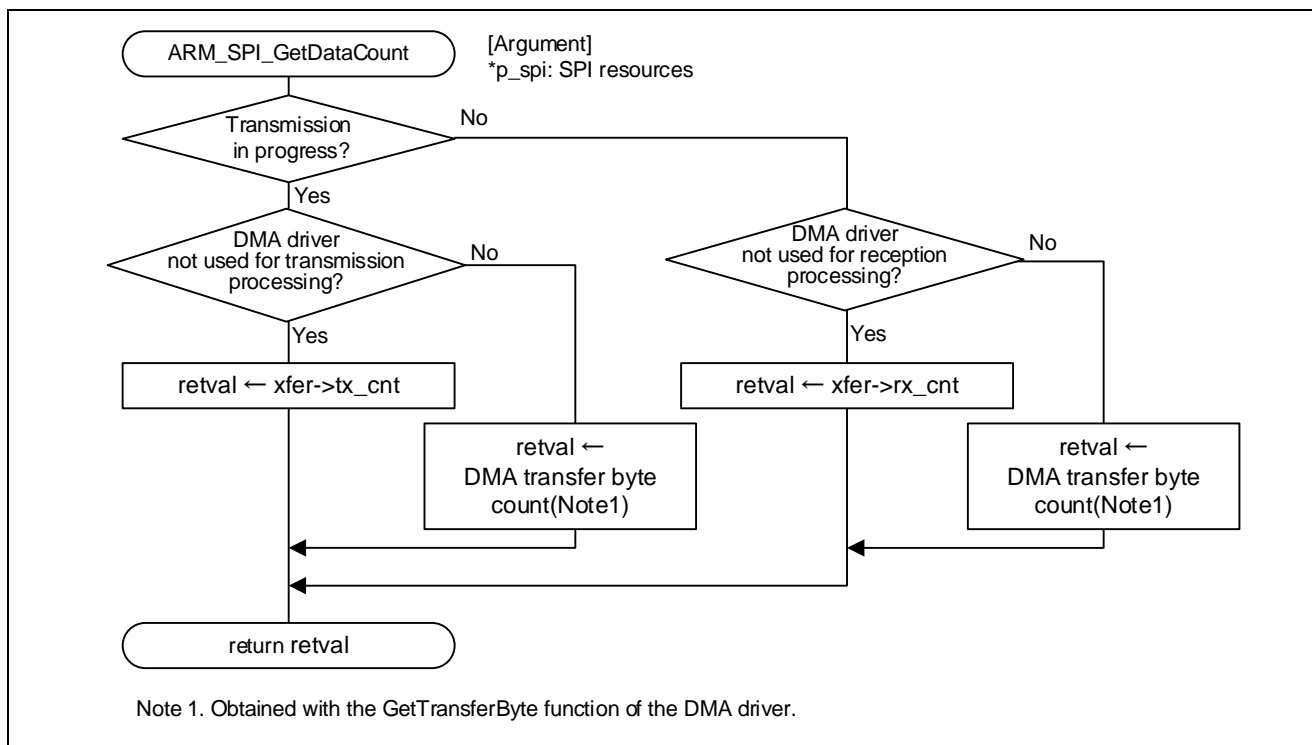


Figure 4-12 ARM_SPI_GetDataCount Function Processing Flow

4.1.10 ARM_SPI_Control Function

Table 4-10 ARM_SPI_Control Function Specifications (1/2)

Format	int32_t ARM_SPI_Control(uint32_t control, uint32_t arg, st_spi_resources_t const * const p_spi)
Description	Executes a control command of the SPI.
Argument	uint32_t control : Control command See section 2.4.1, SPI Control Command Definitions for the control commands.
	uint32_t arg : Command-specific argument (See Table 4-11 for the relationship between control commands and arguments.)
	st_spi_resources_t * const p_spi : SPI resources Specify the SPI resources to be controlled.
Return value	ARM_DRIVER_OK Control command execution completed
	ARM_DRIVER_ERROR Control command execution failed Control command execution failure occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • If the function is executed in the power OFF state • If an illegal command is executed. • If communication is in progress when any command other than ARM_SPI_ABORT_TRANSFER is executed.
	ARM_DRIVER_ERROR_BUSY Control command execution failed due to a busy state If communication is in progress when any command other than ARM_SPI_ABORT_TRANSFER is executed, the control command execution will fail due to a busy state.
	ARM_SPI_ERROR_FRAME_FORMAT Frame format error A frame format error occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • If both ARM_SPI_SS_SLAVE_SW and ARM_SPI_CPOLO_CPHA0 are specified • If both ARM_SPI_SS_SLAVE_SW and ARM_SPI_CPOL1_CPHA0 are specified • If ARM_SPI_TI_SSI or ARM_SPI_MICROWIRE is specified
	ARM_SPI_ERROR_BIT_ORDER Bit order error If an invalid value is set for the bit order setting, a bit order error occurs.
	ARM_SPI_ERROR_DATA_BITS Data bit error If a value other than 8, 9, 10, 11, 12, 13, 14, 15, 16, 20, 24, or 32 is set for data bit length, a data bit error occurs.
	ARM_SPI_ERROR_SS_MODE SSL pin control setting error An SSL pin control setting error occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • If, upon execution of the ARM_SPI_MODE_MASTER command, a value other than ARM_SPI_SS_MASTER_UNUSED, ARM_SPI_SS_MASTER_SW, or ARM_SPI_SS_MASTER_HW_OUTPUT is set for the SSL control setting • If, upon execution of the ARM_SPI_MODE_SLAVE command, a value other than ARM_SPI_SS_SLAVE_HW or ARM_SPI_SS_SLAVE_SW is set for the SSL control setting
Remarks	When this function is accessed, specifying the SPI resources is not required. [Example of calling function from instance] <pre>// SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0; main() { spi0Drv->Control(ARM_SPI_ABORT_TRANSFER, NULL); }</pre>

Table 4-11 Operations Specified with Control Commands and Command-Specific Arguments

Control command (control)	Command-Specific Argument (arg)	Description
ARM_SPI_MODE_INACTIVE	NULL(0)	No arguments are used.
ARM_SPI_MODE_MASTER	Baud rate (MAX: PCLKA/2 MIN:PCLKA/4096)	Initializes master mode with the specified baud rate.
ARM_SPI_MODE_SLAVE	NULL(0)	No arguments are used.
ARM_SPI_SET_BUS_SPEED	Baud rate (MAX: PCLKA/2 MIN:PCLKA/4096)	Sets transfer speed. Specify a baud rate for the second argument.
ARM_SPI_GET_BUS_SPEED	NULL(0)	No arguments are used.
ARM_SPI_SET_DEFAULT_TX_VALUE	Default data (0x00 to 0xFFFFFFFF) (Note)	Sets the transmit data (default data) to be output during reception. Specify the default data value for the second argument.
ARM_SPI_CONTROL_SS	ARM_SPI_SS_INACTIVE	Sets the SSL0 pin to the inactive (High) state
	ARM_SPI_SS_ACTIVE	Sets the SSL0 pin to the active (Low) state
ARM_SPI_ABORT_TRANSFER	NULL(0)	No arguments are used.

Note: The maximum size of default data depends on data bit length setting.

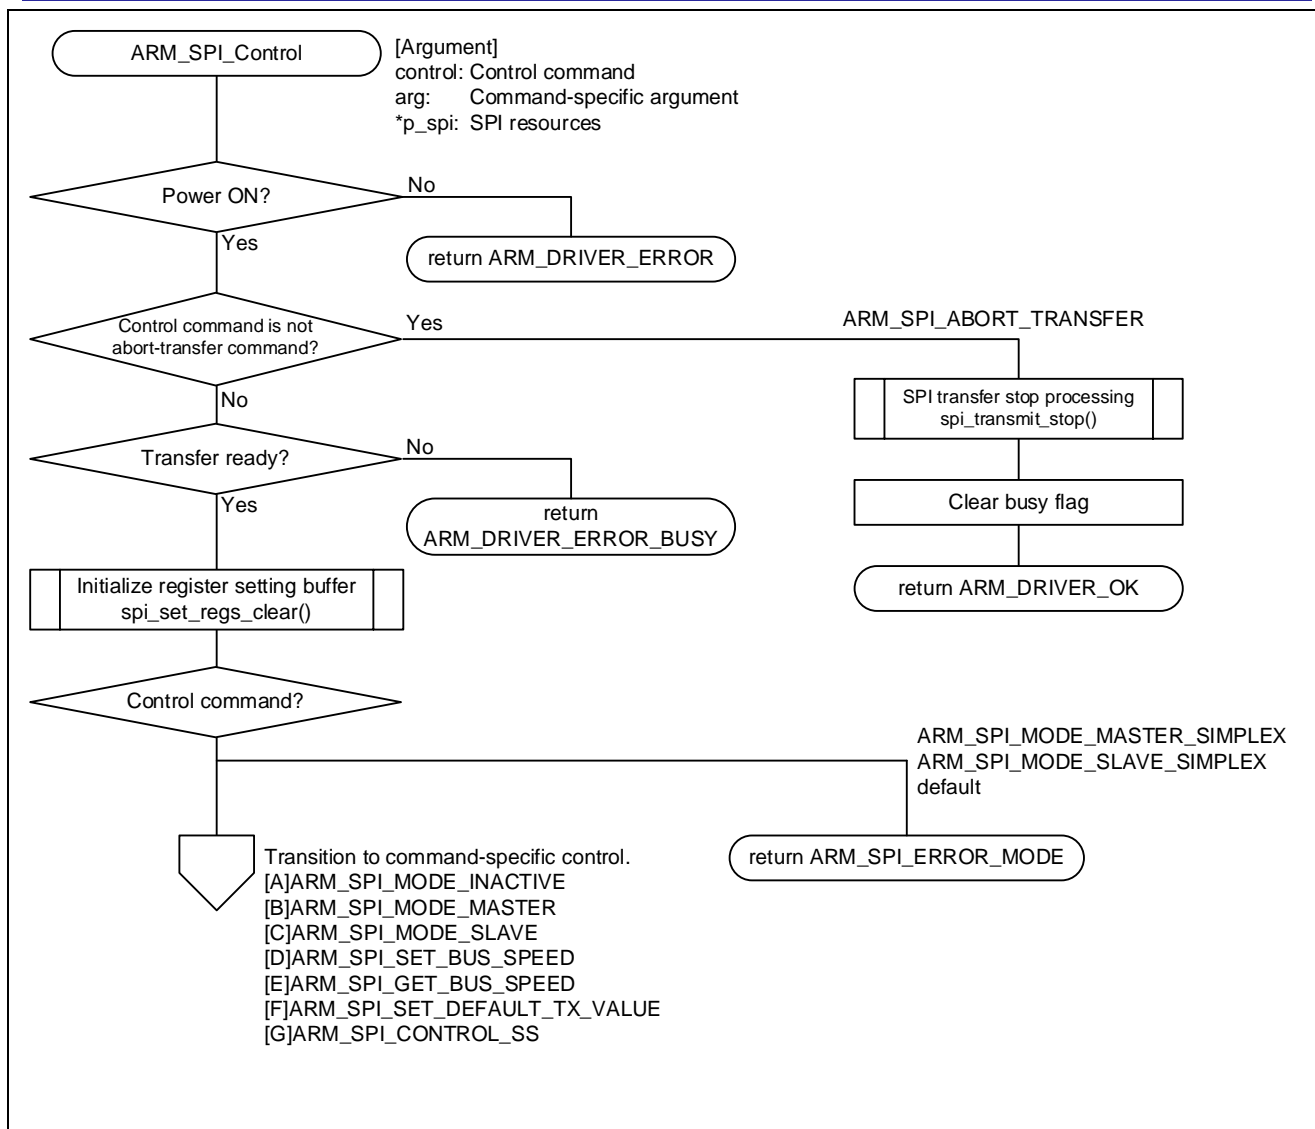


Figure 4-13 ARM_SPI_Control Function Processing Flow (1/3)

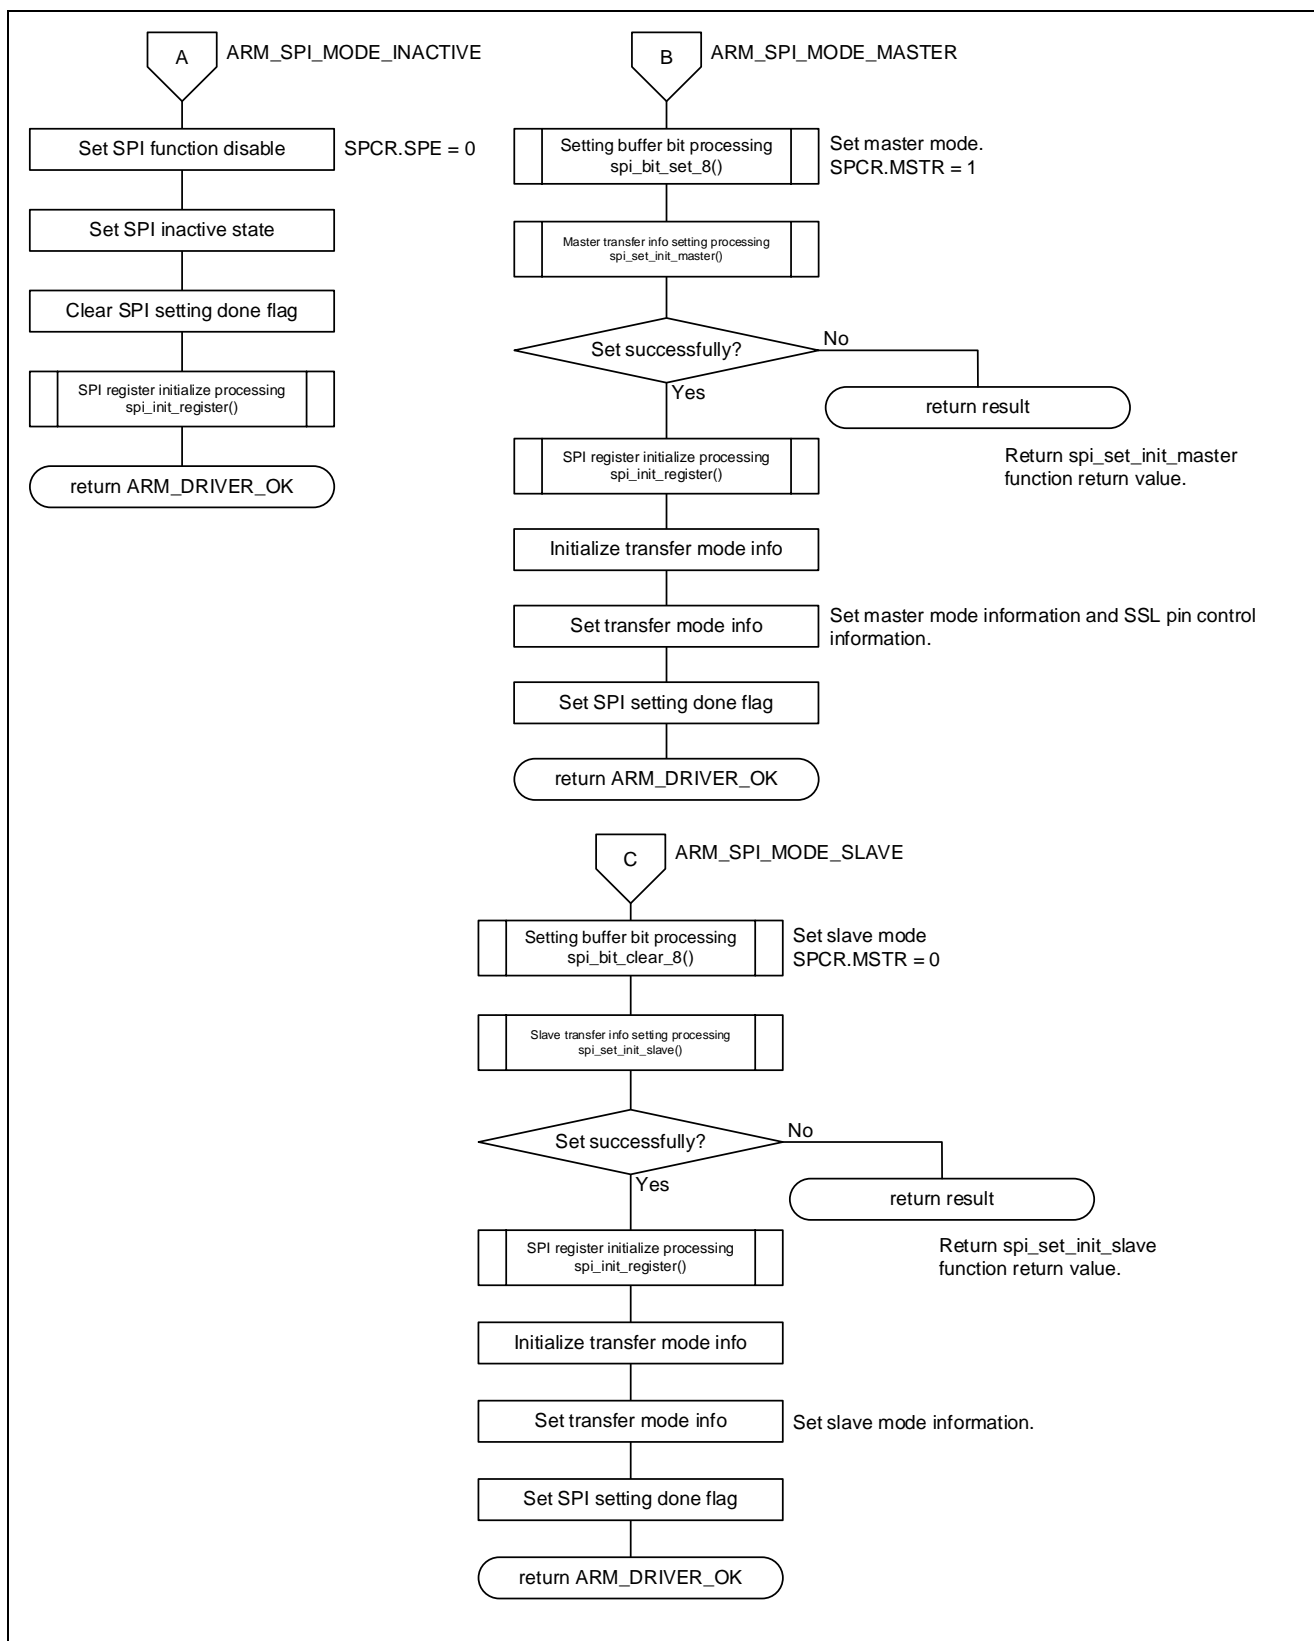


Figure 4-14 ARM_SPI_Control Function Processing Flow (2/3)

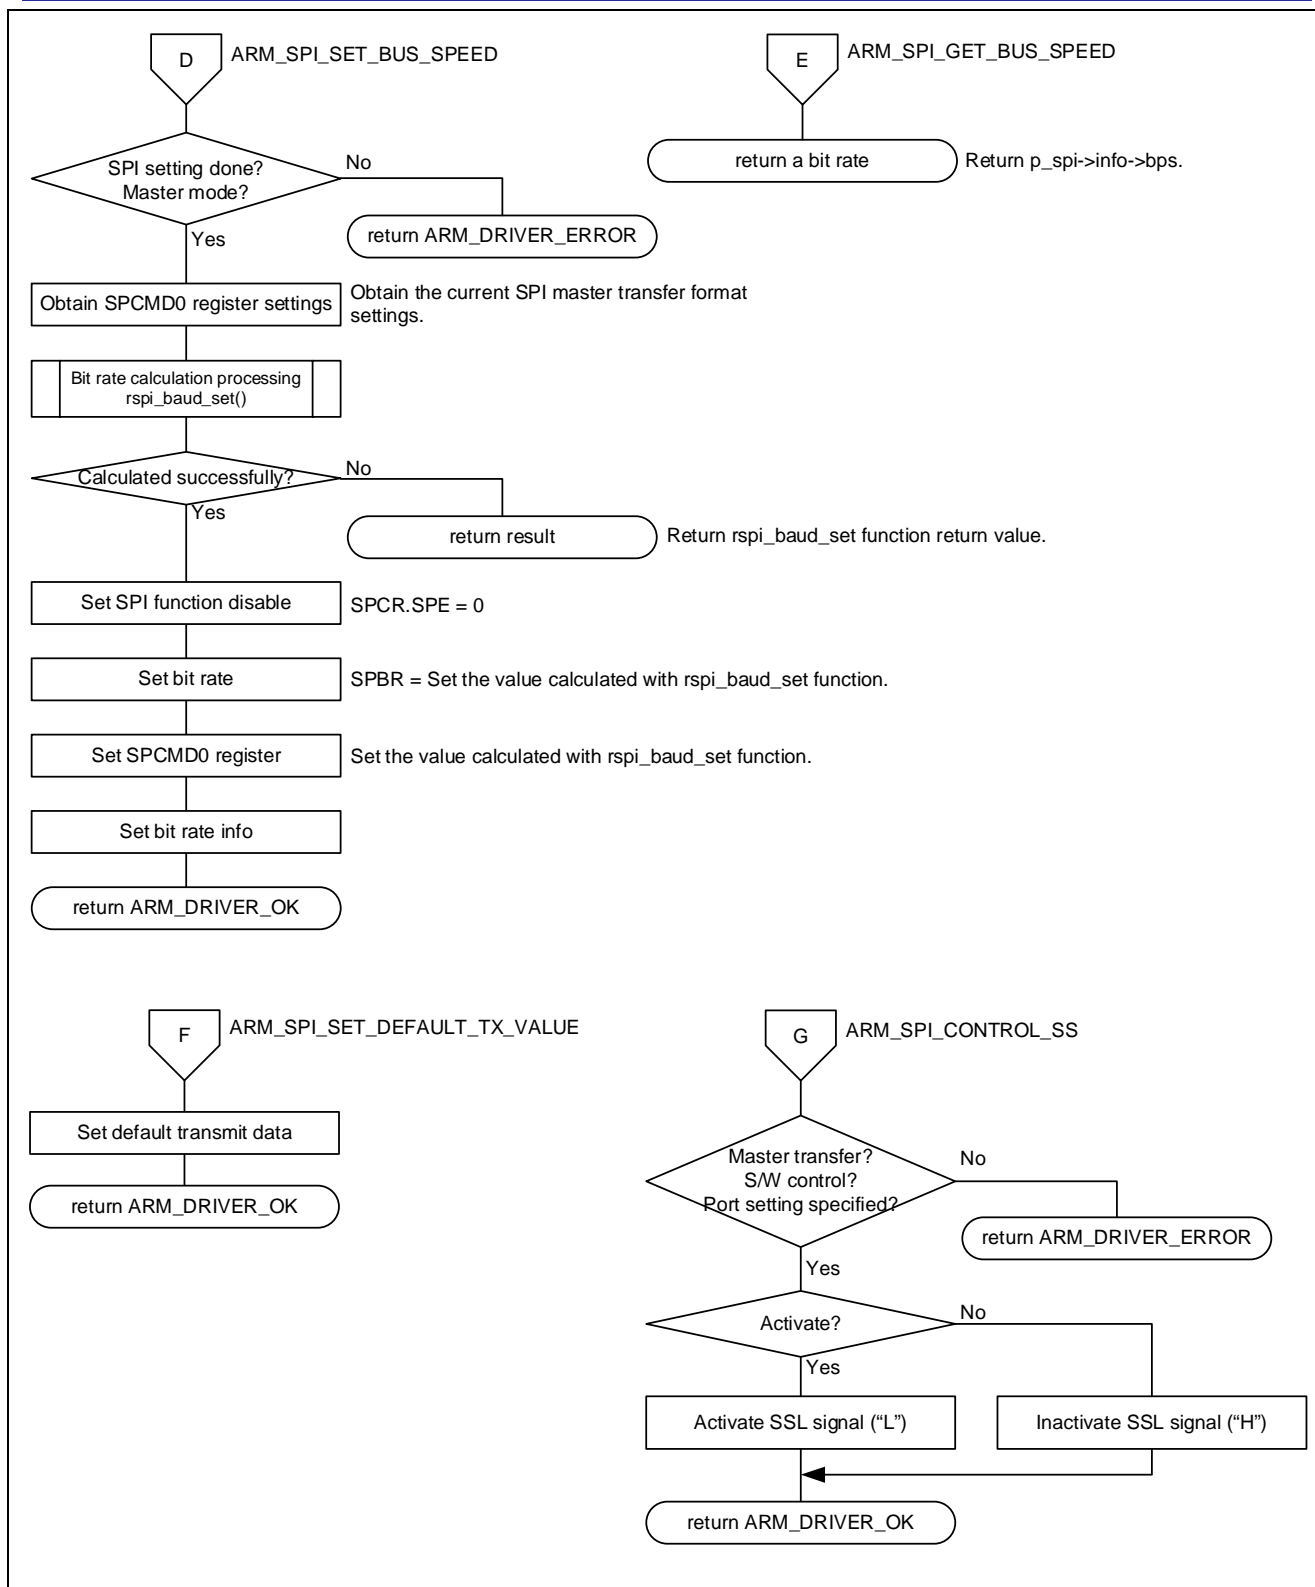


Figure 4-15 ARM_SPI_Control Function Processing Flow (3/3)

4.1.11 ARM_SPI_GetStatus Function

Table 4-12 ARM_SPI_GetStatus Function Specifications

Format	ARM_SPI_STATUS ARM_SPI_GetStatus(st_spi_resources_t const * const p_spi)
Description	Returns the status of the SPI.
Argument	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources concerned.
Return value	Communication status
Remarks	<p>When this function is accessed, specifying the SPI resources is not required.</p> <p>[Example of calling function from instance] // SPI driver instance (SPI0) extern ARM_DRIVER_SPI Driver_SPI0; ARM_DRIVER_SPI *spi0Drv = &Driver_SPI0;</p> <pre> main() { ARM_SPI_STATUS state; state = spi0Drv->GetStatus(); } </pre>

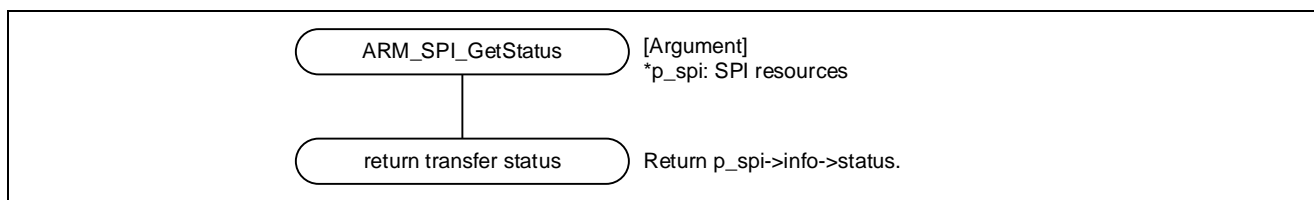


Figure 4-16 ARM_SPI_GetStatus Function Processing Flow

4.1.12 spi_set_init_master Function

Table 4-13 spi_set_init_master Function Specifications

Format	static int32_t spi_set_init_master(uint32_t control, uint32_t baudrate, st_spi_reg_buf_t * const p_spi_regs)	
Description	Specifies master mode settings.	
Argument	uint32_t control: Control command	
	uint32_t baudrate: Baud rate setting	
	st_spi_reg_set_t * const p_spi_regs: Pointer to register setting value storage	
Return value	ARM_DRIVER_OK	Master mode set normally
	ARM_DRIVER_ERROR	Master mode setting failed
	Master mode setting failure occurs if the baud rate setting is invalid (outside the range of a division ratio between 2 and 4096 of PCLKA).	
	ARM_SPI_ERROR_SS_MODE	SSL pin control setting error
	An SSL pin control setting error occurs if a value other than ARM_SPI_SS_MASTER_UNUSED, ARM_SPI_SS_MASTER_SW, or ARM_SPI_SS_MASTER_HW_OUTPUT is set for the SSL control setting.	
	ARM_SPI_ERROR_FRAME_FORMAT	Frame format error
	If ARM_SPI_TI_SSI or ARM_SPI_MICROWIRE is specified, a frame format error will occur.	
	ARM_SPI_ERROR_BIT_ORDER	Bit order error
Remarks	If an invalid value is set for the bit order setting, a bit order error occurs.	
	ARM_SPI_ERROR_DATA_BITS	Data bit error
A data bit error occurs if a value other than 8, 9, 10, 11, 12, 13, 14, 15, 16, 20, 24, or 32 is specified for data bit length.		

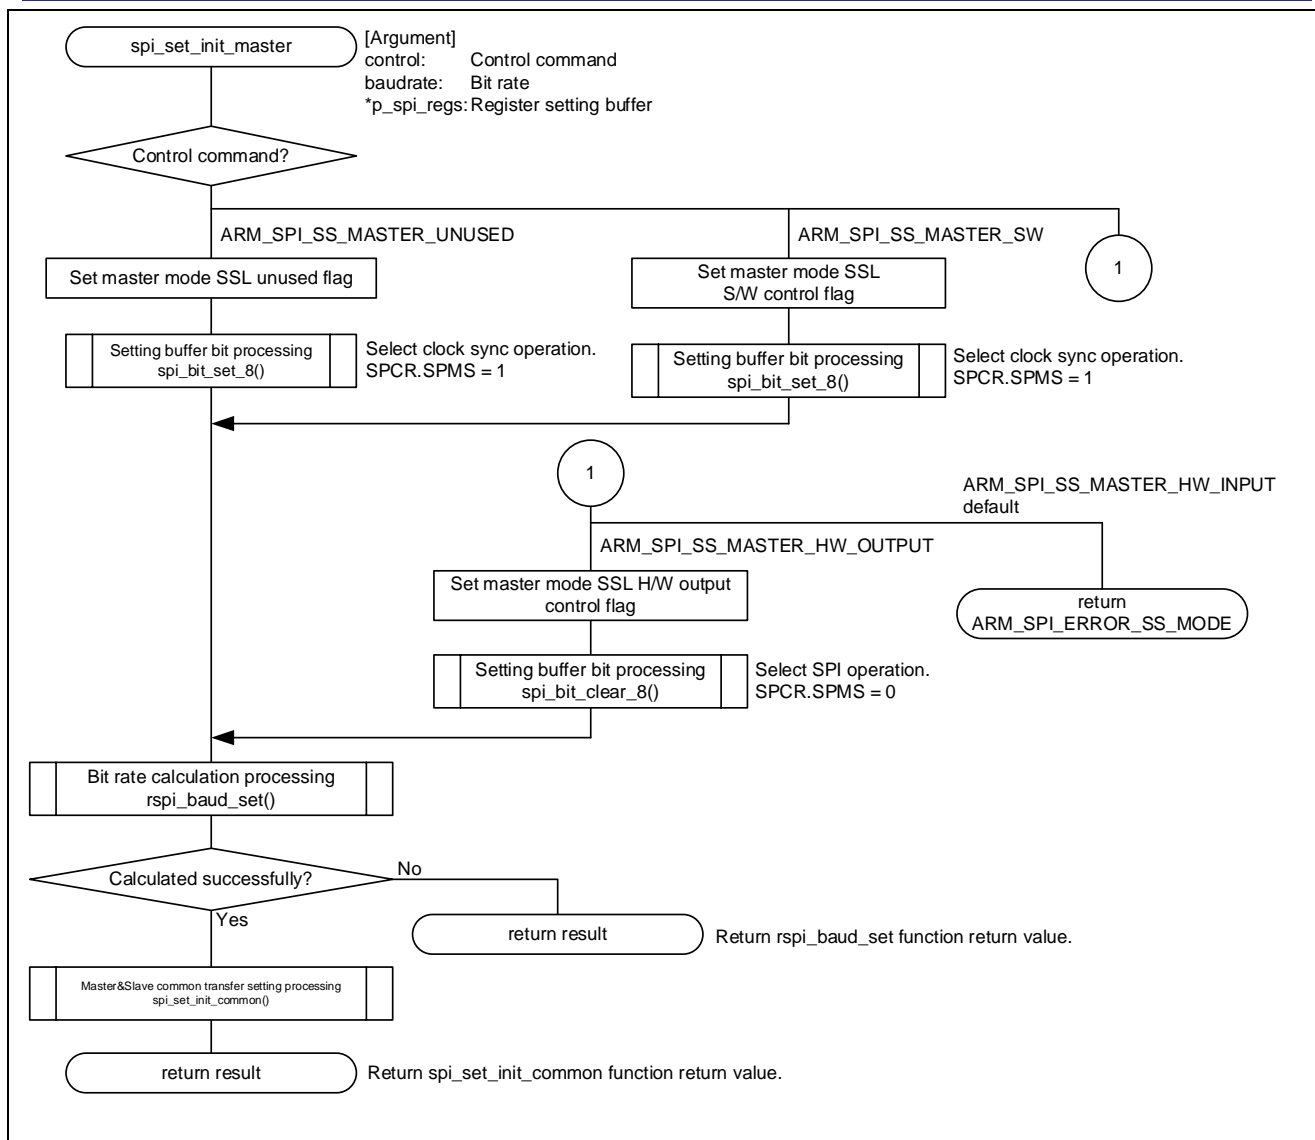


Figure 4-17 spi_set_init_master Function Processing Flow

4.1.13 spi_set_init_slave Function

Table 4-14 spi_set_init_slave Function Specifications

Format	static int32_t spi_set_init_slave(uint32_t control, st_spi_reg_buf_t * const p_spi_regs)
Description	Specifies slave mode settings.
Argument	uint32_t control: Control command
	st_spi_reg_set_t * const p_spi_regs: Pointer to register setting value storage
Return value	ARM_DRIVER_OK Slave mode set normally
	ARM_SPI_ERROR_SS_MODE SSL pin control setting error
	An SSL pin control setting error occurs when a value other than ARM_SPI_SS_SLAVE_HW or ARM_SPI_SS_SLAVE_SW is set for the SSL control setting.
Remarks	

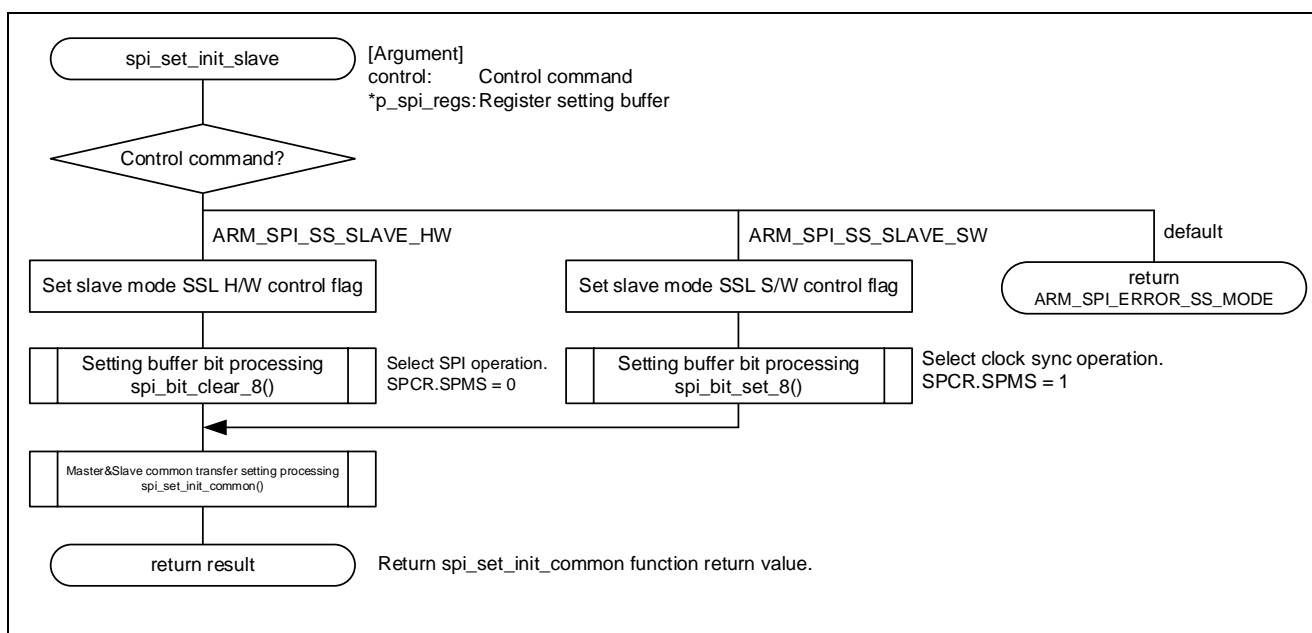


Figure 4-18 spi_set_init_slave Function Processing Flow

4.1.14 spi_set_init_common Function

Table 4-15 spi_set_init_common Function Specifications

Format	static int32_t spi_set_init_common(uint32_t control, st_spi_reg_buf_t * const p_spi_regs)
Description	Specifies transfer settings common to master and slave modes.
Argument	uint32_t control: Control command
	st_spi_reg_set_t * const p_spi_regs: Pointer to register setting value storage
Return value	ARM_DRIVER_OK The settings common to master and slave modes set successfully
	ARM_SPI_ERROR_FRAME_FORMAT Frame format error A frame format error occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • If both ARM_SPI_SS_SLAVE_SW and ARM_SPI_CPOLO_CPHA0 are specified • If both ARM_SPI_SS_SLAVE_SW and ARM_SPI_CPOL1_CPHA0 are specified • If ARM_SPI_TI_SSI or ARM_SPI_MICROWIRE is specified
	ARM_SPI_ERROR_BIT_ORDER Bit order error If an invalid value is set for the bit order setting, a bit order error occurs.
	ARM_SPI_ERROR_DATA_BITS Data bit error A data bit error occurs if a value other than 8, 9, 10, 11, 12, 13, 14, 15, 16, 20, 24, or 32 is specified for data bit length.
Remarks	

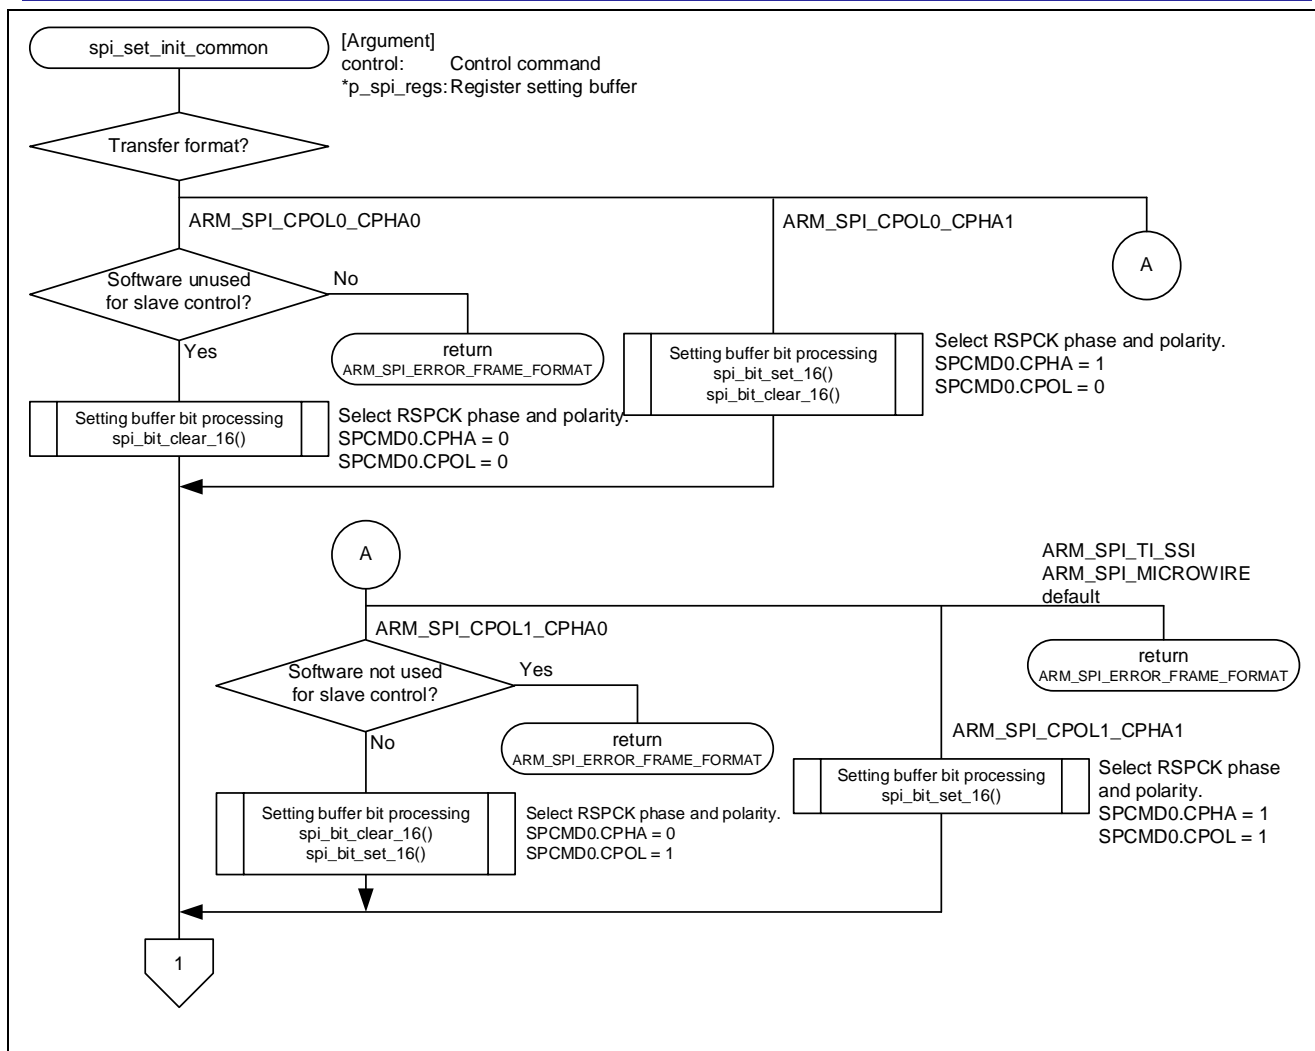


Figure 4-19 spi_set_init_common Function Processing Flow (1/2)

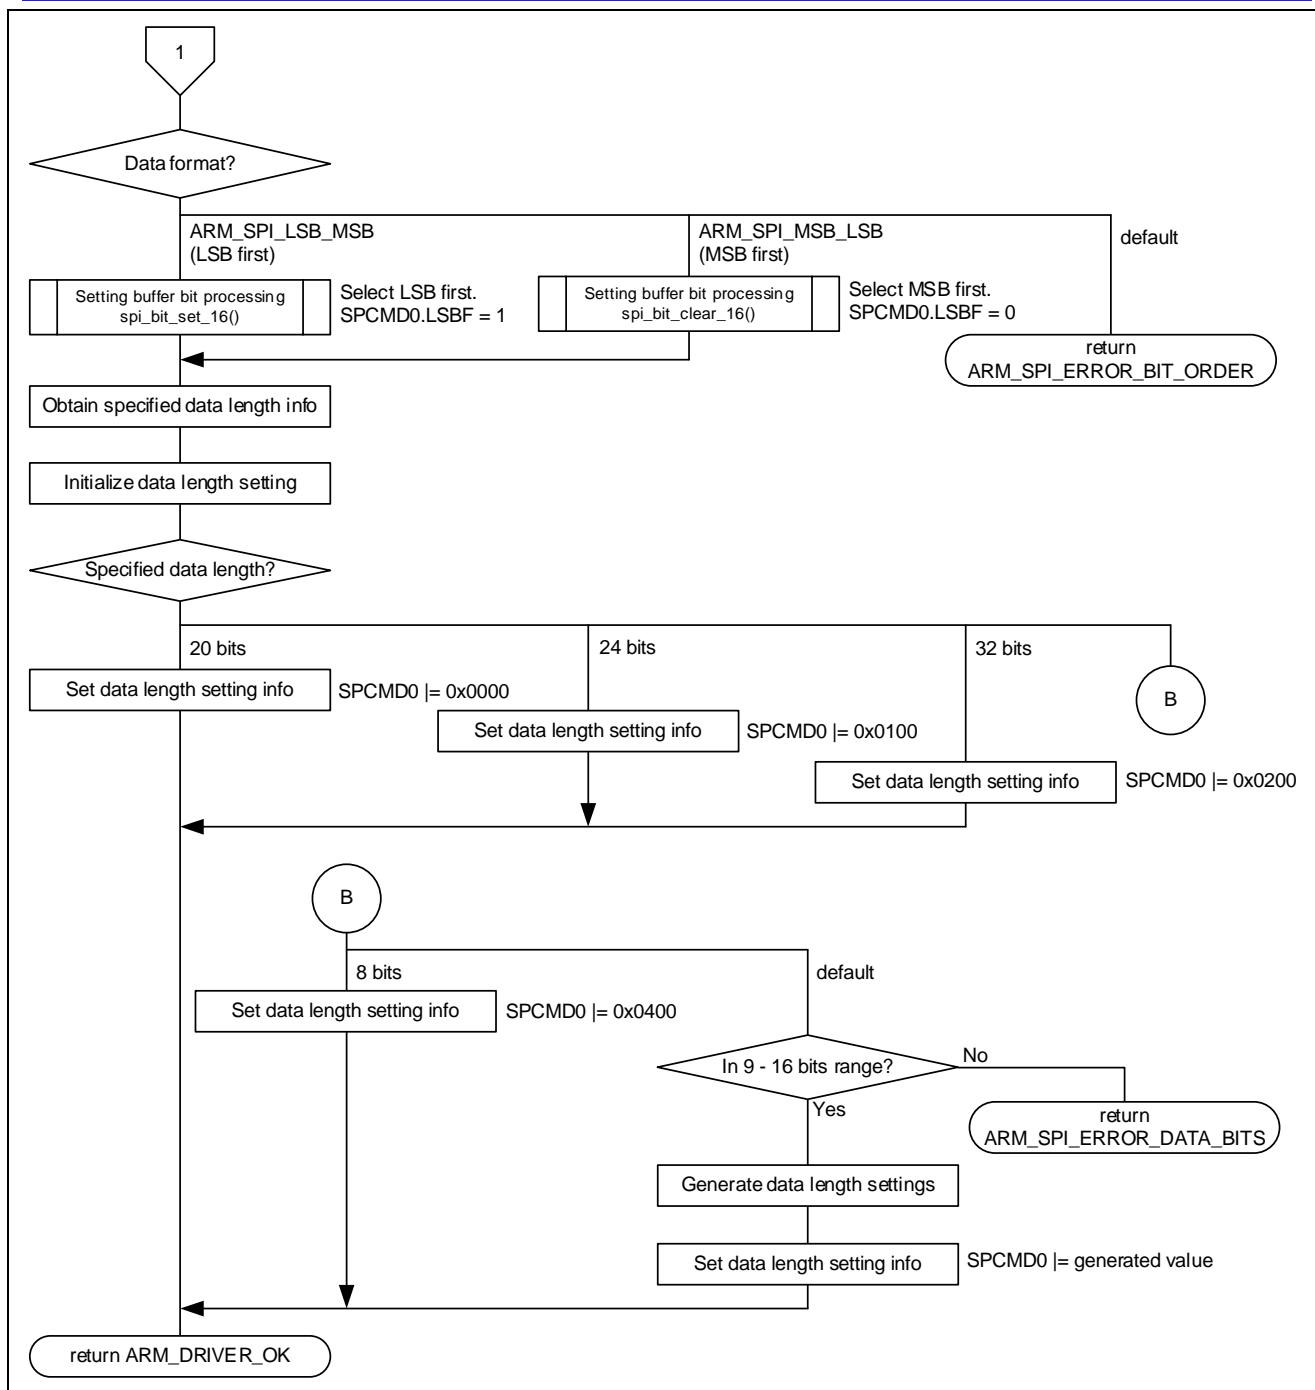


Figure 4-20 spi_set_init_common Function Processing Flow (2/2)

4.1.15 rspi_baud_set Function

Table 4-16 rspi_baud_set Function Specifications

Format	static int32_t rspi_baud_set(st_spi_reg_buf_t * const p_spi_regs, uint32_t bps_target)
Description	Calculates a baud rate.
Argument	st_spi_reg_buf_t * const p_spi_regs: Pointer to register setting buffer Pointer to buffer for storing baud rate calculation results
	uint32_t bps_target: Baud rate settings
Return value	ARM_DRIVER_OK Baud rate calculation completed.
	ARM_DRIVER_ERROR Baud rate calculation failed. A baud rate setting error occurs if the baud rate setting is invalid (outside the range of a division ratio between 2 and 4096 of PCLKA).
Remarks	

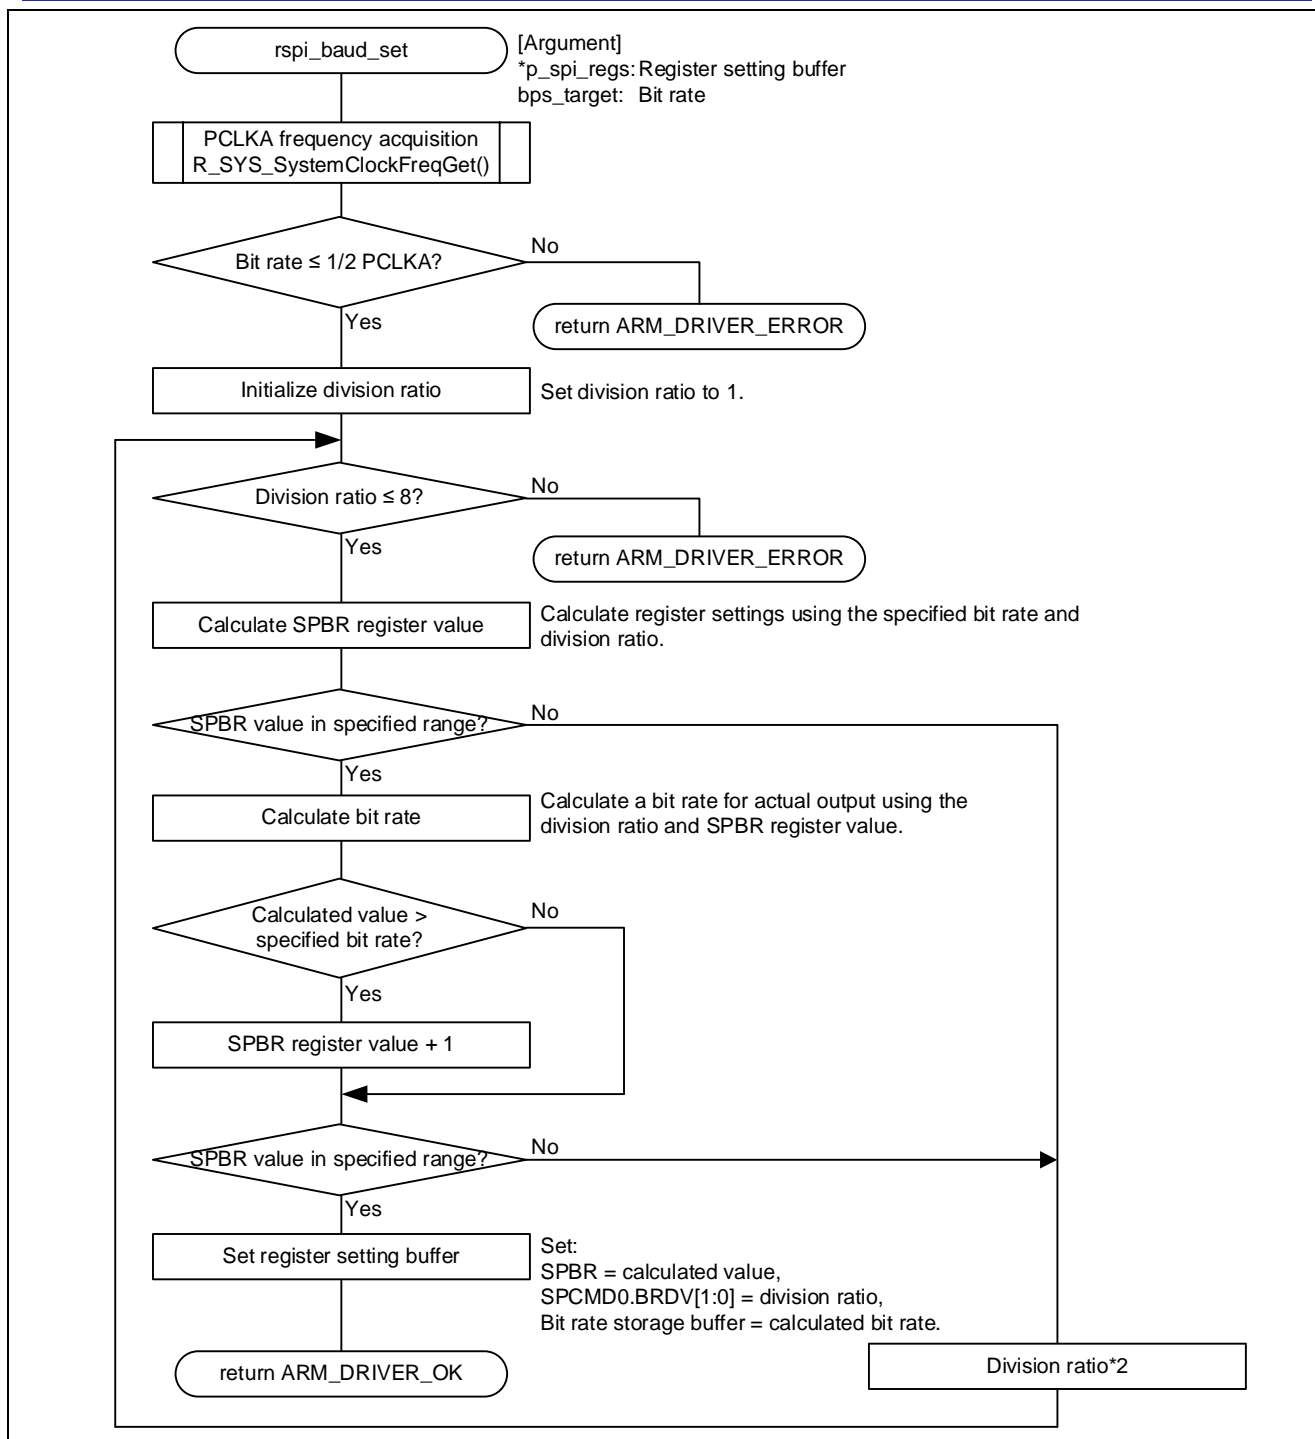


Figure 4-21 rspi_baud_set Function Processing Flow

4.1.16 spi_set_regs_clear Function

Table 4-17 spi_set_regs_clear Function Specifications

Format	static void spi_set_regs_clear(st_spi_reg_set_t * const p_regs)
Description	Initializes the register setting buffer.
Argument	st_spi_reg_buf_t * const p_spi_regs : Pointer to the register setting buffer
Return value	None
Remarks	—

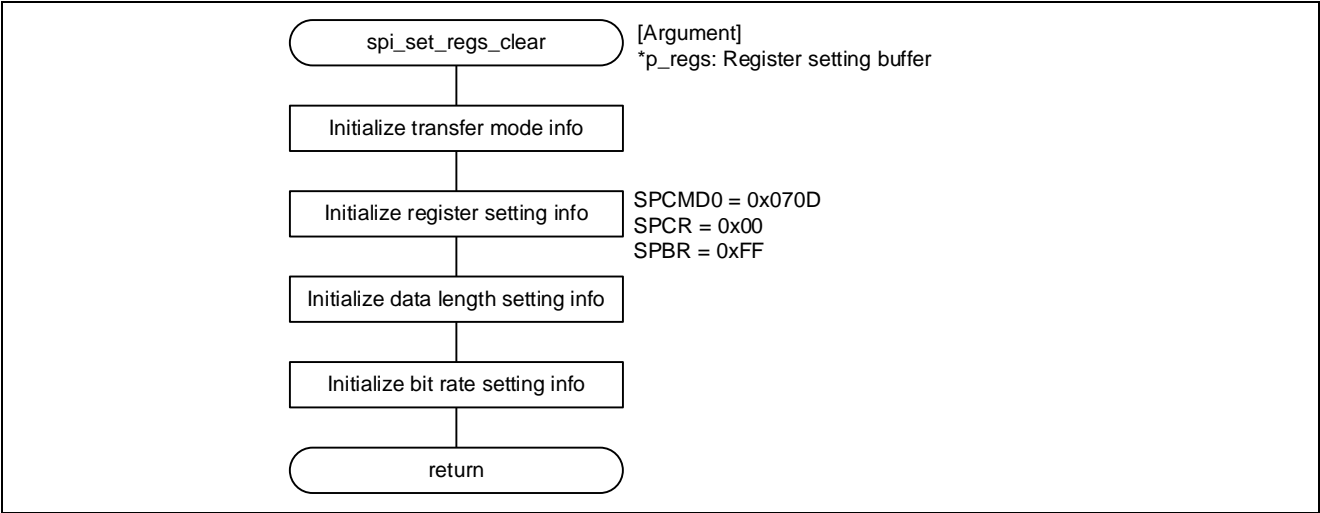


Figure 4-22 spi_set_regs_clear Function Processing Flow

4.1.17 spi_init_register Function

Table 4-18 spi_init_register Function Specifications

Format	static void spi_init_register(st_spi_reg_buf_t const * const p_spi_regs, st_spi_resources_t * const p_spi)
Description	Initializes the SPI capability setting registers.
Argument	st_spi_reg_buf_t * const p_spi_regs : Pointer to the register setting buffer st_spi_resources_t * const p_spi: SPI resources Specifies the SPI resources to be controlled.
Return value	None
Remarks	

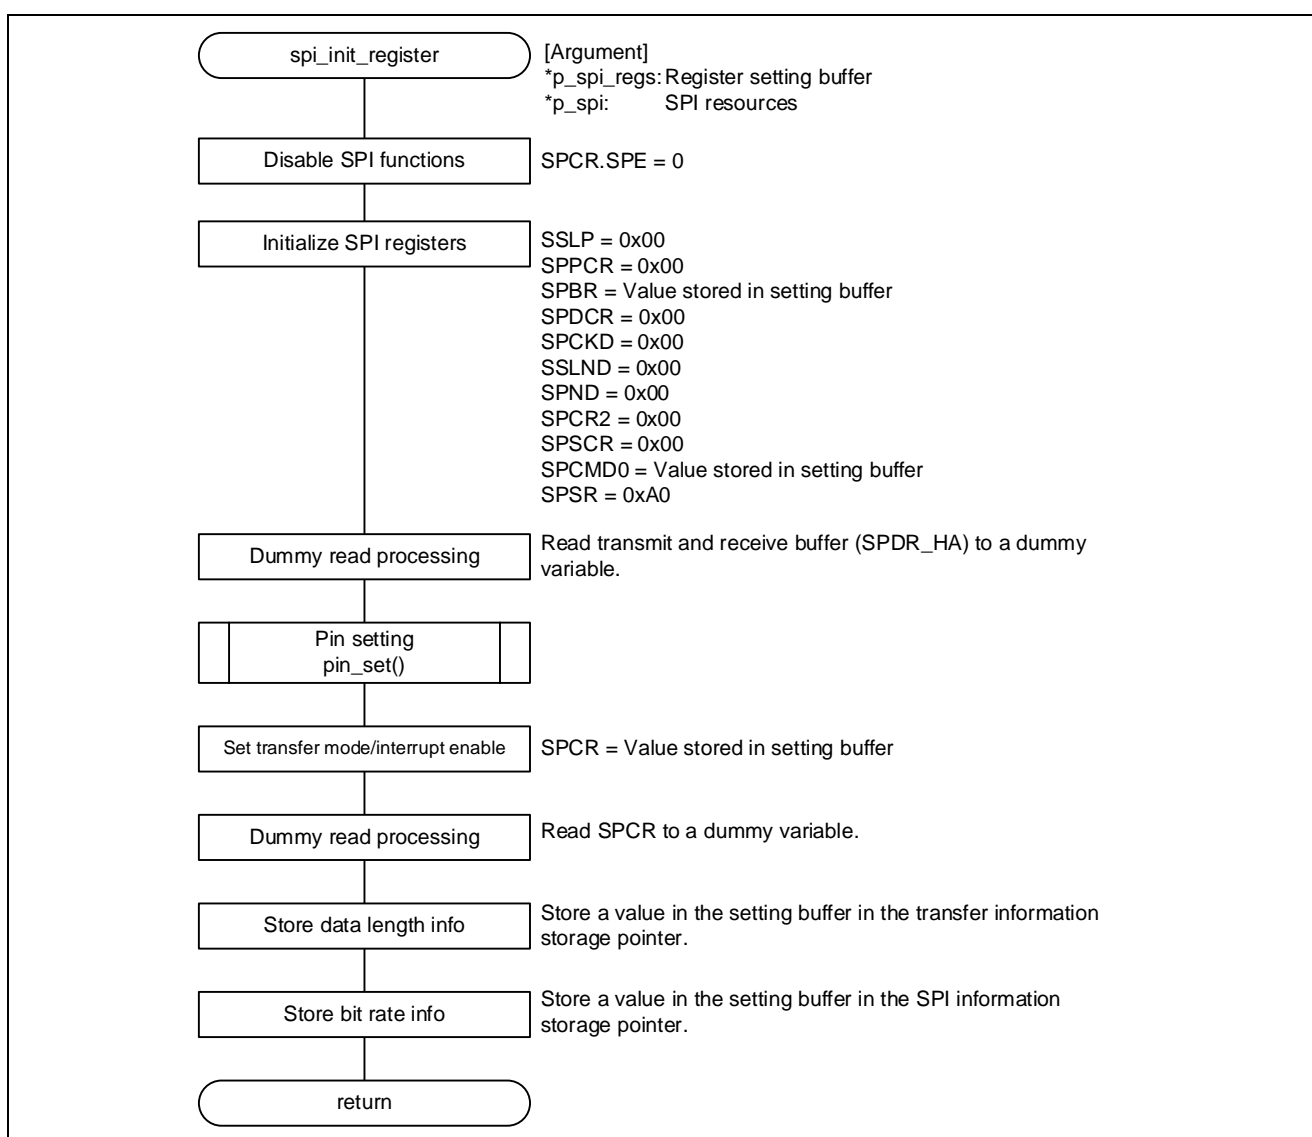


Figure 4-23 spi_init_register Function Processing Flow

4.1.18 spi_interrupt_disable Function

Table 4-19 spi_interrupt_disable Function Specifications

Format	static void spi_interrupt_disable(st_spi_resources_t * const p_spi)
Description	Disables interrupts.
Argument	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources to be controlled.
Return value	None
Remarks	—

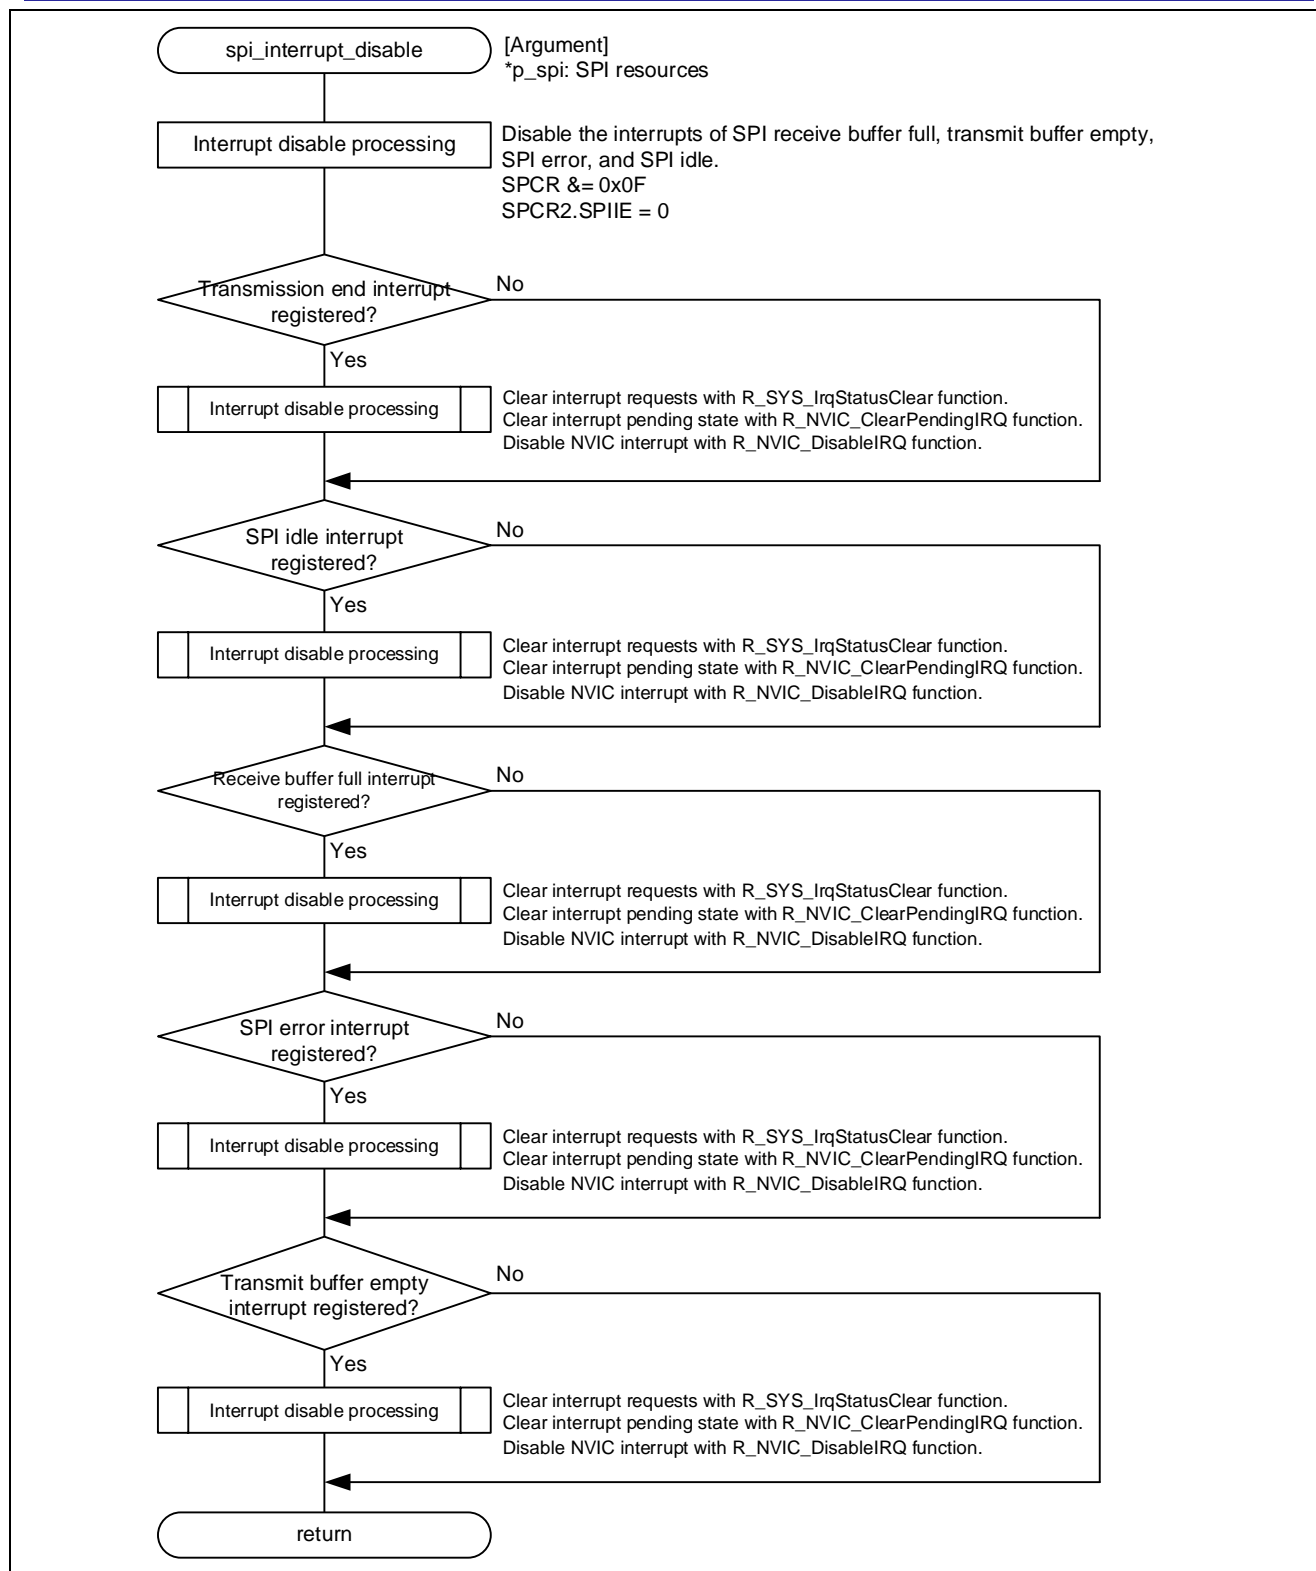


Figure 4-24 spi_interrupt_disable Function Processing Flow

4.1.19 spi_ir_flag_clear Function

Table 4-20 spi_ir_flag_clear Function Specifications

Format	static int32_t spi_ir_flag_clear(st_spi_resources_t * const p_spi)	
Description	Clear IR of transmit / receive interrupt to 0.	
Argument	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources to be controlled.	
Return value	ARM_DRIVER_OK	IR flag clear success
	ARM_DRIVER_ERROR_TIMEOUT	Timeout error
	A frame format error occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • When a timeout occurs during 0 clear wait processing of the SPCR.SPRIE bit • If a timeout occurs during the 0 clear wait processing of the SPCR.SPTIE bit 	
Remarks	—	

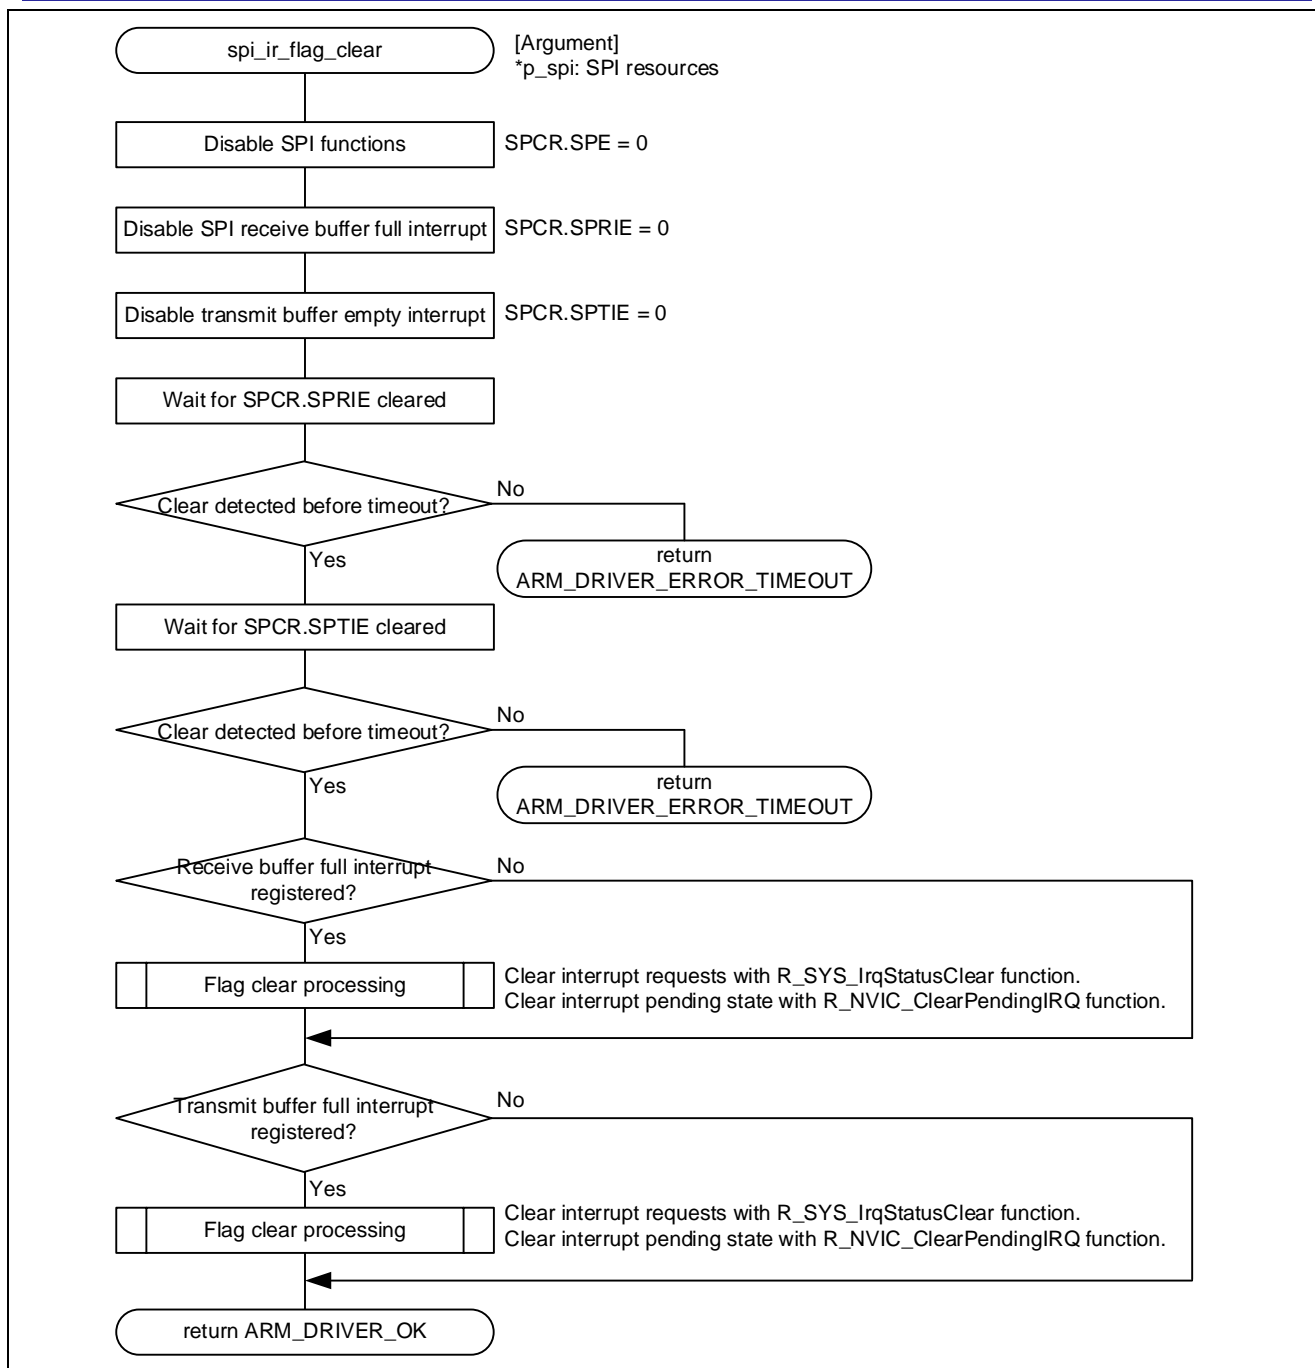


Figure 4-25 spi_ir_flag_clear Function Processing Flow

4.1.20 check_tx_available Function

Table 4-21 check_tx_available Function Specifications

Format	static int32_t check_tx_available(int16_t * const p_flag, st_spi_resources_t * const p_spi)
Description	Judges whether or not transmission is available.
Argument	int16_t * const p_flag: Pointer to Initialization flag storage
	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources to be controlled.
Return value	ARM_DRIVER_OK Transmission availability judgment completed
	ARM_DRIVER_ERROR Transmission availability judgment failed Transmission availability judgment failure occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • If an interrupt or the DTC is used in transmission and the event link setting for the SPTI interrupt fails • If an interrupt or the DTC is used in transmission and interrupt priority level setting fails • If the DTC is used in transmission and the SPTI interrupt is defined not to be used (SYSTEM_IRQ_EVENT_NUMBER_NOT_USED) in r_system_cfg.h • If the DTC or the DMAC is used in transmission and DMA driver initialization fails • If the DMAC is used in transmission and DMAC interrupt enable setting fails • If, in a state in which the SPII interrupt is registered with NVIC in r_system_cfg.h, the event link setting for the SPII interrupt fails • If, in a state in which the SPII interrupt is registered with NVIC in r_system_cfg.h, SPII interrupt priority level setting fails • If, in a state in which the SPTEND or SPEI interrupt is registered with NVIC in r_system_cfg.h, the event link setting for the SPTEND or SPEI interrupt fails • If, in a state in which the SPTEND or SPEI interrupt is registered with NVIC in r_system_cfg.h, SPTEND or SPEI interrupt priority level setting fails
Remarks	

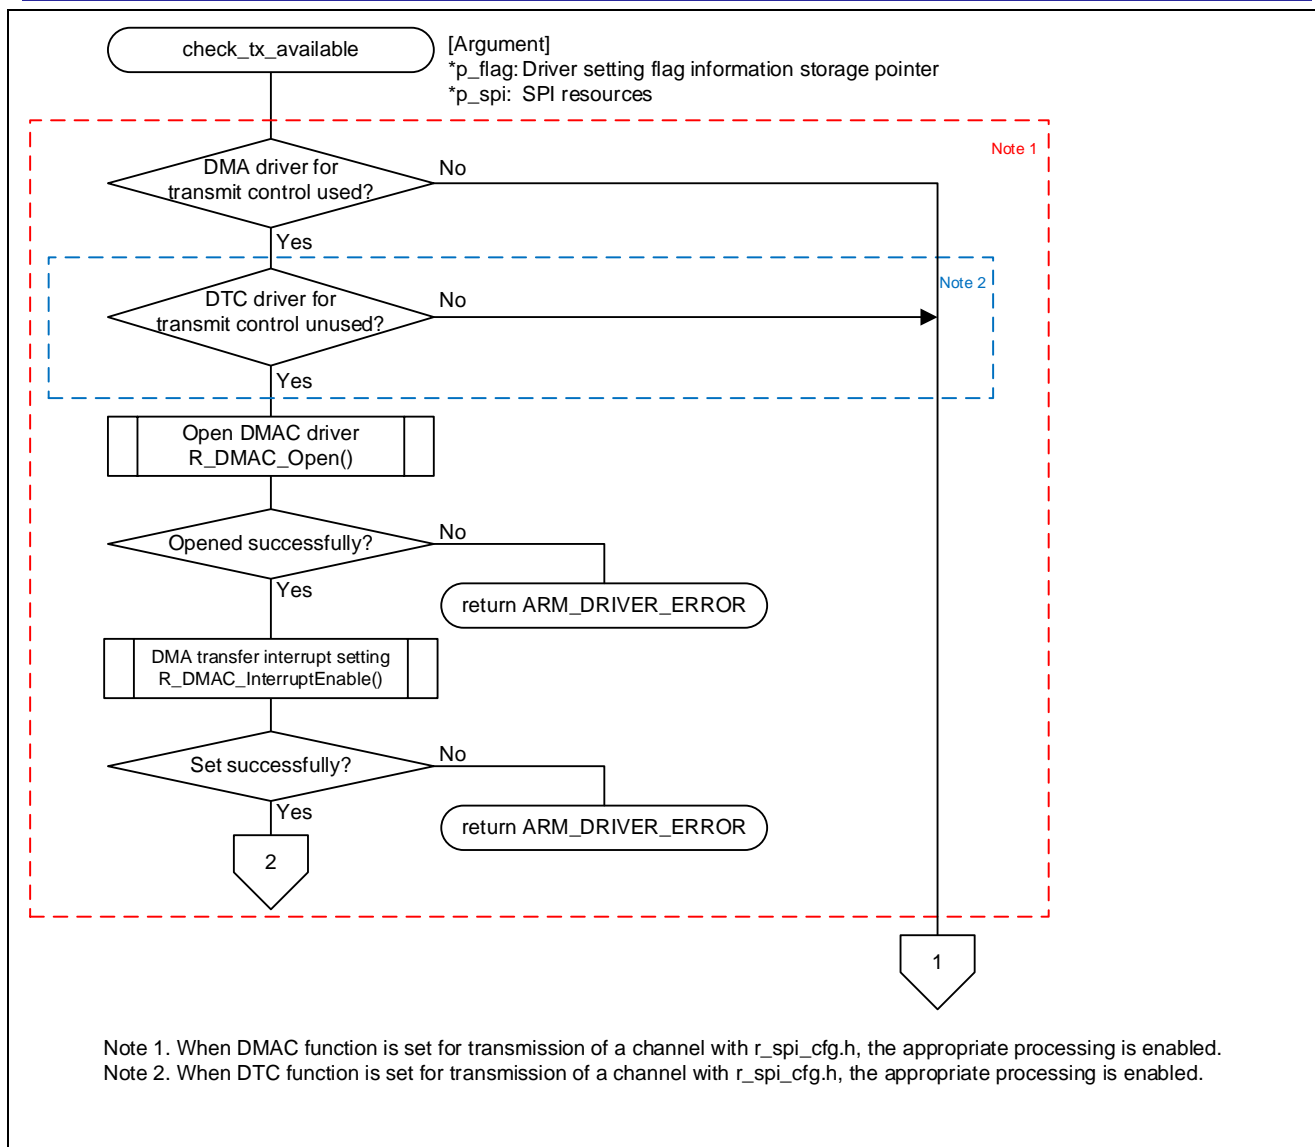


Figure 4-26 check_tx_available Function Processing Flow (1/2)

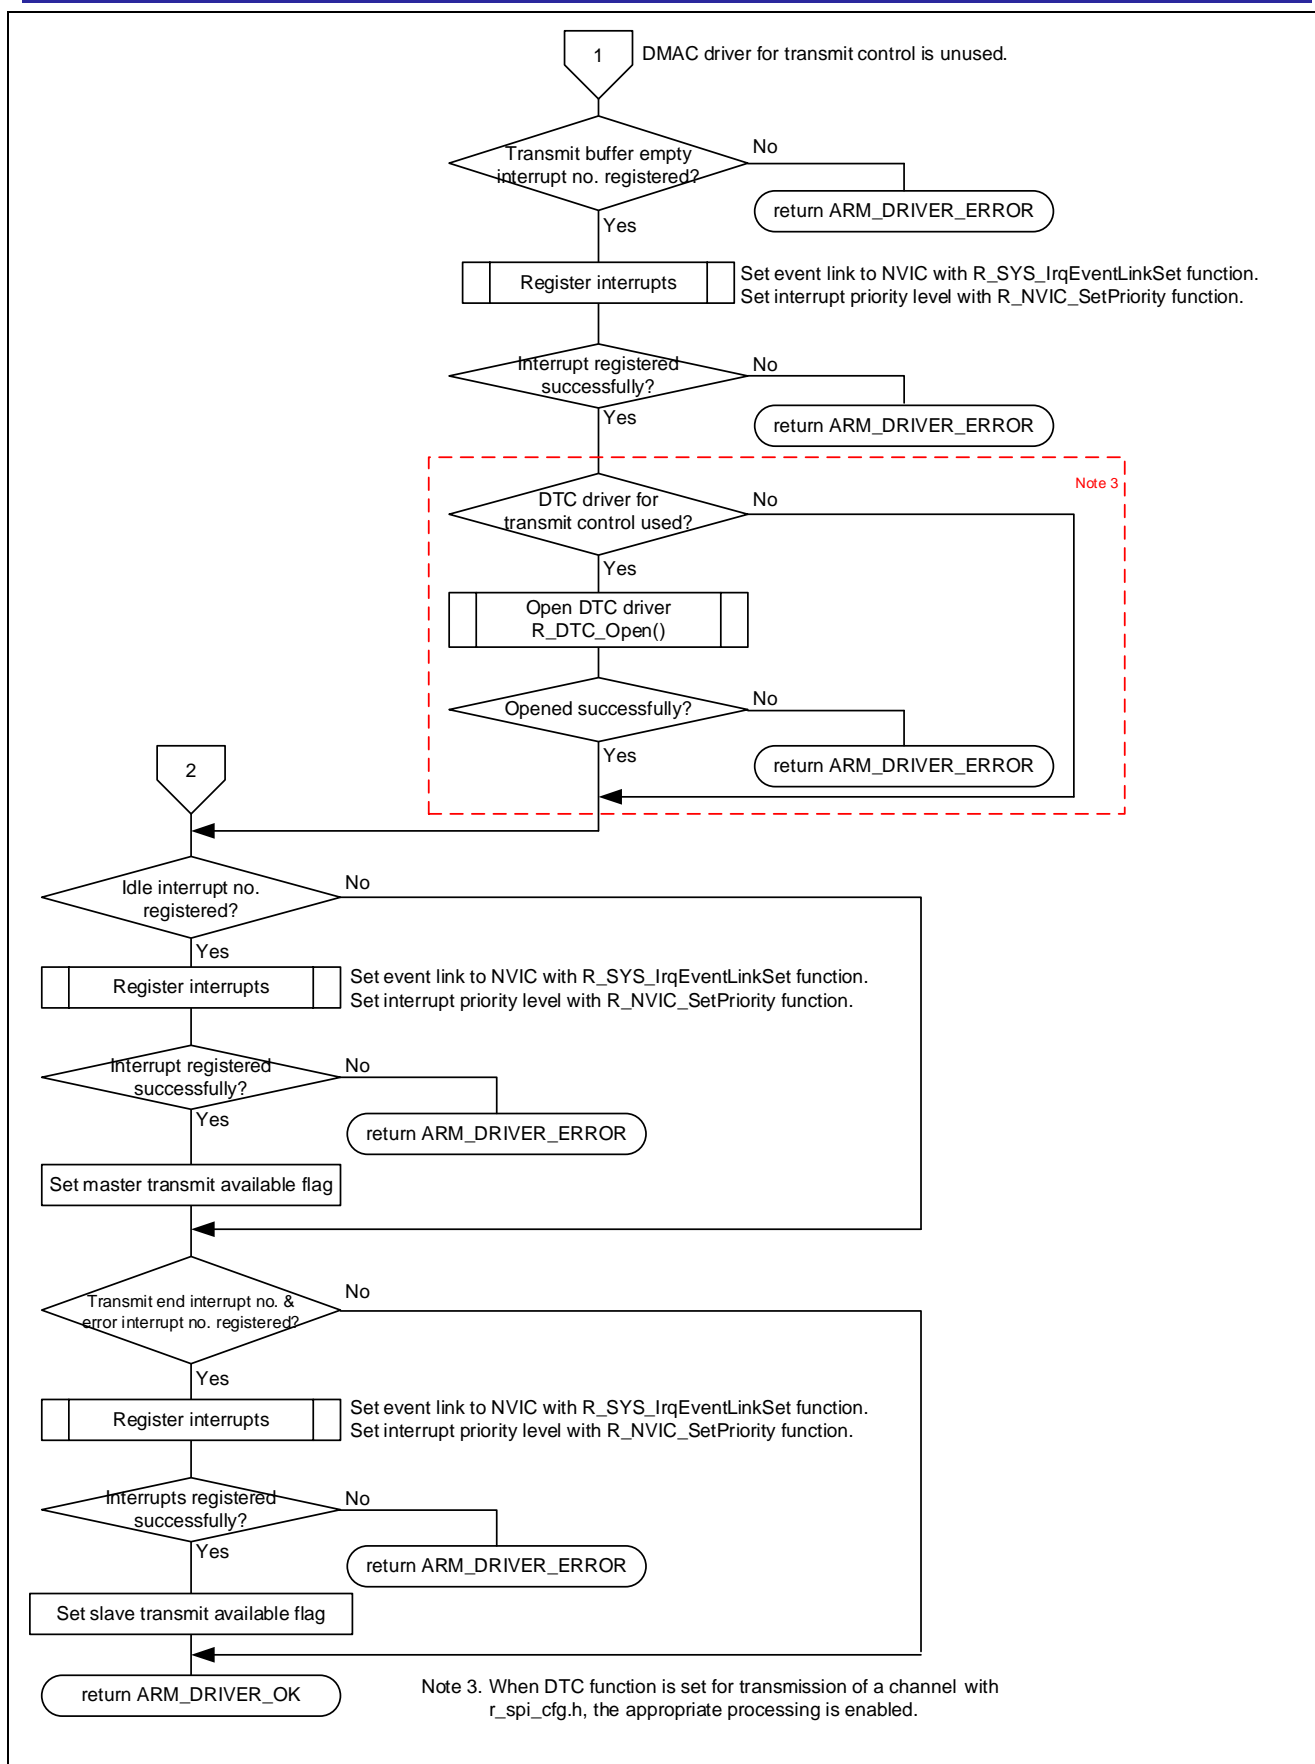


Figure 4-27 check_tx_available Function Processing Flow (2/2)

4.1.21 check_rx_available Function

Table 4-22 check_rx_available Function Specifications

Format	static int32_t check_rx_available(int16_t * const p_flag, st_spi_resources_t * const p_spi)
Description	Judges whether or not reception is available.
Argument	int16_t * const p_flag: Pointer to Initialization flag storage
	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources to be controlled.
Return value	ARM_DRIVER_OK Reception availability judgment completed
	ARM_DRIVER_ERROR Reception availability judgment failed Reception availability judgment failure occurs if one of the following conditions is detected. <ul style="list-style-type: none"> • If event link setting for the SPRI or SPEI interrupt fails • If SPRI or SPEI interrupt priority level setting fails • If the DTC is used in reception and the SPRI or SPEI interrupt is defined not to be used (SYSTEM_IRQ_EVENT_NUMBER_NOT_USED) in r_system_cfg.h • If the DTC or the DMAC is used in reception and initialization of the DMA driver fails • If the DMAC is used in reception and DMAC interrupt enable setting fails
Remarks	

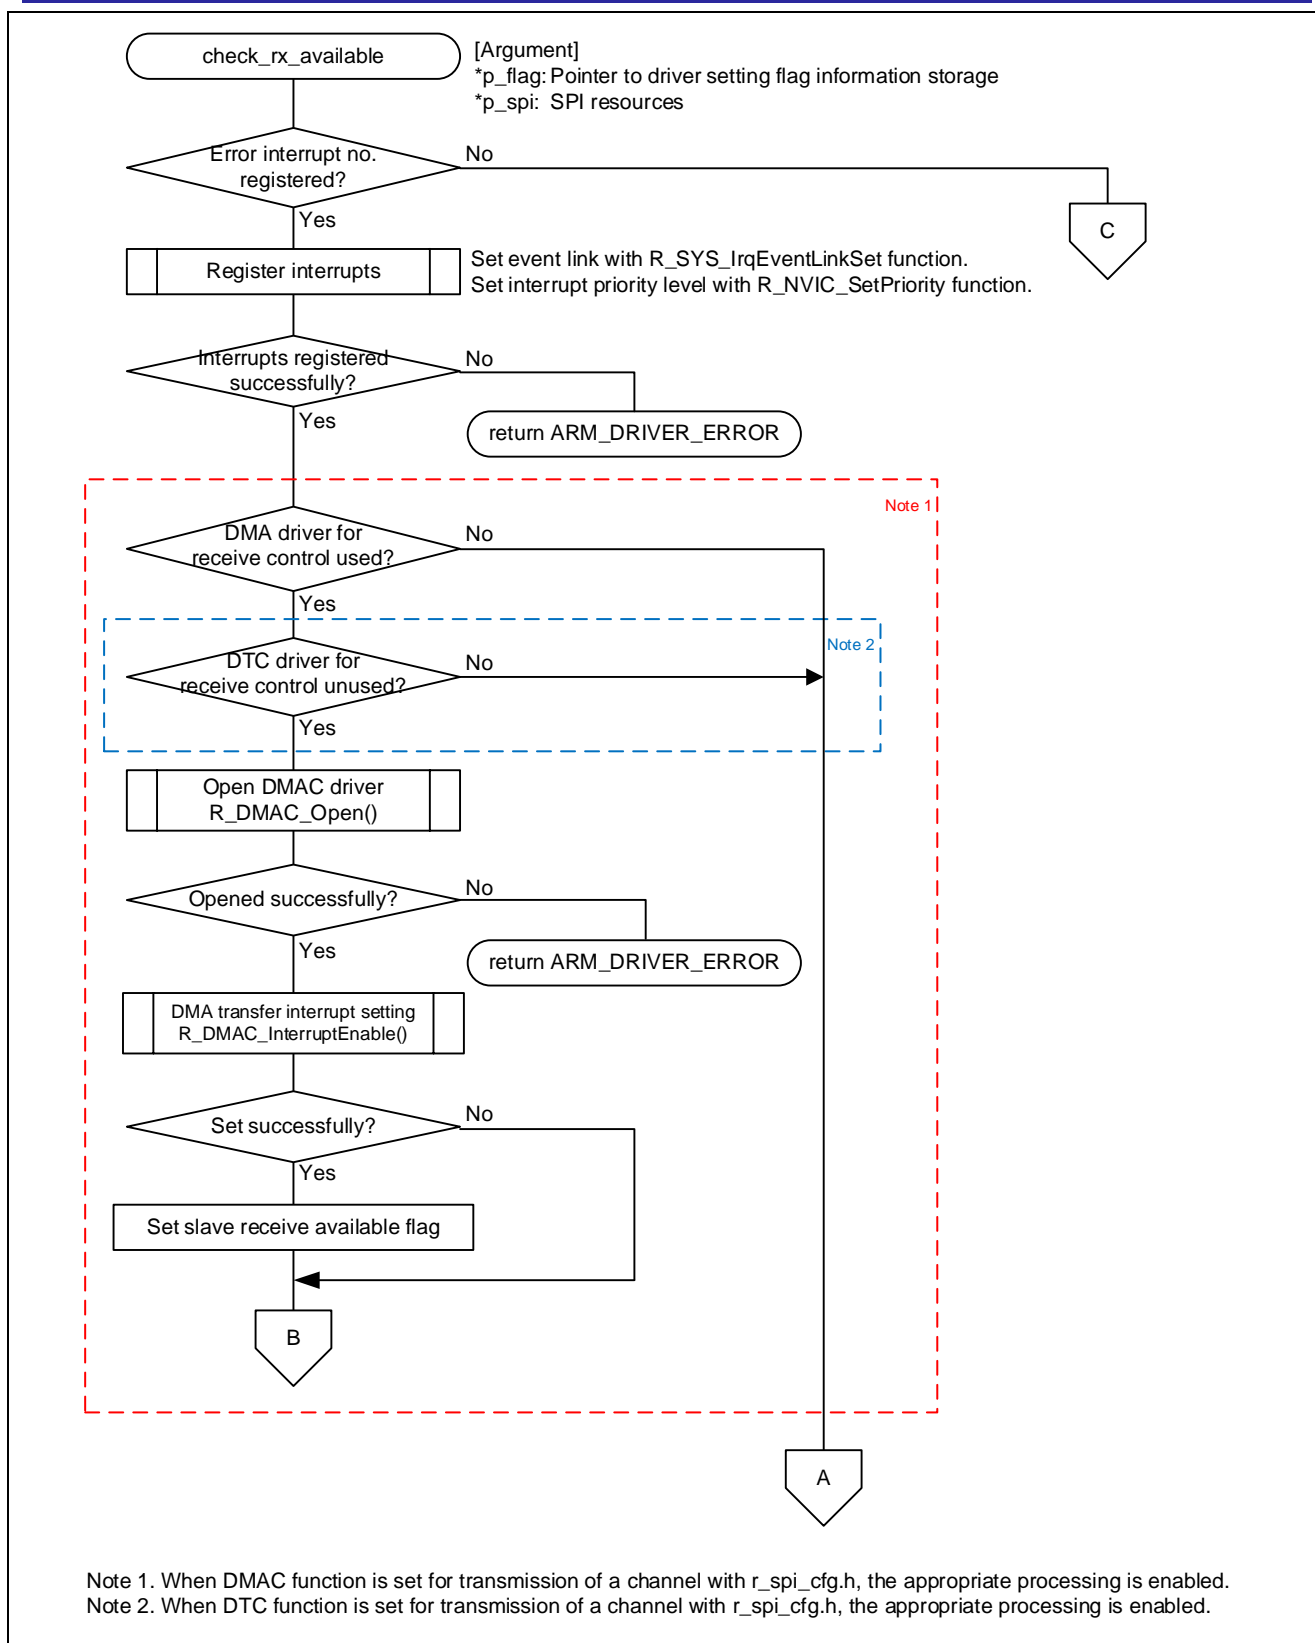


Figure 4-28 check_rx_available Function Processing Flow (1/2)


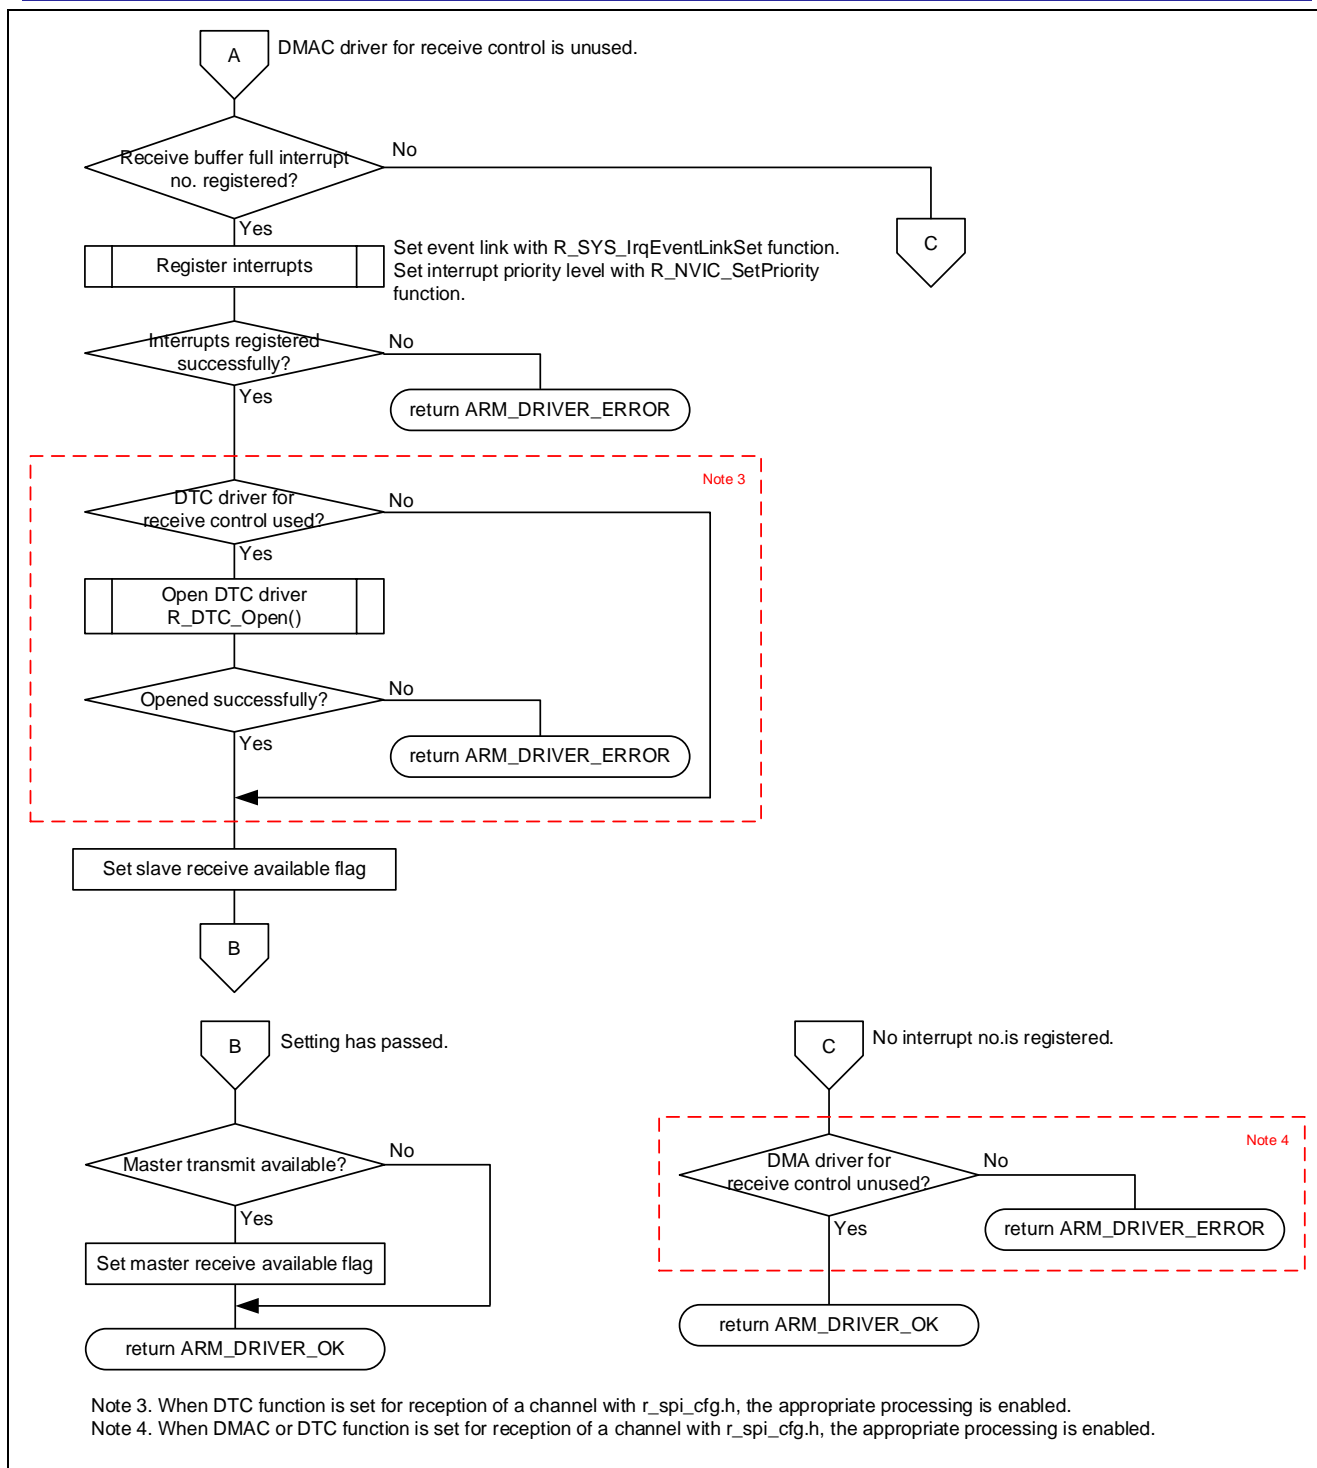


Figure 4-29 check_rx_available Function Processing Flow (2/2)

4.1.22 spi_transmit_stop Function

Table 4-23 spi_transmit_stop Function Specifications

Format	static void spi_transmit_stop(st_spi_resources_t const * const p_spi)
Description	Suspends transmission.
Argument	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources to be controlled.
Return value	None
Remarks	



4.1.23 spi_send_setting Function

Table 4-24 spi_send_setting Function Specifications

Format	static int32_t spi_send_setting(void const * const p_data, uint32_t num, bool dummy_flag, st_spi_resources_t * const p_spi)
Description	Specifies settings for transmission.
Argument	void const * const p_data: Pointer to transmit data storage
	uint32_t num: Transmission size
	bool dummy_flag: Dummy transmission flag
	st_spi_resources_t * const p_spi : SPI resources Specifies the SPI resources to be controlled.
Return value	ARM_DRIVER_OK Transmission setting completed
	ARM_DRIVER_ERROR Transmission setting failed Transmission setting failure occurs if initialization of the DMA driver fails when the DTC or the DMAC is used for transmission.
Remarks	

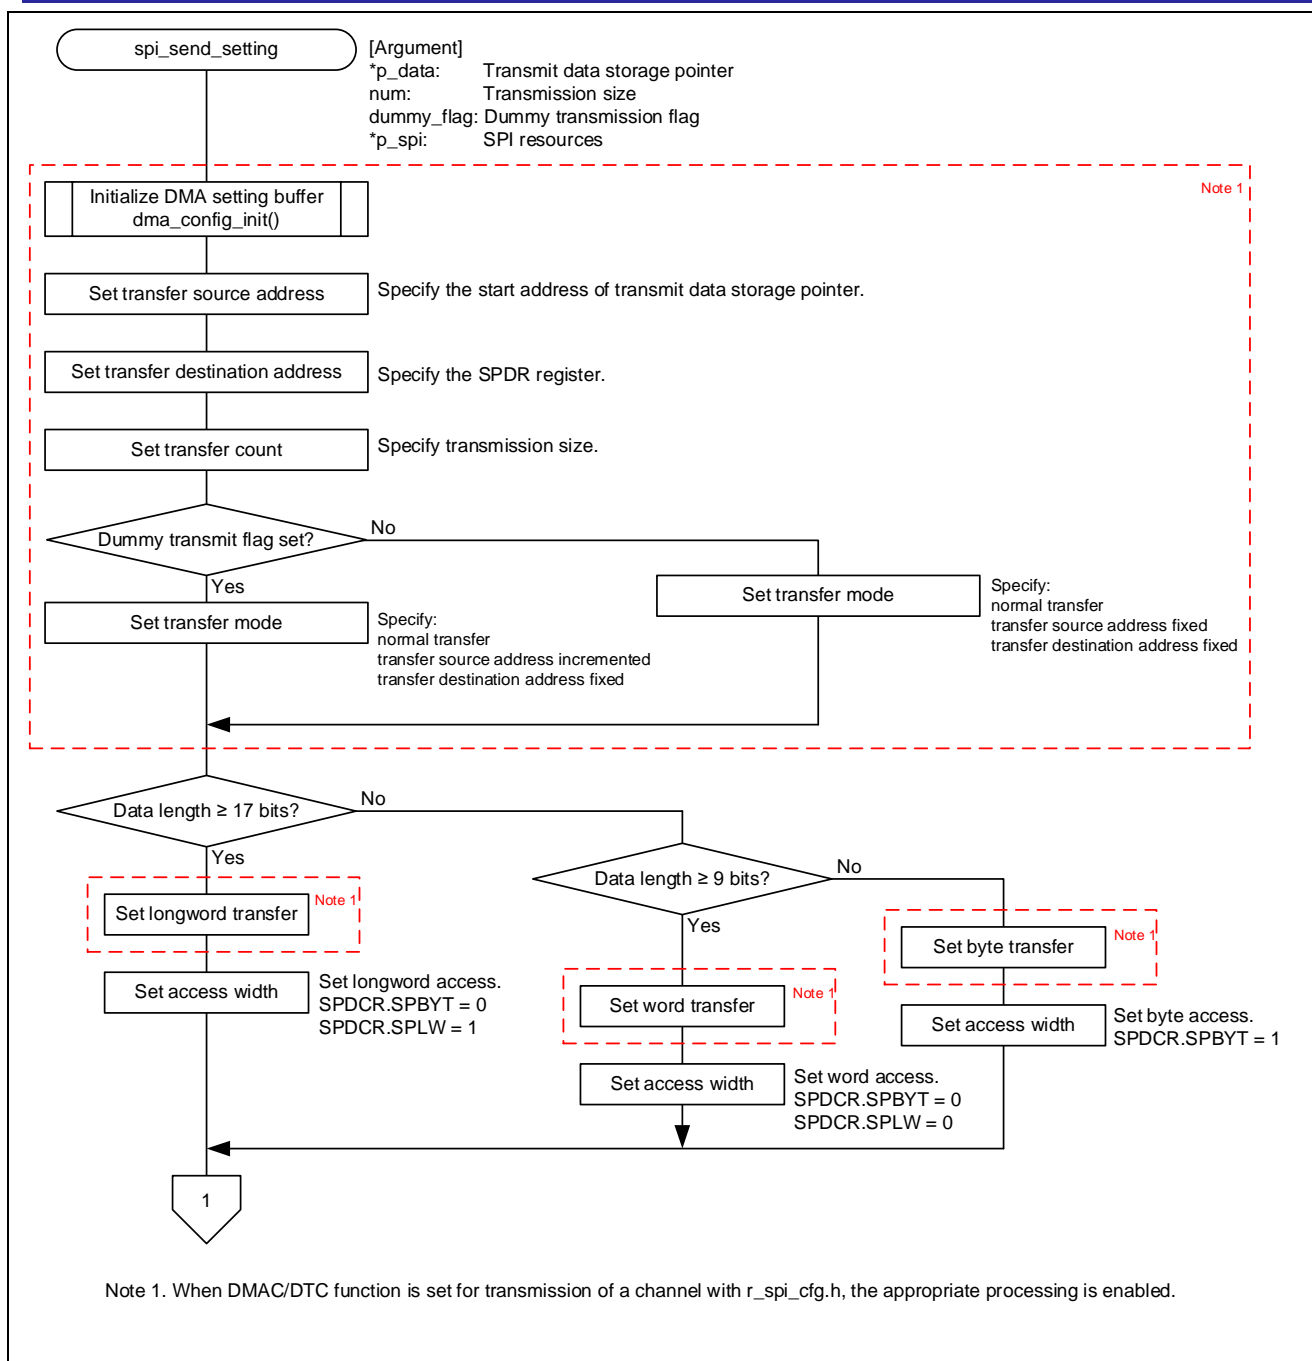


Figure 4-31 spi_send_setting Function Processing Flow (1/2)

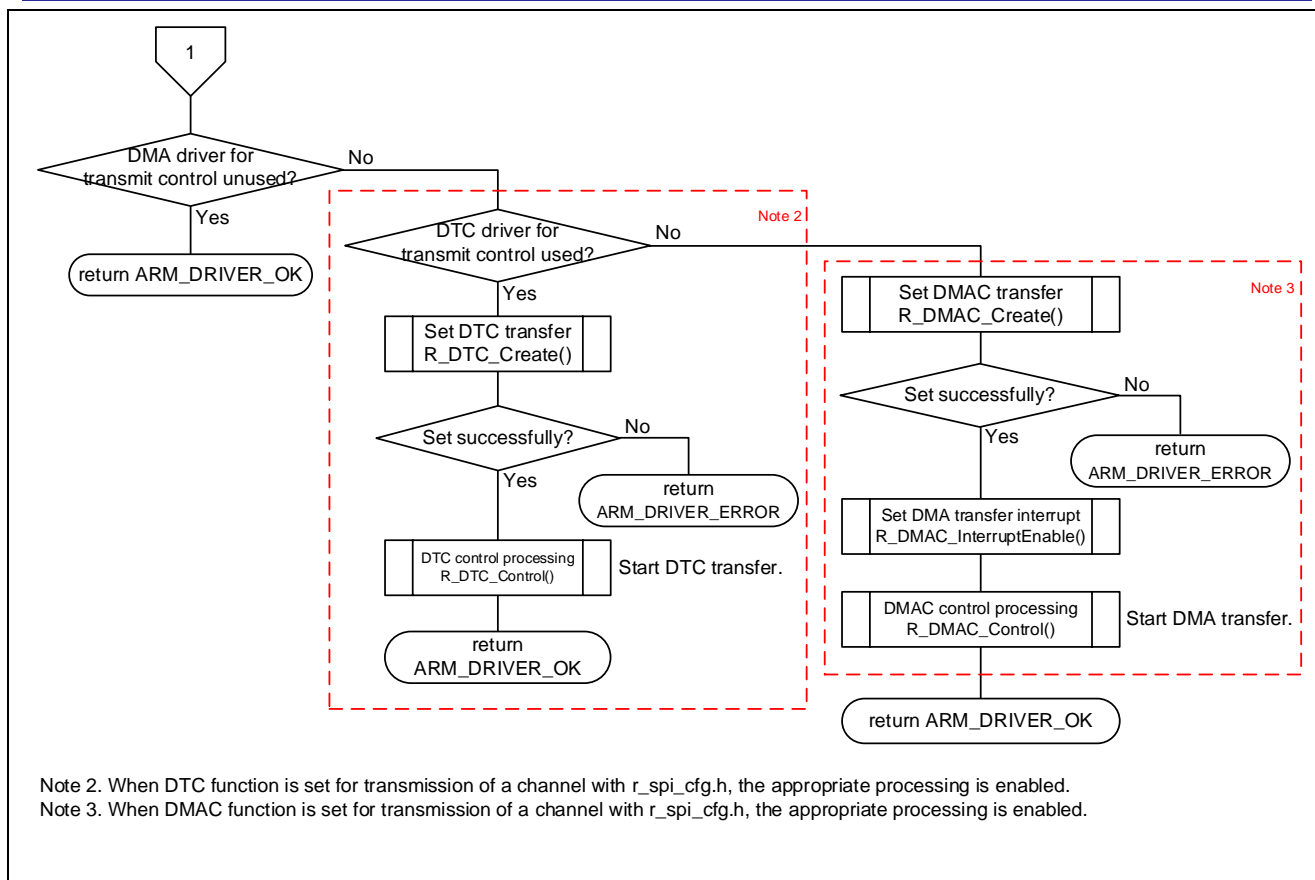


Figure 4-32 spi_send_setting Function Processing Flow (2/2)

4.1.24 spi_receive_setting Function

Table 4-25 spi_receive_setting Function Specifications

Format	static int32_t spi_receive_setting(void const * const p_data, uint32_t num, st_spi_resources_t * const p_spi)
Description	Specifies settings for reception.
Argument	void const * const p_data: Pointer to receive data storage location
	uint32_t num: Reception size
	st_spi_resources_t * const p_spi: SPI resources Specifies the SPI resources to be controlled.
Return value	ARM_DRIVER_OK Reception setting completed
	ARM_DRIVER_ERROR Reception setting failed Reception setting failure occurs if initialization of the DMA driver fails when the DTC or the DMAC is used for reception.
Remarks	

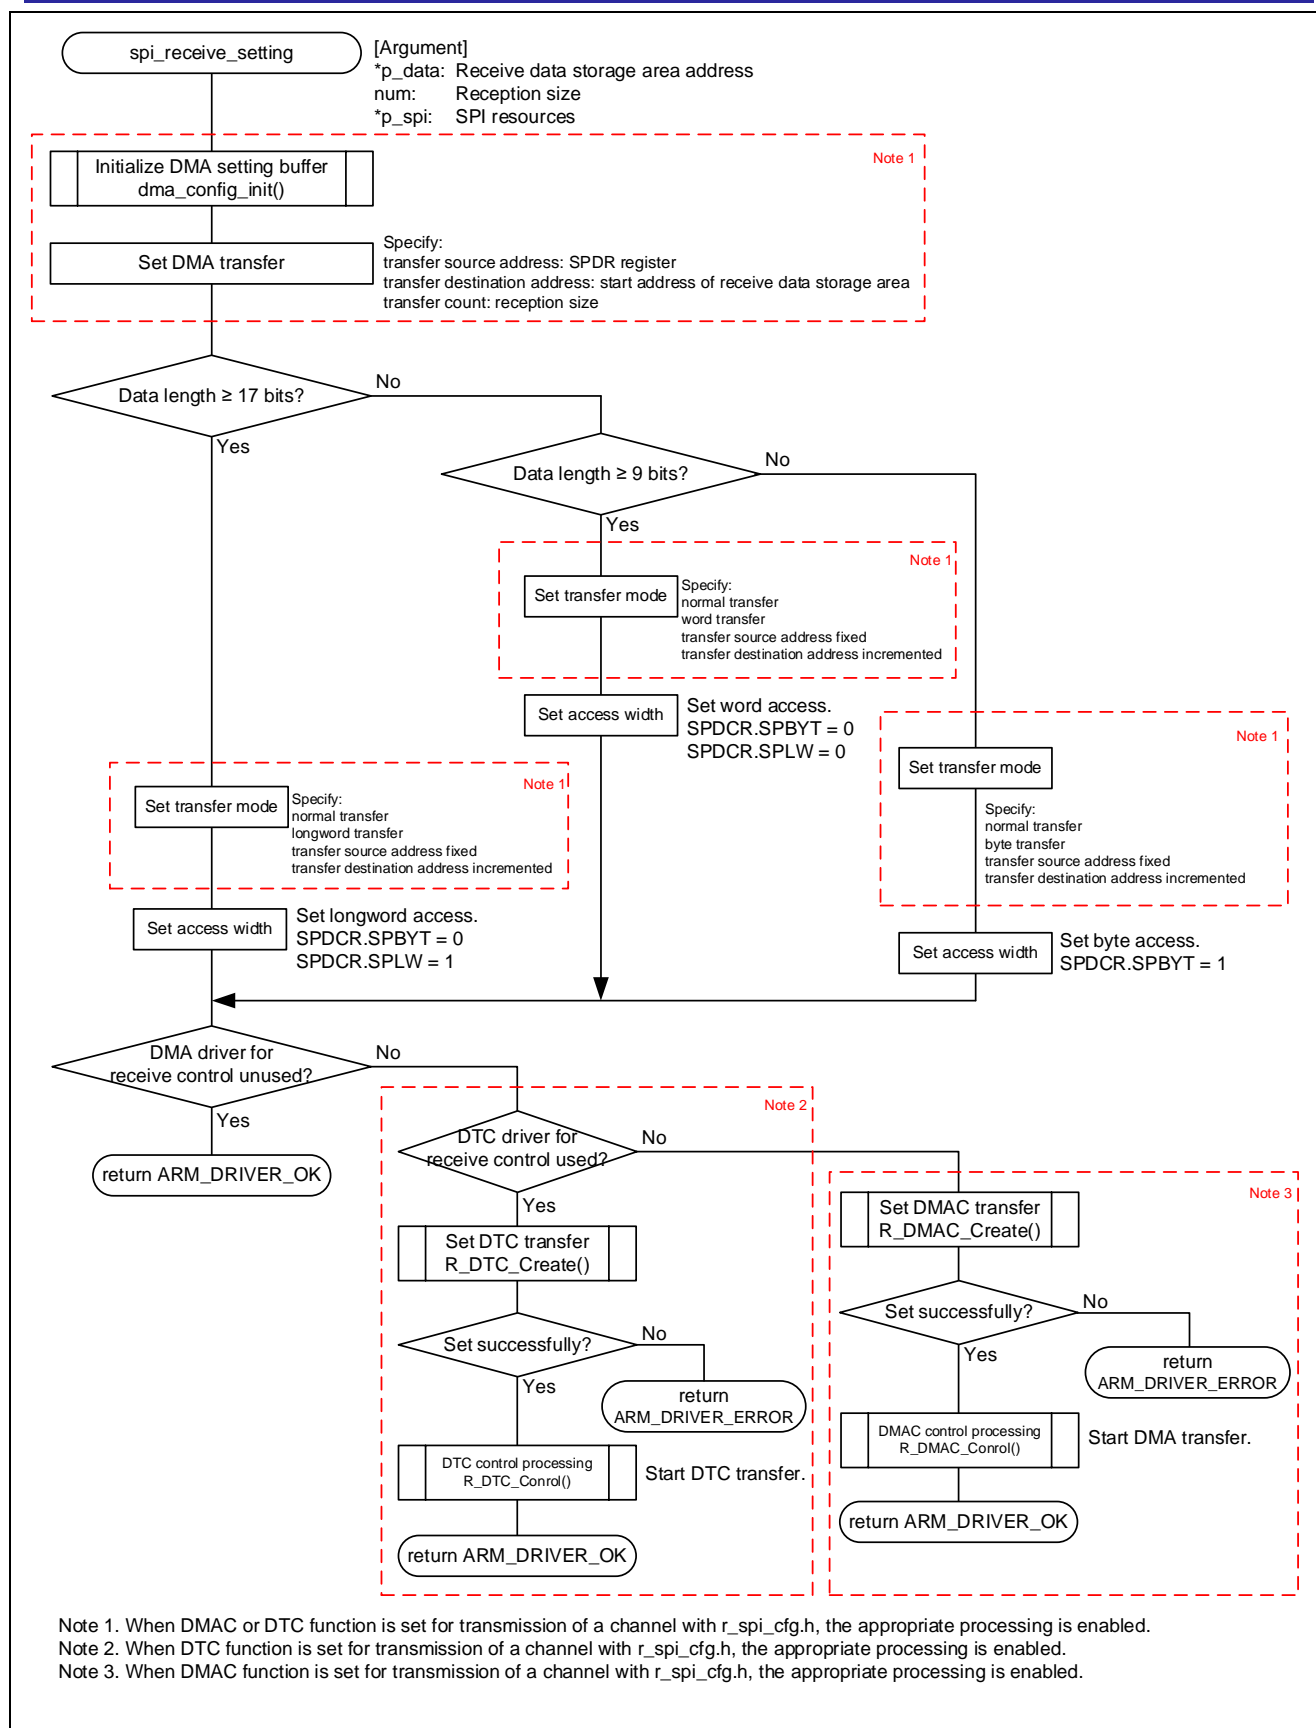


Figure 4-33 spi_receive_setting Function Processing Flow

4.1.25 dma_config_init Function

Table 4-26 dma_config_init Function Specifications

Format	static void dma_config_init(st_dma_transfer_data_cfg_t *p_cfg)
Description	Initializes the DMA driver setting structure to 0.
Argument	st_dma_transfer_data_cfg_t *p_cfg: DMA driver setting structure
Return value	None
Remarks	—

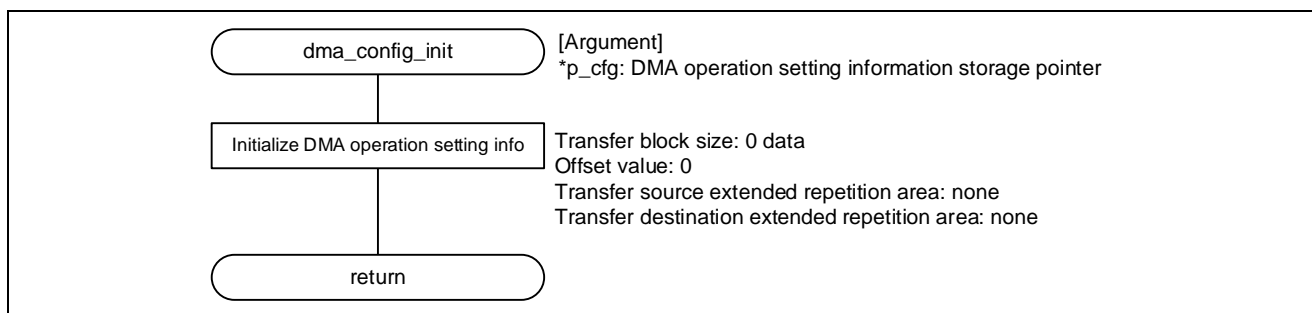


Figure 4-34 dma_config_init Function Processing Flow

4.1.26 spti_handler Function

Table 4-27 spti_handler Function Specifications

Format	static void spti_handler(st_spi_resources_t * const p_spi)
Description	SPTI interrupt handling processing (when using interrupts for transmission)
Argument	st_spi_resources_t * const p_spi: SPI resources Specifies the SPI resources to be controlled.
Return value	None
Remarks	SPTI interrupt handling processing with interrupts used for transmission

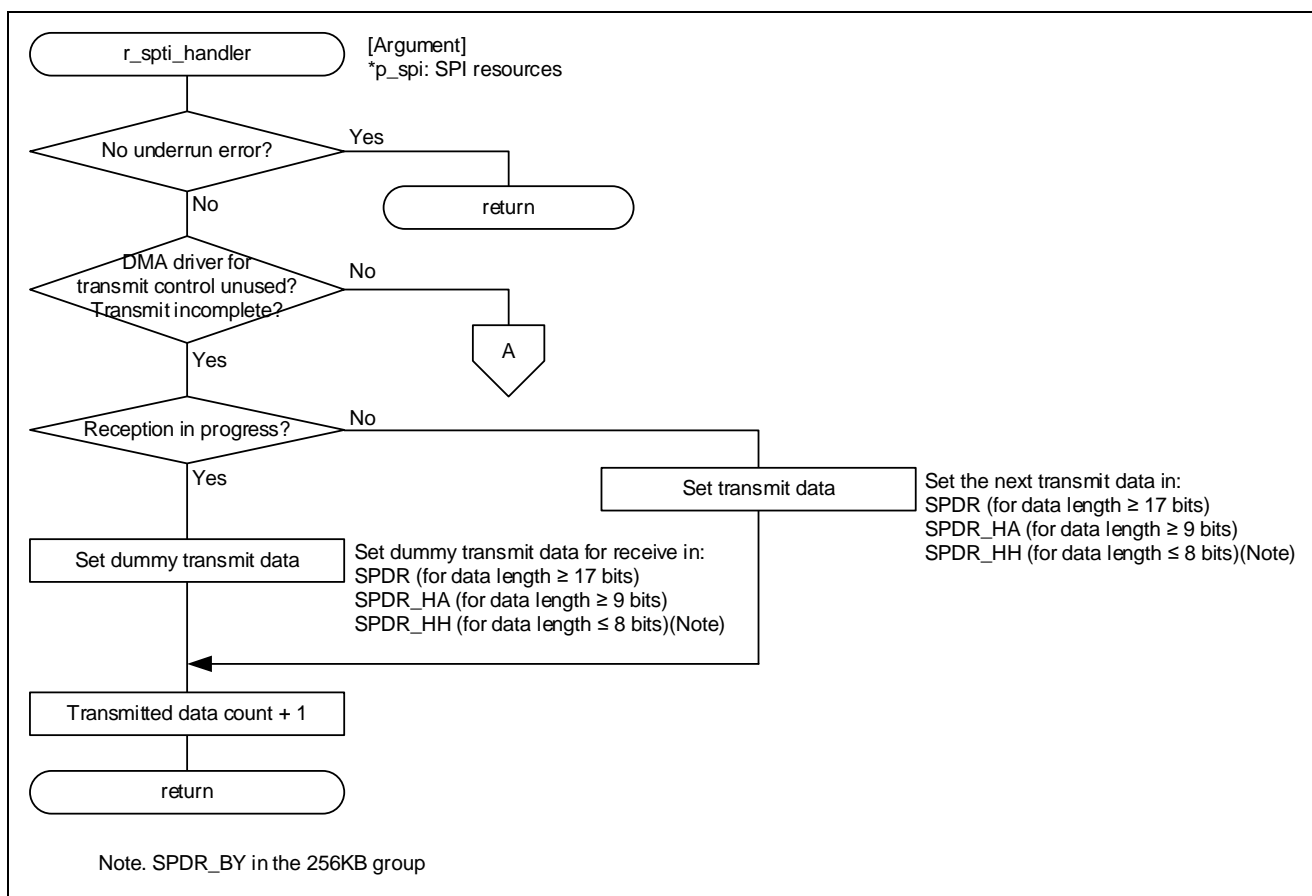


Figure 4-35 spti_handler Function Processing Flow (1/2)

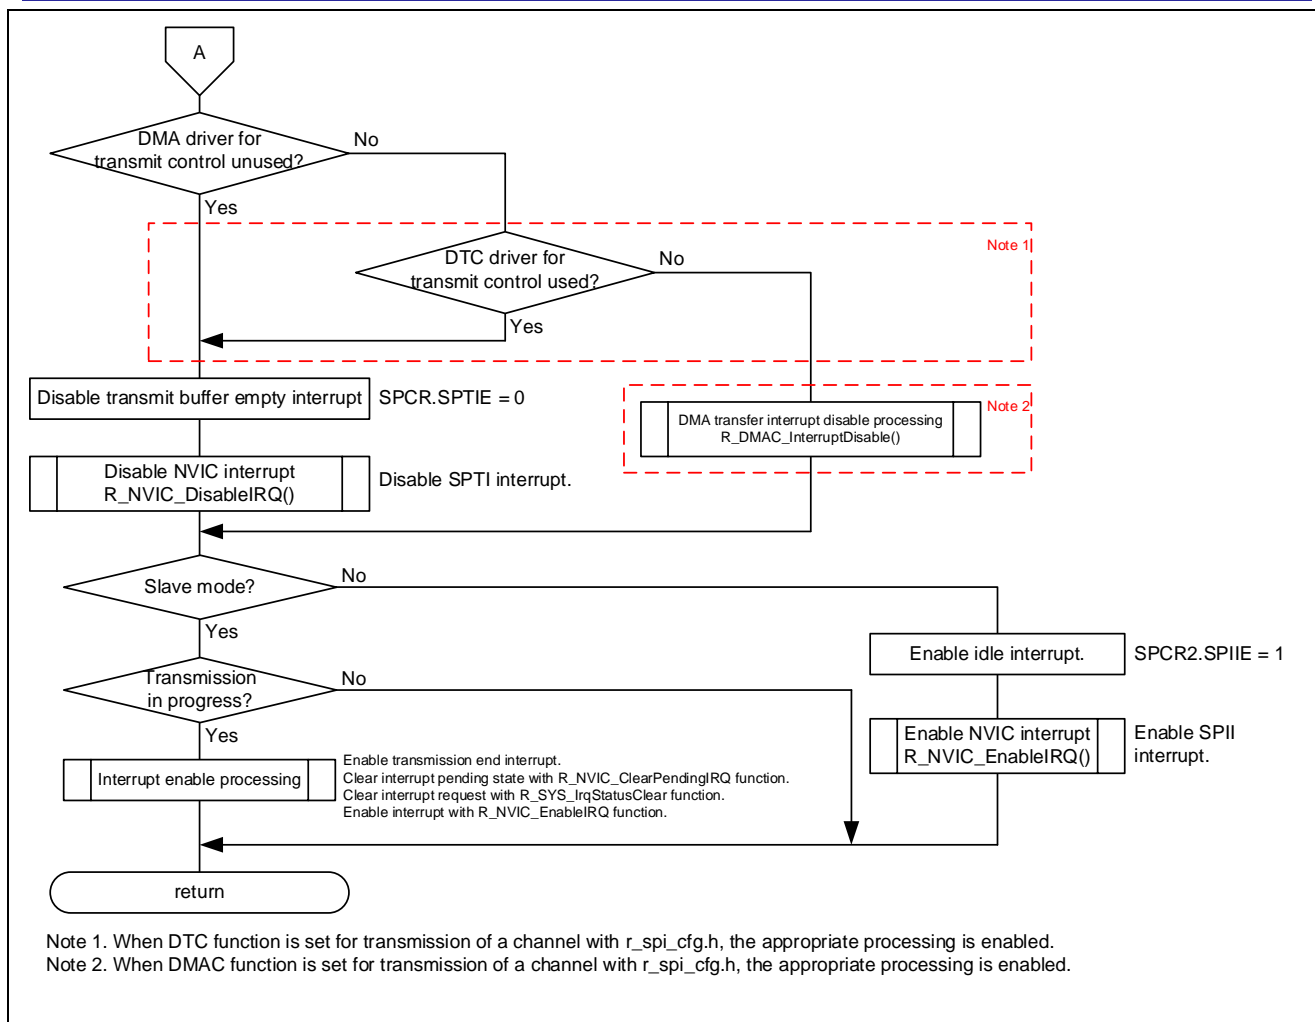


Figure 4-36 spti_handler Function Processing Flow (2/2)

4.1.27 spi_handler Function

Table 4-28 spi_handler Function Specifications

Format	static void spi_handler(st_spi_resources_t * const p_spi)
Description	SPRI interrupt handling processing (when using interrupts for reception)
Argument	st_spi_resources_t * const p_spi: SPI resources Specifies the SPI resources to be controlled.
Return value	None
Remarks	SPRI interrupt handling processing with interrupts used for reception

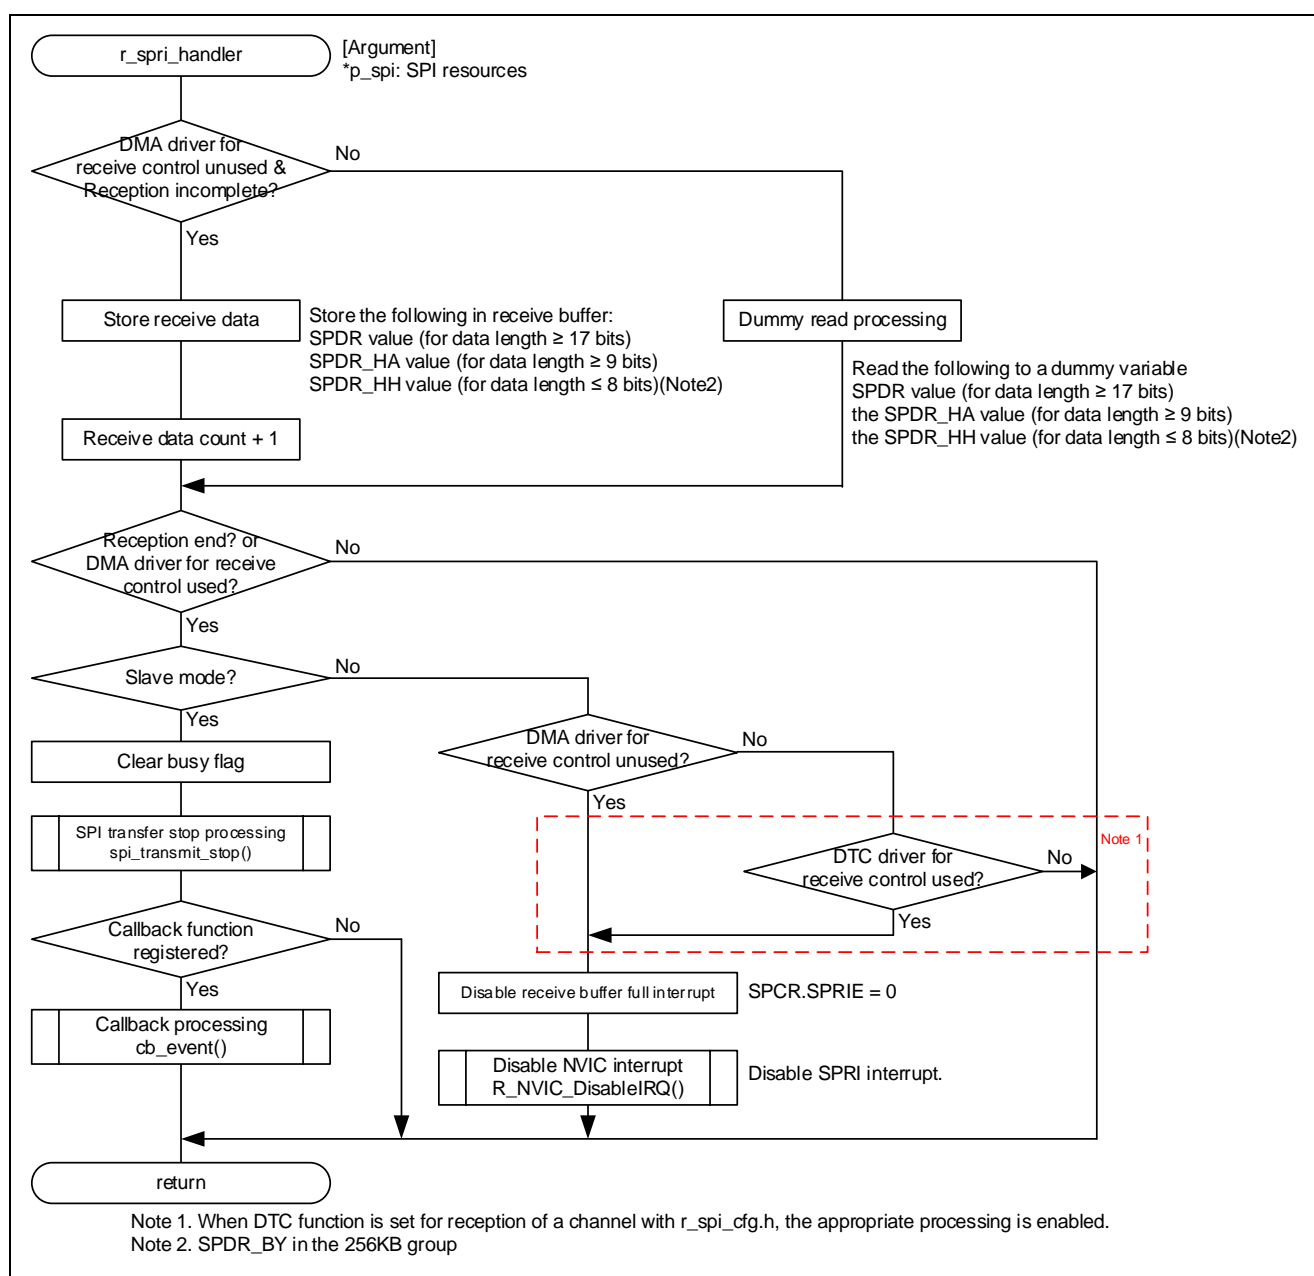


Figure 4-37 spi_handler Function Processing Flow

4.1.28 spii_handler Function

Table 4-29 spii_handler Function Specifications

Format	static void spii_handler(st_spi_resources_t * const p_spi)
Description	SPEI interrupt handling processing
Argument	st_spi_resources_t * const p_spi: SPI resources Specifies the SPI resources to be controlled.
Return value	None
Remarks	—

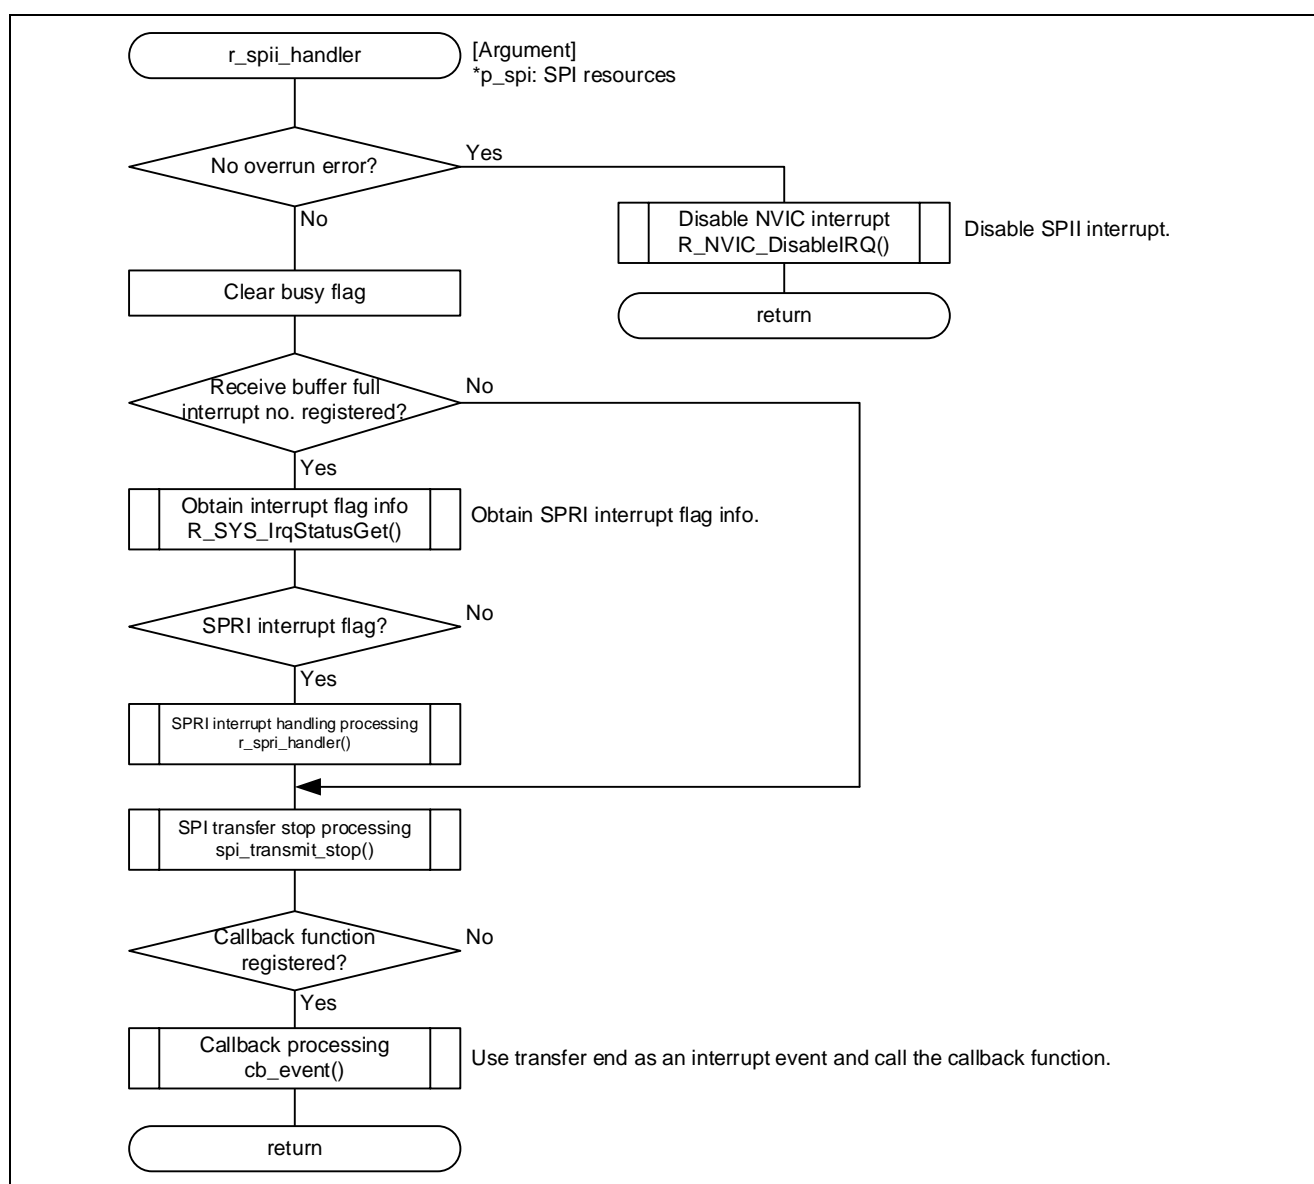


Figure 4-38 spii_handler Function Processing Flow

4.1.29 spei_handler Function

Table 4-30 spei_handler Function Specifications

Format	static void spei_handler(st_spi_resources_t * const p_spi)
Description	SPEI interrupt handling processing
Argument	st_spi_resources_t * const p_spi: SPI resources Specifies the SPI resources to be controlled.
Return value	None
Remarks	—

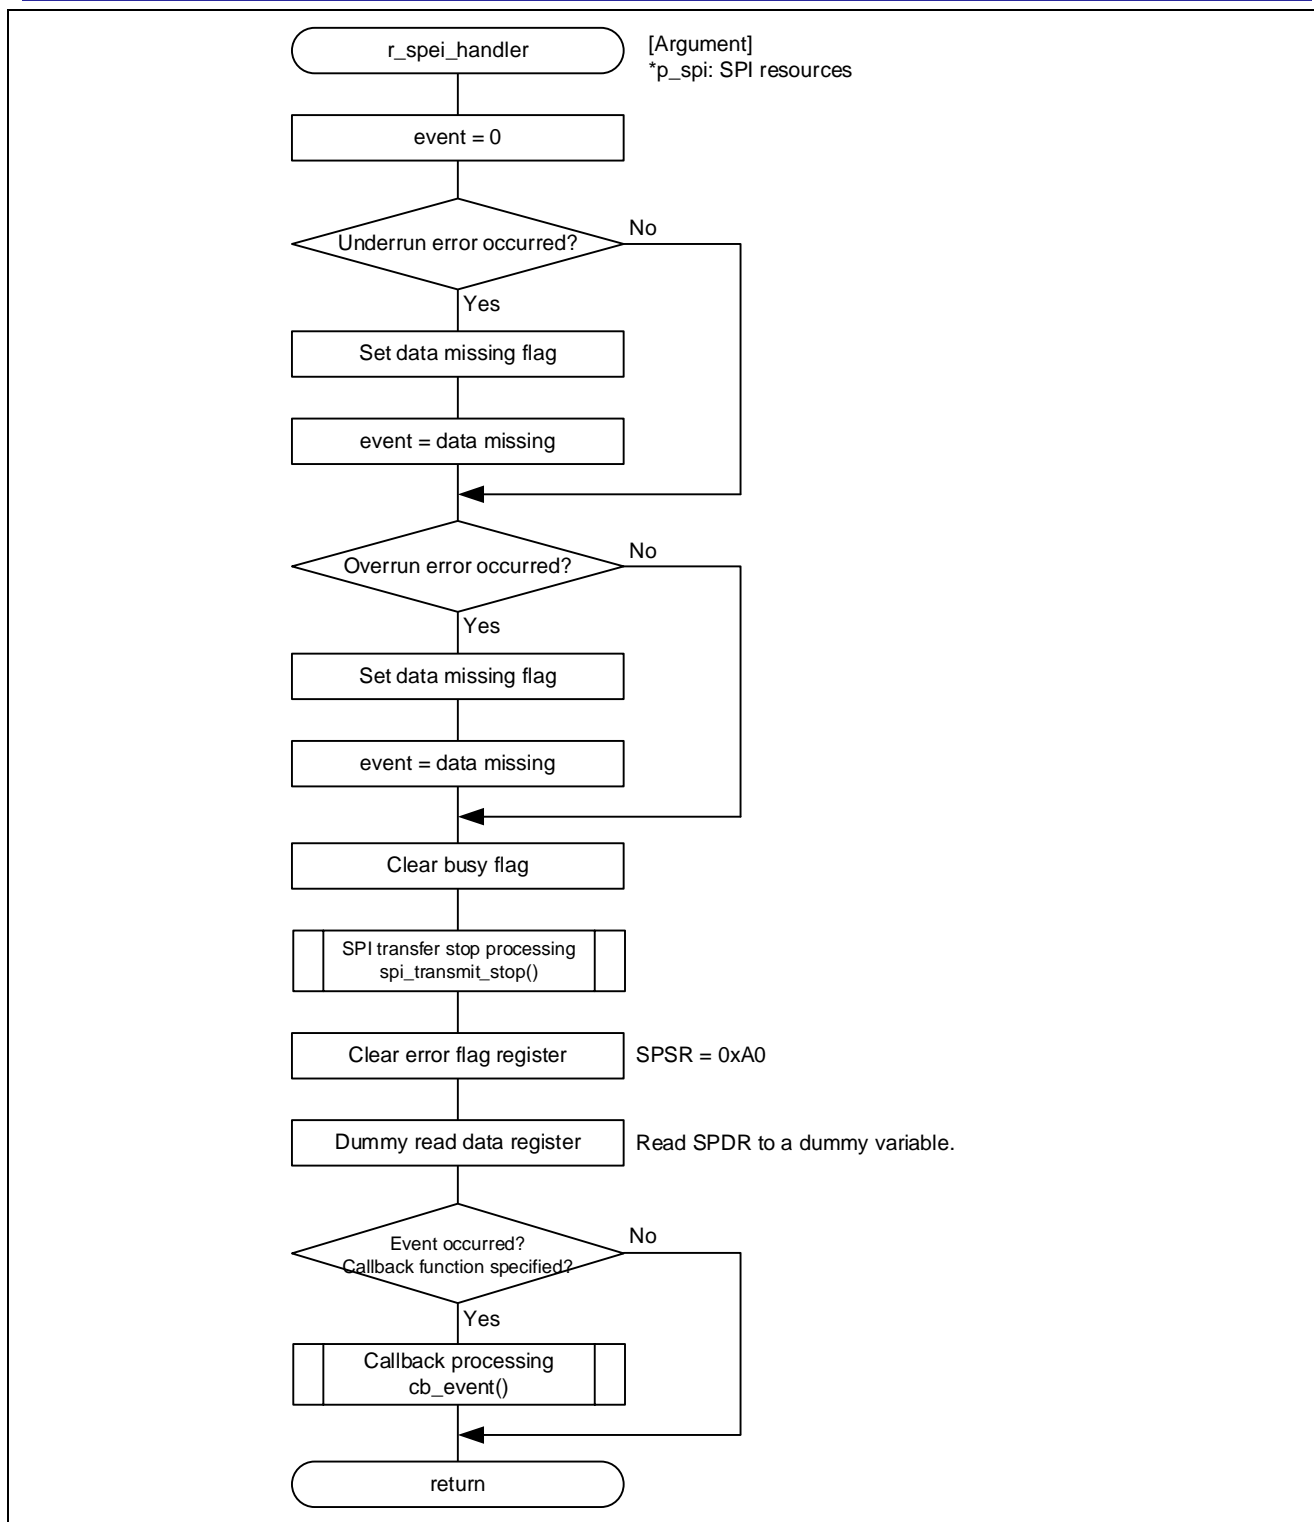


Figure 4-39 pei_handler Function Processing Flow

4.1.30 sptend_handler Function

Table 4-31 sptend_handler Function Specifications

Format	static void sptend_handler(st_spi_resources_t * const p_spi)
Description	SPEI interrupt handling processing
Argument	st_spi_resources_t * const p_spi: SPI resources Specifies the SPI resources to be controlled.
Return value	None
Remarks	–

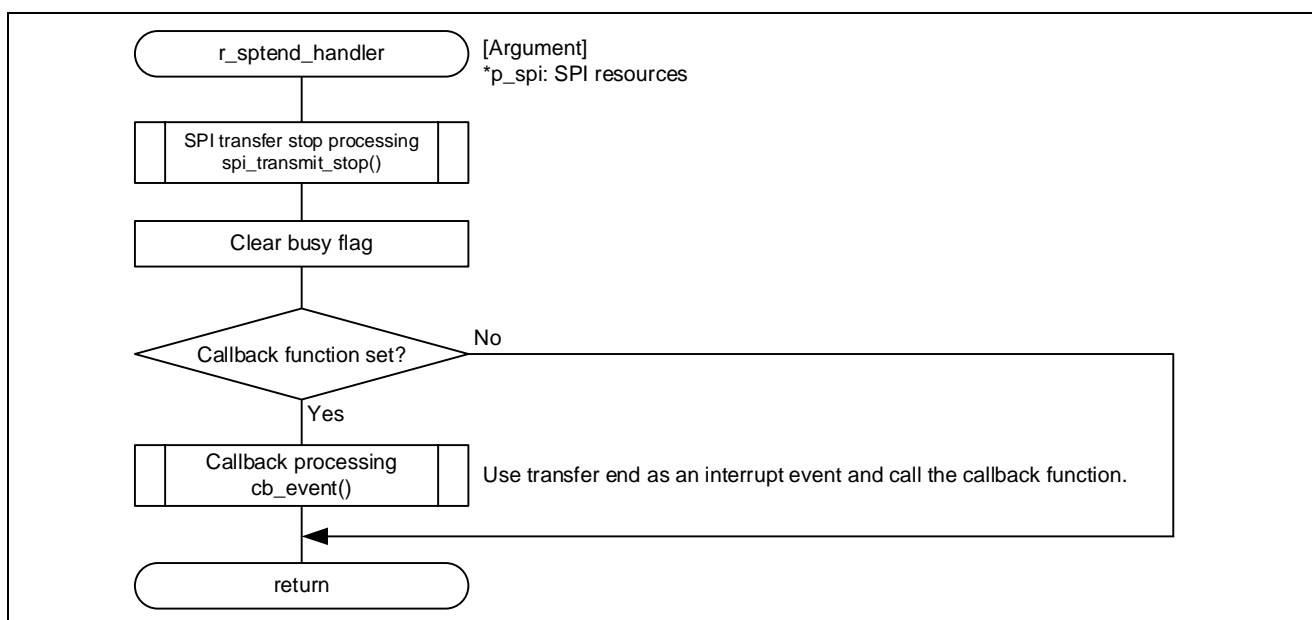


Figure 4-40 sptend_handler Function Processing Flow

4.2 Macro and Type Definitions

This section shows the definitions of the macros used in the driver and the types of them.

4.2.1 Macro Definition List

Table 4-32 List of Macro Definitions (1/2)

Macro Definition	Setting	Description
R_SPI0_ENABLE	(1)	SPI0 resource enable definition
R_SPI1_ENABLE	(1)	SPI1 resource enable definition
SPI_FLAG_INITIALIZED	(1U << 0)	SPI initialization complete flag definition
SPI_FLAG_POWERED	(1U << 1)	Module released flag definition
SPI_FLAG_CONFIGURED	(1U << 2)	Mode setting complete flag definition
SPI_FLAG_MASTER_SEND_AVAILABLE	(1U << 3)	Master transmission enabled state flag definition
SPI_FLAG_MASTER_RECEIVE_AVAILABLE	(1U << 4)	Master reception enabled state flag definition
SPI_FLAG_SLAVE_SEND_AVAILABLE	(1U << 5)	Slave transmission enabled state flag definition
SPI_FLAG_SLAVE_RECEIVE_AVAILABLE	(1U << 6)	Slave reception enabled state flag definition
SPI_SPTI0_DMAC_SOURCE_ID	(0x9A)	DELS bit settings for SPTI0
SPI_SPRI0_DMAC_SOURCE_ID	(0x99)	DELS bit settings for SPRI0
SPI_SPTI1_DMAC_SOURCE_ID	(0x9F)	DELS bit settings for SPTI1
SPI_SPRI1_DMAC_SOURCE_ID	(0x9E)	DELS bit settings for SPRI1
SPI_PRV_USED_DMAC_DTC_DRV	SPI_PRV_USED_TX_DMAC_DTC_DRV SPI_PRV_USED_RX_DMAC_DTC_DRV	Definition for DMAC/DTC driver use judgment
SPI_PRV_USED_TX_DMAC_DTC_DRV	SPI0_TRANSMIT_CONTROL SPI1_TRANSMIT_CONTROL	Definition for DMAC/DTC transmission judgment
SPI_PRV_USED_RX_DMAC_DTC_DRV	SPI0_RECEIVE_CONTROL SPI1_RECEIVE_CONTROL	Definition for DMAC/DTC reception judgment
SPI_PRV_USED_DMAC_DRV	SPI_PRV_USED_TX_DMAC_DRV SPI_PRV_USED_RX_DMAC_DRV	Definition for DMAC driver availability judgment
SPI_PRV_USED_TX_DMAC_DRV	SPI_PRV_USED_TX_DMAC_DTC_DRV & 0x00FF	Definition for DMAC transmission judgment
SPI_PRV_USED_RX_DMAC_DRV	SPI_PRV_USED_RX_DMAC_DTC_DRV & 0x00FF	Definition for DMAC reception judgment
SPI_PRV_USED_DTC_DRV	SPI_PRV_USED_TX_DTC_DRV SPI_PRV_USED_RX_DTC_DRV	Definition for DTC driver availability judgment
SPI_PRV_USED_TX_DTC_DRV	SPI_PRV_USED_TX_DMAC_DTC_DRV & SPI_USED_DTC	Definition for DTC transmission judgment
SPI_PRV_USED_RX_DTC_DRV	(SPI_PRV_USED_RX_DMAC_DTC_DRV & SPI_USED_DTC	Definition for DTC reception judgment

Table 4-33 List of Macro Definitions (2/2)

Definition	Value	Description
SPI_PRV_SPCMD0_SPB_OFFSET	(8)	Offset value for setting SPCMD.SPB
SPI_PRV_SPCMD0_SPB_CLR_MASK	(0xF0FF)	Mask value for clearing SPCMD.SPB
SPI_PRV_SPCMD0_SPB_20BIT	(0x0000)	Data length setting (20 bits)
SPI_PRV_SPCMD0_SPB_24BIT	(0x0100)	Data length setting (24 bits)
SPI_PRV_SPCMD0_SPB_32BIT	(0x0200)	Data length setting (32 bits)
SPI_PRV_SPCMD0_SPB_8BIT	(0x0400)	Data length setting (8 bits)
SPI_PRV_EXEC_SEND	(0x00)	Transmit operation definition
SPI_PRV_EXEC_RECEIVE	(0x01)	Receive operation definition
SPI_PRV_EXEC_TRANSFER	(0x02)	Transmit/receive operation definition
SPI_PRV_MASK_BRDV	(0xFFF3)	Mask value for setting SPCMD0.BRDV
SPI_PRV_BASE_BIT_MASK	(0xFFFFFFFFFE)	Data bit length base mask for storing reception information

4.3 Structure Definitions

4.3.1 st_spi_resources_t Structure

This structure configures the resources of the SPI.

Table 4-34 st_spi_resources_t Structure

Element Name	Type	Description
*reg	volatile SPI0_Type	Shows a target SPI register.
pin_set	r_pinset_t	Function pointer for setting pins
pin_clr	r_pinclr_t	Function pointer for releasing pins
*ss_pin	volatile uint16_t	Software-controlled SSL0 pin setting (port register)
ss_pin_pos	uint8_t	Software-controlled SSL0 pin setting (pin number)
*info	st_spi_info_t	SPI status information
*xfer	st_spi_transfer_info_t	SPI transfer information
lock_id	e_system_mcu_lock_t	SPI lock ID
mstp_id	e_lpm_mstp_t	SPI module stop ID
spti_irq	IRQn_Type	SPTI interrupt number assigned in NVIC
spri_irq	IRQn_Type	SPRI interrupt number assigned in NVIC
spii_irq	IRQn_Type	SPII interrupt number assigned in NVIC
spei_irq	IRQn_Type	SPEI interrupt number assigned in NVIC
sptend_irq	IRQn_Type	SPTEND interrupt number assigned in NVIC
spti_iesr_val	uint32_t	IESR register setting for SPTI interrupt
spri_iesr_val	uint32_t	IESR register setting for SPRI interrupt
spii_iesr_val	uint32_t	IESR register setting for SPII interrupt
spei_iesr_val	uint32_t	IESR register setting for SPEI interrupt
sptend_iesr_val	uint32_t	IESR register setting for SPTEND interrupt
spti_priority	uint32_t	SPTI interrupt priority level
spri_priority	uint32_t	SPRI interrupt priority level
spii_priority	uint32_t	SPII interrupt priority level
spei_priority	uint32_t	SPEI interrupt priority level
sptend_priority	uint32_t	SPTEND interrupt priority level
*tx_dma_drv	DRIVER_DMA	DMA driver for transmission If interrupts are used for transmission, NULL is set.
tx_dma_source	uint16_t	DELS bit value set for SPTI
*tx_dtc_info	st_dma_transfer_data_t	Address at which DTC transfer information for transmission is stored
*rx_dma_drv	DRIVER_DMA	DMA driver for reception If interrupts are used for reception, NULL is set.
rx_dma_source	uint16_t	DELS bit value set for SPRI
*rx_dtc_info	st_dma_transfer_data_t	Address at which DTC transfer information for reception is stored
spti_callback	system_int_cb_t	SPTI interrupt callback function
spri_callback	system_int_cb_t	SPRI interrupt callback function
spii_callback	system_int_cb_t	SPII interrupt callback function
spei_callback	system_int_cb_t	SPEI interrupt callback function
sptend_callback	system_int_cb_t	SPTEND interrupt callback function

4.3.2 st_spi_transfer_info_t Structure

This structure is used to manage the SPI transmission/reception information.

Table 4-35 st_spi_transfer_info_t Structure

Element Name	Type	Description
num	uint32_t	Transmission/reception size
*rx_buf	void	Receive buffer
*tx_buf	void	Transmit buffer
rx_cnt	uint32_t	Reception count
tx_cnt	uint32_t	Transmission count
tx_def_val	uint16_t	Dummy transmit data
data_bits	uint8_t	Data bit length
exec_state	uint8_t	Transmission, reception, or transmission/reception status

4.3.3 st_spi_info_t Structure

This structure is used to manage the SPI information.

Table 4-36 st_spi_info_t Structure

Element Name	Type	Description
cb_event	ARM_SPI_SignalEvent_t	Callback function to be executed when an event occurs When this value is NULL, no callback function will be executed.
status	ARM_SPI_STATUS	SPI communication status
tx_status	st_spi_transfer_info_t	SPI transmission and reception information
mode	uint32_t	Operation mode ARM_SPI_MODE_INACTIVE: The SPI is not active. ARM_SPI_MODE_MASTER: Master mode operation ARM_SPI_MODE_SLAVE: Slave mode operation
bps	uint32_t	Baud rate setting
flags	uint16_t	Driver status flag b0: Driver initialization state (0: Uninitialized, 1: Initialized) b1: Module stop state (0: Module stop state, 1: Module stop released) b2: SPI mode setting complete state (0: Not set, 1: Setting completed) b3: Master transmission availability (0: Master transmission not available, 1: Master transmission available) b4: Master reception availability (0: Master reception not available, 1: Master reception available) b5: Slave transmission availability (0: Slave transmission not available, 1: Slave transmission available) b6: Slave reception availability (0: Slave reception not available, 1: Slave reception available)

4.3.4 st_spi_reg_buf_t Function

This structure is used for the register setting buffers.

Table 4-37 st_spi_reg_buf_t Structure

Element Name	Type	Description
mode	int32_t	Buffer for setting SPI operation mode
spcmd0	uint16_t	Buffer for setting SPCMD0 register
spcr	uint8_t	Buffer for setting SPCR register
spbr	uint8_t	Buffer for setting SPBR register
data_bits	uint8_t	Buffer for setting a data bit length
bps	uint32_t	Buffer for setting a baud rate

4.4 Data Table Definitions

This section shows the definitions for the main data table used for SPI driver processing.

4.4.1 Data Table for Bit Rate Division Setting

The bit rate division setting data table is a table used for setting SPCMD0.BRDV defined with type uint16_t.

Table 4-38 Bit Rate Division Setting Data Table (gs_spi_brdv_tbl)

Frequency Division Ratio	Data Table Settings	BRDV[1:0]		Description
		b3	b2	
0	0x0000	0	0	Base bit rate (Note)
2	0x0004	0	1	Base bit rate (Note) divided by 2
4	0x0008	1	0	Base bit rate (Note) divided by 4
8	0x000C	1	1	Base bit rate (Note) divided by 8

Note. The base bit rate is determined by the SPBR register value. The SPBR setting value is automatically calculated when the baud rate is set.

4.5 Calling External Functions

This section shows the external functions to be called from the SPI driver APIs.

Table 4-39 External Functions Called from SPI Driver APIs and Calling Conditions (1/2)

API	Functions Called	Conditions (Note)
Initialize	R_SYS_ResourceLock	None
	R_NVIC_GetPriority	None
	R_NVIC_SetPriority	None
	R_SYS_IrqEventLinkSet	None
	R_DMAMAC_Open	The DMAC driver was used for transmission or reception.
	R_DMAMAC_InterruptEnable	
	R_DMAMAC_Close	The DMAC driver was used for transmission or reception and initialization failed.
	R_DTC_Open	The DTC driver was used for transmission or reception.
	R_DTC_Close	The DTC driver was used for transmission or reception and initialization failed.
	R_DTC_Release	
	R_DTC_GetAvailabilitySrc	
Uninitialize	R_LPM_ModuleStart	The Uninitialize function was executed in the module stop state
	R_LPM_ModuleStop	None
	R_SYS_ResourceUnlock	None
	R_NVIC_ClearPendingIRQ	None
	R_SYS_IrqStatusClear	None
	R_NVIC_DisableIRQ	None
	R_RSPI_Pinctrl_CHn(n = 0,1)	None
	R_RSPI_Pinset_CHn(n = 0,1)	None
	R_DMAMAC_Close	The DMAC driver was used for transmission or reception.
	R_DTC_Close	The DTC driver was used for transmission or reception.
	R_DTC_Release	
	R_DTC_GetAvailabilitySrc	
PowerControl	R_LPM_ModuleStart	ARM_POWER_FULL was specified (module stop state released)
	R_RSPI_Pinctrl_CHn(n = 0,1)	
	R_LPM_ModuleStop	
	R_NVIC_ClearPendingIRQ	ARM_POWER_OFF was specified (module stop state entered)
	R_SYS_IrqStatusClear	
	R_NVIC_DisableIRQ	
Send	R_NVIC_EnableIRQ	None
	R_SYS_IrqStatusClear	None
	R_NVIC_DisableIRQ	None
	R_DMAMAC_Create	The DMAC driver was used for transmission.
	R_DMAMAC_InterruptEnable	
	R_DMAMAC_Control	
	R_DTC_Create	The DTC driver was used for transmission.
	R_DTC_Control	
	R_DTC_Release	If the DTC driver is used for the transmission process and the transmission process fails
	R_DTC_GetAvailabilitySrc	

Note: If operation terminates due to a parameter check error, the functions may not be called even when no condition is specified.

Table 4-40 External Functions Called from SPI Driver APIs and Calling Conditions (2/2)

API	Functions Called	Conditions (Note)
Receive	R_NVIC_EnableIRQ	None
	R_DMAC_Create	The DMAC driver was used for reception, or the DMAC driver was used for transmission in clock synchronous mode (with transmission enabled).
	R_DMAC_InterruptEnable	
	R_DMAC_Control	
	R_NVIC_ClearPendingIRQ	None
	R_SYS_IrqStatusClear	None
	R_DTC_Create	The DTC driver was used for reception, or the DTC driver was used for transmission in clock synchronous mode (with transmission enabled).
	R_DTC_Control	
	R_DTC_Release	If the DTC driver is used for the send or receive process and the receive process fails
	R_DTC_GetAvailabilitySrc	
Transfer	R_NVIC_EnableIRQ	None
	R_DMAC_Create	The DMAC driver was used for transmission/reception, or the DMAC driver was used for transmission in clock synchronous mode (with transmission enabled).
	R_DMAC_InterruptEnable	
	R_DMAC_Control	
	R_NVIC_ClearPendingIRQ	None
	R_SYS_IrqStatusClear	None
	R_DTC_Create	The DTC driver was used for transmission/reception, or the DTC driver was used for transmission in clock synchronous mode (with transmission enabled).
	R_DTC_Control	
	R_DTC_Release	If the DTC driver is used for the send or receive process and the receive process fails
	R_DTC_GetAvailabilitySrc	
GetDataCount	R_DMAC_GetTransferByte	When a DMAC driver is used for transmission / reception processing
	R_DTC_GetTransferByte	When a DTC driver is used for transmission / reception processing
Control	R_SYS_SystemClockFreqGet	Any of the following commands was executed: • ARM_SPI_MODE_MASTER • ARM_SPI_SET_BUS_SPEED • ARM_SPI_GET_BUS_SPEED
	R_NVIC_ClearPendingIRQ	The ARM_SPI_ABORT_TRANSFER command was executed.
	R_SYS_IrqStatusClear	
	R_DMAC_Control	
	R_DMAC_InterruptDisable	
	R_NVIC_DisableIRQ	
	R_NVIC_ClearPendingIRQ	
	R_SYS_IrqStatusClear	
	R_RSPI_Pinset_CHn(n = 0,1)	Transmission or reception was enabled by either of the following commands: • ARM_SPI_MODE_MASTER • ARM_SPI_MODE_SLAVE
GetStatus	-	-
GetVersion	-	-
GetCapabilities	-	-

Note: If operation terminates due to a parameter check error, the functions may not be called even when no condition is specified.

5. Usage Notes

5.1 Registering SPI Interrupts with NVIC

It is necessary to register the interrupts used for communication control with the NVIC in `r_system_cfg.h`.

For details, see section 2.3, Pin Configuration.

5.2 Pin Configuration

The pins to be used by this driver are set and released respectively with the `R_RSPI_Pinset_CHn` ($n=0,1$) and `R_RSPI_Pinclr_CHn` functions in `pin.c`. The `R_RSPI_Pinset_CHn` function is called when transmission or reception is enabled by the Control function. The `R_RSPI_Pinclr_CHn` function is called when transmission and reception are disabled by the Control function, PowerControl function, or Uninitialize function.

Select the pin to be used by editing the `R_RSPI_Pinset_CHn` and `R_RSPI_Pinclr_CHn` ($n = 0, 1$) functions of `pin.c`.

Pin names of SPI function have added `_A`, `_B`, `_C`, and `_D` suffixes. When assigning SPI functions, select the functional pins with the same suffix. (Note)

Figures 5-1 to 5-3 show the coding examples for setting the pin configuration.

Note. In the case of SPI function, the same signal names are present with the suffixes “_A”, “_B”, “_C” and “_D” attached. These indicate groups in terms of timing adjustment, and signals from different groups cannot be used at the same time. The exceptions are the `RSPCKA_C` and `MOSIA_C` signals for the SPI and the `SSLB0_D` signal, which can be used at the same time as signals from group B.

```

/*****
* @brief This function sets Pin of RSPI0.
* @note Several pin names have added _A, _B, and _C suffixes.@n
*       When assigning the SPI functions, select the functional pins with the same suffix.@n
*       Comment out the terminal of unused suffix.@n
*       When using "RSPCKA_C, MOSIA_C" added by the SPI, select the pair of RSPCKA_B and RSPCKA_C
*       and the pair of MOSIA_B and MOSIA_C. When using "SSLB0_D" added by SPI,
*       select the pair of SSLB0_D and SSLB0_B.
*****/
/* Function Name : R_SPI_Pinset_CH0 */
void R_SPI_Pinset_CH0(void) // @suppress("API function naming") @suppress("Function length")
{
    /* Disable protection for PFS function (Set to PWR register) */
    R_SYS_RegisterProtectDisable(SYSTEM_REG_PROTECT_MPC);

    /* MISOA_A : P105 */
    PFS->P105PFS_b.PMR = 0U;
    PFS->P105PFS_b.ASEL = 0U;
    PFS->P105PFS_b.ISEL = 0U;
    PFS->P105PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
    PFS->P105PFS_b.PMR = 1U;

    /* Set P500 as MISOA */
    /* MISOA_B : P500 */
    PFS->P500PFS_b.ASEL = 0U;
    PFS->P500PFS_b.ISEL = 0U;
    PFS->P500PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
    PFS->P500PFS_b.PMR = 1U;

    /* MOSIA_A : P104 */
    PFS->P104PFS_b.PMR = 0U;
    PFS->P104PFS_b.ASEL = 0U;
    PFS->P104PFS_b.ISEL = 0U;
    PFS->P104PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
    PFS->P104PFS_b.PMR = 1U;

    /* Set P010 as MOSIA */
    /* MOSIA_B : P010 */
    PFS->P010PFS_b.ASEL = 0U;
    PFS->P010PFS_b.ISEL = 0U;
    PFS->P010PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
    PFS->P010PFS_b.PMR = 1U;

    /* MOSIA_C : P501 */
    PFS->P501PFS_b.ASEL = 0U;
    PFS->P501PFS_b.ISEL = 0U;
    PFS->P501PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
    PFS->P501PFS_b.PMR = 1U;

    /* RSPCKA_A : P107 */
    PFS->P107PFS_b.PMR = 0U;
    PFS->P107PFS_b.ASEL = 0U;
    PFS->P107PFS_b.ISEL = 0U;
    PFS->P107PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
    PFS->P107PFS_b.PMR = 1U;

    /* Set P011 as RSPCKA */
    /* RSPCKA_B : P011 */
    PFS->P011PFS_b.ASEL = 0U;
    PFS->P011PFS_b.ISEL = 0U;
    PFS->P011PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
    PFS->P011PFS_b.PMR = 1U;

    /* RSPCKA_C : P502 */
    PFS->P502PFS_b.ASEL = 0U;
    PFS->P502PFS_b.ISEL = 0U;
    PFS->P502PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
    PFS->P502PFS_b.PMR = 1U;
}

```

Figure 5-1 Coding Example for Setting Pin Configuration (1/3)


```

//  /* SSLA0_A : P103 */
//  PFS->P103PFS_b.ASEL = 0U;
//  PFS->P103PFS_b.ISEL = 0U;
//  PFS->P103PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
//  PFS->P103PFS_b.PMR = 1U;

/* Set P012 as SSLA0 */
/* SSLA0_B : P012 */
PFS->P012PFS_b.ASEL = 0U;
PFS->P012PFS_b.ISEL = 0U;
PFS->P012PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
PFS->P012PFS_b.PMR = 1U;

//  /* SSLA1_A : P102 */
//  PFS->P102PFS_b.ASEL = 0U;
//  PFS->P102PFS_b.ISEL = 0U;
//  PFS->P102PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
//  PFS->P102PFS_b.PMR = 1U;

/* SSLA1_B : P013 */
//  PFS->P013PFS_b.ASEL = 0U;
//  PFS->P013PFS_b.ISEL = 0U;
//  PFS->P013PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
//  PFS->P013PFS_b.PMR = 1U;

//  /* SSLA2_A : P101 */
//  PFS->P101PFS_b.ASEL = 0U;
//  PFS->P101PFS_b.ISEL = 0U;
//  PFS->P101PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
//  PFS->P101PFS_b.PMR = 1U;

/* SSLA2_B : P014 */
//  PFS->P014PFS_b.ASEL = 0U;
//  PFS->P014PFS_b.ISEL = 0U;
//  PFS->P014PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
//  PFS->P014PFS_b.PMR = 1U;

//  /* SSLA3_A : P100 */
//  PFS->P100PFS_b.ASEL = 0U;
//  PFS->P100PFS_b.ISEL = 0U;
//  PFS->P100PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
//  PFS->P100PFS_b.PMR = 1U;

/* SSLA3_B : P015 */
//  PFS->P015PFS_b.ASEL = 0U;
//  PFS->P015PFS_b.ISEL = 0U;
//  PFS->P015PFS_b.PSEL = R_PIN_PRV_RSPI_PSEL;
//  PFS->P015PFS_b.PMR = 1U;

/* Enable protection for PFS function (Set to PWPR register) */
R_SYS_RegisterProtectEnable(SYSTEM_REG_PROTECT_MPC);
}/* End of function R_RSPI_Pinset_CH0() */

```

Figure 5-2 Coding Example for Setting Pin Configuration (2/3)

```

/*****
* @brief This function clears the pin setting of RSPI0.
*****/
/* Function Name : R_RSPI_PinClr_CH0 */
void R_RSPI_PinClr_CH0(void) // @suppress("API function naming")
{
    /* Disable protection for PFS function (Set to PWPR register) */
    R_SYS_RegisterProtectDisable(SYSTEM_REG_PROTECT_MPC);

    /* MIS0A_A : P105 */
    PFS->P105PFS &= R_PIN_PRV_CLR_MASK;

    /* Release MIS0A pin */
    /* MIS0A_B : P500 */
    PFS->P500PFS &= R_PIN_PRV_CLR_MASK;

    /* MOSIA_A : P104 */
    PFS->P104PFS &= R_PIN_PRV_CLR_MASK;

    /* Release MOSIA pin */
    /* MOSIA_B : P010 */
    PFS->P010PFS &= R_PIN_PRV_CLR_MASK;

    /* MOSIA_C : P501 */
    PFS->P501PFS &= R_PIN_PRV_CLR_MASK;

    /* RSPCKA_A : P107 */
    PFS->P107PFS &= R_PIN_PRV_CLR_MASK;

    /* Release RSPCKA pin */
    /* RSPCKA_B : P011 */
    PFS->P011PFS &= R_PIN_PRV_CLR_MASK;

    /* RSPCKA : P502 */
    PFS->P502PFS &= R_PIN_PRV_CLR_MASK;

    /* SSLA0_A : P103 */
    PFS->P103PFS &= R_PIN_PRV_CLR_MASK;

    /* Release SSLA0 pin */
    /* SSLA0_B : P012 */
    PFS->P012PFS &= R_PIN_PRV_CLR_MASK;

    /* SSLA1_A : P102 */
    PFS->P102PFS &= R_PIN_PRV_CLR_MASK;

    /* SSLA1_B : P013 */
    PFS->P013PFS &= R_PIN_PRV_CLR_MASK;

    /* SSLA2_A : P101 */
    PFS->P101PFS &= R_PIN_PRV_CLR_MASK;

    /* SSLA2_B : P014 */
    PFS->P014PFS &= R_PIN_PRV_CLR_MASK;

    /* SSLA3_A : P100 */
    PFS->P100PFS &= R_PIN_PRV_CLR_MASK;

    /* SSLA3_B : P015 */
    PFS->P015PFS &= R_PIN_PRV_CLR_MASK;

    /* Enable protection for PFS function (Set to PWPR register) */
    R_SYS_RegisterProtectEnable(SYSTEM_REG_PROTECT_MPC);
}/* End of function R_RSPI_PinClr_CH0() */

```

Figure 5-3 Coding Example for Setting Pin Configuration (3/3)

5.3 SSL Pin Control Using Control Function

When using the Control function (ARM_SPI_CONTROL_SS command) to control the SSL pin by software, set the pins to be used as the SSL pin using SPIn_RTS_PORT and SPIn_RTS_PIN (n=0, 1) in the r_spi_cfg.h file. For SS operation selection when selecting the operating mode using the Control function, specify ARM_SPI_SS_MASTER_SW (slave select control under software control is used during master operation) or ARM_SPI_SS_SLAVE_SW (slave select control under software control is monitored during slave operation); do not set hardware slave select control.

Figure 5-4 shows an example for setting the software controlled SSL pin to PORT107 with SPI0.

```
...
/* When using the ARM_SPI_CONTROL_SS command, cancel the following comment and set the terminal
to use */
#define SPI0_SS_PORT (PORT1->PODR)          /* Uncommented. Selects port 1 */
#define SPI0_SS_PIN (7)                     /*Selects P107 as the SS pin. */
...
```

Figure 5-4 Pin Setting Example for Using SSL Pin under Software Control

5.4 Timeout for clearing interrupt enable bit 0

The SPCR.SPRIE bit and SPCR.SPTIE bit 0 clear wait processing timeout time in the spi_ir_flag_clear function is defined by SYSTEM_CFG_API_TIMEOUT_COUNT in r_system_cfg.h. To change the timeout time, change the value of SYSTEM_CFG_API_TIMEOUT_COUNT in r_system_cfg.h (Note). An example of setting the timeout time is shown in Figure 5-5.

Note. SYSTEM_CFG_API_TIMEOUT_COUNT is a common definition in the RE01 group CMSIS software package. The waiting time for changing register settings other than this driver is also changed.

```
/* *****//**
 * @brief Time-out value of API until register value is changed.@n
 * *****/
#define SYSTEM_CFG_API_TIMEOUT_COUNT      (0x10000000)
```

Figure 5-5 SYSTEM_CFG_API_TIMEOUT_COUNT setting example

5.5 Power supply open control register (VOCR) setting

Use this driver after setting the power supply open control register (VOCR).

The VOCR register prevents indefinite inputs from entering the power domain that is not supplied with power. For this reason, the VOCR register is set to shut off the input signal after reset. In this state, the input signal is not propagated inside the device. For details, refer to “Control of Undefined Value Propagation Suppression in I/O Power Supply Domains” in “RE01 1500KB,256KB Group Getting Started Guide to Development Using CMSIS Package R01AN4660”.

5.6 Resuming communication in slave mode and CPHA0

When CPHA (clock phase) is set to 0 (data sampling at the rising edge, data change at the falling edge) in slave mode, resuming communication during the last half of RSPCK cycle may cause incorrect operations such as underrun error or bit shifts.

After calling the callback function or after ensuring that SPI status is ready by using GetStatus function, wait for half RSPCK cycle before restarting the communication.

Figure 5-6 shows the example of restarting communication in slave mode when CPHA0 is set.

```
static uint8_t tx_data[3] = {0x01, 0x02, 0x03};

/*****
 * callback function
 *****/
static void spi_callback(uint32_t event)
{
    switch( event )
    {
        case ARM_SPI_EVENT_TRANSFER_COMPLETE:
        {
            /* RSPCK half cycle wait (5us for communication speed 100kbps) */
            R_SYS_SoftwareDelay(5, SYSTEM_DELAY_UNITS_MICROSECONDS);
            /* restart */
            spi0Drv->Send(&tx_data[0], 3);
        }
        break;

        case ARM_SPI_EVENT_DATA_LOST:
        default:
        {
            /* Describes processing when a communication error occurs */
        }
        break;
    }
}

} /* End of function spi_callback() */
```

Figure 5-6 Example of restarting communication in slave mode and CPHA0

5.7 SSL signal control during multiple data communication

In this driver, the SSL signal is negated ("H") for each data communication. If you want to keep the SSL signal at the active level ("L") until all data communication is completed during multiple data communication, use clock synchronous communication (3-wire type) and control the SSL signal with software. Figure 5-7 shows an example of SSL signal software control operation during multiple data communication.

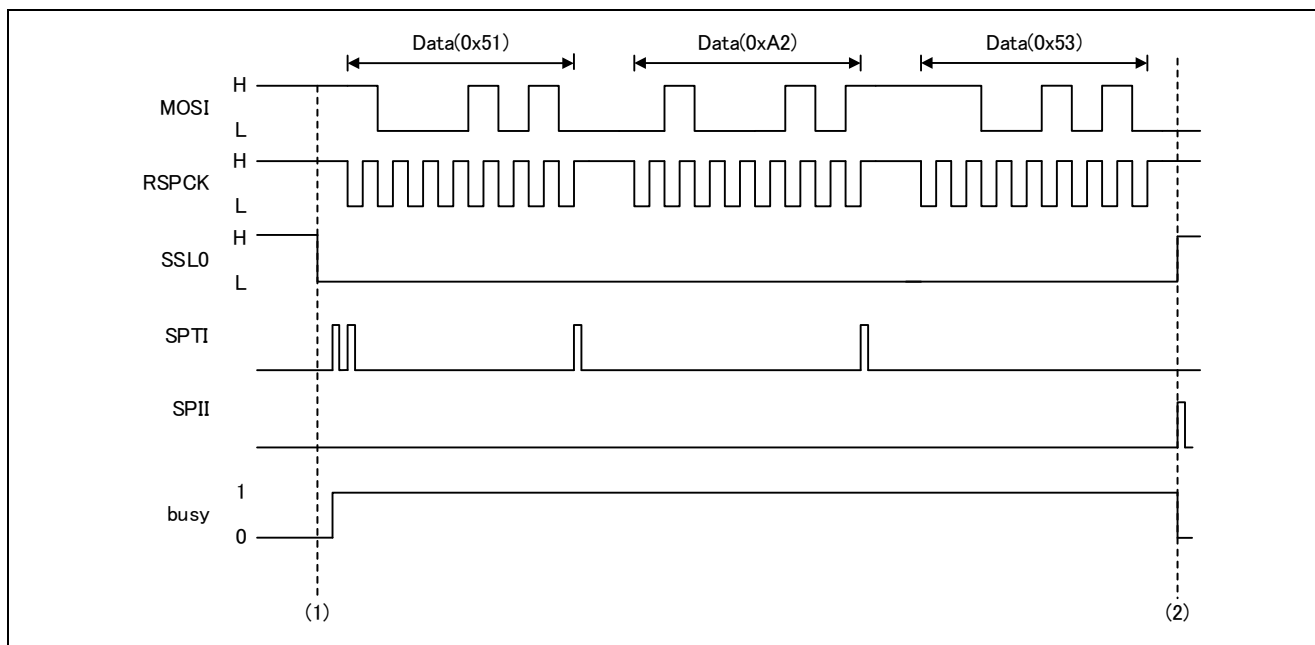


Figure 5-7 Example of SSL signal software control operation during multiple data communication

- (1) When the SSL signal is set to active with the ARM_SPI_CONTROL_SS command (ARM_SPI_SS_ACTIVE) of the Control function, the SSL signal becomes "L".
- (2) When all data communication is completed, if the SSL signal is set to inactive using the ARM_SPI_CONTROL_SS command (ARM_SPI_SS_INACTIVE) of the Control function, the SSL signal becomes "H".

5.8 Notes on using DTC

If DTC is selected for transmit control or receive control in the `r_spi_cfg.h` file of this driver, the DTC driver is used in the SPI driver. When the DTC driver is used together in the user program, execution of the `R_DTC_Close` function will stop all DTC transfers; if the `R_DTC_Close` function is executed during an SPI transfer, the DTC startup factors used by the SPI will be released and the SPI transfer will stop.

6. Reference Documents

User's Manual: Hardware

RE01 1500KB Group User's Manual: Hardware R01UH0796

RE01 256KB Group User's Manual: Hardware R01UH0894

(The latest version can be downloaded from the Renesas Electronics website.)

RE01 Group CMSIS Package Getting Started Guide

RE01 1500KB,256KB Group Getting Started Guide to Development Using CMSIS Package R01AN4660

(The latest version can be downloaded from the Renesas Electronics website.)

Technical Update/Technical News

(The latest version can be downloaded from the Renesas Electronics website.)

User's Manual: Development Tools

(The latest version can be downloaded from the Renesas Electronics website.)

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Oct.10.2019	—	First edition issued
1.01	Dec.02.2019	12, 119~123	Modification to comment out default pin setting of pin.c
1.03	Feb.27.2020	7~10, 16,80 Program	Modified description of SPI control command (bit order definition) Fixed a bug that the setting was reversed for the bit order specified by the SPI control command (bit order definition)
1.04	Mar.5.2020	— Program (256KB)	Compatible with 256KB group The 256KB group specifications are shown below. <ul style="list-style-type: none"> 8-bit access SPI data register name change (Change from SPDR_HH to SPDR_BY)
1.05	Apr.17.2020	Program	Changed the configuration so that it can be built without DMAC and DTC drivers.
1.06	Jun.10.2020	—	Error correction
1.07	Nov.05.2020	125 —	Added "5.8 Notes on using DTC" Error correction
1.08	Feb.22.2021	— 15 Program	Error correction Added "2.5Communication Control (Interrupt/DMAC/DTC) Configuration Procedure" The DTC driver Close process when using DTC has been modified as follows <ul style="list-style-type: none"> Release the startup factor used by the SPI driver. Close DTC only when there are no other valid DTC startup factors.

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

6.1. Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.