


Stick Configuration

Mode 2

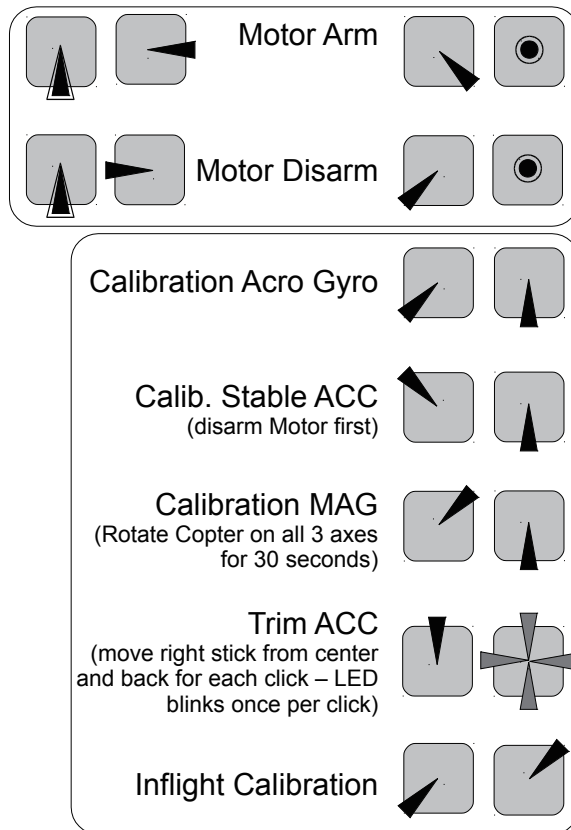


Start/Stop Auto-Telemetry-Mode



LCD – Configuration Mode

Enter (disarm Motor first)




Select Param




Change Value




Save and Exit




Exit without Save



Mode 1

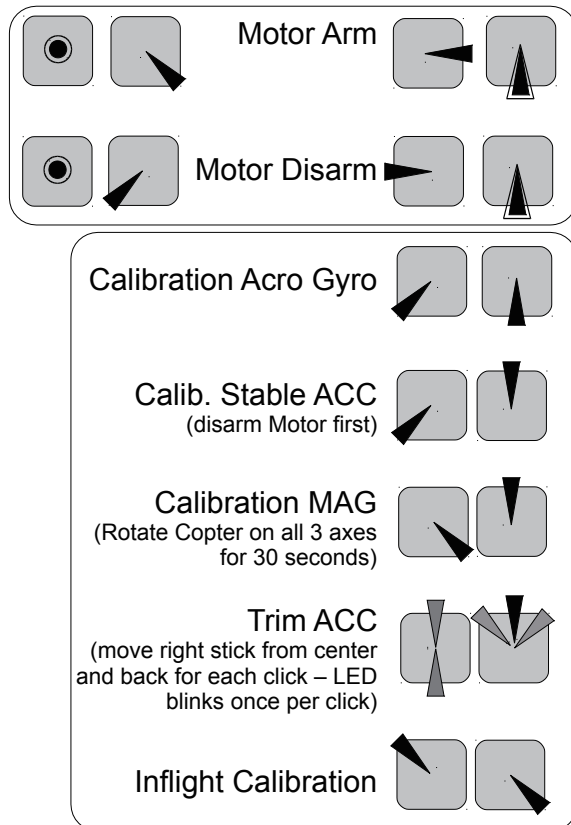


Start/Stop Auto-Telemetry-Mode



LCD – Configuration Mode


Enter (disarm Motor first)




Select Param




Change Value



Save and Exit



Exit without Save



Latest version always at
<http://code.google.com/p/multiwii/source/browse/#svn%2Fbranches%2FHamburger>

This work is licensed under the Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License. To view a copy of this license, visit <http://creativecommons.org/licenses/by-nc-sa/3.0/> or send a letter to Creative Commons, 171 Second Street, Suite 300, San Francisco, California, 94105, USA.