


7.7 UV lamp replacement

	! WARNING
<p>Wear the glove when you touch the lamp house. Touching the chuck table with bare hands cause of burn injuries. Failure to observe the caution may cause of injuries to human body and damage/performance decrement of the equipment.</p>	




- (1) Check whether the machine power is turned off, and remove the UV lamp cover.




- (2) Loosen the screw, and open the lamp house to the front side. The lamp house can be opens 180 degrees.




7.7 UV lamp replacement (Continued)

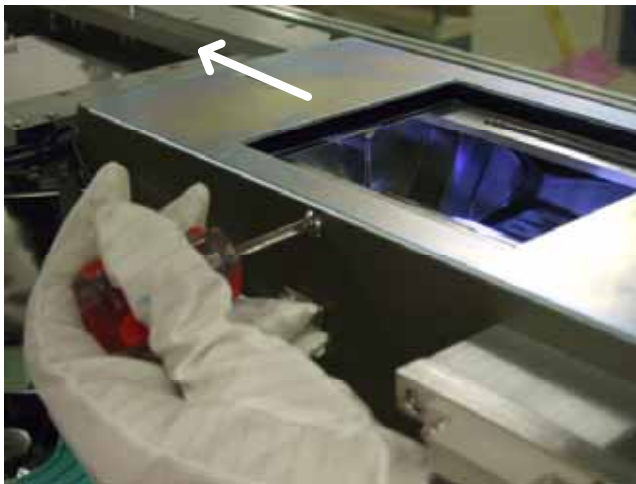

- (3) Loosen the screws at each side of the cover, and slide the plate to the arrow direction.

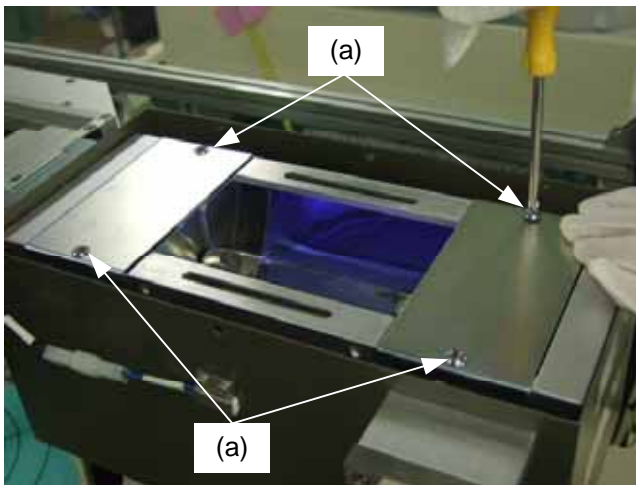


- (4) Loosen the screws (a), and remove the plates.

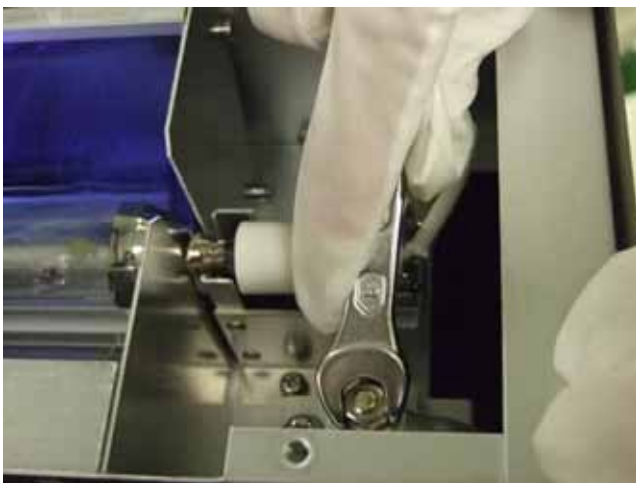

- (5) Loosen the bolts fixing the UV lamp.

7.7 UV lamp replacement (Continued)

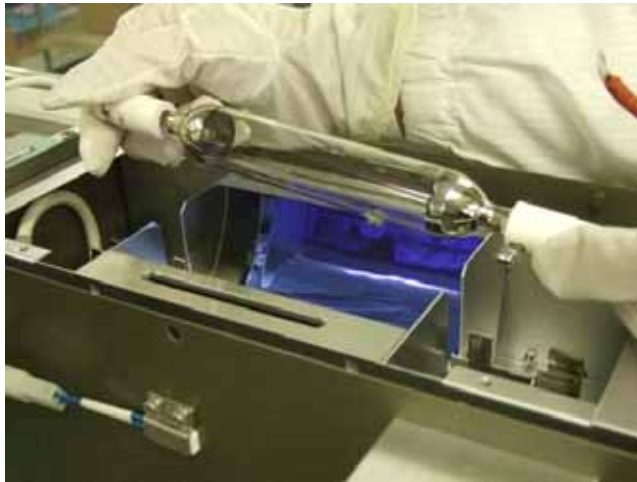


(6) Replace the UV lamp.

Do not touch the arc tube, and hold the both ends of the UV lamp.




(7) Tighten the bolts fixing the UV lamp.

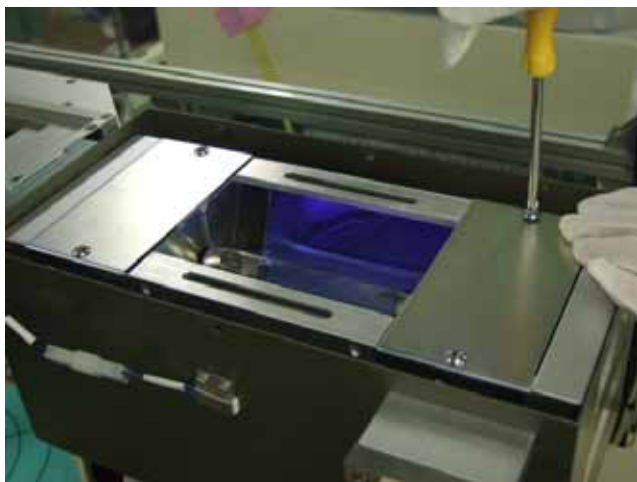

(8) Attach the plates, and tighten the screws.

7.7 UV lamp replacement (Continued)

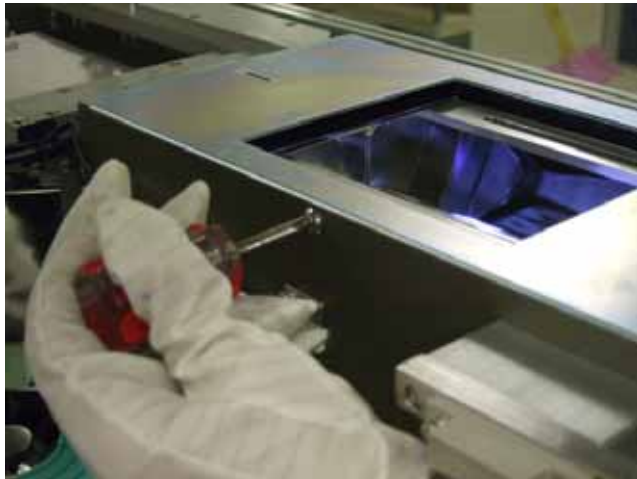

- (9) Attach the cover, and tighten the screws at each side of the cover.




- (10) Close the lamp house, and fix it with the screw.



- (11) Attach the cover.


7.7 UV lamp replacement (Continued)

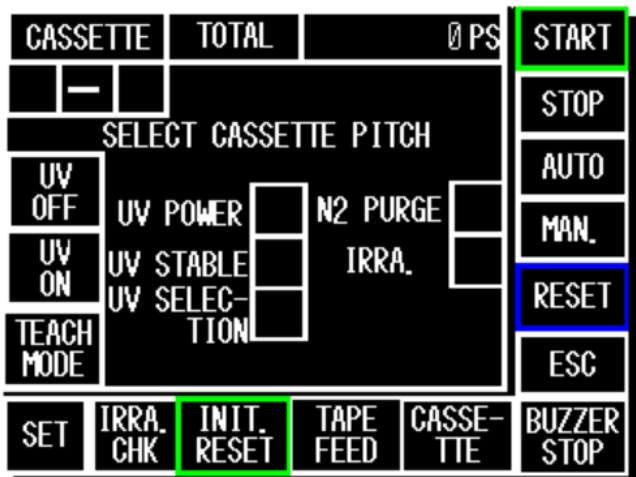

(12) Press [MAN.] key on the MAIN SCREEN.
 "1st page of the setting screen" is displayed.



(13) Press "TOTAL TIMER".
 "SCREEN FOR UV IRRADIATION TIME" is displayed.

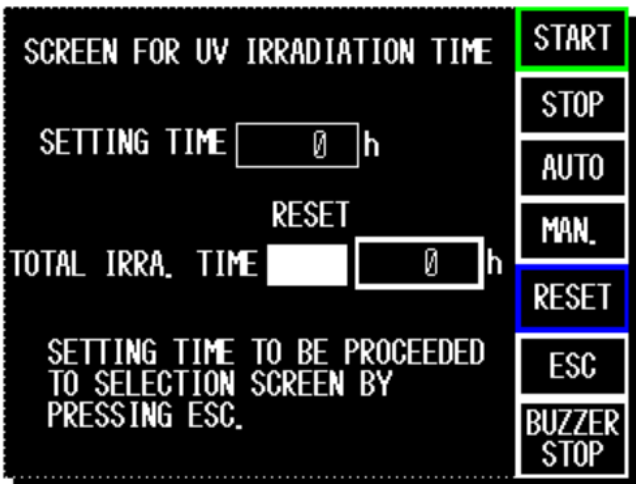

(14) Press "RESET" to reset the "TOTAL IRRA. TIME".

For operators:
Do not change the numerical value of "SETTING TIME".