
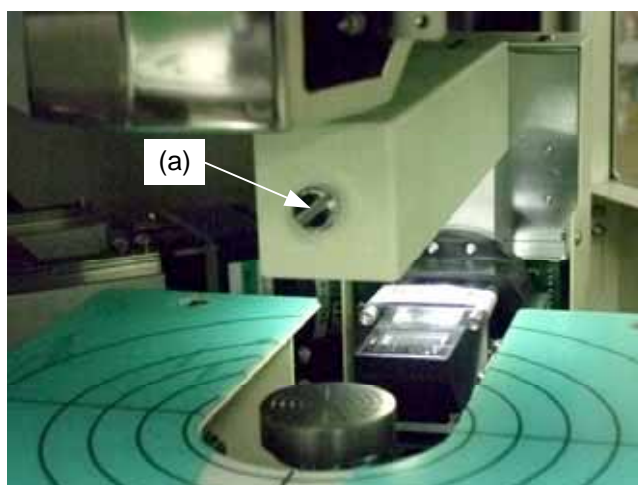


6.3 Aligner lamp replacement

	! WARNING
	<p>Turn the power off the machine before replacing the aligner lamp.</p> <p>Failures to observe the warning could cause of electric shock, serious injuries to human body and damage/performance decrement of the equipment.</p>



(1) Turn off the [MAIN POWER] switch.



(2) Loosen the screws (a) of the aligner lamp cover.



(3) Remove the aligner lamp cover.


6.3 Aligner lamp replacement (Continued)



- (4) Turn around the aligner lamp 90-degree to the arrow direction.



- (5) Attach the new aligner lamp. Turn around it 90-degree to the arrow direction.

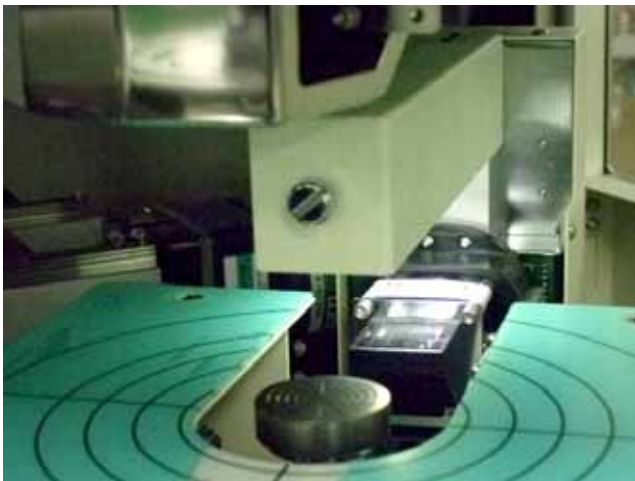


- (6) Attach the aligner lamp cover and tighten the screws (a).

6.3 Aligner lamp replacement (Continued)



- (7) Press [MAN.] key on the MAIN SCREEN. "1st page of the setting screen" is displayed.
- (8) Press "LAMP TIME".

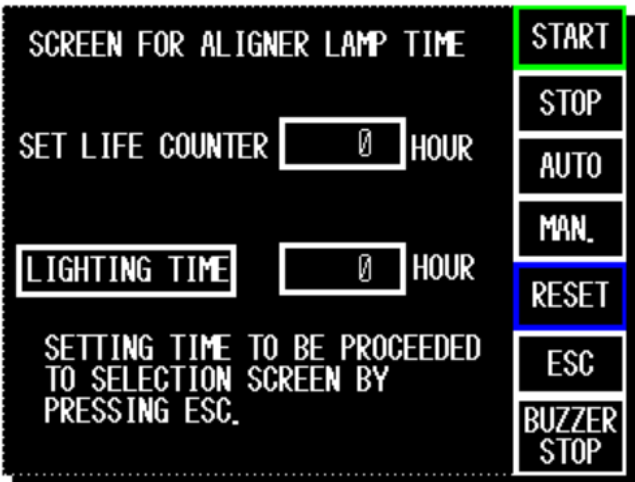

- (9) Press [LIGHTING TIME] to reset the counter.

For operators:
Do not change the numerical value of "SET LIFE COUNTER".