


5.4 Error / Message

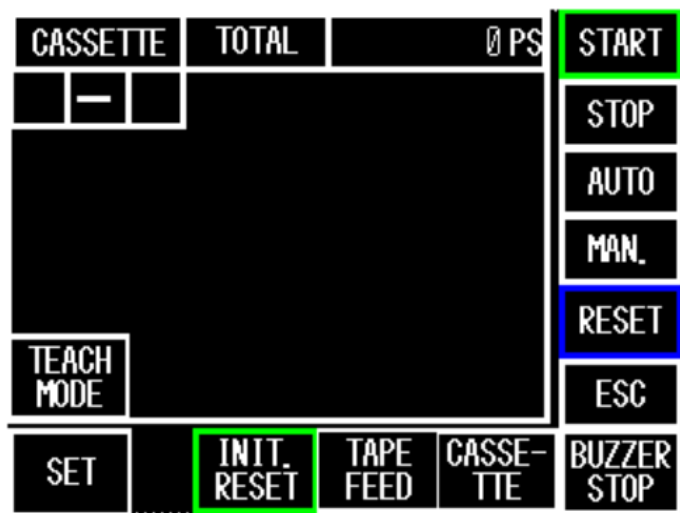

Error code and message are shown on the screen when errors are occurs.

<Recovery from an error / message>

- (1) Press [RESET] key.
- (2) It has recovered from the error if [START] key blinks. Press [START] key to start auto operation.

Call the maintenance engineer when you cannot recover the error after doing above recovery procedure.