
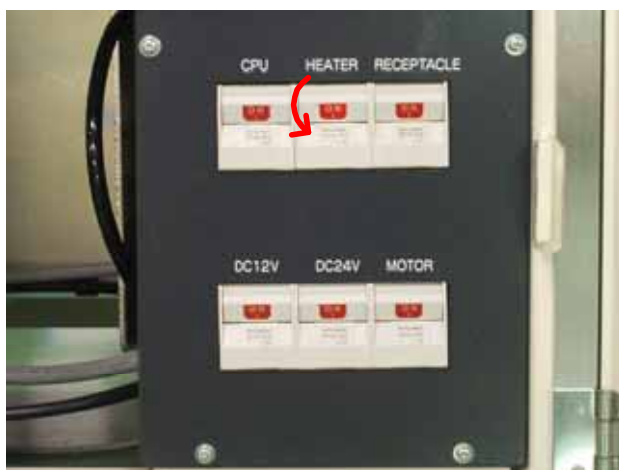


## 7.2 Applying roller replacement

|   |  |
|---|--|
|  | <b>! WARNING</b>   |
|   | <p>Wear the glove when you touch the chuck table. Touching the chuck table with bare hands cause of burn injuries. Failure to observe the caution may cause of injuries to human body and damage/performance decrement of the equipment.</p> |




- (1) Turn off the [HEATER] switch of the power box. Check whether the chuck table temperature is fallen.



Do not use the cutter knife. It may give damages to the rollers.

- (2) Cut the peeling tape with the scissor, and remove the peeling tape from the chuck table.

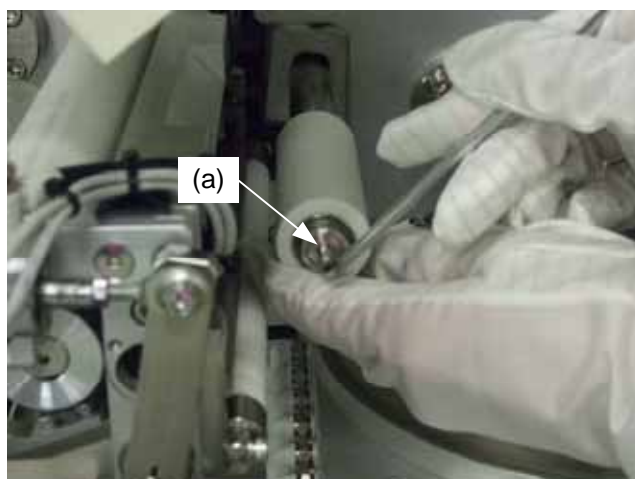


- (3) Loosen the screw (a), and remove the applying roller.

## 7.2 Applying roller replacement (Continued)



- (4) Remove the bearings, and replace the applying roller.

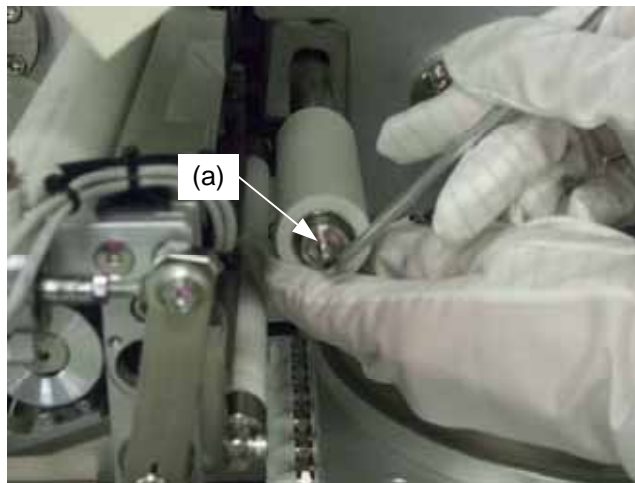

- (5) Set the bearings, and tighten the screw (a) to fix the applying roller.