


7.5 Static eliminator needle replacement



(1) Turn off [MAIN POWER] switch.

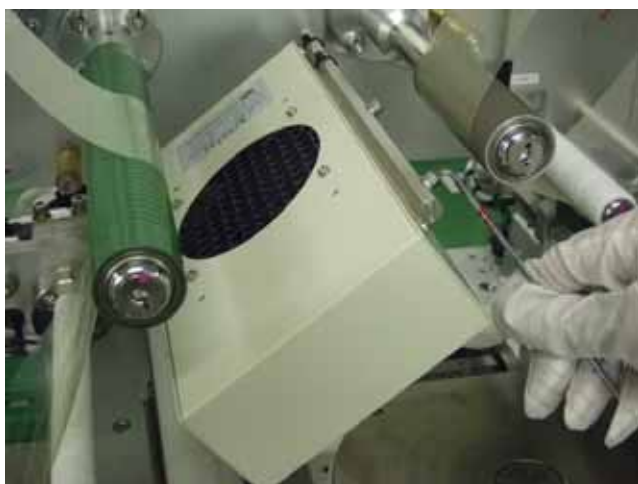

(2) Loosen screws (a), and remove the static eliminator.



(3) Open the cover of the static eliminator.

(4) Replace the static eliminator needles.

(5) Close the static eliminator cover, and fix it to the machine.