



## 7.6 Robot arm replacement

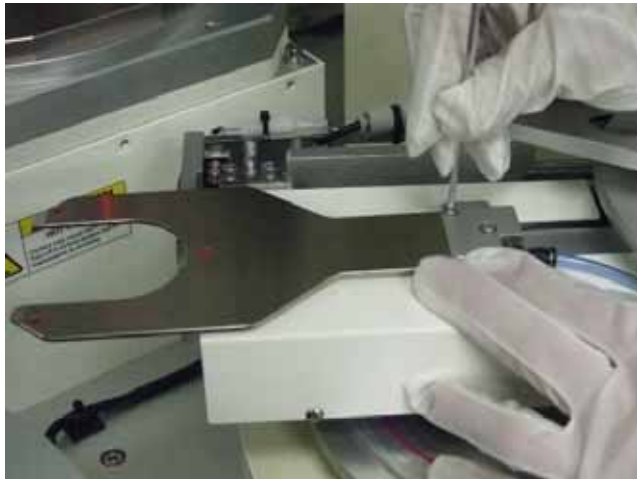

(1) Loosen the screws fixing the robot arm.

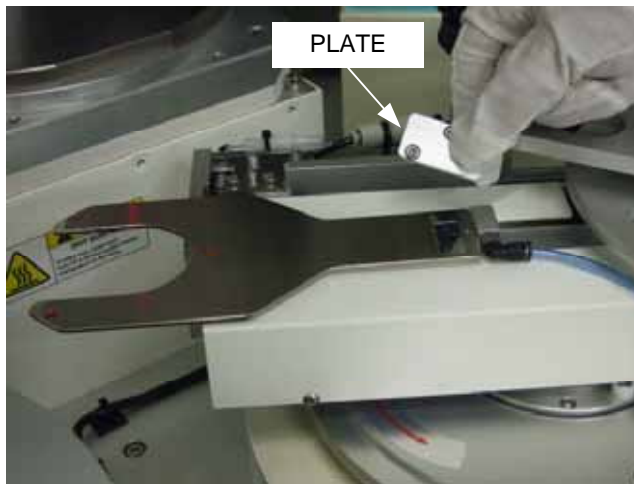

(2) Replace the robot arm, and tighten the two screws.