


## 6.2 Peeling tape replacement

	<b>! WARNING</b>
	<p>Wear the glove when you touch the chuck table. Touching the chuck table with bare hands cause of burn injuries. Failure to observe the caution may cause of injuries to human body and damage/performance decrement of the equipment.</p>




Do not use the cutter knife. It may give damages to the rollers.

- (1) Turn off the [HEATER] switch of the power box. Check whether the chuck table temperature is fallen.




- (2) Cut the peeling tape with the scissor.


## 6.2 Peeling tape replacement (Continued)

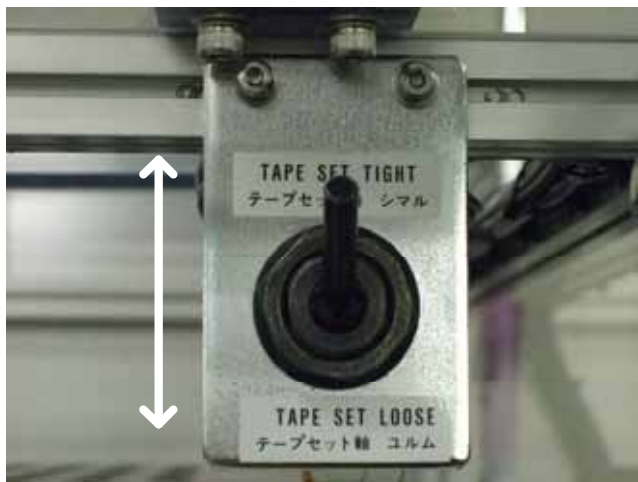

- (3) Confirm the machine is in stopped state. Flip down the switch "TAPE SET LOOSE" to release the tape delivery shaft.

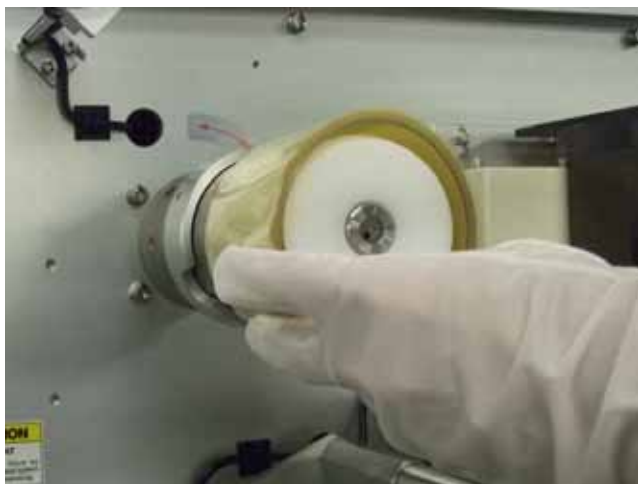

- (4) Replace the peeling tape, and place it according to the tape path.

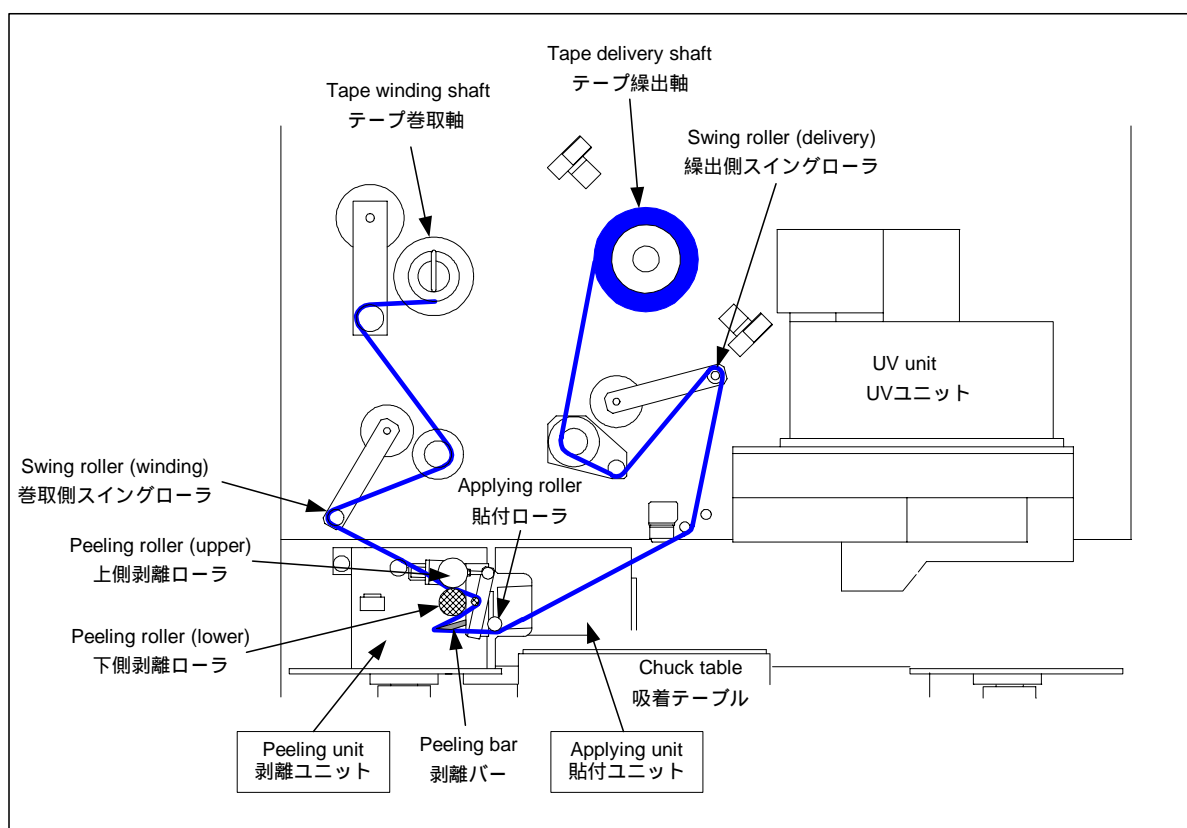

## 6.2 Peeling tape replacement (Continued)



- (5) Applies the new peeling tape onto the old peeling tape.




- (6) Cut the peeling tape as shown photo.



- (7) Remove the pin, and remove the peeled tape with liner.


## 6.2 Peeling tape replacement (Continued)

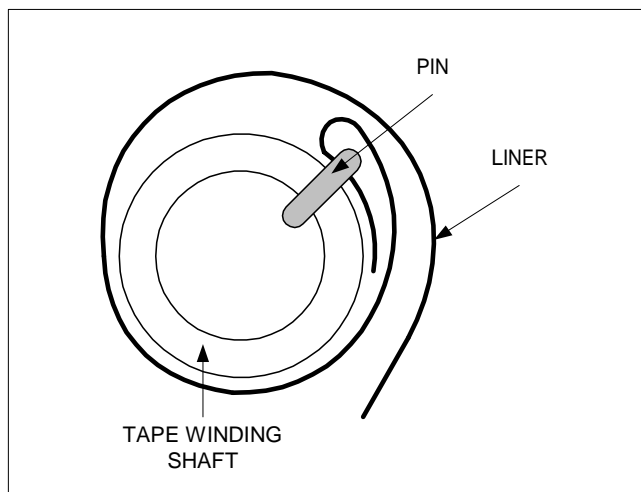

- (8) Place the liner (50-60cm) as shown figure, and fix it with the pin.



- (9) Apply the peeling tape to the tape winding shaft.

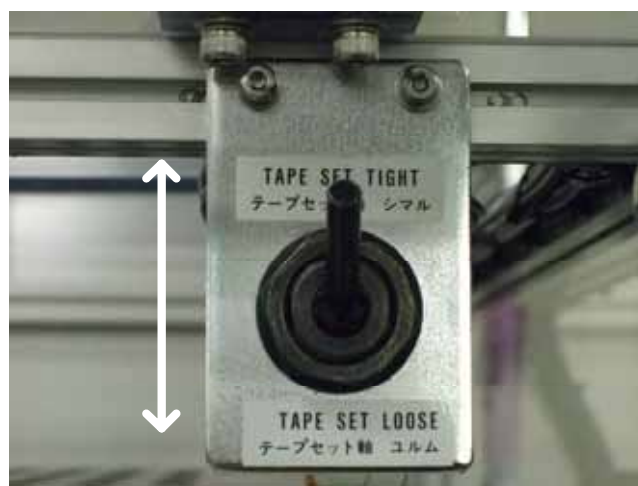

- (10) Flip up the switch "TAPE SET TIGHT".

6.2 Peeling tape replacement (Continued)

CASSETTE		TOTAL		0 PS		START	
—							STOP
SELECT CASSETTE PITCH							AUTO
UV OFF	UV POWER			N2 PURGE			MAN.
UV ON	UV STABLE			IRRA.			RESET
TEACH MODE	UV SELECTION						ESC
SET	IRRA. CHK	INIT. RESET	TAPE FEED	CASSETTE		BUZZER STOP	

(11) Keep pressing [TAPE FEED] key until the BG tape is reeled 2 to 3 turns around the tape winding shaft.