
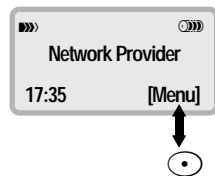


Contents


1


Overview	2	CB Cell Broadcast	20
Safety	3	CB Setup	20
Introduction	4	Reading Cell Broadcast Messages	20
Icons Used	4	Voice Mail	21
Icons on the Display	4	Configuring Voice Mail	21
Menu Control	5	Hearing Voice Mail	22
Getting Started	6	Applications	23
1. Insert SIM Card	6	Missed Calls	24
2. Insert and Charge Battery	6	Ringers/Melodies	25
3. Switch Telephone On	7	Switching the Ringer On/Off	25
4. Emergency Call	7	Setting the Ringer Volume	25
5. Enter PIN	7	Setting the Melody	25
6. Standby Mode	8	Switching Service Tones On/Off	25
7. Switch Telephone Off	8	Switching CB Tones On/Off	25
Making Calls	9	Key Sound	25
Dialling with the Keypad	9	Ringers/Melodies	26
Ending Calls	9	Switching All Tones On/Off	26
International Number	9	Setup	27
Redialling	10	Language	27
Answering Calls	10	Time	27
Unwanted Calls	10	Charges	27
Active Number	10	Divert	28
Phonebook	11	Security	29
Saving Numbers	11	GSM Services	30
Calling from Phonebook	12	Car Use	31
Phonebook Menu	12	Troubleshooting	32
Saving the Tone Sequence	13	Data	34
Fast access dialling	14	Licensing	34
During a Call	15	Technical Data	34
Changing the Volume	15	Care of Phone	34
Time/Units	15	Care of Your SIM Card	34
Call Waiting	15	Accessories	35
Answering Calls	15	GSM Network Control Codes	37
Rejecting Calls	15	International Service	
Conducting a Second Call	15	Numbers (Hotline)	38
Text Messages (SMS)	16	Index	39
Reading New Messages	16		
Writing and Sending Messages	17		
Message Lists	18		
Replying to Messages	19		
Displaying Capacity	19		
Setting the Service No.	19		

Overview

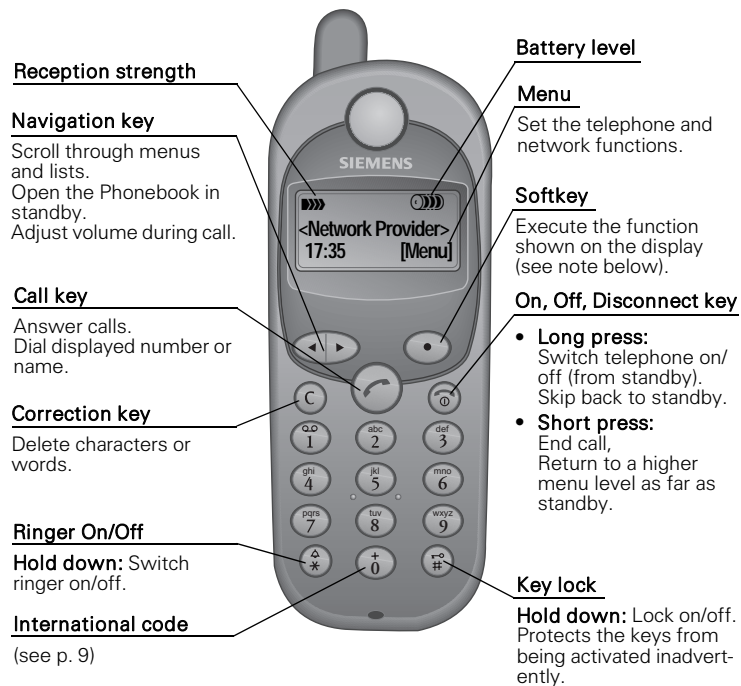

Note: Softkeys

The function currently active is indicated by a text on the display. In order to execute the function displayed, you must press the so-called softkey  on the keypad.

To call up the Main Menu in this example, press .

Safety

3

All radio transmitters are subject to restrictions such as:



Switch off in hospitals and in the vicinity of medical electronic devices, e.g. pacemakers or hearing aids.



While driving:
Do not hold the phone in your hand
(Accessories, → p. 35).



Mobile phones must be switched off at all times in an aircraft. Prevent accidental activation.



Switch off near petrol stations, fuel depots, chemical plants or blasting operations.



Minor interference may affect TVs, radios, PCs, etc.



The ring tone is reproduced through the earpiece. First accept the call, then hold the phone to the ear.



SIM card may be removed. Caution! Small parts could be swallowed by children.

Please note:



Neither the phone nor the battery may be opened under any circumstances.



We recommend you use only Original Siemens batteries and charging devices. Otherwise considerable health risks and damage to the product cannot be excluded.



Dispose of used batteries according to the legal regulations.

Original
Accessories

We recommend you use only Original Siemens accessories to avoid possible damage.

Improper use invalidates the warranty!












Package Contents

- A36 telephone
- User Guide
- NiMH battery
- Charger

Introduction























Icons Used

The following icons appear in the User Guide:

	Use the keypad to write numbers or letters.
	Navigation key
	To scroll, press the key at the right or left as indicated.
	Use the softkey for the function displayed above.
	Correction key: Press briefly to clear the last character, hold down to clear the word or the number.
	Call key
	On/Off/Disconnect key
	Network-dependent feature. Not available from all network providers.
	Bold text indicates a displayed function which is executed using the corresponding key.
	Variable text
	Operating step performed by the user, e.g. scroll through the menu, select a menu item.

Icons on the Display

The most important display icons:


Status/Events	
	Local network area
	New text message, new voice mail, new missed call.
	All calls diverted.
	Ringer off
	Key lock
	Set up connection
	Connection set up
	Incoming call
	Network access barred
	Restricted network connection - emergency calls OK
	No encryption (network-dependent)
	Action successfully executed, On
	Action not executed, Off
	Active line (number)
Menu Icons	
	Event
	SIM applications
	Phonebook
	Text messages
	Missed calls
	Voice mails
	Ringers/melodies
	Extras


Menu Control

5


Example: Setting the Language in standby


Step 1: Open the menu

Press  to call up the [Menu].



Step 2: Scroll through menu


Use the  key to scroll between the main menu items (e.g. to **Setup**).




Step 3: Confirm selection


Select the **Setup** main menu item by pressing the  key.


Step 4: Scroll through submenu

Press  to scroll to **Language** submenu.





Step 5: Confirm selection

Select the **Language** submenu item with the  key.





Step 6: Open the menu

Select the **Language** submenu item with the  key.




Step 7: Scroll through submenu

Press  to scroll between the menu items (e.g. to **English**).



Step 8: Confirm selection

Confirm your selection by pressing the  key.

Step 9: Back



Holding this key down brings you to standby mode.



Pressing briefly takes you back one menu level.

Getting Started

1. Insert SIM Card

Your service provider will supply you with a SIM card, which stores information regarding your connection and billing details.

"Care of Your SIM Card", → p. 34.

Older SIM cards are only compatible if they are 3 V mini SIM cards. Contact your service provider if you have any questions or problems.

If a credit card sized SIM was delivered snap the smaller section out.


Switch the phone off before removing the battery.

- Unlock and remove the battery cover.



- Remove the SIM card holder.
- Insert the SIM card into the holder. Ensure that the angled corners and contact surfaces are correctly positioned.


- Turn the card and holder over (the SIM card contacts are face down) and insert into the device as indicated by the arrow.

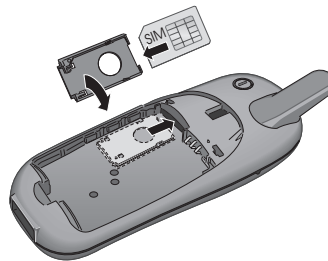

2. Insert and Charge Battery

To Insert the Battery

- Insert the battery as indicated below (contacts on top end).

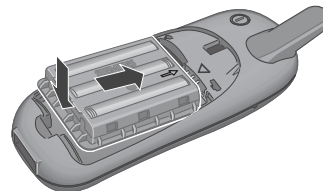

- Refit the cover, ensure the top end is flush before pressing it closed (until it clicks).


Getting Started


7

To Charge the Battery:


Your new battery will not be fully charged:

- Insert the plug of the charger into the socket in the phone (see illustration below).
- Plug the charging unit into the mains power socket (first checking the rated voltage of the charging unit).

 The charging progress is shown on your display. You may use your phone whilst charging.

 Charging complete. Battery is fully charged.

- To release, squeeze the arrows on the plug together and remove.

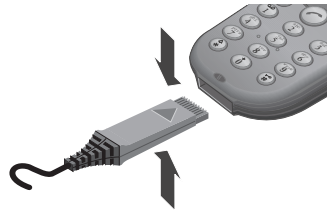

Charging Time

Allow at least 3 hours for your first few charges. 1.5 - 2 hours are enough after this.

Usage Time

A full charge can provide from 60 to 150 hours standby, or from 90 to 240 minutes talk time (depending on use and network conditions).

A beep sounds when the battery needs charging.

3. Switch Telephone On



Hold down to switch on.

If **Insert SIM Card** is displayed, check that the SIM card is correctly inserted (→ p. 32).


4. Emergency Call


You can contact the emergency services at any time even without a SIM card. Simply dial 112 (999 in the UK).


5. Enter PIN

Your SIM card is provided with a PIN to prevent misuse:



Enter the PIN.
The display is suppressed
(You can correct mistakes using ).



Press .

It may take a few seconds to register your phone with the network.

PIN


The SIM card will be blocked after the third incorrect PIN entry (→ p. 32).

To switch on/off PIN control or to change your PIN number (→ p. 29).

Getting Started



6. Standby Mode

If the name of the network provider is displayed, the telephone is on standby:



You can now make calls, answer calls and use the other telephone functions.

If the Date/Time function is on (→ p. 27), you will see the time displayed.


-  Strong reception signal.
-  If the signal is weak, call quality or continuity may be impaired.

You can normally improve reception by moving to a window or open space.

If you are outside your "home" network (→ p. 30) or abroad, your phone will automatically select another GSM network (→ p. 30). Your network provider may restrict the selection of another network (→ p. 30).


Key Lock

Activating the key lock prevents keys being pressed inadvertently.


-  Hold down.

The key lock is activated. Any key can now be pressed without a function being executed.

Deactivating the key lock:

-  Hold down.

7. Switch Telephone Off

-  Hold down (in standby mode).

Making Calls


9

Dialling with the Keypad

The telephone must be switched on (standby).



Always enter the number with the area code (where applicable with the international code).



You can use the  key to correct any mistakes.



Press. The number displayed is dialled.

You can use the **[Save]** function to store the number in your Phonebook (→ p. 11).

Ending Calls



Press.

Press this key even if the other party hangs up first. The call is ended.

For easier, quicker, error-free use you can:

- Redial numbers.
- Use the Phonebook (→ p. 12).
- Use speed dialling (→ p. 14).
- Dial numbers in messages (→ p. 16).

International Number

An international number comprises the international prefix, the country code (e.g. 49 for Germany) and the national number (often without the first digit):



Hold down until "+" appears.



Enter the country code and number.



Press.

Making Calls


Redialling




The last numbers dialled are stored (max. ten, depending on your SIM card).

 Press.

A list is opened of the last numbers dialled.


 Scroll to the required number.

 Press. The number displayed is dialled.


Processing Lists

You can save an entry to a list or delete the list.

 Press.

 Scroll to the required entry.

[Options] Press.

 Scroll to the required option.

[Select] Press to save an entry to a list or delete the list.


Answering Calls

In certain cases, the caller's name or number is displayed (→ p. 11).

 Press.

Unwanted Calls

You can reject unwanted calls. If you receive a call:

 Press. The caller hears the busy tone.

or

[Busy] Press.

Divert is on appears if call diversion is activated (→ p. 28).

Active Number



When an alternative number is registered for the telephone it is possible to switch between numbers in standby mode:

 Press.

Line **2/1** Press to switch the line.

Phonebook

11

You can enter frequently dialled numbers along with the associated names in the Phonebook, enabling you to dial quickly and without errors.

If caller number transmission is activated, the name of the caller is shown on the display, providing there is a corresponding entry in the Phonebook.

Saving Numbers

When you are in standby mode you can make a new entry:



Always enter the number with the area code.

For frequent travel abroad, enter the international code (→ p. 9).


[Save]

Save entry.



Enter the name that belongs to the number (see below).



Press  to confirm your entry.



Return to standby mode to enter another number.

or



Dial the number.

A number can consist of up to 20 characters.

Up to 250 Phonebook entries can be made, depending on the SIM card.

Writing Names

Press the digit keys repeatedly until the character you want appears. The cursor advances after a short delay.



Press once briefly for A, twice for B, etc.



Press briefly to erase the character preceding the cursor, hold down to erase the whole word.



Press to switch between upper and lower case letters (only applies to the adjacent character). The first character is written in upper case as standard.



Press to create a space.



Numbers and letters with accents appear after letters.



Press briefly to move the cursor from character to character. Hold down to move from word to word.

Entering Other Characters



These keys are used for punctuation, common icons and Greek characters.

Available characters (→ p. 17).

You may enter a range of numbers for the same person, e.g.:

- Ann O (Office)
- Ann H (Home)

The entries are sorted alphabetically, however only the first six letters of each name are taken into account.

Phonebook

Calling from Phonebook

You can access the Phonebook directly from standby mode (→ p. 5):



Press to open the Phonebook.



Select a name by entering the first letter and/or scrolling.



Press.

Phonebook Menu

Own Number

The first entry in the Phonebook is reserved for your own phone number. This means that you can display your own number at any time. You cannot dial this number. If your number is not already entered, you can do this as follows:

[Menu] → Phonebook → <Own number>

[Set] Press.



Enter the number.

[OK] Confirm entry.

Alternative Line



If your SIM provides an alternative line (Line 2), you can view or set the second number.

New Entry

[Menu] → Phonebook → <New entry>



Always enter the number with the area code. For frequent travel abroad, enter the international code (→ p. 9).

[OK] Confirm entry.



Enter the name.

[OK] Confirm entry.

Edit Phonebook Entry

Several options are available for each displayed entry:

[Menu] → Phonebook → <Entry> → [Options]

View entry

Edit entry

The number is displayed with a flashing cursor:



Alter the number.

[OK] Confirm changes and repeat for entering the name.

Delete entry

Clear Phonebook

Capacity

The memory available on the SIM card is displayed.

Phonebook

13

Saving the Tone Sequence

You can save your numbers in your Phonebook together with tone sequences (digits), e.g. for remote reply of an answering machine.



Enter the number.



Hold down until a "+" appears (pause during connection setup).



Enter the digits.



If necessary insert more pauses to ensure that the numbers are processed securely on the receiver side.

Sending a Tone Sequence

A tone sequence can be entered manually after a connection has been set up:



Enter the numbers for the tone sequence.

Service numbers



Your service provider can equip your SIM card with service numbers. If this case, you will see **<Service numbers>** as an entry in your Phonebook.

[Menu] → Phonebook → **<Service numbers>**



Scroll to the required service number.




Press. The number is dialled.

Information Numbers



Your service provider can equip your SIM card with information numbers. These numbers can be stored together in directories (e.g. hotels, weather). The numbers or directories are automatically available as entries in the Phonebook.

If  appears beside an entry, it can only be dialled in the local network.

Dialling Information Numbers

[Menu] → Phonebook → **<Info Numbers>**



Scroll to the required directory.

[Select]

Press to open the directory.



Scroll to the required entry.




Press. The number is dialled.


Active Line



[Menu] → Phonebook → **<Active Line>**


The line is active in the following example. You can switch to **Line 2**.



Press  to switch to **[Line 2]** in this example.

Fast access dialling

To accelerate dialling, you can define speed dialling numbers for the entries in your Phonebook. You can use the digit keys 2 - 9 for this purpose.

The number for checking the mailbox is assigned to the digit key .

Assigning Speed Dialling Numbers

This is how to allocate a speed dialling number (in this case 3):



Press.

[Set]

Press to open the Phonebook.



Scroll to the required entry.

[Select]

Confirm.

The speed dialling number (in this case 3) is linked with the selected Phonebook entry.

Making Calls using Speed Dialling Numbers



Enter the speed dialling number.

The Phonebook entry corresponding to the speed dialling number is displayed.




Press. The number is dialled and the connection is set up.

Only the first six characters of a name can be displayed.

Next Speed Dialling Number



Press .



Scroll to the required speed dialling number.



Press. The number is dialled and the connection is set up.

Changing Speed Dialling Numbers

You can change a speed dialling number.



Press .

The Phonebook entry and corresponding speed dialling number are displayed.

Twice in succession:

[Reset] Press.

Assign a new speed dialling number (see above).

During a Call

15

Changing the Volume

You can set the handset volume while a call is in progress. There are five volume settings.



Press to change the volume.

Time/Units



The call duration or the units are displayed during and after a call (→ p. 27).

Call Waiting



If someone calls you while you are on a call, you will hear a Call Waiting signal.


If may be necessary to apply to your service provider to have this function enable. To activate/deactivate Call Waiting or to check the status of the function (→ p. 37).

Answering Calls



Press.

The first call is placed on hold and the new call is answered. You can now toggle back and forth between the two calls (swap).



Press  to swap.

Rejecting Calls

You can reject a new call:



Press.

If you have activated Divert to the mailbox, then the call is diverted.

Conducting a Second Call



You are on a call and make a call to a second subscriber.



Enter the number.

or


[Menu]

Press and select entry from Phonebook.



Press. The connection is set up.

In both cases the current call is put on hold and the new call is set up. You can swap between the two calls.



Press  to swap.

Ending a Connection



Press.

[OK]

Confirm the prompt. You return to the call on hold.

Text Messages (SMS)

Your phone can receive and send text messages (Short Message Service, SMS). Your service provider will advise you concerning service availability and operation.

Reading New Messages

A new text message is indicated by the following icon :



To read the message:

[Menu] → Events → New Message

The display indicates the date and time at which the message was received.



Scroll to read the number and the message.

The end of the message is indicated by a mark.

When you have read the message you will be asked if you want to delete this message. You should delete messages regularly as the capacity of your SIM card is limited (see below).



Once you have read the message scroll to the next one.



Press to dial a selected number in the text message (►08998765432◄).

Options While Reading

You can access the following functions when reading a message:

[Options] Press.



Scroll to the required function and then:

[Select] Press to execute a function.

Call active no.

Save active no.
Saves the number in your Phonebook.

Reply to sender

Sends a reply to the originator.

Edit Message

Edits the received message.
Can also be used to enter a new address.

Delete Message



Flashes when the message memory is full. You cannot receive any more messages when the memory is full.

[Delete] Press to confirm the security prompt.

Text Messages (SMS)

17

Writing and Sending Messages

You can create text message containing up to 160 characters.

To send a text message, this must first be forwarded to the Service Centre. The number of your Service Centre is usually preset. Otherwise you must enter this manually (→ p. 19). The Service Centre number is available from your service provider.

[Menu] → Messages → Create Message



Enter the message text.
(See the box below for writing text).

After entering the message text:

[Options] Select.

[Select] Confirm the prompt for sending the text message.



Enter the number or dial from the Phonebook.

Send Message Confirm.

or



Press to send.

You are advised when your message has been sent, then you can save it. It will appear in your sent message list.

Writing Text

Press the digit keys repeatedly until the character you want appears. The cursor advances after a short delay.

Press once briefly for A, twice for B, etc.

Press briefly to erase the character preceding the cursor, hold down to erase the whole word.

Press to switch between upper case and lower case letters. The first character is written in upper case as standard.

Press to create a space.

Numbers and letters with accents appear after letters.

Press briefly to move the cursor from character to character. Hold down to move from word to word.

Space	1	€	£	\$	¥
Aa	Bb	Cc	2	Ää	Çà
Dd	Ee	Ff	3	Éé	è
Gg	Hh	Ii	4	ì	
Jj	Kk	Ll	5		
Mm	Nn	Oo	6	Öö	ñ ò
Pp	Qq	Rr	Ss	7	ß
Tt	Uu	Vv	8	Üü	ù
Ww	Xx	Yy	Zz	9	Ææ Øø Åå
A - a	*	/	()	<	= >
	%	□			
+	0	-	.	:	? ¡
	!	;	"	'	;
#	@	&	\$	Γ	Δ Θ Λ
	Ξ	Π	Σ	Φ	Ψ Ω

Text Messages (SMS)

Options While Writing

When writing a message, other functions are available in addition to the send function:

Save message

Saves the message.

Insert from:

Opens the Phonebook to select a number.

Insert new line

Begins a new paragraph.

Discard message

Delete the text input.

[Options] Press.



Scroll to the required function and then:

[Select] Press to execute the required function.

Info

If the message could not be sent, you are given the option of repeating the action. If the send action fails again, check that your Service Centre number is correctly set (→ p. 19).

Note that "Message sent!" means that the message has only been received by your Service Centre. It will then try to send it on to the recipient within a certain period of time.

Message Lists

Your messages are saved in an incoming or outgoing list.

Inbox

In the incoming list, there are several options when a message is displayed:

New Message

[Menu] → Messages → Incoming List →
<Select Message> →
Read Message

Read **new** message.



Scroll through the message.

For editing options when reading (→ p. 16).

Old Messages

[Menu] → Messages → Incoming List →
<Select Message> → [Options]

Read Message

Read **old** message.



Scroll through the message.

For editing options when reading (→ p. 16).

Edit Message

For information on procedure, see the section on "Options While Writing", → p. 18.

Delete Message

[Delete] Press.
Confirm security prompt.

Text Messages (SMS)

19

Outbox

If you select a sent message in the outgoing list, the text is displayed.

If you select an unsent message which contains a number, the number is displayed.

The following options are available:

[Menu] → Messages → Outgoing List → <Select Messages> → [Options]

Read Message

Read message.

 Scroll through the message.

Edit Message

For information on procedure, see "Options While Writing" (→ p. 18).


Delete Message

(→ p. 16)

[Delete] Press.
Confirm security prompt.

You have the following options when reading a text message:

[Options] Press.

 Scroll to the required function and then:

[Select] Press to execute a function.

Call active no.

Save active no.

Send Message


Edit Message

Delete Message

Replying to Messages

A received message can be read as follows:

[Options] Press.

 Scroll to the **Reply to sender** option.

[Select] Press.

Here you can edit a message and then send it (→ p. 17).

Displaying Capacity

[Menu] → Messages → Capacity

The amount of occupied and free storage space for messages on the SIM card is displayed.

Setting the Service No.

This is where you enter the number of the Service Center. If this number is not already contained on the SIM card, you can obtain it from your service provider.

[Menu] → Messages → Set Serv. Center

 Enter the number.

[OK] Confirm entry.

CB Cell Broadcast

Some service providers offer information services for local areas (Cell Broadcast, CB), e.g. display of the local area code. Service availability depends on the network where you are registered.

If "Cell Broadcast" is activated, you will receive cell broadcast messages. For more information on this, contact your service provider.

CB Setup

CB On/Off

[Menu] → Messages → **CB Setup** → **CB Messages**

[Change] Press.
Cell Broadcast is switched on/off.

Note that operating times are reduced if Cell Broadcast is activated.

Setting the CB Channel

The numbers for the available CB channels can be obtained from your service provider. You can only set one CB channel.

[Menu] → Messages → **CB Setup** → <<Channel ID>>

[Change] Press.
The last active channel number is displayed if available.



Where necessary, delete the old channel number and enter the new CB channel.

[OK] Confirm entry.

Reading Cell Broadcast Messages

In standby mode, a new **CB** message is indicated by an icon in the last display line:



Reading New Broadcasts



Press to read the message or scroll through it.

Rereading Broadcasts

[Menu] → Messages → **CB Message List**



Press to read messages.

Scroll to read broadcasts (arranged in chronological order). If the message memory is full, the oldest messages are overwritten.



Voice Mail

21

The service provider can provide you with an external answering machine (mailbox). Calls that you fail to answer because:

- your telephone is switched off
- you do not answer the call
- you are on another call

can be forwarded to this mailbox. The caller can then leave you a voice message.

The following descriptions may vary somewhat depending on the service provider.

Configuring Voice Mail

Your network provider will supply a mailbox number as well as a number for call forwarding.

Configuring a Mailbox Number



This number is used in order to hear the voice mail you have received.

[Menu] → Voice Mail → Mailbox Number → Set



Enter the Mailbox number.

[OK] Confirm.

On some SIM cards  is automatically assigned the mailbox number when the mailbox is set up. If your SIM card does not have this function, you should assign  as the speed dial key for the mailbox (→ p. 14).

Change Mailbox Number

[Menu] → Voice Mail → Mailbox Number → Change



Delete old number.



Enter the new number.

[OK] Confirm new number.

Divert to Mailbox

Unanswered calls are diverted to this Service Center number (Mailbox) for recording. This can be set as follows:

[Menu] → Voice Mail → Divert

[Check] Press. The current setting is checked (This option is only available once the SIM card has been inserted).

[Change] Switch on divert (if switched off).

The last divert number used is displayed.



Press to delete the number.



Enter the new divert number.

[OK] Confirm.

Divert On appears after each call as a reminder.

Voice Mail

Hearing Voice Mail

A new voice mail is indicated by the following icon :



The Event menu indicates whether the call in question is a voice mail. A text message or a call with an automatic announcement can also indicate the arrival of a new voice mail (see below).

[Menu] → Events → Voice Mail

Options for hearing voice mails:

[Menu] → Voice Mail → Call Mailbox

or

calling using the speed dial key:



Press.



Call the mailbox.

Messages via SMS



You receive a text message (SMS) informing you that a new voice mail has been received. The text message contains the mailbox number which is marked and which you can call directly (→ p. 16).

Messages via automatic announcements



You receive a call with an automatic announcement informing you that a new voice mail has been received. You may be connected to your mailbox automatically.



Applications

23

Your service provider can provide you with additional services via the SIM card, such as banking, stock market news, etc. (SIM Application). Such services are controlled by the SIM card, so that your telephone has no control over the procedure.

If you are registered for such a service, the service name will appear as the first entry in the main menu.

SIM services enable any future additions to the service provided by the service provider, to be integrated to your telephone.

Missed Calls

This callback list stores the numbers of the last five calls that were not answered. This requires that the number has been identified.



Display when a new missed call has been stored.


[Menu] → Events → Missed calls

[Select] Display missed calls.



Scroll to the required entry.

The number or the name of the caller is displayed. If Time/Date is activated (→ p. 27) then the time and date of the call are displayed alternately.

Now press  to dial the number.

Editing the List

You can save a list entry or delete it from the list.

[Menu] → Missed Calls

[Select] Display missed calls.



Scroll to required entry.

[Options] Press.



Scroll to required option.

[Select] Press to save list entry or to delete the list.

Ringers/Melodies

25

Switching the Ringer On/Off

You can switch the ringer on/off or set a short beep.

[Menu] → Ringer/Tones

[Change] Press to switch the ringer on/off or to set a short beep.

Setting the Ringer Volume

[Menu] → Ringer/Tones → Volume

[Change] Start change.



Set volume at one of four levels.

[OK] Confirm required volume.

Setting the Melody

You can set the ringer melody.

[Menu] → Ringer/Tones → Melody



Select ringer melody.

[Change] Start change.



Choose from 15 melodies.

[OK] Confirm selection.

Switching Service Tones On/Off

You can switch on/off the audible signals for the following:

- Connection to the network.
- Message/📞 message.
- Connection set up.

The "Low Battery" warning tone cannot be deactivated.

[Menu] → Ringer/Tones → Service Tones

[Change] Press.
The service tones are switched on/off.

Switching 📞 Tones On/Off

You can switch on/off the signal announcing a new 📞 message.

[Menu] → Ringer/Tones → 📞 Tones

[Change] Press to switch 📞 tones on/off.

Key Sound

You can set the signal that sounds at a keystroke (off, click or tone).

[Menu] → Ringer/Tones → Key Sound

[Change] Press to switch the key sound or click on/off.

Ringers/Melodies

Switching All Tones On/Off


[Menu] → Ringer/Tones → All Tones

[Change] Press to switch all tones on/off.

or To switch on/off in standby mode:



Hold down.

 appears in the first display line as a reminder.

Setup

27

In the Setup menu, you can configure, for example, language, unit metering, call diversions and security. You can also enable GSM services for your telephone.

Language

You can set the display language. The setting "Automatic" sets the language predefined by your service provider.

[Menu] → Setup → Language

[Change] Press.



Select the required language or **Automatic**.

Time

Set Time/Date

[Menu] → Setup → Clock →
Set Time & Date

The time is entered in hh:mm format and the date in DD/MM/YYYY format.

Depending on the language selected, the date format can vary to read MM/DD/YYYY.

The existing values are overwritten when a new time or date is entered.

Invalid entries are not accepted (e.g. 32 as the date value).



Enter the time and date.

[OK] Confirm your entry.

Switch Time Display On/Off

[Menu] → Setup → Clock →
Auto Display

[Change] Press. The time/date display is switched on/off.

Displaying the time increases the power consumption of the mobile phone.

Charges



A unit limit can be set by the service provider on so-called prepaid cards. After this limit has been reached the telephone is locked to outgoing calls.

For more information on prepaid services, please contact your service provider.

You can check how many units have been used and how many are remaining.

[Menu] → Setup → Charges

The number of units used is displayed.

[OK] Press.

The number of units still remaining is displayed.

Divert



This network feature diverts unanswered calls to another phone or to your mailbox.

[Menu] → Setup → Divert

For how to set a simple divert for unanswered calls (→ p. 21).

For other ways to implement a divert (→ p. 37).

Setting Divert

[Menu] → Setup → Divert → All unanswered

[Check] Press; the current setting is checked.

or

[Change] Switch divert on/off.

If a destination number is stored, this is displayed.

If you wish to retain the destination number:

[OK] Confirm.

If you wish to enter a new destination number:



Delete the old number.



Enter the new destination number or dial from the Phonebook.

[OK] Confirm entry.

Divert On appears after each call as a reminder (dependent upon the service provider).

Clearing Divert

[Menu] → Setup → Divert → All unanswered

[Check] Press (if offered). The current setting is checked.

or

[Change] Switch Divert off.

Check Divert

Divert network functions may not always match your display (e.g. if you change the SIM card).

[Menu] → Setup → Divert → Check Status

[Select] Press. The current network status is displayed.

Clear all Diverts

[Menu] → Setup → Divert → Clear Diverts

[Select] Press.

Active Line:

If the SIM card or service provider supports an alternative line, then separate settings can be made for each number (e.g. ringtones, call divert, etc.). The relevant call number must be activated for this purpose (→ p. 10).

Setup

29

Security

Security Codes

Use of your SIM card is controlled by the PIN (Personal Identification Number) you received from your service provider.

A super pin (PUK) is also provided for unlocking the SIM card after the third incorrect PIN entry.

The phone is protected by the phone code (4 - 8 characters in length) which you enter with the first security setting.

SOS

Emergency 112 (999 in UK) calls can always be made.



It is important to keep these codes carefully. The phone will be locked after three incorrect entries (your network provider may charge for unlocking).

PIN Setup

PIN Control

The PIN must be entered each time the phone is switched on. This PIN control can be deactivated. The SIM card is then no longer protected against misuse by unauthorized persons. As a result, some SIM cards do not support PIN control deactivation.

[Menu] → Setup → Security →
PIN Control

Change PIN

You can change the current PIN to another 4 - 8 digit number that is easier to remember:

[Menu] → Setup → Security →
Change PIN



Enter the current PIN.

[OK]

Confirm entry.



Enter the new PIN.

[OK]

Confirm entry.



Repeat new PIN.

[OK]

Confirm entry.

Protection Against Theft

The telephone can be linked to your SIM card using the phone code. If this feature is activated, the phone cannot be operated with a different SIM card. If you lose your phone, your SIM card can be disabled and protected against misuse (→ p. 34).

Change Phone Code



Enter current phone code.
The default is 0000.

[OK]

Confirm entry.



Enter the new phone code.

[OK]

Confirm entry.



Repeat new phone code.

[OK]

Confirm entry.

The phone does not support services requiring the use of PIN 2.

Setup

GSM Services

Network Info

[Menu] → Setup → GSM Service →
Network Info

A list of GSM service providers are displayed.



Marks the service providers that are barred by your SIM card.



Scroll through the list of GSM service providers.

Select New Network

You can manually switch service providers when outside your home network. This setting only applies until the next time the telephone is switched off.

[Menu] → Setup → GSM Service →
Change Network

If the **Auto Network** option is activated, the preferred network is now selected automatically (→ p. 31).

If the **Auto Network** option is deactivated, the available networks are located.



Scroll to the required service provider.

[Select] Press.

The required service provider is selected.

Auto Network

Automatic service provider selection is implemented according to the sequence of the "Preferred Networks" list.

[Menu] → Setup → GSM Service →
Auto Network

[Change] Press.
Auto Network is switched on/off.

If **Auto Network** is switched off, you must select another network manually.

Operator list

A list of known GSM service providers is displayed.

[Menu] → Setup → GSM Service →
Operator list



Scroll through the list of service providers.

[Network Info]

Press to obtain more information.

Add New Network Provider



Scroll to the option
Add new Network.

[Select] Press.



[OK] Enter the national (MCC) code and network (MNC) code as well as the name of the network provider.

If the name is already in the list, it is automatically displayed.

Setup

31

Processing the Preferred Netw. list


This list contains your preferred network providers after your home network provider. You can delete entries or add new ones.

New Network Provider

[Menu] → Setup → GSM Service → Preferred Netw.


Your home network provider is displayed.

[OK] Press.

 Scroll to the required entry

and confirm with

[Set] service providers can be preassigned, depending on the SIM card.

 Select the required entry from the list of network providers.


[Select] Confirm.

Delete Network Provider

[Menu] → Setup → GSM Service → Preferred Netw.

Your home network provider is displayed.

[OK] Press.

 Scroll to the required entry.

[Change] Press.

[Delete] Confirm.

Conc.ID/Incogn.



[Menu] → Setup → GSM Service → Conc.ID/Incogn.

Activate **Conc.ID/Incogn.** to prevent your number being transmitted for all subsequent calls.

Car Use

[Menu] → Setup → Car Use → Auto Answer




Calls are answered after the third ring if the telephone is connected to the "Car Kit Portable", → p. 35 or a "Headset with PTT key (Talk key)", → p. 36.

Troubleshooting

Problem	Possible Cause	Possible Corrective Measures
Unable to switch on phone	Empty battery.	Charge battery. Check charging indication on display.
	Battery contacts dirty.	Clean contacts carefully. Repeat switching on and off.
No charge icon	Battery deeply discharged.	Continue to charge device. The charge icon appears after max. 2 hours.
	Battery defective.	Replace battery. After several years' average use a gradual decline may be expected.
	Contact problem.	Check power supply and connection to telephone.
Charge icon is flashing	Temperature exceeds 0 °C to + 45 °C range.	Ensure correct temperature, allow time, then re-charge.
SIM error	SIM contacts dirty.	Clean SIM contacts with a dry cloth.
	Damaged SIM card.	Make visual check. Return SIM card to your service provider.
	SIM card not correctly orientated.	Ensure SIM is correctly orientated.
	Old SIM card.	Only 3 volt SIM cards may be used. If you are using a 5 volt SIM card, please contact your service provider.
PIN error	3 incorrect inputs.	Enter super PIN (PUK) supplied with your SIM as instructed. If your super PIN or PIN are lost, contact your service provider.
No connection to network	Weak signal.	Move to a higher location, or to a window or open space.
	Outside GSM network.	Check service provider coverage map. Check network information for the device.
	SIM not valid.	Contact your service provider.
	New network not authorized.	Try selecting manually, or try other network (→ p. 30).
Phone loses network	Weak signal.	Reconnection, or connection to another service provider is automatic; AutoNetwork (→ p. 30). Switching off and on may accelerate this.
Calls not possible	Dialling error.	Check the telephone number (correct international and area code).
	New SIM fitted.	Check for new restrictions.
	Charge limit reached.	Contact your network provider.

Troubleshooting

33

Problem	Possible Cause	Possible Corrective Measures
Cannot write in PhoneBook	Call restriction set. PhoneBook is full.	Check PhoneBook restrictions. Delete PhoneBook entries.
Cannot find PhoneBook	SIM has been changed.	Refit original SIM.
Voice Mail not working	Divert not set.	Set Divert (→ p. 21).
 flashes continuously	Message store full.	Delete a message to make room (→ p. 18).
Cannot send a message	Service provider does not support this service. Service Centre not configured. Destination does not have compatible phone.	Contact your service provider. Configure Service Centre (→ p. 19). Check.
Cannot set a function	Not supported by service provider or registration required. 	Contact service provider (→ p. 38).
Network provider CODE error	Not authorized for this service.	Contact network provider.
Accidents		
Severe impact damage	Internal damage could result.	Remove and refit battery and SIM card (→ p. 6). Do not dismantle phone.
Immersion in water	Internal damage could result.	Remove battery and SIM. Dry immediately with a cloth, do not heat. Dry connector contacts thoroughly. Stand unit upright in airstream. Do not dismantle phone.
Reset all phone settings to their original condition		
Enter *9999# and press  . The phone code and the settings for the SIM card and the network will not be affected.		

Siemens Service

Worldwide assistance is provided by Siemens Partners - a simple phone call away. See service numbers (→ p. 38) or visit our Internet site.

Internet: <http://www.my-siemens.com>

If your phone appears faulty, first check the section → "Troubleshooting", p. 32.
If the problem persists contact your service provider or specialist dealer.
Incorrect use will render the warranty invalid.

Licensing

Siemens ICM D MP RD hereby declares that the mobile A35 is in conformity with the essential requirements and other relevant provisions of Directive 99/5/EC.

A copy of the original declaration of conformity can be found at the following Internet address:

<http://www.siemens.com/a35>

Complies with SAR values as per ICNIRP.

Technical Data

- GSM Class 4 (2 watts)
Frequency range
880 - 960 MHz
- GSM Class 1 (1 watt)
Frequency range
1710 - 1880 MHz
- Length x Width x Thickness
approx. 118 x 46 x 27 mm
(without antenna)
- Weight: approx. 120 g
- Battery voltage: 3.6 V
- Charging voltage: 3.3 - 5.5 V
- Max. power consumption with
standard charging unit: 500 mA
- Charging times: 3 h (first time),
then 1.5 - 2 h
- Standby time: 60 h to 150 h
- Talk time: 90 mins to 240 mins
- Innovatron Patent

Care of Phone

- Clean the phone with a damp cloth or an antistatic wipe. Do not use chemical cleaning agents.
- Protect your phone from impact and moisture. Do not expose your phone to direct sunlight.

Care of Your SIM Card

- The SIM card must be treated with the same care as a bank card.
- Do not bend, scratch or expose to static electricity.

Phone Identification

The following information is important if you lose your phone or SIM card. Please enter:

No. of the SIM card (on the card)

.....

15-digit serial number of the phone (beneath the battery):

.....

Service provider's customer service number

.....

In the Event of Loss

If your phone and/or SIM card are lost or stolen, call the service provider immediately to prevent misuse.

Accessories

35

NiMH Battery 600 mAh

L36880-N4301-A100

Spare battery is ideal for frequent callers or when on the move (NiMH 600 mAh).

Travel Charger


L36880-N4001-A103 (EU)

L36880-N4001-A104 (UK)

This compact charger has a rapid charge functionality with automatic mains voltage selection in the range 100 - 240 V.

Mobile Holder

L36880-N4301-A101

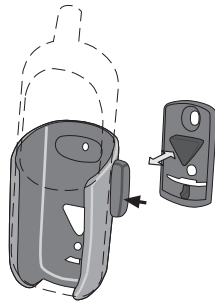

The mobile holder ensures that the telephone is fitted securely in your car at all times. Can be used together with the Car Charger, Car Kit Portable or the headset. The installation of car accessories must not impede vehicle operation (e.g. airbag).


Car Charger

L36880-N4001-A108

The telephone power supply, also used for rapid battery charging. The cable plugs into standard cigarette lighter sockets (12/24 Volt). For reasons of safety, we recommend using the Car Charger together with the Mobile Holder.

Car Kit Portable

L36880-N3015-A117

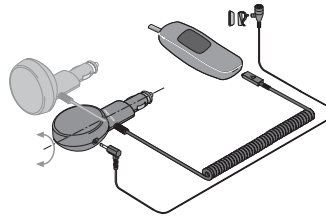

Enables convenient handsfree operation with superior voice quality (rotatable loudspeaker, flexible microphone positioning). It simply plugs into a standard cigarette lighter socket enabling easy movement between vehicles. For reasons of safety, we recommend using this device together with the Mobile Holder.

Accessories

Leather Case

L36880-N4001-A118

Functional Case

L36880-N4001-A119

Shoulder Bag


L36880-N4001-A149

Active Bag

L36880-N4001-A120

Belt Clip

L36880-N4301-A102

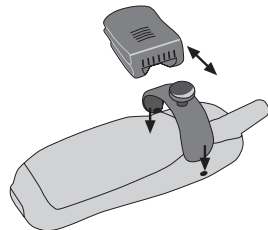

With the belt clip your telephone is always within reach and ready for use. The clip attaches securely and can be easily removed.

Headset with PTT key (Talk key)

L36880-N4001-A123

Enables maximum freedom of movement when conducting calls. The headset is equipped with a button for answering and ending calls.

Further information

Contact your dealer for further information on other products or check out our Internet page:


<http://www.siemens.com/mobiles>






























GSM Network Control Codes

37

You can implement functions via the GSM network using control codes.

Key to the following functions:

-  Number
 t Time (from 5 to 30 seconds) before diversion
 ts Teleservice (see below)

Function	Setup	Deactivation	Status query
Number display			
Suppress number for next call	#31# 	*31# 	*#31# 
Divert			
Divert when not available	**62*  * ts # 	##62* ts # 	*#62# 
Divert if no reply	**61*  * ts * t # 	##61* ts # 	*#61# 
Divert all calls	**21*  * ts # 	##21* ts # 	*#21# 
Divert if busy	**67*  * ts # 	##67* ts # 	*#67# 
All divers (if available in the network) 		##002# 	
Restricted divert (if available in the network) 	**004*  * ts # 	##004* ts # 	*#004# 
Call Waiting	*43* ts # 	#43* ts # 	*#43# 

Coding for teleservice ts:

Functionality	All teleservices	Language	Data	Fax	SMS	All except SMS
ts	10	11	12	13	16	19

38 International Service Numbers (Hotline)

Country	Service Unit	Number	Country	Service Unit	Number
Abu Dhabi	Siemens Service Center	02713500	Latvia	Siemens	7501114
Australia	Siemens	1800622414	Lebanon	F.A. Kettaneh	01443043
Austria	Siemens	0517075004	Lithuania	Siemens	822391555
Bangladesh	Siemens	017527447	Luxembourg	Siemens	43843399
Belgium	Siemens	078152221	Malaysia	Hello Service	032415993
Brunei	DST	02151	Mauritius	Ireland Blyth	2116213
Bulgaria	Omnitel	02739488	Morocco	SETEL S.A.	2352409
China	Siemens	02150318149	Netherlands	Siemens	0703333100
Croatia	Siemens	016105381	Norway	Siemens	22633314
Czech Republic	Siemens	0233032727	Oman	Siemens Service Center	791012
Denmark	Siemens	35258600	Pakistan	Siemens	0215673565
Dubai	Siemens Service Center	04699720	Philippines	Siemens	28149888
Egypt	Siemens	23313129	Poland	Siemens	0800220990
Finland	Siemens	0922943700	Portugal	Siemens	014178393
France	Siemens	0156384200	Russia	Siemens	80957371801
Germany	Siemens	01805333226	Saudi Arabia	Siemens	026655058
Greece	Siemens	016864389	Singapore	Siemens	8454818
Hong Kong	Siemens	22583636	Slovak Republic	Siemens	0759682266
Hungary	Siemens	0614712444	Slovenia	Siemens	0611746333
Iceland	Smith & Norland	5113000	South Africa	Siemens	0800114050
India	Siemens	116923988	Spain	Siemens	902115061
India	Siemens	116925589 (ISDN)	Sweden	Siemens	087509911
Indonesia	Dian Graha Elektr.	0214615081	Switzerland	Siemens	012120090
Ireland	Siemens	1850777277	Taiwan	Siemens	0225186504
Italy	Siemens	0269893691	Thailand	Siemens	26791777
Jordan	F.A. Kettaneh	079559663	Turkey	SIMKO	02122528835
Kuwait	NGEECO	4818749	United Kingdom	Siemens	0990334411
			Vietnam	Opticom	090456789

Index

39

A

Accessories
 active bag 36
 battery 7, 35
 belt clip 36
 car charger 35
 car kit portable 35
 charging unit 7
 functional case 36
 handsfree headset.. 36
 handsfree kit 35
 leather case 36
 shoulder bag 36
 travel charger 35
 Activating 7
 Active bag 36
 Active line 13
 Alternative
 line 10, 12, 13
 Answering machine
 → Mailbox
 Applications
 SIM services 23
 Audible signals
 → Warning tones

B

Battery
 charging 7
 charging time 7, 34
 inserting 6
 reserve battery 35
 standby 7
 standby time 7, 34
 talk time 7, 34
 usage time 7, 34
 warning tones 25
 Belt clip 36

C

Call duration
 displaying 15
 Call key 2
 Call waiting
 second call 15
 Callback 24
 Calls
 answering 10
 answering
 a second call 15
 automatic answer ... 31
 ending 9
 missed 24
 rejecting 15
 rejecting
 a second call 15
 second 15
 unwanted 10
 Car charger 35
 Car kit portable 35
 Car use 31
 Care of 34
 SIM card 34
 telephone 34
 CB
 → Information services
 Cell Broadcast
 → Information services
 Charges
 display 27
 Charging time
 battery 7, 34
 Charging unit
 connecting 7
 Cleaning 34
 Control codes
 GSM network 37

Correction key 2
 Country codes 9
 Customer service
 service provider 34
 Siemens 38

D

Date
 format 27
 setting 27
 Deactivating 7, 8
 Dialling 9
 Dialling
 with the keypad 9
 Digit keys
 assigning 14
 Display
 features 2
 setting
 the language 27
 Divert
 activating 28
 alternative line 28
 checking 28
 deactivating 28
 deleting 28
 GSM code 37
 mailbox 21
 DTMF
 saving 13
 sending 13
 During a call 15

E

Emergency calls 7

F

Functional case 36

Index

- G**
 Getting started 6
 GSM
 adding
 network providers .. 30
 class 34
 network
 control codes 37
 operators 30
 services 30
- H**
 Handsfree kit 35
 Headset 36
 Help
 technical (hotline) ... 38
 Hotline 38
- I**
 Icons on the display 4
 Icons used 4
 Inbox
 text messages 18
 Incognito 31
 Information numbers. 13
 Information services
 reading messages .. 20
 rereading
 messages 20
 setting the channel. 20
 setup 20
 International numbers . 9
 Introduction 4
- K**
 Key lock 2
 activating 9
 deactivating 8
 Key sounds 25
 Keypad 9
- Keys**
 call key 2
 correction key 2
 key lock 2
 navigation key 2
 on, off,
 disconnect key 2
 soft key 2
- L**
 Language
 date format 27
 display 27
 setting 5
 Leather case 36
 Licensing 34
 Line
 active 13
- M**
 Mailbox 21
 changing number 21
 checking 22
 configuring 21
 configuring a divert . 21
 listening
 to contents 14
 messages
 via automatic
 announcements 22
 messages via SMS . 22
 number 21
 speed dial key 21
 Making calls 9
 speed
 dialling numbers 14
 Menus
 back 5
 scrolling 5
- Message lists** 18
Missed calls
 calling back 24
 displaying number ... 24
- N**
 Names
 entering 11
 Navigation key 2
 Network
 adding
 network providers ... 30
 automatic selection. 30
 deleting
 network providers ... 31
 information 30
 list 30
 manual selection 30
 preferred 31
 Numbers
 active 10
 entering 9
 international 9
 missed calls 24
 preventing
 transmission 31
 saving 9, 11
 second 10, 12
 suppressing the
 display (GSM code) . 37
- O**
 On, off,
 disconnect key 2
 Outbox
 text messages 19
 Own number 12

Index

41

P		
Package contents.....	3	
Personal Identification Number → PIN		
Phone code		
changing.....	29	
Phonebook	9, 11	
allocating an entry ..	14	
calling from	12	
capacity	12	
changing speed		
dialling numbers	14	
deleting speed		
dialling numbers	14	
edit entry	12	
entering speed		
dialling numbers	14	
information		
numbers	13	
new entry	12	
number of entries....	12	
own number	12	
saving		
a tone sequence	13	
scrolling	14	
sending		
a tone sequence	13	
service numbers.....	13	
speed dialling.....	14	
PIN	29	
changing	29	
entering	7	
error.....	32	
Prefix		
country codes.....	9	
Protection		
against theft	29	
PUK → PIN		
R		
Reception signal		
strength.....	8	
Redial.....	9, 10	
Replying		
text messages	19	
Ring → Ringer		
Ringer		
activating.....	25	
changing.....	25	
deactivating.....	25	
setting the melody..	25	
setting the volume..	25	
S		
Safety	3	
Saving		
numbers.....	9	
Scrolling		
menus	5	
submenus	5	
Second call		
answering	15	
conducting	15	
rejecting	15	
toggling	15	
Selecting		
a new network.....	30	
Selection		
confirming	5	
Serial number		
telephone	34	
Service	33	
hotline	38	
Service number		
hotline	38	
Service Center	19	
Service numbers.....	13	
Service tones		
→ Warning tones		
Setting the volume	15	
Short beep		
→ Warning tones		
Shoulder bag.....	36	
SIM card	34	
additional		
applications	23	
inserting	6	
memory capacity.....	12	
number.....	34	
service number	19	
SMS		
new voice mail		
message	22	
SMS → Text messages		
Soft key	2	
Special characters		
text messages	17	
Speed dial key		
mailbox.....	21	
Speed dialling numbers		
assigning	14	
changing.....	14	
deleting	14	
entering.....	14	
scrolling.....	14	
Standby.....	7	
back	5	
Standby mode	8	
Standby time	34	
Submenus		
scrolling.....	5	
Super PIN → PIN		
Support		
hotline	38	

T	
Talk time.....	7
battery	34
Technical data	34
Telephone	
activating	7, 8
care of	34
deactivating	7
serial number.....	34
talk time.....	34
Text	
special characters...	11
Text messages	
capacity	19
deleting.....	16
editing.....	16
end of message	
mark	16
inbox.....	18
message lists	18
outbox	19
reading.....	16
reading	
the next message...	16
replying	16, 19
saving	18
sending.....	17
special characters...	17
successful	
transmission.....	18
time received.....	16
writing	17
Time	8, 15
activating	
the display	27
deactivating	
the display	27
setting	27
Time → Call duration	
Toggling → Second call	
Tone sequence	
saving.....	13
sending	13
Travel charger	35
Troubleshooting	32
U	
Units	
display	27
used	15
Usage time	
battery.....	7
V	
Voice mail → Mailbox	
W	
Warning tones	
activating	
the CB tone.....	25
connection set up ...	25
connection	
to the network	25
deactivating	
all tones.....	26
deactivating	
the CB tone.....	25
information	
services.....	25
key sounds.....	25
low battery.....	25
Writing names	11