

MP3 Player

Menu → Surf/Fun → MP3 Player

- Choose a melody.
- Press to play.

Control

Side keys: See overview.

Control key:

- Playlist: Go forward or go back one track.
- Pressed **briefly on the right:** Play/pause.
- Pressed **briefly on the left:** Stop (Stop melody).
- Held **down:** Fast forward, reverse.

Right soft key:

Pause / **Play** (also using PTT key)

Create playlists

To play several melodies with one selection you can put them in a playlist (folder).

Options Open MP3 menu.

Create playlist Select. Give a name to the new list, confirm with **OK**.

Options Open list menu and select

Add Song, then choose the melody in the MP3 list and confirm with

Add, etc.

MP3 import with the Data Exchange Software (see User Guide page 70).

Internet

Menu → Surf/Fun → Internet


Get the latest WAP information from the Internet that is specifically adapted to the display options of your phone. Internet access may require registration with your Service Provider.

Settings

An access profile must be set before the first connection. If the settings have already been made by the Service Provider, you may begin immediately. If not, the access profile must be set and activated manually.

Internet access

With the function macro **Internet** the start menu appears:

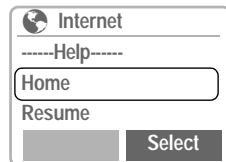

Home: The home page may show different soft keys or menus depending on its contents (it may be preset/default).

Resume: Call the pages last visited which are still in the memory.



Favorites: Display of up to 9 WAP pages for fast access.

Profiles: Setting of the access profiles.

SL 45

November 2000


Overview of keys/display

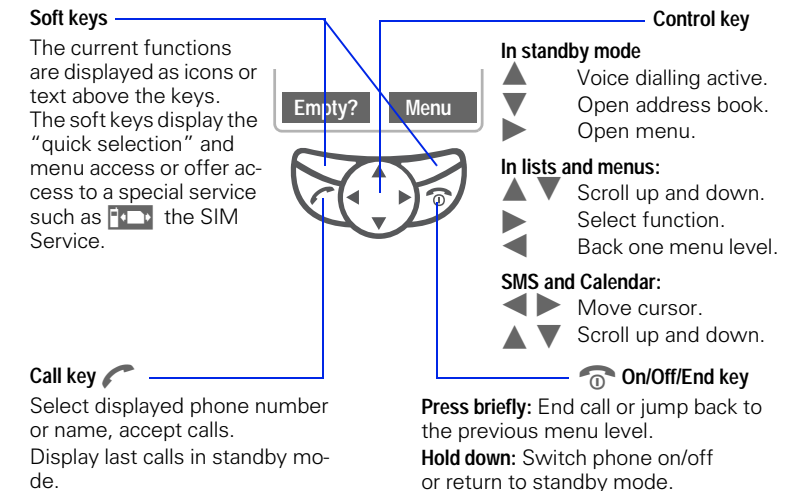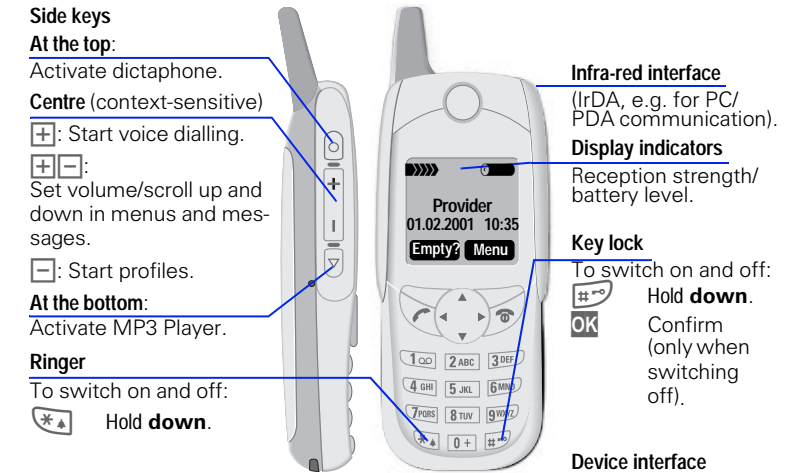


Making a phone call

Switch on

SIM card and charged battery must be inserted.

 Hold **down** to switch on or off.


 Enter PIN code.


 Confirm. The logon to the network takes some seconds. When the Service Provider is displayed, the phone is in standby mode.

If the signal is very weak, move to a window or open space.
By pressing the soft key **SOS**, you can make an emergency call without SIM card or PIN input via any network.


Call


 Enter number (**always with prefix**).

 Press. The number in the display is dialled.

 Press. The call is ended.

Redialling previous numbers

 Press. Press again to redial the last called number

or
 scroll through the list to select a number used formerly.


Accept call




 Press.

Addressbook

Menu → **Organiser** → **Addressbook**


New entry

 Open address book (in standby mode).


	Addressbook
New entry	
<input type="text" value="Businesscard"/>	
Barbara	
	

 Select New entry.


In the following entry card, enter at least the first or last name and a phone number.


 If necessary make your entries step by step. Press.

Call entry


 Open address book (in standby mode).

 Select entry. Press.

 If multiple phone numbers are stored, always the **first number is** dialled. If not ...

 ... open the entry and scroll to another number.

Search: You can enter the first 4 letters of the required name:

 For **PAUL**. The address book shows the first entry with "P".

Dictaphone

Menu → **Organiser** → **Dictaphone**

Voice recording offers you the following functions:

- Use as Dictaphone.
- Recording a call - For numbers or addresses.
- Add a voice memo to an alarm in the Calendar.

Control

Side keys: See overview.

Record

Start

Hold down the dictation key for the duration of the recording. After a short beep, the recording starts.

Recording pause / end


Release the dictation key to pause, press once more to continue. A pause of 10 seconds stops the recording.

Save


A recording is stored with the current recording time as its name and can be renamed later.

Play back

Press dictation key **briefly** to display the list of voice memos.

 Select required recording.

 Press **briefly** for playback.

 End play back.

Answering notice

Menu → **Organiser** → **Answering notice**


This voice recording can be played back if you cannot accept a call immediately.




Record


The list of recordings is opened:


New entry Select.

 Start recording.

 End recording.

Answering notice	
12,0 seconds	
	
4,0	
	


 The answering notice is played back for control purposes.


 The recording can be assigned a name and then be saved.

Apply

First choose an announcement and activate it with **Edit**. Then press the dictation key **briefly** if there is an **incoming call**.

The call is accepted and the announcement is played continuously, until you ...

 ... answer the call.

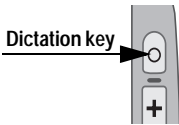




Calendar


Menu → **Organiser** → **Calendar**


The Calendar offers a monthly, weekly and daily view.


Th	Feb 2001	W 8
	1	2 3 4
5	6 7	8 9 10 11
12 13 14	15 16	17 18
19 20 21	22 23	24 25
26 27 28		
Week		Appoint.

  Use the side keys to scroll between months.

 Scroll between weeks.

 Scroll between days.


 Display of the daily view.


 Schedule. Time overlaps are highlighted.



New appointment

 Select.

New entry Select.

 Make your entries field by field.

 Store entry.

 Display when alarm is activated. An alarm sounds even when the phone is switched off. To deactivate it press any key.  delays the alarm by 5 minutes.

Schedule

Menu → **Organiser** → **Appointments**

Displays **all** appointments entered chronologically.

Voice Control


Menu → **Organiser** → **Voice Control** →


Voicedialling

New entry

A list with entries is displayed. In the list select ...

New entry ..., then ...

 ... enter name/phone number or use **Insert** to retrieve from the address book.

 Confirm.


A short signal sounds. Now say the name corresponding to the phone number and **repeat** it when prompted. A beep confirms the recording and all entries are displayed.

Voice command

New entry


A list with the commands is displayed.

 Select command.

 Confirm, then proceed as with "Voicedialling".


Apply

Activate Voice Control in standby mode:


 Control key **or** side key **or** PTT key.

Now say the name or the function. The number is dialled or the function is carried out.

Message (SMS)

 Indicates a **new** message. To read, press the soft key underneath it.


31.01.01	23:45	Date/time
01719898767654		Number/sender
Do we meet at 18.00 in the hotel tomorrow?		
Options		Reply


 Scroll through the message.


 Direct reply with new or standard text.
 The message may be stored on the MultiMediaCard™.


Compose and send messages


Menu → **Messages** → **SMS** → **Write Message**


 Compose message (**T9 composer** see User Guide S. 41).

 **Blank.** Ends a word.


 **Full stop.** Ends word when a blank follows.


 UPPER-, Lowercase, digits.

 Deactivate T9 **temporarily** and activate it again.

 Open the text menu.

Send Select.

 Enter number or select from address book.

 Transfer the message to the Service Centre.


If necessary enter phone number of the Service Centre / validity.


Data exchange


Card-Explorer

Menu → **Surf/Fun** → **Card-Explorer**

To organize your files on the MultiMediaCard™ you can use the Card-Explorer. The name of the current MultiMediaCard™ is shown at the top of the display, and a list of the folders and files beneath this.

 Scroll up and down.

 Highlight file/remove highlighting, open folder.

 Go back from folder.

Data Exchange Software (PC)

An additional drive icon (Mobile) is appended to the Windows®-Explorer. It allows you to conveniently control the many storage options of the MultiMediaCard™ from the PC.

The Data Exchange Software is on the CD ROM provided.

First select the drive icon, then you can activate the help with detailed operating and help information with mouse click on „?“ in the menu bar.

Siemens Quick Sync Software (PC)

This PC program can be used to synchronise addresses and appointments between your phone and Microsoft® Outlook® 98/2000.

Before a PC software is used, the phone must be connected to the PC by the Sync Station!