


SIM Card / Batteries

Insert SIM card


Your service provider will supply a SIM card, containing all the key data about your line.

You may need to snap this out carefully from a credit card sized SIM.


- Unlock the battery cover (1) and lift it off (2).

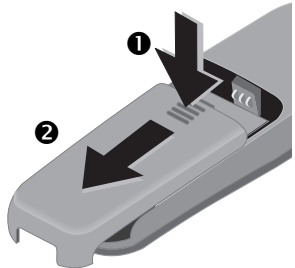

- Slide out the SIM carrier (3), then turn it in the direction indicated by the arrow (4).

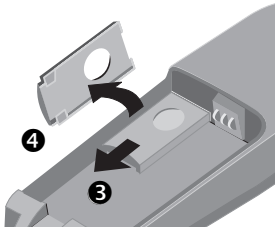

- Slide the SIM card into the carrier (5). Ensure the angled corner is positioned correctly and that contact is made.

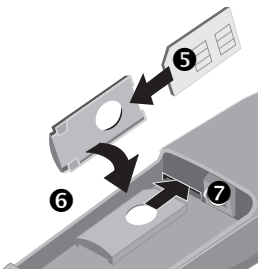


- Turn the SIM carrier until the SIM card faces the phone (6).
- Slide the SIM carrier into the phone until it clicks into place (7).
- Insert the battery into the phone and close the cover.

Charge battery

The lithium ion battery is not yet fully charged:



- Insert the charger plug in the socket at the bottom of the phone (arrow facing upwards).
- Plug charging unit into a mains power socket (ensure voltage range stated on charger is not exceeded).

The unit is fully charged after 2 hours. The charger may heat up if used for long periods.

 Display shows charge level.

Usage time

A fully charged battery: 60 to 220 hours standby time **or** 100 to 360 min. talk time.


Batt. empty:  -  -  full

A beep sounds when the battery is nearly empty.

RÜCKSEITE

VORDERSEITE

Overview

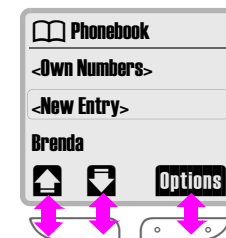


Soft keys

The current functions are shown in the display as symbols or text above the keys. Different functions are available by pressing either the left or the right end of the keys.




In standby, the soft keys enable fast "name" dialling and menu access or access to a special service such as SIM service.


Making calls

Switch on

-  Hold down to switch on or off.

Do you still have to insert the SIM or battery? See reverse page for details. Switch PIN control on/off, change the PIN code, (page 59).

-  Enter your PIN code. (Correct any errors with ).
-  Confirm (soft key).

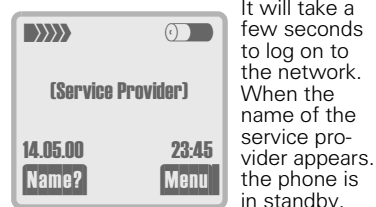





It will take a few seconds to log on to the network. When the name of the service provider appears, the phone is in standby.

If the signal is too weak, move to a window or open space.


By pressing the **SOS** soft key you can make an emergency call in all networks even without a SIM card or PIN code.

Making a call

-  Enter the phone number (**always with prefix**).
-  Press. The phone number on the display is dialled.
-  Press. The call is ended.
-  Dials any highlighted number in messages.



Redialling

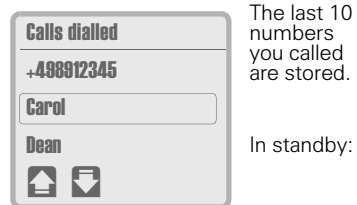Redialling




The last 10 numbers you called are stored.

In standby:




-  Press.
-  Pressing again dials the last phone number used or scroll to highlight previously used numbers.

Auto redialling




-  **AutoDial** Press to repeatedly dial a number in progressive intervals for 15 minutes.

Records

The last calls received, made and missed are stored (depending on network).




-  **Menu** Press, and select **Records** followed by the required list.
-  Scroll in the list and select a phone number.
-  Press for last caller or choose a different caller from the list.


International dialling code

-  **0 +** Press until “+” appears.
-  **+List** Press, and select country or enter dialling code.
-  Enter the national phone number (the first digit is omitted in many countries).


Phonebook



Making an entry in the Phonebook

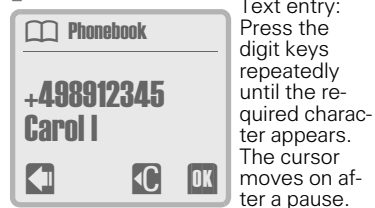-  Enter the required phone number **with** prefix.
-  Press.
-  Enter a name for the number.






Text entry: Press the digit keys repeatedly until the required character appears. The cursor moves on after a pause.

-  Press briefly to delete the last character, hold down to delete the last word.

-  Press. The phone number is stored and can be dialled immediately:
-  Press.

Making a call

-  Open phonebook.
-  Select a name with the first letter and/or scroll.
-  Press, the highlighted entry is dialled.




Phonebook menu

Open the phonebook and highlight an entry. The functions available include:

- Edit Entry, Delete Entry, Send/Print, Check Space** and
- VIP Entry** For important numbers.
- Voice Dialling** Adds voice recognition.

Comfort Features

Fast Access keys

- Set the soft key:
 -  **Name?** Press (the first time, then  or e.g.
 - Set speed dialling number (2 - 9).
 -  Press digit key.

-  **Set** Press

... then select a function from the list:

- Open the **Phonebook** to select a phone number (e.g. “Office”).
- If you select an application (e.g. **Games**) this is assigned directly to the soft key.

-  **Select** Press.


Making a call (e.g. the “Office” no.):



Press **Office** /  or first press a speed dialling number, e.g. .

Making several calls at once


(Depends on the network)

- If the “Call Waiting” feature is available in the network, you can answer a second call, put the first on hold and switch back and forth between the two calls.
- You can make a second call, then return to the first and join all calls together (conference). To do this, during the first call:

-  **Hold** Press.

-  /  Make the second call.

Press  or  and select **Conference**.

-  Press to complete a call or return to the first call.

Overview of functions

Menu Control

Main Menu

The main menu is always reached from standby mode by pressing the right soft key.



-  **Menu** Press.

Submenu

You can branch from the main menu into submenus for accessing functions and options:

Press  **Menu**,  **Select** or  **Options**.

Go back

-  Press briefly to go back one menu level.
-  Hold down to go back to standby mode.


Features available in the main menu:

Usage Hints

A brief introduction to the various phone functions.

SIM Services (depending on SIM card)

Special applications, e.g. banking or stock market functions, if supported.

Internet  (depending on network)



This area in the main menu can also be set with one of the other functions listed below.


Office & Fun

- Internet: Access to special sites on the World Wide Web.
- Calendar: Views of days, weeks and months for entries using the appointment function
- Appointments: Entry of daily or regularly recurring appointments.
- Calculator with basic calculator functions and memory.


Messages



Text Messages

-  Indicates a **new** message on the display.
-  Press to read.

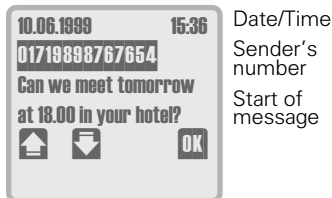

Date/Time
Sender's number
Start of message

-  Scroll through the message.



-  Access message menu with further functions, such as reply, edit, delete, etc. (see page 43).
-  Press to select highlighted phone number.


Messages should **always** be deleted after they have been read.

Voice Message


The service centre provides you with a mailbox that operates in the same way as an answerphone.


Listening to Voice Message

-  Indicates a new voice mail on the display.
-  Press to play back.

A voice mail can also be indicated by a text message () or a call.




Call and listen to mailbox:


-  Press (see “Digit Key”, page 18).



-  Flashes when memory is full. Delete messages as otherwise no more messages can be received.

Writing and Sending Messages

-  **Menu** Press, select **Messages**, then **Write Message**, then **Create New**.
-  Write your message (T9 editor, see page 40).

-  Set a blank.
-  UPPER/lowercase.
-  Insert a full stop.

-  Press and select **Send Text** from the menu.

-  /  Enter the phone number/select the no. from phonebook.




If necessary, enter the phone number of the service centre retain type and validity (see page 44).

-  **Send** Press.




Setting Voice Message

If not already pre-set, you will receive a number for calling the mailbox and one for diverting to the mailbox.

1 Calling the mailbox (playback)


-  **Menu** Select **Messages** then **Voice Message**.
-  /  Enter the “Call” no. to hear the messages.

2 Call diversion to mailbox

-  **Menu** Select **Divert** then **All Unanswered** then **Set**.
-  /  Enter the diversion number to the mailbox.

Overview

1

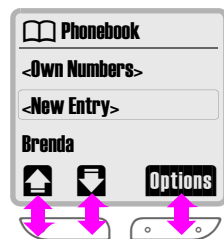

Soft Keys

The current functions are shown in the display as symbols or text above the keys. Different functions are available by pressing either the left or the right end of the keys.

In standby, the soft keys enable fast "name" dialling and menu access or access to a special service such as SIM service.

Precautions

All radio transmitters carry risks of interference with electronics in close proximity:



Deactivate when on board aircraft.
Prevent inadvertent activation!



Deactivate near gas stations, fuel depots, chemical plants or blasting operations



Deactivate in hospitals and in the vicinity of medical electronics, e.g. pacemakers and hearing aids can be affected.



Minor interference may affect TVs, radios, PCs, etc.



Avoid pointing active infrared port at eyes.



Do not hold the phone in your hand while driving ("Car Accessories", page 75).



Do not dismantle phone or battery.

Please note:



Only use ORIGINAL SIEMENS batteries/charging units. The use of non-specified accessories can lead to significant health and material damage.



Unusable batteries should be disposed of in accordance with relevant legislation.



Only use ORIGINAL SIEMENS accessories to avoid damage to your phone.

The guarantee does not cover improper use!

Contents

3

Overview.....	1	Voice Memo	22
Introduction.....	5	Recording.....	22
Symbols used	5	Pause	22
Menu Entry	5	Playback	22
Getting Started	6	Main Menu Information	23
1. Insert SIM Card	6	Main Menu.....	23
2. Charge Battery	7	SIM Services (optional)	23
3. Switch On	7	Office & Fun.....	24
Emergency Call (SOS)	7	Internet	24
4. Enter PIN.....	8	Switch Key	24
Making Calls.....	9	Internet Access.....	24
Dialling a Number.....	9	Browser Menu	25
Ending a Call	9	Profiles	26
When a Number is Busy	10	Phonebook Key	28
Redialling	10	Calendar	29
Incoming Calls.....	11	Appointments	30
Answering Calls	11	Calculator	32
Ending Calls	11	Currency Conv.	33
Unwanted Calls	11	Business Card	34
Turning off Ringer	11	Games.....	35
Missed Calls.....	11	Chronometer.....	36
Phonebook.....	12	Messages.....	37
New Entry	12	Reading New Messages.....	37
Calling from Phonebook.....	13	Creating a New Message	38
VIP Phonebook.....	13	Text Input with "T9"	40
<Own Numbers>	13	Incoming / Outgoing.....	43
<New Entry>	13	Sending Business Cards	44
Phonebook Menu.....	14	Setting.....	44
Saving a Control Code.....	16	Voice Message	45
Fast Access Keys.....	17	Information Services	47
Soft Key	17	Records	49
Digit Key.....	18	Calls missed.....	49
Fast Menu Access	18	Calls received.....	49
During a Call	19	Calls dialled	49
Volume Control	19	Alarms missed	49
Call Waiting	19	Profiles	50
Play Back Recording	19	Audio	51
Notebook	19	Ringer Setting	51
Conference/Toggling	20	Volume	51
In Call Menu	21	Melodies	51
		Vibration	51

Contents






Call Screening	51
Service Tones	52
Record Melody	52
Time/Charge	53
Charges	53
Charge Setup	53
Divert.....	54
Divert	54
Status Check	55
Clear all Diverts	55
Reactivating Call Diversion.....	55
Changing Phone Numbers	55
Setup.....	56
Menu Mode	56
Phone.....	56
Security	58
Network	59
During Calls	62
FAX/Data Mode	63
Clock	64
Car Use	64
Headset.....	64
Fax/Data	65
Display Symbols	66
Tips on Use	67
Siemens Service	68
Troubleshooting.....	69
Specifications.....	72
Licensing	72
Technical Specifications	72
Care / Security	73
Care of your SIM Card.....	73
Accessories.....	74
Car Accessories.....	75
Index.....	76

Introduction

5

Symbols used

The following symbols are used to simplify operation:

	Input of numbers or letters.
	Soft key for the function displayed above.
	Press the soft key on the page displayed.
	Representation of a soft key function.
	Function depends on the service provider; separate registration may be necessary.

Menu Control

The menus provide access to important functions and settings for your telephone.

Main Menu

To reach the main menu, press the right soft key in standby mode (see page 8).

 Press.

Submenu

You can branch from the main menu into submenus for accessing functions and options.

Go Back



Press this button briefly to go back one menu level.



Hold this button down to return to standby mode.

Menu Entry

Menu entry is sometimes abbreviated in the operating instructions, e.g.:

Menu → **Audio** → **Volume**

means



Press to open the main menu.



Scroll to the **Audio** menu item.



Press to open the **Audio** menu.



Scroll to the **Volume** menu item.



Press to open the **Volume** menu.

Getting Started


1. Insert SIM Card

Your service provider will supply a SIM card, containing all the key data about your line.


You may need to snap this out carefully from a credit card sized SIM.

If removing the battery, ensure the phone is switched off first.


- Unlock the battery cover (1) and lift it off (2).

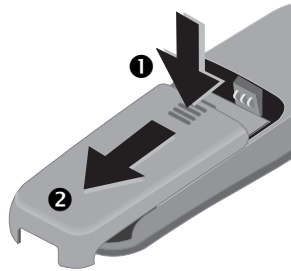


- Slide out the SIM carrier (3), then turn it in the direction indicated by the arrow (4).

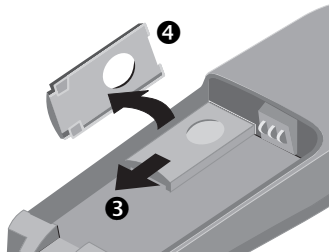

- Insert the SIM card in the carrier (5). Ensure the angled corner is positioned correctly and that contact is made.

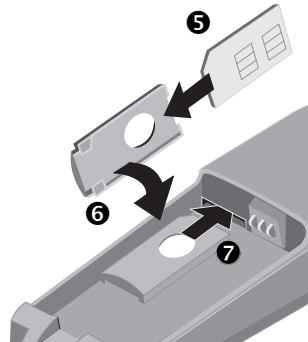

- Turn the SIM carrier until the SIM card faces the phone (6).
- Slide the SIM carrier into the phone until it clicks into place (7).
- Insert the battery into the phone (see below) and close the cover.

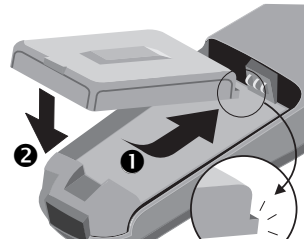


Getting Started

7

2. Charge Battery



The lithium ion battery is not yet fully charged, so:

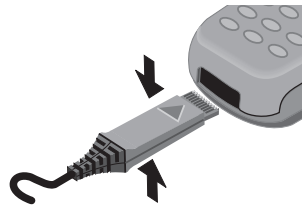- Insert the charger plug into the socket at the bottom of the phone.



- Plug charging unit into a mains power socket (ensure voltage range stated on charger is not exceeded).

The charging unit will heat up when used for longer periods. This is normal and is not dangerous.

-  When charging is in progress.
-  Charging is complete.

Charging Time

The unit is fully charged after 3.5 hours.



Variations in the power supply can lead to different charging times.

Telephoning

The telephone can be used while charging is in progress.

Usage Time

A fully charged battery can provide 60 to 220 hours standby time **or** 100 to 360 minutes talk time.

-  Charging status display.
-  A beep sounds when the battery is nearly empty.

The times specified above are average times. They may vary depending on personal usage and network conditions (see also "Technical Specifications", page 72).

3. Switch On



Hold down to activate, in standby mode (see page 8) **hold down** to deactivate.

If the error message "Please insert your SIM card!" appears when you switch on, please check if the SIM card is correctly inserted.

Also, please note that older SIM cards (5 volt technology) cannot be used. Contact your service provider if you have questions or encounter problems with regard to the matter.

Emergency Call (SOS)

By pressing the **SOS** soft key you can make an emergency call on all networks even without a SIM card or PIN code.


This function must **only** be used in emergencies.

Getting Started

4. Enter PIN

Your SIM card can be protected with a 4 - 8-digit PIN code to prevent misuse (depending on the SIM card).



Enter your PIN code (shown as a series of asterisks).
Correct any errors with .




Press the key on the right beneath the display (see figure).



It will take a few seconds to log on to the network.

When the name of the service provider appears on the display, the phone is in standby mode and is ready for use.

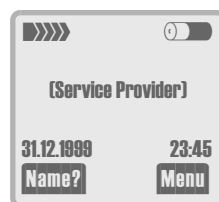

Info

Wrong PIN?

The SIM card will be blocked after the third incorrect PIN entry (see "Troubleshooting", page 69).

See also "PIN Control" and "Change PIN" (see page 59).

Network Connection



Indicates incoming signal strength.



A weak signal reduces call quality and there may be a risk to call continuity.

If the signal is too weak, move to a window or open space.

The integrated antenna is located at the top of the phone. Do not interfere with this area unnecessarily while making a call, as this can impair the quality of your connection.

Your phone will automatically select another GSM network if you are abroad or outside your "home" network (see page 59).

SIM Services



This symbol is displayed when your SIM card supports special applications, such as banking (see page 23).

Making Calls

9


Dialling a Number


The phone must be switched on (standby mode).



Dial the required number with **prefix** (international dialling code if appropriate).



 A short press clears the last digit, a long press the entire number.

 Save the number in the phonebook, see page 12.



Press. The number displayed is dialled.

Ending a Call



Press. The call is ended. You should also press this key if the person you called hangs up first.

Info

Setting the date/time, see page 64.

Setting the language, see page 56.

International Dialling

Many international dialling codes are already stored in your phone. To retrieve these:



Press until a "+" symbol appears.



Press.



Select the required country from the list.



Press. The international dialling code appears on the display.



Add the national number (the first 0 is omitted in many countries).



Press. The number displayed is dialled.

Functions Available while Making a Call:



(see page 20)



(see page 21)

Easier Ways to Call

Easier, quicker and error-free dialling by:

- Redialling previous numbers.
- Automatically redialling busy numbers.
- Calling back unanswered/ received calls (see page 49).

or using the

- Phonebook (see page 12).
- Fast access (see page 17).

Making Calls

When a Number is Busy

The following functions are available if the number you dial is busy:

Auto Redialling

AutoDial Press to repeatedly dial a number in progressively longer intervals for up to 15 minutes. No other number can be dialled in this period.

End

Off

Press.

or



Press.

Every other function terminates this function.

Reminder

Prompt

Press for a reminder to dial the number again in 15 minutes (beeps and displays number).


Redialling

The last numbers you called are stored.

From your standby display:



Press. Shows a list of last calls.

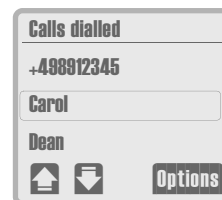

Press again to redial the last call

or

to redial a previous number:



Scroll to highlight required number.



Press to dial the number selected.

Options see page 49.

See page 49 for information on how to dial other stored numbers:

- Calls missed.
- Calls received.

Incoming Calls

11

Answering Calls

To be able to receive calls, you must switch the phone on (standby mode).



Press

or



Press.

Ending Calls



Press.

Unwanted Calls

Reject

Press for the caller to hear the busy signal.

Divert

This appears when "call diversion" is active (see page 54).

or



Press.

Turning off Ringer



Hold down. The ringer is deactivated for the current call.

Missed Calls

Missed calls, i.e. unanswered calls are indicated by a icon.

Info

- The numbers of received or missed calls are saved (providing the network supports this function) so that you can return these calls (see page 49).
- An incoming call will interrupt any other use of the phone.
- Data, fax calls (see page 63).

Phonebook

You can enter frequently dialled numbers with a name in the phonebook. The number is then dialled by simply selecting the entry. If a call number is saved under a name, the name will appear on the display when a call is received from that number.

New Entry




Enter the number **always with the prefix** and also, where applicable, **with the international dialling code**.



Press.



Enter the name for the number (see also "Text Entry").

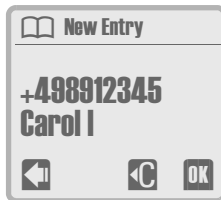

Press.



The number can be dialled straight away.

or



End input and begin a new entry.

Info

The editor T9 cannot be used for entries in the phonebook (see page 40).

Text Entry

Press number keys repeatedly until the required character appears. The cursor advances after a short delay.



Press once for "A", twice for "B", etc.



Press to erase the letter preceding the cursor, hold down to erase the whole name



Press to manually switch letter case. The first letter in each name is automatically written in UPPERCASE.



Press to switch between numbers and letters.



Press to create a blank.



Umlauts and numbers are displayed after the relevant letters.



Controls cursor position.

Special Characters

Press the key repeatedly until the character appears.



Blank 1 € £ \$ ¥



+ 0 - . , : ? ; ! i " ' ; _



A - a * / () < = > % ¢



A - 1 # @ & § Γ Δ Θ Λ Ξ Π Σ Φ Ψ Ω

Phonebook

13


Calling from Phonebook



Open the phonebook.



Write the first letter of required name and/or scroll to highlight required name.

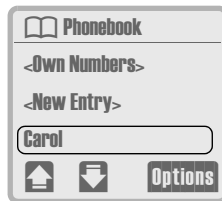

Dial the entry selected.

VIP Phonebook

Important numbers can be transferred to the **VIP Phonebook**.



Press twice to open the VIP Phonebook. Then proceed as above.

For information on adding new entries to the VIP Phonebook: see "VIP Entry", page 14.

<Own Numbers>

Depending on the SIM card, you can enter up to six "own" numbers (e.g. fax).

<New Entry>

See page 12.

Info

Selection by Name in the Phonebook



Open the phonebook.

Use the digit keys to enter the first letter of the name required, e.g.



For **Paul**. The phonebook scrolls to the first entry beginning with the letter "P".

Extending Numbers

You can enter partial numbers in the phonebook (e.g. a company number/PABX).

These partial numbers can be extended before dialling:



Open the phonebook.



Select the (partial) number.



Open the menu, select **View Entry**. The phonebook entry is displayed.



Add the extension number.



Dial.

or conversely



Enter the (partial) number.



Open the phonebook.



Select the extension number.



The extension number is added to the call number.



Dial.

Phonebook

Phonebook Menu



Open the phonebook.



Write the first letter of required name and/or scroll to highlight required name.

Options

The menu is displayed; now select the required function.

View Entry
Edit Entry
Delete Entry
VIP Entry
Voice Dialling
Location
Send/Print
Check Space
Del. PhoneBook

View Entry

Edit Entry

The entry is deleted from the phonebook after confirmation.



Change the number if necessary.



Confirm.



Change the name if necessary.



Confirm.

Delete Entry

The entry is deleted from the phonebook after confirmation.

VIP Entry

Only designate important numbers as VIP entries to ensure fast access (page 13).

Voice Dialling

You can assign voice recognition to a phonebook entry. When voice recognition is activated the number is dialled simply by saying the name.

Record Sample

Say the required name and repeat it when prompted. A beep will confirm successful recording.

Delete Sample

Voice dialling is removed from the entry and deleted.

Play Sample

You can display the entry using the phonebook menu.



Entry with voice dialling.



To play an entry back, press the lower key on the left side of the phone.

Apply

In standby:



To select, press the lower key on the left side of the phone.

or use the soft key (setting, see page 17).

Then say the name. The phone number will be dialled automatically.

Phonebook entries with pictures are not stored in the SIM (see also "Location", page 15).

Phonebook

15

Location

A new phonebook entry can be stored as follows:

SIM Card

Entries are automatically stored in your SIM card, enabling them to be transferred to another GSM phone.

Phone

Phonebook entries with voice dialing are stored here.

If your SIM card is full, entries will overflow into this memory.

Special

If you have a special SIM offering "Fixed Dialling Numbers", you can restrict calls to entries in this phonebook. PIN2 is needed to change this (see page 59).

Send/Print

Send as Text

The phonebook entry can be sent as an SMS (see page 38).

The recipient can immediately enter the number in their phonebook.

Send via IrDA

The entry is transferred to another phone or to a suitable PC using infrared technology.

Via I/R drucken

The entry is transferred to a suitable printer using infrared technology.

Check Space

You can check used and available capacity for:



SIM card



Special SIM card



Phone memory



Voice recognition

Del. Phonebook

You can select the phonebook to be deleted. The phonebooks available for deletion depend on the SIM card used. You will be asked to enter a security code before the delete operation (see page 59).



SIM card (PIN)



Special SIM card (PIN2)

Phone memory
(phone code)

Info

- Always enter the full number with the area code (e.g. 0171 for London).
- If you travel abroad often, you should enter all phonebook entries with the international dialling code (e.g. +49 for Germany).

Saving a Control Code

You can store phone numbers and control codes (digits) together in the same way as a normal phonebook entry. This is useful if you want to control an answerphone remotely.




Enter the phone number.



Hold down until "+" appears (pause to establish connection).



Enter the control code (digits).

You can hold down  again to create a further pause of three seconds to ensure the digits are processed correctly on the receiver side.



Press.



Enter name.



Save.

Alternatively, just save the control code (digits) and send it during a call (see page 21).

Info

Improved Phonebook Management

You can use the "SoftDataLink 3" accessory to create and manage your phonebook entries via a PC/PDA (see "Accessories", page 74).

Service Provider Expansions

Your service provider may have added important service numbers to your phonebook or can do this on request.

Phonebook Restrictions

Please note that the use of your phonebook can be restricted (normal for some business applications).

Incomplete phone numbers can be identified with a "?" in a restricted phonebook. These numbers can be completed before dialling.

During a Call

You can also use the phonebook during a call, e.g. to look up a number or to send a control code.


Fast Access Keys

17

The left soft key and the number keys 2 to 9 can each be assigned an important phone number or one of the functions listed below. The phone number can then be dialled, or the function can be started at the touch of a button.

- **Phone Number** (page 12)
- **Internet** (page 24)
- **Write Message** (page 38)
- **Calendar** (page 29)
- **IrDA** (infrared) (page 63)
- **Calculator** (page 32)
- **Currency Conv.** (page 33)
- **Games** (page 35)
- **Sprachwahl** (page 14)
- **Select Group** (page 61)

Soft Key

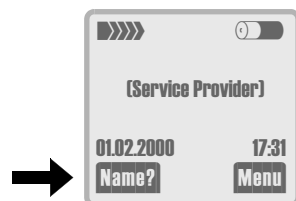

The left soft key can be used for fast access.

This may be temporarily replaced with / , for example, for access to a new message.

Your service provider may have already programmed this key (e.g. access to SIM Services”).

Setting

When making initial settings:

Name? Press.

Select a function.

If you select **Phone Number** the phone-book will be opened.

Select a name by entering the first letter and/or scroll to the relevant entry, e.g. **Office**.

or

If you select an application (e.g. **Games**), this is set directly on the soft key.

Select Press.

Use

Office Press.

OK If a phone number is set on the fast access key, this is dialled or, alternatively, the application is started.

or

Office Hold down.

Changing

Office Press.

Change Press.

Proceed as described above under “Setting”.

If you do not want to assign a function to the left soft key, then select the entry **<Empty>**.

Fast Access Keys

Digit Key

Digit keys 2 to 9 can be used as speed dialling numbers for fast access.

Digit key **1** should be used for the phone number for checking the mailbox.

Setting


To set a digit key for the first time, e.g. 2:

2ABC Press the digit key.

Set Press.

 Select a function.

If **Phone Number** is selected, the phonebook is opened for a number to be chosen.

 Select a name by entering the first letter and/or scroll to the relevant entry, e.g. **Office**

or

If you select an application (e.g. **Games**), this is set directly on the soft key.

Select Press.

Use

Either a stored phone number is dialled or a stored application is started. In standby mode:

2ABC Press.

The setting for 2 appears instead of the left soft key, e.g.:

Games Press.

OK Press.

or

2ABC Press.

 Press.

Changing

2ABC Press the digit key briefly; the current setting will appear (e.g. **Games**).

Games Press.

Change Proceed as described under "Setting".

Fast Menu Access

All menu functions are numbered. A function can be selected directly by entering the number sequence.

For example, to activate the stopwatch:

Menu Press.

2ABC for **Office & Fun**

8TUV for **Chronometer**

2ABC for **Stopwatch**

During a Call

19


Volume Control

- The volume can be adjusted using the keys on the left side of the phone.

Call Waiting



During a call you can be advised that there is another call waiting. You may need to register for this service and set your phone (see page 62). You will hear a special "call waiting tone" during the call.

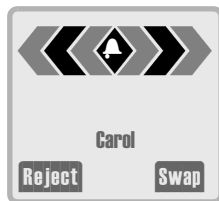

You have 3 options:

1 Swap



This accepts the waiting call and places the current call on hold.

Call swapping:
You may swap back and forth between both calls (see page 20).

2 Reject Waiting Call



Rejects the call; the caller hears a busy tone.

or



If this is set, the call is diverted to the answerphone or mailbox, for example (see page 45).

3 End Current Call, Answer New



Press to end the current call. The waiting call will ring.



Answer the new call.

Play Back Recording



The keys on the right side of the phone can be used to play back a recording (see also page 67). The person called will also hear the recording (see "Voice Memo", page 22).

Notebook

You can enter a phone number during a call (the person on the other end may hear your entry). This number can be stored or called after you have ended the call.

During a Call


Conference/Toggling

You can call an additional number during a call.



You can swap back and forth between both calls or link all callers together in a conference. A conference can include up to 5 participants.

During a call, explain your intention:



then press .

The current call is put on hold.

 /  Enter a phone number or select one from the phonebook.



Establish the new connection.

Three options are now available:

1 Swap

Swap

You may swap back and forth between the two calls as required.

If the current call is terminated you will be asked: "Return to call on hold?"

Yes

Return to the held call.

No

The held call is terminated.

2 Conference

Menu

Press, select **Conference**.

A held call is joined (conference line for up to 5 subscribers).

3 End Connection



Press. All calls are terminated.

Your service provider may not offer all the functions described.

During a Call

21

In Call Menu

The following functions are only available during a call.



The menu is displayed; now select the required function.

Volume Control
Microphone off
Conference
Hold Call
Time/Cost
Send DTMF tones
Call Transfer
MAIN MENU
Call Status

Volume Control



The left soft key or the keys on the side of the phone are used to adjust the handset volume.

If Car Kit Comfort is used, this arrangement does not affect the usual setting.

Microphone off

You can switch the microphone on or off. If it is switched off, the person on the other end will not be able to hear you.

Conference (see page 20)

Hold Call

The current call is placed on hold.

Time/Cost

You can check current call time and cost (if programmed, see page 53).

Send DTMF tones

You may transmit control codes (digits) for controlling an answerphone and other device.

From the Phonebook

Establish a connection with the device, then



Open the call menu and select **Send DTMF tones**.



Press. Select the name of the control code in the phonebook.

Manual Entry

After a connection is established.



OK Enter the digits for the control code.

Call Transfer

Joins the original call to the second one. You are no longer connected to either call. This function may not be supported by all service providers.

MAIN MENU

This is fast way to access other menus, for example to check a message (see also page 23).

Call Status

All held and active calls are listed (e.g. participants in a conference).

Voice Memo

The voice memo feature enables you to:

- Record a conversation - useful if you are given a phone number or address.
- Dictate a memo as a reminder or for others to hear.
- Add a memo to an appointment in the Organizer.
- Record a message and play it back to a caller (see for example "Silent Answer", page 67).

Recording

- Hold down the memo key on the right side of the phone for the duration of the recording.

A beep indicates the start of recording.

Release the key to stop recording.



A beep will warn you when the memory is almost full (max. 20 seconds).

Pause

- Release the memo key to pause, then press it again (within 10 seconds) to resume.

A pause of more than 10 seconds will end the recording.

A new memo will replace the oldest one when the memory is full.

Soft keys

The soft keys can be used instead of the keys on the side of the phone.

Playback

- Press the memo key briefly.
The person on the other end of the line can also listen to a recording during a call.

Main Menu Information

23

Main Menu

The main menu gives you access to important phone functions and settings. In standby mode, this is accessed with the right soft key:

Menu Open the main menu.

The main menu contains the following functions:

Usage Hints (operating instructions)
(SIM Services)
(Internet)
Office & Fun
Messages
Records
Profiles
Audio
Time/Charge
Divert
Setup

All menu items open a submenu in which the required functions can be selected.



Press briefly to jump back one menu level.

Hold down to jump back to standby mode (see page 8).

Menu Mode

To make it easier for new users to learn how to operate the phone, the comprehensive main menu is reduced to the key functions (see also page 56).

Menu → **Setup** → **Menu Mode**

SIM Services (optional)

Your service provider can offer special applications through the SIM card, such as homebanking, stock market, etc.

If you are registered for one of these services, the service name will appear at the top of the main menu or directly above the left soft key



SIM service icon.

If there is more than one application, these are displayed in the "SIM Services" menu.

Menu → **SIM Services**

With the SIM Services menu your phone is future-proof and will support additions to your service provider's service. For further information contact your service provider.

Internet

(not always available)

Fast access to the Internet browser from the main menu.

For a more detailed description, see page 24.

A different function may have been assigned to this menu item by your service provider.

Office & Fun

Office & Fun contains the following functions:

Internet
Calendar
Appointments
Calculator
Currency Conv.
Business Card
Games
Chronometer

Internet

Your telephone provides access to the Internet. On account of the limited display size, Internet information is shown in a special format adapted to the display options available on the phone. For this reason, not all Internet services are available. Information on the scope of the available WAP services is available on the Internet or from your service provider.

Internet access may require registration with your service provider.

Settings

An access profile must be set before initial access.

Setting are frequently preprogrammed by your service provider. If not, the connection must be configured. The service provider can update the settings via an SMS message.

The corresponding functions can be found under **Profiles** in the browser menu. Contact your service provider, if necessary.

Switch Key

The **right** soft key can be used to activate any of the functions depending on the current situation. To switch between these different assignments, press the **right side** of the soft key.



Press to switch.



Press to select.

Possible selections, e.g.:



Jump to an Internet site (online).



Confirm menu selection.



Display the submenu.




Display browser menu.

Internet Access

Menu → **Office & Fun** → **Internet**

The following appears when the function is activated if no pages from a former session were saved:

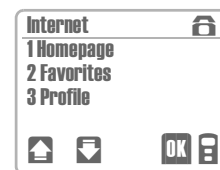

Scroll to select a menu or enter a number.





Press.


Office & Fun

25


Please note that WAP utilisation incurs additional costs (see also **Linger-time** below).


 Online,  Offline

The online/offline display appears on the top right in the display.

 Press repeatedly to change the display: title bar, scrollbars, soft keys are removed, etc.

Browser Menu

 Press until **@Menu** appears.

 Open the browser menu.

Homepage


The first WAP Internet site displayed after you establish a connection (may be defined/preset by the service provider).

Favorites

Up to nine of your most important WAP sites are displayed for fast access.

Favorites

Output of list. Mark a (where applicable blank) line.

 Press until **Menu** appears.

Change Select to change or enter an entry.

Clear Select to delete the current entry.

Navigation

Go to URL

Input option for direct Internet address selection.

Show URL

(Uniform Resource Locator)
Displays the current Internet address visited.

BrowserReset

The browser is reset, the sites saved are deleted.

Disconnect

Terminate the activate data connection.

Profiles

Up to 5 profiles can be created irrespective of the service provider (see next page).

Services

Channels

Load WAP pages to the telephone and then read offline.

Outbox

E-mails that are to be sent later, for example, can be stored here (depending on the service provider).

About Phone.com

Displays the current browser version.



Terminate the Internet connection.

Special characters

(as in the case of SMS text editor)



press 3 times for /



press 3 times for @



press 4 times for . (full stop)

Profiles

You can set or modify the maximum 5 access profiles as necessary. Inputs and functions can differ depending on the service provider.

Profile Settings

Proceed as follows to set up a new profile:



Open the browser menu.

Profiles

Select and confirm with **OK**.

Profile1..5

Select a profile and confirm with **OK**.

Settings

Select and confirm with **OK**.

You can leave the list once all entries have been made:



Press briefly.

Your service provider will inform you which entries must be made in the following list.

Activate the input functions one after the other and confirm the entries with **OK**:

Profile name

You can give the profile another name.

Dial-up number

Enter the node dial-in number.

Call type

Select whether ISDN (V.110) or analog (V.32).

Log-in name

Enter the user name.

Password

Enter the password.

IP address

Enter the IP address.

Port

Enter the gateway.

Homepage

Enter the homepage (see also **Navigation** in the browser menu).

Linger-time

Enter the time in seconds after which a connection should be cleared down if **no** entry is made.

Office & Fun

27

Activate

Activate a set profile.

Profile 1..5 Select the required profile and confirm with **Pick**.
* Marks the activated profile.

Encryption

Specific sites can be encrypted to guarantee secure data exchange.

Verify Key


Check the existing key.

New Key

Request a new key from the service provider.

The **Encryption** menu item only appears if a profile is activated.

Overview of profile settings structures:

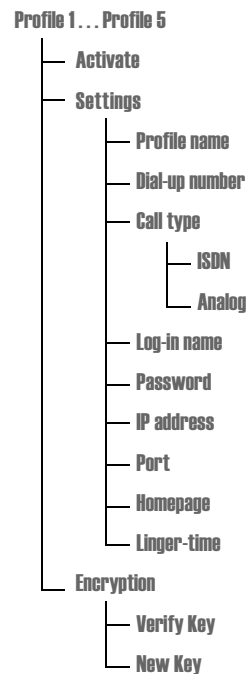

Phonebook Key



A menu can be opened during a WAP session:

Add Bookmark



Insert the current online page as a new bookmark.

Homepage

See Browser Menu.

Favorites

See Browser Menu.

You Internet browser is licensed by:



Office & Fun

29

Calendar

Menu → Office & Fun → Calendar

The Calendar offers you

- a monthly view
- a weekly view
- a daily view

For the Calendar to work correctly, you must set the time and date, see page 64.

Monthly View



Scroll between days, weeks or months, depending on the active view.



The highlighted day is displayed. Entries/appointments can be created or edited (see "Appointments", page 30).

Calendar Functions

Highlight the required day.

14 The highlighted day is displayed in reverse video.

23 Days with entries are displayed in bold.

Daily view.

Weekly view.


Monthly view.

D21 Displays the current day (1-366).

W4 Displays the current week (1 - 53).

The days are shown from left to right (Monday to Sunday).

Weekly View

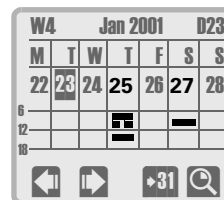

Scroll between days.



Highlighted day is displayed.



One appointment.




Several appointments.

Each column is divided into two groups of six hours (morning + afternoon).

Appointments

Menu → **Office & Fun** → **Appointments**

You can enter several different appointments for each day in the appointments list. When an appointment time is reached, you will hear an alarm (setting the clock, see page 64).

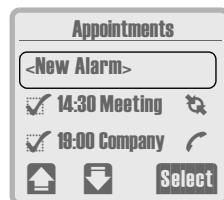

Entering a New Appointment

Select **<New Alarm>**.

Select Press.

Change the date and time as necessary.

Simply press to set an appointment with recurrent alarm.

Select the alarm: **Date, Daily, Weekly, Monthly, Yearly**

Select Confirm selection.

OK The default alarm type is **Memo**.

Change Select a different alarm type or enter a short text.

Alarm Types



Memo

Short note (max. 16 characters).



Call

Enter the phone number or select from . This number is displayed with the alarm.



Meeting



Birthday



Voice Memo

Recording, see page 22.

Select

A short note can be appended.

OK

Save the alarm entry.

Info



Display indicates that an alarm is active.

- A total of 30 entries can be created.
- An alarm sounds even when the phone is switched off. It is deactivated by pressing any key. Press **Pause** to delay the alarm by 5 minutes.
- Setting: Alarm tone, see page 51.
- Setting: Clock, see page 64.
- All appointments/alarms can be set using either **Appointments** or **Calendar**.




When travelling by plane please note that alarms are activated even when the phone is switched off.

Office & Fun

31

Deleting an Alarm Entry

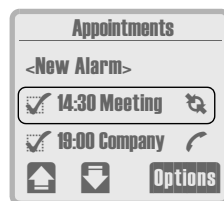

Select the required alarm.

The following menu is displayed.

View Entry
 Activate Alarm/Deactivate Alarm
 Delete Entry
 Modify Alarm
 Clear List
 Send as Text
 Send via IrDA
 Print via IrDA

View Entry

The selected alarm entry is displayed.

Activate Alarm/Deactivate Alarm

A deactivated appointment can be reactivated, and vice versa.

Delete Entry

An entered appointment is deleted from the list of appointments and from the Calendar.

Modify Alarm

See "Entering a New Appointment", page 30.

Clear List

All entered appointments are deleted.

Send as Text

Sends the appointment data as a text message.

Send via IrDA

The alarm entry is transferred to another phone or PC using infrared technology.


Print via IrDA

The alarm entry is transferred to a suitable printer using infrared technology.

Calculator

Menu → **Office & Fun** →
Calculator



Enter the first number.
( sets the decimal point).



Press the right end of the left soft key repeatedly until the required calculator function is displayed.



Repeat the procedure with other numbers.



The result is displayed.

Additional functions



Change operational sign
+ and -.



Conversion to percentage.



Saves the number
displayed.



Retrieves the number
stored.



Exponent (one digit only).

Info



corresponds to soft key =



corresponds to soft key *

Office & Fun

33

Currency Conv.

Menu → Office & Fun → Currency Conv.

You can use the currency converter to calculate any combination from three different currency rates.

Entering a new Currency Pair

Before using this function for the first time, you must set the currencies and exchange rates (max. 3).

If a currency pair has not yet been entered:

Own into Foreign Press.

Select Press.

/ **OK** Enter the symbol for your own currency, e.g. DM.

/ **OK** Enter the symbol for the foreign currency, e.g. € (Euro).

/ **OK** Now enter the relevant exchange rates, e.g. DM = 1, then € = 0.491.

OK Confirm.

If a currency pair has already been entered:

Select Press.

Finally, select the **<New Entry>** menu item as described under "Edit Exchange Rates".

Edit Exchange Rates



Select the required pair from the list:

Select

Press. The following menu is displayed.

Convert
New Entry
Edit Entry
Delete Entry

Convert



Enter the amount to be converted.



Start conversion to other currency.

Repeat

Make a new entry.

New Entry



OK Enter new currencies and exchange rates.

Edit Entry



For example, to alter the exchange rates, proceed as described under "Entering a new Currency Pair".

Delete Entry

The highlighted entry is deleted.


Office & Fun

Business Card

Menu → Office & Fun → Business Card

You can create your own business card and send it as a message via SMS or using infrared technology to another GSM phone (with IrDA capability) or a suitable PC/printer.

If a business card has not yet been created, you will be prompted to make an entry.

 / **OK** Entries are made as follows:

<First name>
 <Name>
 <Company>
 <email (Office)>
 <Phone>
 <City>
 <Postcode>
 <Street>

Info

- The content and sequence for the business cards corresponds to the international standard (vCard).
- When sending a business card note that no more than 160 characters can be sent via SMS.

Business Card Menu

Options Press. The following menu appears:

Send as Text
Send via IrDA
Print via IrDA
Edit Text

Send as Text

Send via SMS (see page 44).

Send via IrDA

The business card is transferred to another phone or PC using infrared technology.

Print via IrDA

The business card is transferred to a suitable printer using infrared technology.

Edit Text

Proceed as for new entry.

Office & Fun

35

Games

Menu → Office & Fun → Games:

Wayout
Reversi
Quattropoli
Minesweeper

Wayout

Find the way out of a 3-dimensional labyrinth.

Options Provides tips on how to play the game, show the highest score and allows you to set the level of difficulty.

Start Start game.


Reversi

Try to obtain as many counters as possible by "trapping" your opponent's counters.

Options Provides tips on how to play the game, allows you to define who begins and set the level of difficulty.

Start Start game.

Controls for Wayout and Reversi:

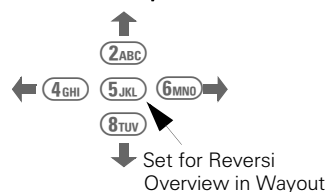

Quattropoli

Drop the counters into a field from above. The object of the game is to be the first to have four counters in a row (horizontal, vertical, diagonal).

Options Provides tips on how to play the game, allows you to define who begins and set the level of difficulty.

Start Start game.

Controls:




Minesweeper

Find all fields with no mines.

Options Provides tips on how to play the game, allows you to set the playing field and shows the highest score.

Start Start game.

Controls:

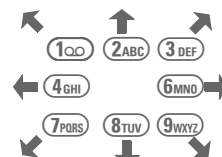

Digit Shows the number of mines in the surrounding fields.

*△ Uncovers a field.

##-o Mark a field that you suspect contains a mine.

0+ , 5JKL Uncover if the number of mines and hits is equal.

Office & Fun

Chronometer

Menu → Office & Fun → Chronometer

The following menu is displayed:

Alarm Clock
Stopwatch
Countdown

Alarm Clock

You hear a beep at the set time if the telephone is activated.

On, Off

The setting is made as described under "Appointments", page 30.

- Setting: Beep, see page 51.
- Setting: Clock, see page 64.

Stopwatch

Displays the time to 100th second.



Start/stop stopwatch (you can also use the key on the right side of the phone).



Display interim time (you can also use the key on the left side of the phone). Last time is stored.



Reset to zero.



Press. The following functions are available:

Save Entry

The current entry can be assigned a comment and saved.

Edit Entry

The comment can be changed.

Delete Entry

The current entry is deleted.

Stopwatch List

A list with the relevant entry date is displayed.

Clear List

The list is deleted.

Countdown

A set period elapses. The last 3 seconds are indicated by a beep. A special beep sounds at the end.



The period can be entered.



Starts the counter.

Messages

37

You can use your phone to receive and send written messages (SMS) and to receive voice messages and info services.

Text entry with "T9" enables you to write long messages very quickly (see page 40).

Reading New Messages



Indicates a new message on the display.




Press .

The message is displayed.

Line 1: Date and time

Line 2: Phone number /name of sender

Line 3: Message

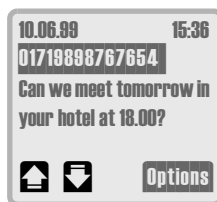

Scroll.

Deleting a Message

At the end of the message you will be asked whether you want to delete this message.

You should always delete messages when possible as the capacity of the SIM card is limited. If it is full ...



... the message symbol flashes and **no more** messages are received.

Reading Old Messages

Saved messages can be selected and then read in the incoming or outgoing list (see page 43).

Info

Options

Access the message menu with further functions (see page 43).



You can scroll page-by-page using the keys on the left side of the phone.

- A phone number/name inversely displayed in the message can be:



Stored in the phonebook.



Called.

- New messages may be displayed immediately on receipt (depending on the network).


Messages

Creating a New Message

Menu → **Messages** → **Write Message**
→ **Create New**



Create the message
(for text entry see
page 40).

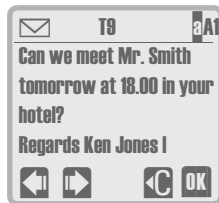

Open the text menu.

Select **Text senden**.

Adding a Phone Number



Enter a phone number or
select one from the
phonebook.

Send



The message is trans-
ferred to the service cen-
tre for transmission. If the
service centre's phone
number is not stored
(page 44), it must be en-
tered each time a mes-
sage is sent.

Set Message Type / Validity Period

The **Variable** setting can be used to
change the message type or validi-
ty before each call (see page 44).

Text Menu

The text menu offers additional
word processing functions, such as:

Send Text
Save Text
T9 Text Input
T9 Language
T9 Info
Insert new line
Clear Text
Insert Picture
Print via IrDA

Send Text

Enter the recipient's phone number
or select this from the phonebook
and send.

Text sichern

The text is saved.

T9 Text Input

Activate or deactivate intelligent text
entry (see also page 40).

T9 Language

Select the language you want to use
for the message.

T9 Info

User information.

Insert new line

A line break is entered.

Clear Text

Deletes the whole message; the
text field of the editor is cleared.

Messages

39

Insert Picture

The message can include symbols. In this case, the message can only be played back via telephones that support this function.

Print via IrDA

The message is transferred to a suitable printer using infrared technology.

Text Input with "T9"

When using "T9" for entering messages, you only need to enter one keystroke for each letter. T9 deduces the correct word from the individual key entries by making comparisons with a comprehensive dictionary. If a number of letters is possible with a key combination, T9 chooses the most common word and offers a list of possible alternatives.

Writing a Message



Enter the desired word by pressing the key with the appropriate letter only **once**, e.g. for "off":

6 MNO 3 DEF 3 DEF

Because the display is constantly changing during input, it is best to write a whole word without looking at the display.

T9 converts language-specific special characters, e.g. ä. Simply enter the corresponding default character in the message, e.g. a.

Once you have completed your input, check whether the word displayed is the one you want. If so, terminate it, otherwise correct it:

Terminate a Word

100

Blank.

0 +

Press repeatedly for full stop or comma.

→

Move to the right.

Corrections

123

Press. Additional possible letter combinations may be displayed.

The current number of the alternative proposal is displayed in pointy brackets in the lower margin, the number of the selected alternative proposal is highlighted.

If no further entries are made, the displayed word is incorporated in the message.

123

Press to scroll through the list of alternative proposals.

The last entry in the list is the entry **manual**. Select this entry to enter the desired word manually.

This word is automatically incorporated in the dictionary.

Messages

41

Words that were written with T9 can also be correct subsequently:



Move left/right word by word until the desired word is highlighted.



Press to scroll through the list of alternative proposals.

Setting the T9 Language

T9 functionality cannot be used until the language in which the messages are to be written is set:

Menu → **Messages** → **Write Message** → **Create New**



Press before starting your entry.

Select **T9 Language** and set the language.

Activating/Deactivating T9

Menu → **Messages** → **Write Message** → **Create New**



Press before starting your entry.

Select **T9 Text Input** to activate or deactivate T9.

You can also activate/deactivate T9 temporarily. This setting then remains active until you quit the text editor for entering messages:



Hold down to activate or deactivate T9.

Info



In T9 mode the cursor jumps from word to word.



Switch: Uppercase and lowercase.

Hold down: closes T9 temporarily.



Switch: Numbers and letters.



Blanks: Ends a word.

Smart Punctuation

If a full stop is entered in a word with (0 +), then this is considered to be a wildcard for a separator that will be assigned by T9 in the case of subsequent input. For example, the full stop in the string

(2ABC) (2ABC) (6MNO) (0 +) (8TUV)

is automatically converted into an ', thereby creating the word "can't". A blank ((100)) after (0 +) terminates the word ("can.").

Special Characters

Press the key repeatedly until the character appears.

(100) Blank 1 € £ \$ ¥



. + 0 - . , : ?



¿ ! ¡ " ' ; _



A - a * / () < = >



% □



A - 1 # @ & § Γ Δ Θ



Λ Ξ Π Σ Φ Ψ Ω

T9 Text Input is a registered trademark and a patented technique from Tegic Communication, Inc.

Messages

Preformatted Messages

The phone contains a number of preformatted messages that only need to be supplemented with the time and date.



In standby mode:



Menu → **Messages** → **Write Message**, then select the required message:

Create New (see page 38)
Late
Appointment
Anniversary


The cursor appears at the first input point, e.g. in the case of "late".



 Complete the message.
 Jump to the next input point.


  Enter the phone number or select from the phonebook.



Info

- A message is confirmed as sent by the phone with the text "Message Sent". The message is stored in the outgoing list and can be selected and re-read there.
- The "Message sent" text only indicates that the message has been transferred to the service centre. The latter now tries to deliver the message within a certain period (see "Validity Period", page 44).
- If the phone was unable to send the message, a retry option is available. If this attempt also fails, then check the phone number of the service centre, see page 44.
-  can be used instead of **Send**.
- You can also edit your messages using a PC (see "SoftDataLink 3.0", page 74).
- You can edit messages you receive (see "Edit Message", page 43) and store them or send them as your "own" messages.

Forward Message

If the message appears on the display:

 Press (if no phone number is highlighted).

 /  Enter phone number or select from phonebook.


OK / **Send** Press.


Messages

43


Incoming / Outgoing

Your messages are stored in the incoming and outgoing lists. The number of messages stored is displayed after the relevant function. These can be read, changed and re-used.

Menu → **Messages** → **Incoming 3 / 3** or **Outgoing 3 / 3**
 Scroll and read as required.

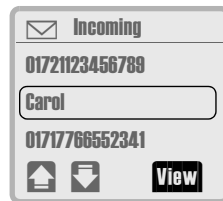



Press 



 You can also scroll page-by-page using the keys on the left side of the phone.

Highlighting messages in:

Incoming:

-  Read.
-  Unread.

Outgoing:

-  Not sent.
-  Sent.

Message Menu

A message is displayed.

Options Select a function.

Reply (incoming only)
Delete Message
Edit Message
Send Message
Print via IrDA
Capacity
Status Report (outg. only)

Reply

Write Message, Edit Text,
Answer is YES/Answer is NO,
Please Call Back, I'll be late

The text of a received message can be changed, supplemented or combined with one of the standard reply texts to form a new message.

Delete Message

The message is deleted.

Edit Message

The message is displayed in the editor for changes.

Send Message

Enter a phone number or select one from the phonebook, then send.

Print via IrDA

The message is transferred to a suitable printer using infrared technology.

Capacity

Displays the max. number of messages and the number of already stored messages.



Status Report

Subsequent request for a report on the read message.

Messages

Sending Business Cards

Menu → Messages → Send Bus. Card

 /  Enter phone number or select one from phonebook and send as a normal message. For creating business cards, see page 34.

Up to 160 characters can be transmitted as SMS.

Setting

The phone number of the service centre can be entered here and other settings can be made.

Menu → Messages → Message Setup, then select one of the functions.

Service Centre
Message Type
Validity Period
Status Report
Direct Reply

Service Centre

Enter or change the service centre phone number supplied by the service provider.

Message Type

Select a message type for sending to special terminals. The different message types (e.g. e-mail) may be assigned to different service centre phone numbers. Contact your service provider for details.

The current setting is displayed after the function has been called up. To change the setting:

Change Select the required type:

Variable
Standard text
Telex
Fax
Email
X400
New

Variable (default)

The message type has to be confirmed each time before it is sent.

Standard text

All messages are transferred as normal SMS messages.

Telex, Fax, Email, X400

Special types of messages.

New

You may need to obtain the code number from the service provider.

Validity Period

Select the period in which the service centre is to attempt to deliver the message:

Variable, 1 hour, 12 hours,
1 day, 1 week, Maximum, New.

Status Report

You will receive confirmation of whether or not a message you have sent has been delivered. This service may be subject to a charge.

Direct Reply

The answer to your message is handled via your service centre (contact your service provider for details).

Messages

45

Voice Message



The service centre provides you with an external answering service (mailbox). Calls you cannot answer or do not wish to answer are diverted to this mailbox. The caller can leave a voice message for you there.

The voice mail service may be part of your service provider's user package. Otherwise, you will need to register and the settings must be made manually.

The following descriptions may vary, depending on the service provider.

Setting Voice Mail

You will receive two phone numbers from your service provider and these are entered as follows:

1 Mailbox Number

This is the phone number you call to listen to your voice mail. To set this:

Menu → **Messages** → **Voice Message**

/ Enter the phone number or select it from the phonebook.

OK Confirm.

2 Divert to Mailbox

Calls will be diverted to this phone number for your mailbox.

A call is always diverted on the basis of a condition (see page 54). The most frequently used condition, "unanswered calls", has been used in the following example. To set:

Menu → **Divert** → **All Unanswered** → **Set**

Enter the phone number.

OK Register call forwarding to the mailbox on the network. Call diversion will be confirmed after a few seconds.

Messages

Listening to Voice Mail

A new voice mail will be displayed as follows:



Appears on the display (with a beep).



You call your mailbox and play back your messages.

or



Appears on the display (with a beep).



A written message informs you that a new voice mail has been received.

Calls your mailbox.

or

You receive a call with an automatic announcement.

Info



Set the mailbox phone number on the key indicated (see "Digit Key", page 18).

- It may be necessary to call a different mailbox number when outside your home network.
- If a password (digits) is required to access your mailbox, then you can store this in the phonebook along with the phone number (see page 16).

Messages

47

Information Services

Your service provider may offer Cell Broadcast where specific local information is broadcast, e.g. weather and traffic services (info channels). Different topics are covered by the various service providers.

If "Cell Broadcast" is active, you will receive messages on the active topics in your "Topic List".

Menu → **Messages** → **Cell Broadcast**

Broadcast
Read New CB
Topic List
Auto Display
Topic Index
CB Language

Broadcast

You can activate and deactivate the CB service. The operating time of the phone will be reduced if the CB service is activated.

Read New CB

All unread CB messages are displayed (across the whole display scroll using the side keys).


Set Topics

You can add 5 topics to this personal list by selecting them from the Topic Index (see page 48) or entering them yourself with the name and channel number. Depending on the SIM card, other channel numbers without names may be possible.

New Topic


<New Topic> Select.

- If there is no Topic Index as yet (see page 48), then

 **OK** enter the topic and the channel number.

Select Press.

- If the Topic Index has already been transmitted, then

 select a topic.

Select Press.

Selection from a list

You can edit entries in the topic list.

 Select a topic.

Options Select the required function.

View Topic

If a message exists for the selected topic, then it will be displayed.

Activate Topic/Deactivate Topic

Edit Topic

You can change the name and channel number.

Delete Topic

The topic is deleted from the list after confirmation.

View Topic ID

The channel number is displayed.

Messages

Auto Display

CB messages are displayed in standby mode and long messages are automatically scrolled.

 / **View CB** Press.

Switches to "Full page view".

Automatic display can be set for all messages or only for new messages, or can be deactivated.

A beep can be set for this purpose (see page 51).

Topic Index

The list of topics currently provided by your service provider is displayed for selected purposes.

If no list appears, then the IDs can be entered manually (see page 47). Please consult your service provider for further details.

CB Language

You only receive Cell Broadcast messages in the selected language. "All Languages" means that messages are received in all languages.

Info

Displays



Topic activated.



Topic deactivated.



New messages received on the topic.



Messages on the topic already read.

Phone numbers in reverse video can be



dialled.



stored in the phonebook.

Records

49


The phone records the phone numbers of the most recent calls, enabling you to call back.

Menu → **Records**, then select the call list.

Calls missed
Calls received
Calls dialled
Alarms missed



Scroll and select a phone number from the list.

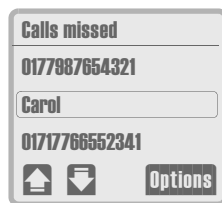

The highlighted phone number is dialled.

Calls missed



The phone number of calls you have received but not answered can be recorded for callback purposes (providing the network supports the "Caller Identity" function). Please note that the caller may have left a voice mail (see page 45).

Calls received



The phone numbers of calls that you accepted are saved for callback. Numbers can only be listed if the network used supports the "Caller Identity" feature.

Calls dialled

Fast access to the last phone numbers you dialled. In standby mode:



Press.

Call List Menu

The call list menu can be called up if an entry is highlighted in the display.

Options Select the required function:

View Entry
Edit Number
Save Number
Clear List

View Entry

The phone number, name (if available) and time of the call are displayed.

Edit Number

A phone number can be edited and then dialled or transferred to the phonebook (see page 12).

Save Number

A phone number can be transferred to the phonebook (if not already contained there).

Clear List

The complete call list is deleted after confirmation.

Alarms missed


Appointment alarms you have failed to respond to are listed and can be displayed and edited (see also page 30).

Profiles

You can store individual settings for certain functions in a personal profile, or select one of three standard profiles.

If, for example, the phone is used by different users, each one can activate their settings by selecting their own profile.

Menu → **Profiles**, then select the required profile:

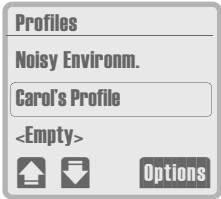

Standard Profiles

You can choose between the following "Situations":

Normal
Quiet Environm.
Noisy Environm.



Scroll and select the required profile.

Options

The profile menu is displayed.

Personal Profiles

To set your personal profile:



Scroll to: **<Leer>**

Options

The profile menu is displayed.

Profile Menu

Activate Profile
Change Settings
Rename

Activate Profile

A selected profile is activated.

► Profile activated.

Change Settings

A list of adjustable functions is displayed:

Ringer Setting	page 51
Volume	page 51
Melodies	page 51
Vibration	page 51
Call Screening	page 51
Service Tones	page 52
Key Tone	page 56
Short Menu	page 23
Big Letters	page 57
Bitmap Style	page 57

Select the required function and adjust the settings in the usual way. When a setting is complete, you will automatically return to this selection list.

All settings are stored in the current profile.

Rename

You can give the selected profile a new name (this does not apply to the standard profiles).

Audio

51

Menu → **Audio**,
then select one of the fol-
lowing functions:

Ringer Setting
Volume
Melodies
Vibration
Call Screening
Service Tones
Record Melody

Ringer Setting

The ringer can be activated and deactivated or reduced to a short signal.



Display if ringer is deacti-
vated.



Ringer on/off

Volume

The volume can be set differently
for a variety of signals:

Any Call
Call
VIP-Call
Alarm
Message
Cell Broadcast



Display for increasing
volume.

Any Call

If two independent phone numbers
are registered for your phone, you
have the following choice:

Both Lines
Line 1
Line 2

Melodies

You can also set a melody instead of
a signal (same procedure as for vol-
ume).

A variety of melodies are provided,
or compose your own melody (see
page 52).

Vibration

If you do not wish to disturb those
around you, you can activate the vi-
brator instead of the ringer. This can
also be activated in addition to the
ringer (e.g. in a noisy environment).

Call Screening



Only those calls with phone
numbers stored in the phonebook or
VIP Phonebook are signalled acous-
tically.

Other calls only appear on the dis-
play. If you do not answer these
calls, they will be diverted to your
mailbox (if activated, page 45).



Display when active.

Service Tones

The following service and alarm tones can be activated or deactivated:

All
Welcome/G.bye
Network found
Warnings
End of Menu

Record Melody

You can compose a melody of your own and then use it in the same way as the melodies provided (see page 51).



Keys 1 to 7 correspond to the notes C, D, E, F, G, A, H.



Play the melody and re-wind.



Increase length of note.



Reduce length of note.



One note higher.



One note lower.



Insert a pause.



The octaves are changed with the keys on the left side of the phone:

Upper key: higher

Lower key: lower



The menu contains other functions, such as. **Playback, Save Melody, Insert Note, Delete Note** etc.

Time/Charge

53

You can display the charge details and duration of calls as you speak, as well as setting a unit limit for outgoing calls

Menu → **Time/Charge**, then select a function:

Charges
Charge Setup

Charges



When you have adjusted the settings (see below) you can display the details of the following calls:

Last Call
All Calls out
All Calls in



Scroll and select the required call.

Select Display the data.

After the data has been displayed, you can:

Clear Clear the display.

Options If a restriction exists (see right) then the remaining credit or time is displayed.

Charge Setup

Currency

Enter the currency in which charge details are to be shown.

AdviceOf Charge



If your network supports charge detail display, then the current units are shown.

If you have set the charge per unit, then the costs incurred are displayed.

It may be necessary to register separately for this service.

Personal Rate

Enter the charges per unit/period.

Charge Limit



Special SIM cards allow you or the service provider to define credit/period after which the phone is blocked for outgoing calls (PIN2 required).

Change Press.

OK Enter the number of units. Then confirm the credit or reset the counter.

Combined In/Out

Display the call time/charge details for all calls.

Charge Incoming

Display the charge details for incoming calls if these are billed separately.

Auto Display

The length of call and charge details are displayed after every call.

This network function diverts calls to your mailbox or to other numbers chosen by yourself. This means that you are always reachable.

Menu → **Divert**,
then select a function:

All Unanswered
All Calls
Specific Divert
All Fax Calls
All Data Calls
Status Check
Clear all Diverts

Divert



The most common condition for call diversion is:

unanswered calls

This and other conditions are set in the same way:


Menu → **Divert** →
All Unanswered → **Set**

If a phone number is not yet entered to which calls are to be diverted:

 /  Enter the phone number.

OK Confirm.

or

 Press if offered to divert to your mailbox.

After a short pause the setting is confirmed by the network.

Divert Conditions


All Unanswered

This covers the key conditions (see also below):

- If not Reachable
- If no Reply
- If Busy

All Calls

All calls are diverted.

 Symbol in display.

Specific Divert

Different call types can be diverted to different phone numbers with the following conditions.

- If not Reachable

Call diversion if the phone is deactivated or out of range.

- If no Reply

A call is only diverted after a delay. The period can be set in intervals of 5 seconds up to a maximum of 30 seconds.

- If Busy

Calls are diverted when a call is in progress.

All Fax Calls

Fax calls can be diverted to a phone number with a fax connection.

All Data Calls

All data calls can be diverted to a phone number with a PC connection.

Divert

55

Status Check

A check is made in the service centre to see which call diversions are set.

If you wish to check a certain call diversion, including the number, then first select the condition, followed by **Status Check**.

After a short pause the network will transmit and display the current situation.



Indicates a set condition.



Indicates an unknown status (e.g. new SIM card).

Info

Please note that call diversion is stored in the network and not in the phone.

Clear all Diverts

All set call diversions are deleted.

Reactivating Call Diversion

The last call diversion destination was stored.

Proceed as with **Divert**.

The stored phone number is displayed.



Confirm.

Changing Phone Numbers

Proceed as with **Divert**. When the stored phone number is displayed:



Delete the phone number.



Enter the new phone number.



Confirm.

Menu Mode

Menu → **Setup** → **Menu Mode**

To make it easier for new users to learn how to operate the phone, the comprehensive main menu is reduced to the key functions.

Proceed as follows to reduce the menu scope:

Change Press until **Fast** appears.

OK Confirm.

The following functions can now be called up directly (without intermediary steps).

Calls dialled
Calls missed
Voice Message
Divert all Unans
Incoming Msgs
Write New Msgs
All Serv. Tones
Volume all Calls
Melody all Calls
Profiles
Menu Mode

Proceed as follows to revert to the complete menu scope:

 Select **Menu Mode**.

Change Press until **Complete** is displayed.

OK Confirm.

Phone

Menu → **Setup** → **Phone**, then select a function.

Language


You can select the required language for the display texts. If "Automatic" is set, the language used by your service provider is used.

If a language happens to be set that you do not understand, you can reset the phone to the language used by the service provider by making the following entry:

*#0000# 

Keys

Any Key Answer

You can answer incoming calls with any key (except .

Auto Key Lock

This activates automatically when no key has been activated for one minute. This prevents accidental activation of the phone keys, although you can still be reached and can make emergency calls.

This lock can also be activated and deactivated with the keypad.

 **Hold** down.

Key Tone

You can set the type of acoustic key tone:

Key Click, Key Tone, Key silent

Setup

57

Display

Illumination

Display illumination can be activated and deactivated (to prolong standby time).

Big Letters

You can change the size of the letters shown on the display.

Bitmap Style

You can choose from one of three styles for the graphics/animations on the display.

Own Greeting

You can write a greeting that will appear when the phone is activated.

Change Press to activate and deactivate.

OK Press to change.

⏮ / ⏭ Delete existing greeting and write a new greeting.

OK Confirm your change.

Contrast

You can modify the contrast setting for the display.

Press the **⏮** key to interrupt the contrast setting operation without saving the new values.

Animation

You can deactivate the animation in the display.

Status

Master Reset

The phone is reset to default values (does not apply to SIM card and network settings) (see "Reset phone", page 67).

Phone Identity

The phone identity number (IMEI) is displayed. This information is helpful for service purposes.

Fast Search

You can speed up network reconnection if this function is activated. This reduced usage time.

Erase Records

(Phone code, page 58)

The following lists are deleted (see also page 49):

- Calls missed
- Calls received
- Calls dialled
- Alarms missed

Security

The phone and SIM card are protected from misuse by several security codes.

Your **SIM card** is protected by a **PIN** (Personal Identification Number).

A **PIN2** is required for the additional functions available with a special SIM card.

A code (**PUK**) is also provided for unlocking the SIM card if you have forgotten the PIN.

Your **phone** is protected by the **phone code** which you can enter yourself when making the first security setting (4-8 digits).


Keep these confidential numbers in a safe place where you can access them again if required.

Menu → **Setup** → **Security**, then select a function:


Babysitter

(Phone code)


Calls are limited to **one** phone number which is dialled with the right soft key.

 **OK** Enter the phone number and name.

or

 **OK** Select a number from the phonebook.

Ending the function:

 Hold down (phone code is requested).

Allow only

(PIN 2/phone code)

Dialling options are limited to numbers in the phonebook; new entries cannot be made. If only local codes are entered, the relevant phone numbers can be added to these before dialling.

Depending on whether the phonebook is stored on the SIM card or in the phone, the PIN 2 or the code will be requested before changes can be made.

Allow last 10

(Phone code)

Calls are limited to the call list of the "selected numbers".

This call list can be filled with specific phone numbers for this purpose:

Delete the call list (page 49), then create "new entries" by dialling phone numbers and hanging up before a connection is made:

 or  followed by .

Loan Phone

(Phone code)

You can limit the use of the phone by others.

The following general locks are set with "Loan Phone":

- **Prevent newSIM** active (see page 59).
- Charge detail counter cannot be deleted.
- Charge rate cannot be changed.

Setup

59

PIN Control


The PIN is normally requested each time the phone is switched on. You can deactivate this control here, but this would risk unauthorised use of the phone by a third party. Some service providers do not permit this function.

Codes


Change PIN


You can change the PIN to any 4 - 8-digit number (i.e. a number you may find easier to remember).

Menu → **Setup** → **Security Codes** → **Change PIN**

 Enter the current PIN.

Change Press.

 **OK** Enter the new PIN.

 **OK** Enter the new PIN again.

Change PIN 2

You can change PIN 2 to any 4 - 8-digit number (only displayed if PIN2 is available).

Proceed as described under **Change PIN**.

Chng Phonecode

You can change the phone code to any 4 - 8-digit number.

Proceed as described under **Change PIN**.

Prevent newSIM

This prevents your phone from being used with another SIM card.

Network

Menu → **Setup** → **Network**, then select a function:

Line




This function is only displayed if supported by the service provider.

Two independent phone numbers are registered for the phone.

Select line

Select the currently used phone number.

If this is changed frequently, it is more convenient to make the selection using the soft key (see page 17).

 Display the active phone number.

Lock Line


(Phone code, page 58)

You can restrict usage to one phone number.

Info

Special settings can be made for each phone number (e.g. melody, call diversion, etc.). Switch to the required phone number first.

To switch the lines (in standby mode):


 Press, then:

Line 1 Press.

Configuration

Network Info

The list of currently available GSM networks is shown.

 Marks the service providers not permitted by your SIM card.

Change Network

Network search is restarted. This is useful if you are not in your home network or if you wish to register in another network.

If "automatic network" is activated, the next network is selected in the order of the list of your "preferred service providers".


Otherwise, a different network can be selected manually from the list of available GSM networks.

Auto Network

Activate or deactivate, see also "Select Network".

Operator List

A list of all known GSM networks worldwide and their respective codes is displayed.

 Select an entry.

Info Press.

A new network can be added to the list (enter the national code and network code).

 Select <Empty>.

Change Press.

 **OK** Make an entry.

Preferred Netw

The networks you prefer after your home network are displayed in this list (e.g. if there are several networks that differ in price).

When this function is activated, your home network is displayed first.

List Display list of preferred networks.


• New entry:

 Select <Empty>.

Select an entry from the list of networks.

Select Confirm.

• Change/delete old entry:

 Select existing entry.

Change Select a different entry from the list of networks.

Select Confirm.

or

Clear Delete the entry.

Setup

61

Barring



Barring restricts the usage of your phone (not supported by all service providers). Security takes the form of a four-digit password supplied by your service provider. You must be registered separately for each barring.

All Calls out

All outgoing calls, except emergency number 112 and 999 are barred.

Out International

Only national calls can be made.

Out Internat. excl. Home

International calls are not permitted. However, you can make calls to your own service provider when abroad.

All Calls in

The phone is barred for all incoming calls.

InWhen Roaming

You receive no calls when outside your home network. This means that no charges are incurred for incoming calls.

Status Check

The following information may be displayed after a status check:

- ☒ Barring set.
- ☐ Barring not set.
- ? Status unknown (e.g. new SIM card).

Clear all Barring

All barrings are cleared.

User Groups



If offered by the service provider, this service enables groups to be formed that have access to internal (company) information or for whom special tariffs apply. Check with your service provider for details.

The following settings are available:

Group active

(Phone code, page 58)

Activate or deactivate the function. "User group" must be deactivated for normal phone use.

Select Group

You may select or add other groups as the preferred groups (see below). Your service provider will supply code numbers for the groups.

Outgoing Access

In addition to network control for a user group, it is possible to set whether outgoing calls outside of the group are permitted. If the function is deactivated, then the phone only permits calls within the group.

Preferred Group

If this is activated, it is only possible to make calls within this standard user group (depending on the network configuration).

During Calls

Menu → **Setup** → **During Calls**, then select a function:

Call Waiting



If you are registered for this service, you can check whether it is set and activate or deactivate it (see also page 19).

Conceal ID



When you make a call, your phone number appears on the recipient's display (depending on the called party's service provider). To suppress this display on the destination phone, you can activate "Conceal ID" mode for the next call or all subsequent calls. You may need to register separately with your service provider for this function.

Minute Beep

During a call you hear a beep every minute as a reminder of the time elapsed.

Setup

63

FAX/Data Mode

Menu → **Setup** → **FAX/Data Mode**,
then select a function:

You can use the phone and a connected PC to send and receive faxes and data (see also page 65).

Prerequisites:

The use of fax and data services must be enabled.

Depending on the network, there are several types of fax/data reception, so you should check with your service provider.

IrDA

Infrared data transfer is activated.

Self Test

PC connection is checked.

Send Sp/FAX

If this function is activated, the following soft key is available for 2 seconds after the connection is established:

Sp/Fax Press. You can now switch from speech to fax mode during a call in order to send a fax.

Otherwise, the call is treated as a normal call.

Receive Sp/FAX

(**Only** if the phone numbers for speech and fax reception are identical.)


Switch to fax mode during a call.

Rec. FAX/Data

(**Only** if the phone numbers for speech and fax reception are identical.)

When this function is switched on and the connection to the PC is active, **only** fax or data calls can be received. The PC automatically accepts the fax or data call, depending on which communication program is active.

When this function is switched on voice calls can only be accepted if the connection to the PC has previously been interrupted.

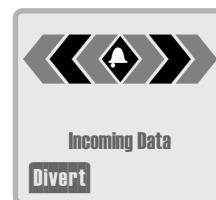

Setup


Clock

Menu → **Setup** → **Clock**,
then select a function:

Time&Date

The clock must be set correctly during start-up.

Change Press.

 **OK** First the date (day/month/year), then the time (24 hours incl. seconds).

The clock must be reset if the battery is removed for longer than 30 seconds.

Format Date

Date format setting:
DD.MM.YYYY or **MM/DD/YYYY**

Auto Display


The time display can be switched on or off.

Auto Phone off

The phone switches off at the set time.

Set

Clock Press.

 Enter the time (24-hour clock).

OK Confirm.

Deactivate

manual Press.


OK Confirm.

Car Use

Menu → **Setup** → **Car Use**,
then select a function:

Auto Answer

Calls are answered after the 3rd signal tone if the phone is connected to the "Portable", "Comfort" or "Professional" Car Kit. Depending on the installation, the ignition may need to be switched on for this.

 Indicator on the display.

Auto Power Off

The phone is powered by the car's power supply and is switched on and off with the ignition. The time between the switching off of the ignition and the deactivation of the phone can be adjusted.

Headset


Menu → **Setup** → **Headset**

Calls are answered after the 3rd signal tone if the headset is connected.

Info

Headset (page 74)

To change to hand-held mode during a call (phone connected to headset).

 Press to switch on and off.

Car handset (page 75)

Phoning with a car handset.

Fax/Data

65

Technical Information

Fax/Data Prerequisites

Fax and data services must be enabled. Depending on the network, there are several different types of fax/data reception, so you should check with your service provider. Your PC must have appropriate software installed for data/fax communication.

Connecting Units


Data cable

A data cable (see page 74) is used to connect the phone to the PC's serial port.

Infrared

If the IrDA interface integrated in the phone is to be used, then the other device must also have a corresponding interface.

Activate the infrared interface on the phone.

 Indicator on the display

Align the infrared windows (max. distance 50 cm) and activate the IrDA interfaces.

Setting the PC

Your phone has an integral modem. You will need to install a standard modem in your PC's operating system:

- Standard modem with 19 200 bit/s
- Fax Class 1 modem, max. 9 600 bit/s
- Where appropriate IrDA 115 000 bit/s.


Sending Fax or Data

- During a call:

First set the **Send Speech/FAX** function (page 63) and then start your PC's communication program.

- Fax only:

Start your PC communication program. Enter the required destination phone number.

 During transmission.

Receive Fax or Data

Before you receive data/faxes, establish the connection between the phone and the PC and start the communication program on your PC.

The phone display will indicate the type of call (fax or data) and you will hear a special signal tone.

Ending Transmission

Transmission is normally ended with the PC software. If necessary:

 Press.

Technical Data

Modem Driver

Conforms to V.25 command set.

Data transmission speed

Conforms to the ITU-T standard of V.22bis (transfer at 2400, 4800 and 9600 bit/s).

Facsimile

Facsimile operation at 2400, 4800, 7200 and 9600 bit/s. Conforms to Service Class 1.

Display Symbols

The following symbols are displayed during operation:

Display Indicators

	Incoming signal strength.
	Battery being charged.
	Battery indicator.
	All calls diverted.
	Ringer off.
	Short beep only.
	Call Screening. Only "known" calls will ring.
	IrDA standby (infrared).
	IrDA transmission (infrared).
	Alarm set.
	Keypad locked.
	Low-level encryption.
	Indicates UPPER/ lower case.
	Phonebook in SIM card,
	Phonebook in phone,
	Restricted phonebook.
	Service/number barred
	Phone number 1 or 2 active.
	Menu function active.
	Indicates an unknown status of network feature.
<i>DATA</i>	Receive only data.
<i>FAX</i>	Receive only fax.
	Automatic call answering active

Organizer Icons

	Memo.
	Meeting.
	Call.
	Birthday.
	Voice Memo.
	Calculator functions.
	Calculator memory
	Calendar - daily view.
	Calendar - weekly view.
	Calendar - monthly view.
	Recurring Alarm.

Soft Keys

	Short press clears last character, long press clears entry.
	Message received. Press to read it.
	Voice mail received. Press to hear it.
	Unanswered call. Press to see identity.
	SIM services.
	Switch to handset.
	Save in phonebook.
	Vertical scrolling.
	Horizontal scrolling.

Tips on Use

67

Deactivate Ringer



Hold down in **standby mode**. All signal tones are activated/deactivated temporarily or reduced to a short tone.



Hold down for **incoming calls**. The signal tone for the current call is deactivated.

Activate/Deactivate Key Lock



Hold down in standby mode.

Soft Key



Press until number is dialled. "OK" is skipped over in this case. Can also be implemented for fast access keys.

International Prefix



Press the key until the "+" sign appears.



Press and select country.

Voice Recording

"Silent Response"

You are expecting a call, but cannot answer immediately yourself (e.g. in a conference). When the call is signalled (e.g. vibrating alarm), answer it and play the recording, e.g.:

"Please don't hang up, I'll speak to you in person in a moment."

Call Mailbox



This digit key is reserved for the mailbox (see page 46).

Send Messages



Press this key instead of



Phonebook

International Prefix

An international prefix e.g. +49 for Germany should always be assigned to all numbers. You can then make calls from abroad without difficulty.

Name Search

If there are several entries for one letter, it is sometimes advisable to jump to the next letter and then scroll backwards.

Name Assignment

For example, assigning several numbers to one person:
Carol O (for Office)
Carol H (for Home)

Redialling

Redials the last number dialled.



Press twice.

Reset phone

All phone settings are reset to the default status: enter ***#9999#** and press

SIM card and network settings are unaffected.

Siemens Service

Worldwide support from Siemens partners is just a phone call away. Alternatively, use the Internet

Internet: <http://www.siemens.com/cd.service>

Abu Dhabi ... Siemens Service Center..	02 71 35 00	Luxembourg. Siemens	43 84 33 99
Egypt	Siemens 23 31 31 29	Malaysia..... Hello service	0 37 51 49 74
Australia	Siemens 18 00 62 24 14	Morocco SETEL S.A.....	2 35 24 09
Bangladesh . Siemens	0 17 52 74 47	Mauritius Ireland Blyth.....	2 11 62 13
Belgium	Siemens 0 78 15 22 21	Netherlands. Siemens.....	0 70 3 33 31 00
Brunei	incomm 0 21 51	Norway Siemens.....	22 63 33 14
Bulgaria	Omnitel 02 73 94 88	Austria Siemens.....	01 17 07 50 04
China	Siemens 0 21 50 31 81 49	Oman Siemens Service Center	79 10 12
Denmark	Siemens 35 25 86 00	Pakistan Siemens.....	02 15 67 35 65
Germany Siemens	0 18 05 33 32 26	Philippines ... Siemens.....	28 14 98 88
Dubai..... Siemens Service Center..	04 69 97 20	Poland Siemens.....	08 00 22 09 90
Finland..... Siemens	09 22 94 37 00	Portugal Siemens.....	0 14 17 83 93
France	Siemens 01 56 38 42 00	Russia Siemens.....	8 09 57 37 18 01
Greece..... Siemens	0 16 86 43 89	Saudi Arabia Arabia Electric	0 26 65 50 58
Great Britain Siemens	09 90 33 44 11	Sweden Siemens	0 87 50 99 11
Hong Kong ... Siemens	22 58 36 36	Switzerland . Siemens	0 12 12 00 90
India Siemens	1 16 92 39 88	Singapore ... Siemens	8 45 48 18
	1 16 92 55 89 (ISDN))	Slovak Rep... Siemens.....	07 59 68 22 66
Indonesia Dian Graha Elektr.....	02 14 61 50 81	Slovenia Siemens	06 11 74 63 36
Ireland..... Siemens	18 50 77 72 77	Spain Siemens	9 02 11 50 61
Iceland Smith & Norland	5 11 30 00	South Africa Siemens	08 00 11 40 50
Italy	Siemens 02 69 89 36 91	Taiwan Siemens.....	02 25 18 65 04
Jordan F.A. Kettaneh	0 79 55 96 63	Thailand Siemens.....	26 79 17 77
Croatia Siemens	0 16 10 53 81	Czech Rep... Siemens	02 33 03 27 27
Kuwait..... NGEECO	4 81 87 49	Turkey SIMKO	021 22 52 88 35
Latvia Siemens	8 22 39 15 55	Hungary Siemens.....	06 14 71 24 44
Lebanon F.A. Kettaneh	01 44 30 43	Vietnam Opticom	0 90 45 67 89
Lithuania Siemens	7 50 11 14		

Troubleshooting

69

If you encounter problems using your phone, please try to find a solution using the “Troubleshooting” table below. If the problem persists, contact your service provider or Siemens Service (see page 68).

Problem	Possible Causes	Possible Corrective Measures
Unable to switch phone on	On/Off key not pressed long enough	ⓘ Press on/off key for at least 2 seconds
	Empty battery.	Charge battery. Check charging indicator in display.
	Battery contacts dirty.	Clean contacts.
	Battery totally discharged.	Charge battery for half an hour, detach the charging cable briefly, then charge as normal.
Standby time insufficient	Frequent use of Organizer/games	Restrict use if necessary.
	Economy power mode not activated.	Activate economy power mode (see page 57).
	Display illumination active.	Switch off display illumination (see page 57).
	Key pressed unintentionally (illumination!).	Activate key lock.
Charging error (no charging display)	Battery totally discharged.	Charge battery for half an hour, detach the charging cable briefly, then charge as normal.
	Temperature exceeds 0 °C to +45 °C.	Make sure the ambient temperature is right, allow time, then charge again.
	Contact problem.	Check mains socket and connection to phone. Check battery contacts and clean if necessary, then insert the battery again.
	No mains power.	Connect to a different mains socket or check the mains supply.
	Charger defective.	Replace charger.
	Wrong charger.	Only use original Siemens accessories.
	Battery defective.	Replace battery.
SIM error	SIM card not correctly inserted.	Make sure that the SIM card is inserted correctly. The card carrier must engage (see page 6).
	SIM card contacts dirty.	Clear the SIM card with a dry cloth.
	SIM card has wrong volt rate.	Only use 3 volt SIM cards.
	SIM card damaged.	Make visual check. Return SIM card to service provider.

Troubleshooting

Problem	Possible Causes	Possible Corrective Measures
No connection to network	Signal weak.	Move higher, to a window or open space.
	Outside GSM coverage.	Check service provider coverage map.
	SIM not valid	Contact service provider for replacement SIM.
	New network not authorised	Try reselecting manually or try a different network (see page 60).
	Barring set. Network overloaded	Check barring (see page 61). Try again later.
Phone loses network	Signal too weak.	Reconnection or connection to another service provider is automatic (see page 60). Switching off and on may accelerate this.
Calls not possible	Dialling error.	New network not approved (see page 60).
	2nd line set.	Set different call line (see page 59)
	New SIM fitted.	Check for new restrictions.
	Charge limit reached.	Call your service provider or use PIN2 to reset (see page 53).
Certain calls not possible	Call restrictions set.	Restrictions may be set by your service provider. Check restrictions (see page 59).
	Phone number has more than 20 digits	Check phone number.
Cannot save in phonebook	Call restriction set.	Check restrictions (see page 58).
	Phonebook is full.	Delete some phonebook entries (see page 14).
Cannot change phonebook	SIM restriction set	Call service provider.
Cannot find phonebook	SIM has been changed	Refit original SIM.

Troubleshooting

71

Problem	Possible Causes	Possible Corrective Measures
Voice Mail not working	Divert not set.	Set divert (see page 54).
"✉" flashing	Message store full.	Delete messages to make room (see page 37).
Cannot send a message	Service providers do not support this service.	Check with service provider.
	Service centre phone number incorrect or not set.	Set service centre (see page 44).
	SIM card contract does not support this service.	Contact service provider.
	Service provider overloaded.	Try again.
	Destination does not have a compatible phone.	Check with service provider.
Cannot set a function	Not supported by service provider or registration required.	Contact service provider.
Charge counter not working	Charge unit pulse not transferred.	Contact service provider.
PIN error	3 incorrect entries.	Enter the MASTER PIN (PUK) provided with the SIM as instructed. If you have lost the MASTER PIN or PIN, contact the service provider.
Phone CODE error	3 incorrect entries.	Contact Siemens Service (see page 68).
Service provider CODE error	No authorisation for this service.	Contact service provider.
Too few/too many menu entries	Functions may have been added or removed by the service provider using the SIM card	Check with the service provider.
Fax function unavailable	Incorrect settings in PC.	Check the settings (see page 63).
	No authorisation for this service.	Contact service provider.
	Wrong IrDA driver.	Replace the IrDA driver.
Accidents		
Severe shock	Remove and refit the battery and SIM. Do not dismantle.	
Immersion in water	Dry immediately with cloth; do not heat. Dry connector contacts thoroughly. Remove and dry the battery and SIM. Stand unit upright in an air current. Do not dismantle.	

Specifications

Licensing

Your phone is authorised for use on GSM networks with its IMEI number and complies with the following EU directives:

- 89/336/EEC "Electromagnetic Compatibility"
- 98/13/EC, CTR 19 and CTR 20 "Telecommunication Terminal Directive"
- 98/13/EC, CTR 31 and CTR 32 "Telecommunication Terminal Directive"
- 73/23/EEC "Low Voltage Directive" as amended by 93/68/EEC



Technical Specifications

- GSM Class 4 (2 watts)
Frequency range
880 - 960 MHz
 - GSM Class 1 (1 watt)
Frequency range
1710-1880 MHz
- Weight : 99 g
Size : 118 x 46 x 21 mm
(89 ccm)
Operating voltage : 3.6 V
Power consumption :
max. 400 mA
Operating temperature :
0°C to 45°C
Standby time : up to 220 hours
Talk time : up to 6 hours


Usage times

A fully charged battery can provide the following usage times:

Standby time: 60 - 220 hours

Talk time: 100 - 360 minutes.

The specified times are based on the assumption that the device is only in either standby mode or talk mode. The standby time is affected even by short calls, for example, as shown in the following diagram:

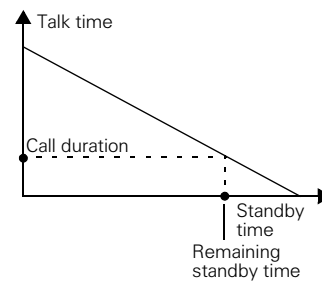

The times specified above are average times. They may vary depending on a range of factors.

Standby time, for example, is reduced by the following:

- activated info services
- navigating through the menu
- activated fast network searches
- device relocation

The talk time depends, among other things, on the distance to the nearest base station.

Care / Security

73

Care of your SIM Card

- The SIM card should be treated with the same care as a cheque guarantee card. Do not bend or scratch it or expose it to static electricity.
- Clean the card with a damp cloth or anti-static wipe without chemical cleaning agents.
- Protect the phone from shocks and moisture. Never leave your phone in direct sunlight (max. 55°C)
- Remove the battery if you are not going to use the phone for extended periods of time.

Phone ID

You are advised to write down the following details (to help recovery of your phone or SIM card in the event of loss):

No. of SIM card (on the card):

.....
15-digit phone serial number
(under the battery):

.....
Service provider's customer service number:

Loss

If your phone and/or SIM card are lost or stolen, call your service provider immediately to prevent misuse.

Accessories

Spare Battery

L36880-N4001-A100 (NiMH, 500 mAh)
L36880-N4001-A101 (Li-Ion, 600 mAh)


Travel Charger

L36880-N4001-A103 (EU)
L36880-N4001-A104 (UK)

Similar to standard charger but automatically enables worldwide voltage range 100-240 V.

Desktop charger


L36880-N4001-A102

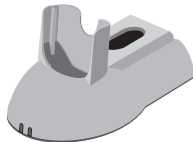

This convenient stand enables the battery in the phone and a spare battery to be charged at the same time. Can be used together with the original charger or the travel charger.

Headset (PTT)

L36880-N4001-A123

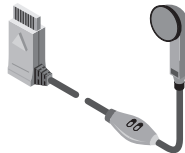

Offers freedom of movement when on the move or in your car, includes PTT (Push To Talk) key for convenient operation.

Belt Clip

L36880-N4001-A113



The phone can be fastened securely and simply to your belt.

Case

L36880-N4001-A118

The attractive case protects against dirt and environmental surroundings. Keys are accessible at all times.

SoftDataLink 3.0

L36880-N4001-A122

This software includes the following functions for Windows® 95/98/NT/CE and Palm III™/V™:

- Sending, receiving and writing messages (SMS)
- Convenient phonebook and Organizer administration
- Composing ring tones

Data Cable

L36880-N3101-A102

Same function as IrDA, can be used for connecting the phone to the RS-232 port of a PC if there is no infrared port.

Car Accessories

75



Ensure that vehicle functions (e.g. airbag) are not obstructed when installing car accessories.

Cradle

L36880-N4001-A109

For connecting the Car Charger Cable, Portable Car Kit and Headset.

Antenna Cradle

L36880-N4001-A110

The cradle with connector for an external antenna eliminates radiation and interference risks and offers improved reception. For connecting the Car Charger, Car Headset and Car Kit Portable.

Car Charger Cable

L36880-N4001-A108

This fits standard cigarette lighter sockets (12/24 Volt). It can be used together with the Antenna Cradle.

Car Kit Portable


L36880-N3015-A117



Hands-free kit with integral loudspeaker and microphone and auto talk feature. It simply plugs into the standard cigarette lighter socket, enabling easy movement between vehicles. It can be used together with the Antenna Cradle.

Car Kit Comfort

L36880-N4001-A111

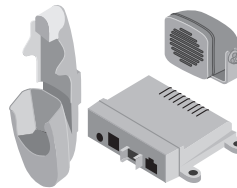

This ensures safe and relaxed communication with high speech quality (full duplex and digital technology) whilst driving.

Car Kit Professional Voice

L36880-N4001-A125 (German)

L36880-N4001-A124 (English)



Voice Control

State-of-the-art voice recognition system for safe and convenient calling. Contains everything needed for installation in a car.

Data Cable Professional

L36880-N3101-A112

For connecting Car Kit Professional Voice to the serial data cable for data applications.

Car Handset

L36880-N3015-A123

The handset enables optimum confidentiality when connected to Car Kit Comfort or Car Kit Professional Voice.

A

Accessories	74
Advice of charge	53
Alarm clock	36
Allow last 10	58
Appointments	30
Audio	51
Auto power off	64

B

Babysitter	58
Barring	61
Big letters	57
Bitmap style	57
Browser	25
Business card	34

C

Calculator	32
Calendar	29
Call diversion	54
Call lists	49
Call transfer	21
Call waiting	19
Call waiting tone	19
Calls	
answering	11
ending	11
rejecting	19
several at once	20
Calls dialled	49
Calls, accepting/ending	11
Car accessories	75
Car use	64
Care of your SIM card	73
CB services	47
Charge battery	7
Charge display	53
Charging time	7
Charging unit	7
Chronometer	36
Clock, setting	64
Codes	59

Conceal ID	62
Conference	20
Control codes	
saving	16
Control codes (DTMF)	16, 21
Countdown	36
Currency converter	33

D

Data communication	63, 65
Default status	67
Display	57
Display symbols	66
Divert to mailbox	45
DTMF code	
saving	16
sending	21
DTMF tones	
sending	21

E

Emergency call	7
Extending numbers	13

F

Fast access	17
Fast menu access	18
Fax	63
Fax transmission/receipt	63, 65

G

Games	35
Greeting	57

H

Headset (accessories)	64
Home network	60

I

Illumination	57
IMEI number	57, 72
In call menu	21
Incoming/outgoing messages	43
Info channel	47
Information services	47

Index

77

- Infrared (I/R) 63
- International dialling code 9
- Internet 24
- L**
- Language, setting 56
- Licensing 72
- Loan phone 58
- Loss
 - phone/SIM card 73
- M**
- Mailbox 45
- Mailbox number 45
- Main menu 23
- Master 57
- Melody 51
- Melody, composing 52
- Memo key 22
- Menu mode 56
- Message menu 43
- Messages 37
- Messages (SMS)
 - deleting 43
 - forwarding 42
 - preformatted 42
 - reading new 37
 - reusing 42
 - setting 44
 - writing 38
- Microphone on/off 21
- N**
- Network connection 8
- Network info 60
- Notebook 19
- O**
- Own numbers 13
- P**
- Phone code 58, 59
- Phone identity number (IMEI) 57
- Phone memory 15
- Phone, activating, deactivating 7
- Phonebook
 - deleting an entry 14
 - menu 14
 - new entry 12
 - restrictions 16
 - voice dialling 14
- Phonebook restrictions 16
- PIN
 - changing 59
 - entering 8
 - error 71
- Prefix 9
- Preformatted messages 42
- Prevent new SIM 59
- Profile 50
- PUK 58
- R**
- Redial list 10
- Redialling 10
- Reminder 10
- Reset phone 67
- Ringer, setting 51
- Ringer, turning off 11
- S**
- Second phone number 59
- Security 58
- Select line 59
- Service provider expansions 16
- Service tones 52
- Settings, resetting 67
- Setup 56
- Show URL 25
- Siemens Service 68
- Signal tone, ringer 51
- Silent alarm 52
- SIM card 6
- SIM services 23
- SMS (messages) 37
- Special characters 12, 41
- Specifications 72
- Standby mode 8

Standby time	7, 72
Stopwatch	36
Swap	20

T

Talk time	7, 72
Technical specifications	72
Text entry	12
Text input	40
Text input with "T9"	40
Text menu	38
Time/charge	53
Tips on use	67
Toggling	20
Total	53
Troubleshooting	69

U

Uppercase and lowercase ...	12, 41
Usage time (battery)	7
User groups	61

V

Vibration alarm	51
VIP Phonebook	13, 14
Voice dialling	14
Voice memo	22
Voice messages (mailbox)	
listening to	46
setting	45
Voice playback	22
Voice recording	22
Volume	51

Notes

Notes