

BG96 Windows USB Driver Installation Guide

LTE Module Series

Rev. BG96_Windows_USB_Driver_Installation_Guide_V1.0

Date: 2017-06-30



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

7th Floor, Hongye Building, No.1801 Hongmei Road, Xuhui District, Shanghai 200233, China

Tel: +86 21 5108 6236

Email: info@quectel.com

Or our local office. For more information, please visit:

<http://www.quectel.com/support/salesupport.aspx>

For technical support, or to report documentation errors, please visit:

<http://www.quectel.com/support/techsupport.aspx>

Or email to: Support@quectel.com

GENERAL NOTES

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2017. All rights reserved.

About the Document

History

Revision	Date	Author	Description
1.0	2017-06-30	Hunter LV/ Daisy TIAN	Initial

Contents

About the Document.....	2
Contents	3
Figure Index	4
1 Introduction	5
2 Installation of USB Driver.....	6
2.1. Preparation	6
2.2. Installation Procedures.....	7
2.3. Test	11
3 Uninstallation of USB Driver	13
3.1. Uninstallation Procedures	13

Figure Index

FIGURE 1: "DEVICE MANAGER" INTERFACE OF WINDOWS SYSTEM WITHOUT QUECTEL DRIVERS ...	6
FIGURE 2: CONFIRM INSTALLATION	7
FIGURE 3: CHOOSE DESTINATION LOCATION	8
FIGURE 4: COPYING FILES	8
FIGURE 5: AUTOMATIC INSTALLATION	9
FIGURE 6: COMPLETE INSTALLATION	10
FIGURE 7: CHECK USB DRIVER INSTALLATION RESULT FOR BG96	11
FIGURE 8: BG96 TESTING VIA NAVIGATOR	12
FIGURE 9: CHOOSE THE INSTALLED USB DRIVER.....	13
FIGURE 10: UNINSTALL THE USB DRIVER	14
FIGURE 11: CHECK UNINSTALLATION SETTING.....	14
FIGURE 12: CONFIRM UNINSTALLATION	15
FIGURE 13: AUTOMATIC UNINSTALLATION	15
FIGURE 14: REMOVING FILES	15
FIGURE 15: COMPLETE UNINSTALLATION.....	16
FIGURE 16: CHECK UNINSTALLATION RESULT FOR BG96 USB DRIVER	17

1 Introduction

This document illustrates how to install USB driver for Quectel BG96 module on Windows operating systems, with provided installation package.

The installation package (*Quectel_BG96_Windows_USB_Driver*) supports Windows XP, Windows Vista, Windows 7 and Windows 8 operating systems. This document introduces the installation procedure on Windows 7 system as an example.

2 Installation of USB Driver

This chapter mainly describes how to install USB driver for BG96 with the provided installation package.

2.1. Preparation

Before USB driver installation, please connect BG96 to PC via USB cable first and then press BG96's power key to power up the module. If you have never installed any Quectel driver on your system before, there would be a prompt about new device which indicates you to update the drivers. Please ignore the prompt and go to the next step.

The figure below shows the "Computer Management" → "Device Manager" interface of Windows system that has never installed Quectel drivers.

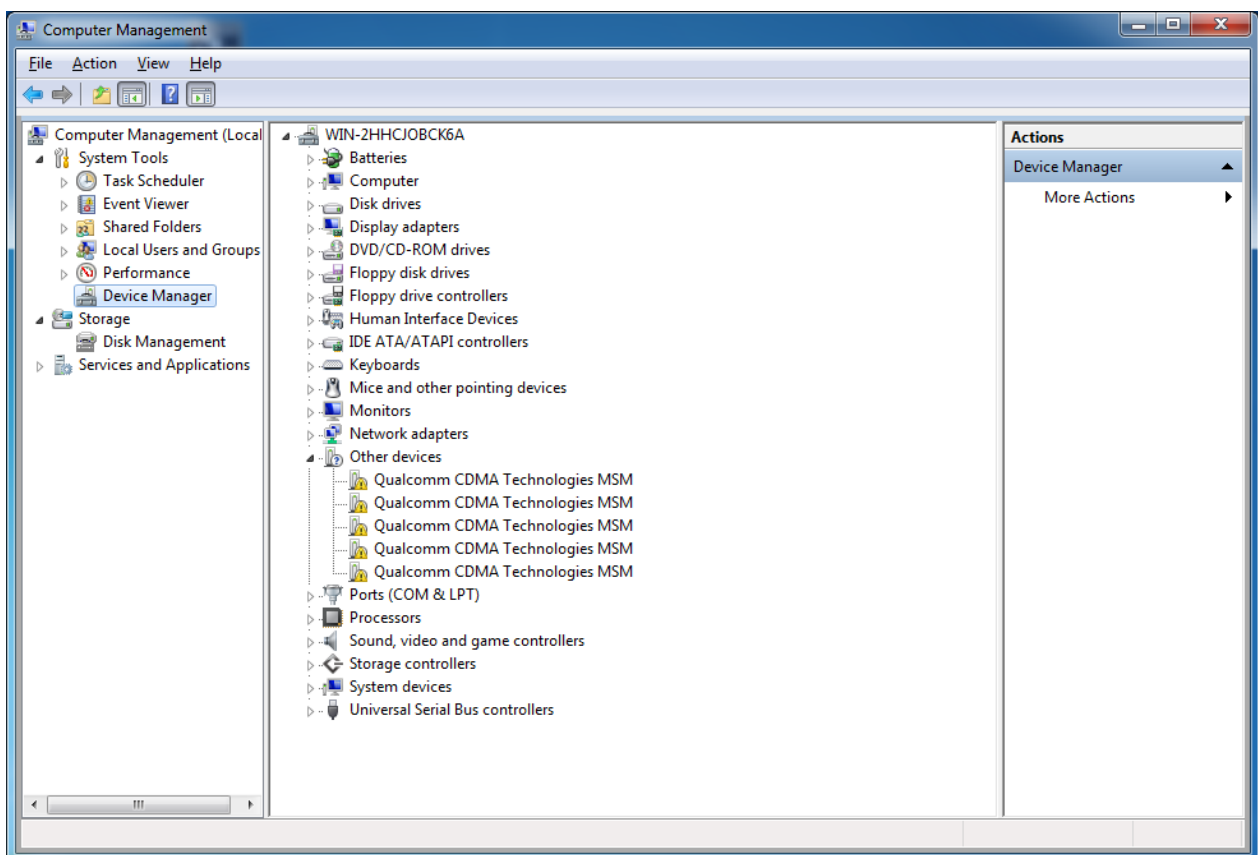


Figure 1: "Device Manager" Interface of Windows System without Quectel Drivers

NOTE

For Windows XP system, you MUST ensure the BG96 module has been connected to PC before installing the USB driver.

2.2. Installation Procedures

Before USB driver installation, please get the latest installation package from Quectel. This document takes the installation of *Quectel_BG96_Windows_USB_Driver_V1.0* as an example, and the details are shown as below.

1. Check Installation Setting

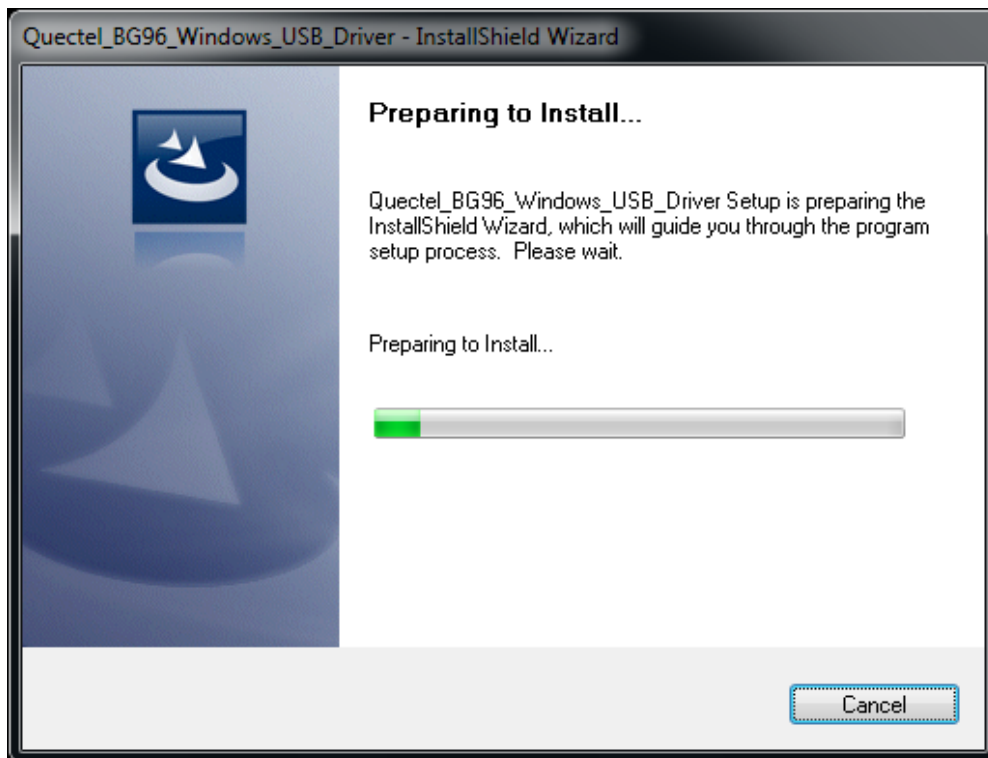


Figure 2: Confirm Installation

2. Choose Destination Location

If you do not want to change the default location for USB driver installation, please click **“Next”** directly to go on.

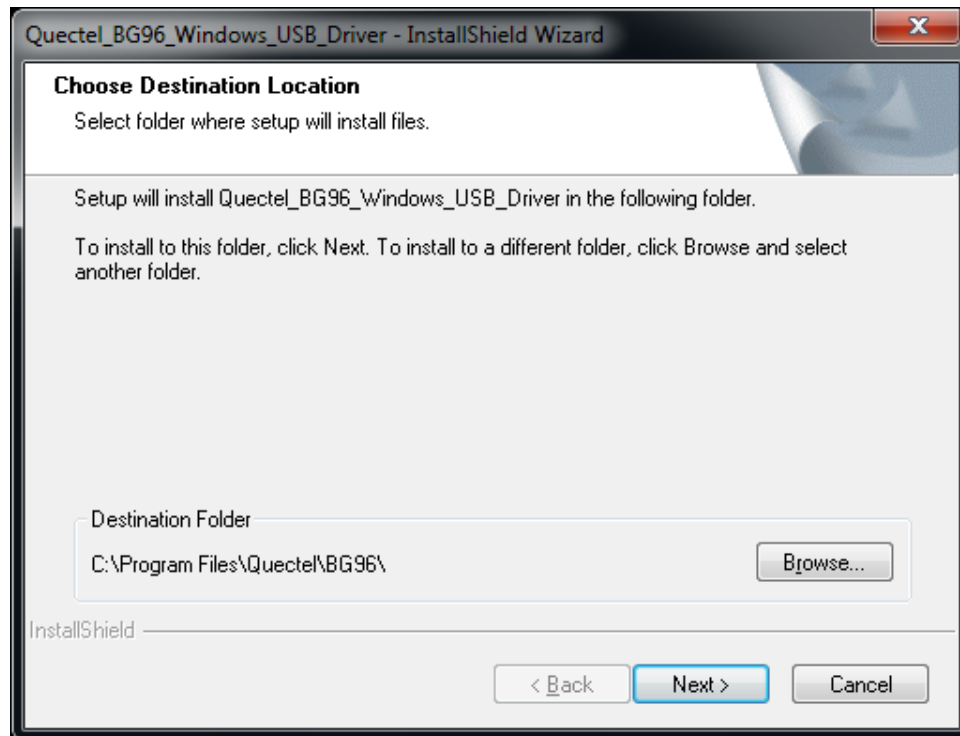


Figure 3: Choose Destination Location

3. Prepare Driver Files Needed for Installation

Click **“Next”** to go on, as shown below.

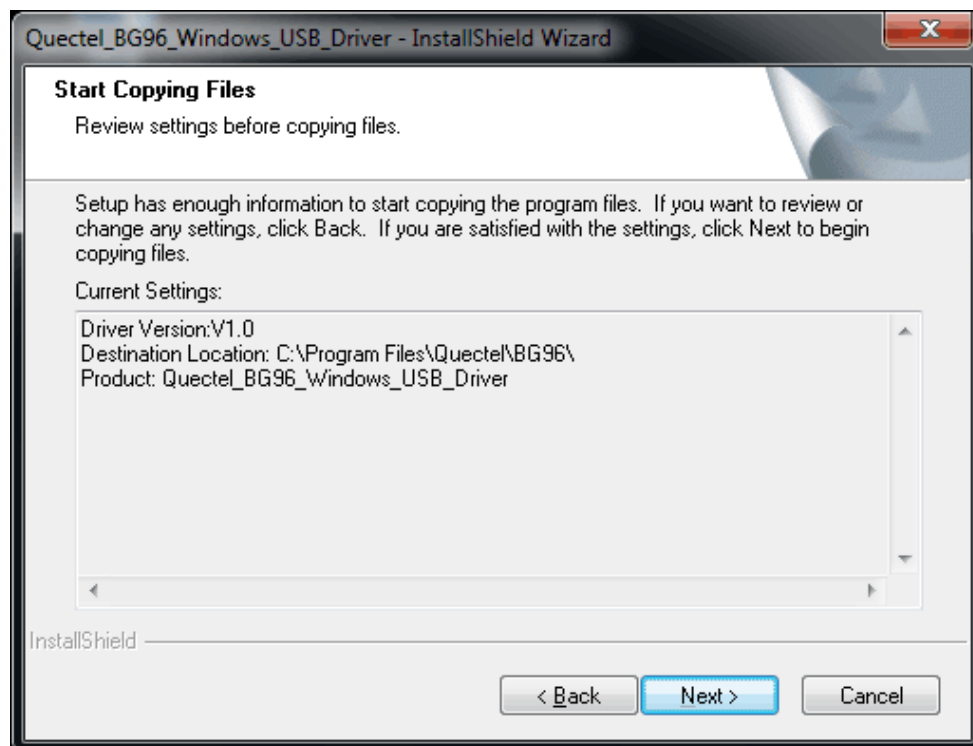


Figure 4: Copying Files

4. Automatic Installation

It may take some time to install the driver, please wait patiently for the process to complete.

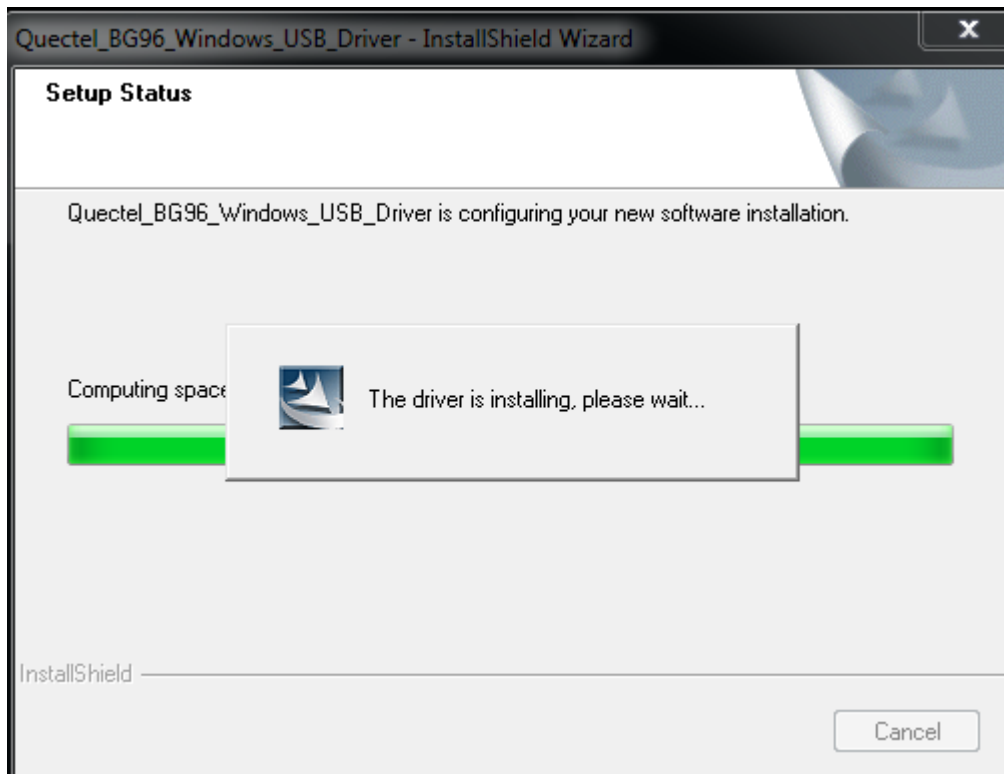


Figure 5: Automatic Installation

5. Complete Installation

The driver has been installed successfully, shown as below. Please click **“Finish”** to complete the installation.

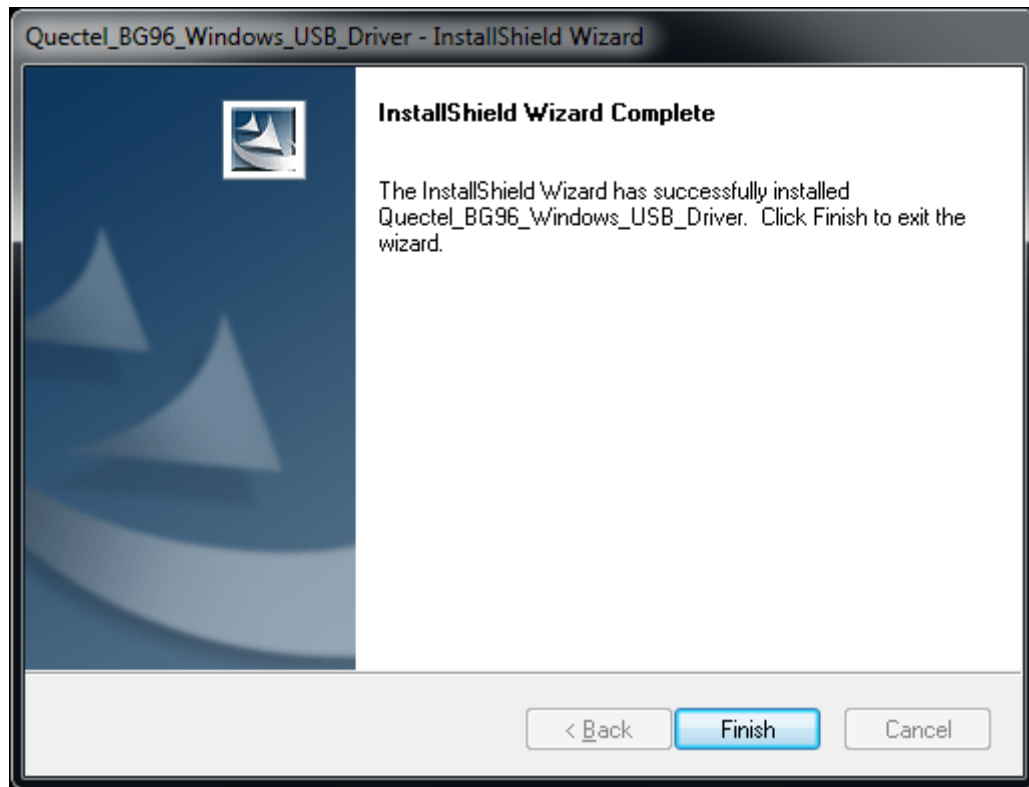


Figure 6: Complete Installation

After successful installation, customers can check the installation result through “Computer Management” → “Device Manager”.

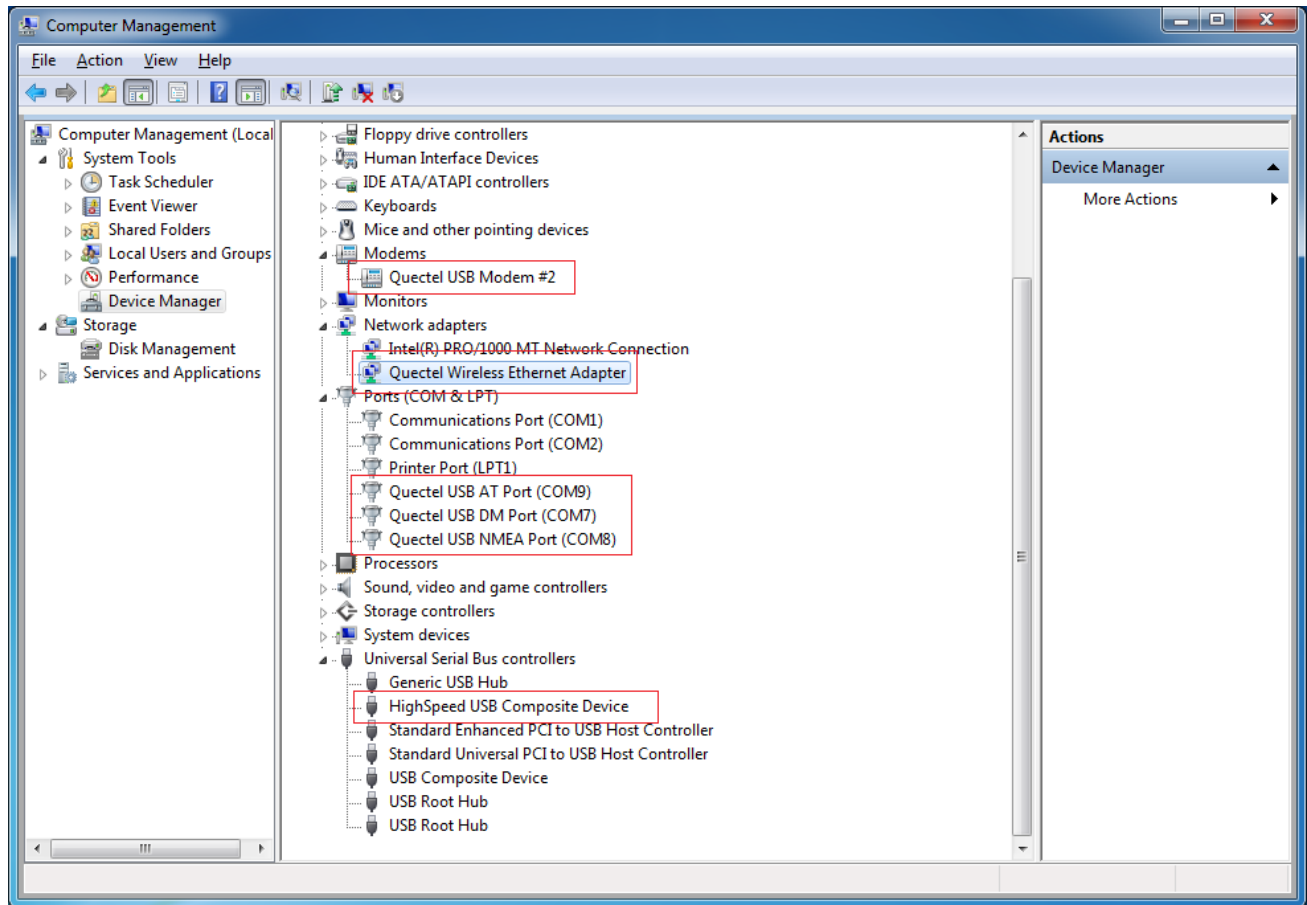


Figure 7: Check USB Driver Installation Result for BG96

2.3. Test

After the USB driver has been installed, customers can test whether the driver can work normally or not by QNavigator. For detailed steps, please refer to *Quectel_QNavigator_User_Guide*.

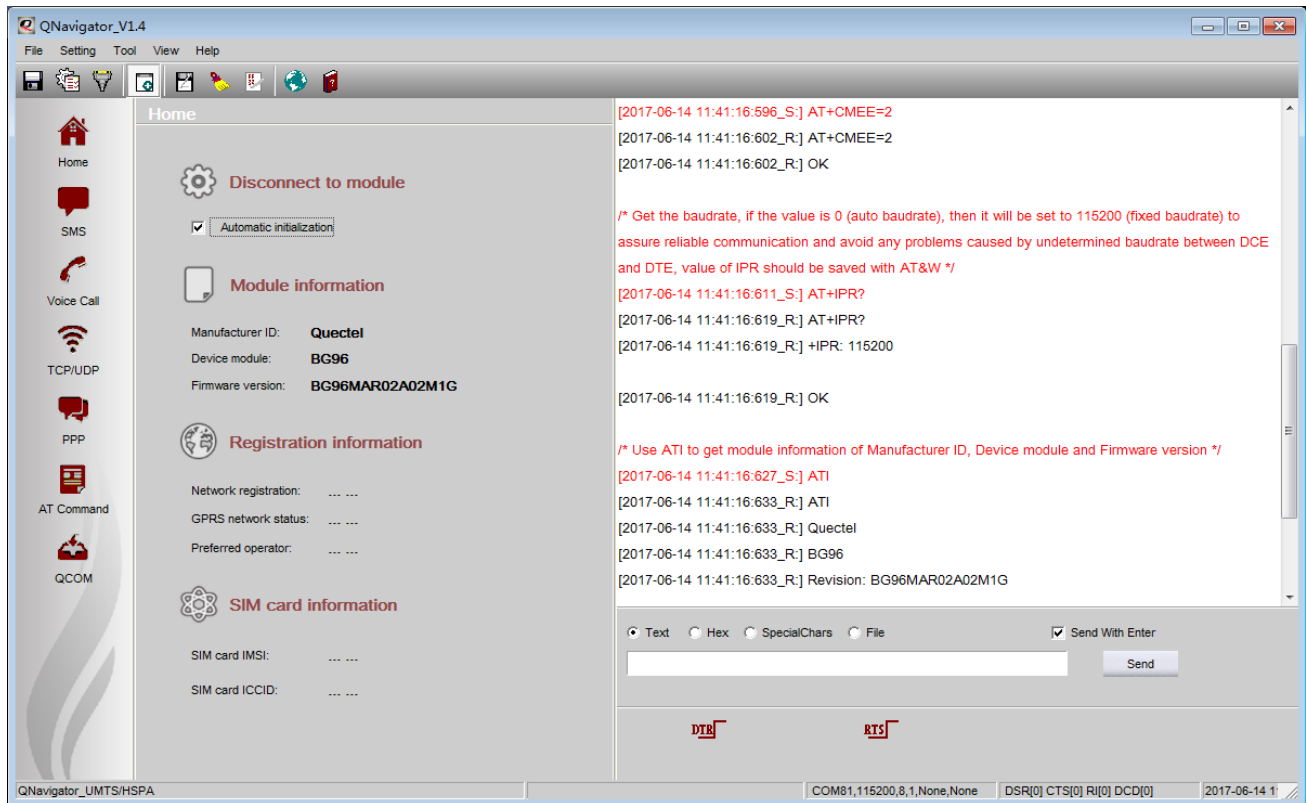


Figure 8: BG96 Testing via Navigator

3 Uninstallation of USB Driver

This chapter mainly provides the way to uninstall USB driver for BG96. The uninstallation can be realized by re-operating installation package or adding/deleting program on “Control Panel”. By taking as an example, this document introduces using the latter method to uninstall the USB driver for BG96.

3.1. Uninstallation Procedures

1. Choose Drivers

Enter “Control Panel” and choose the installed driver, then click “**Uninstall**”, as shown below.

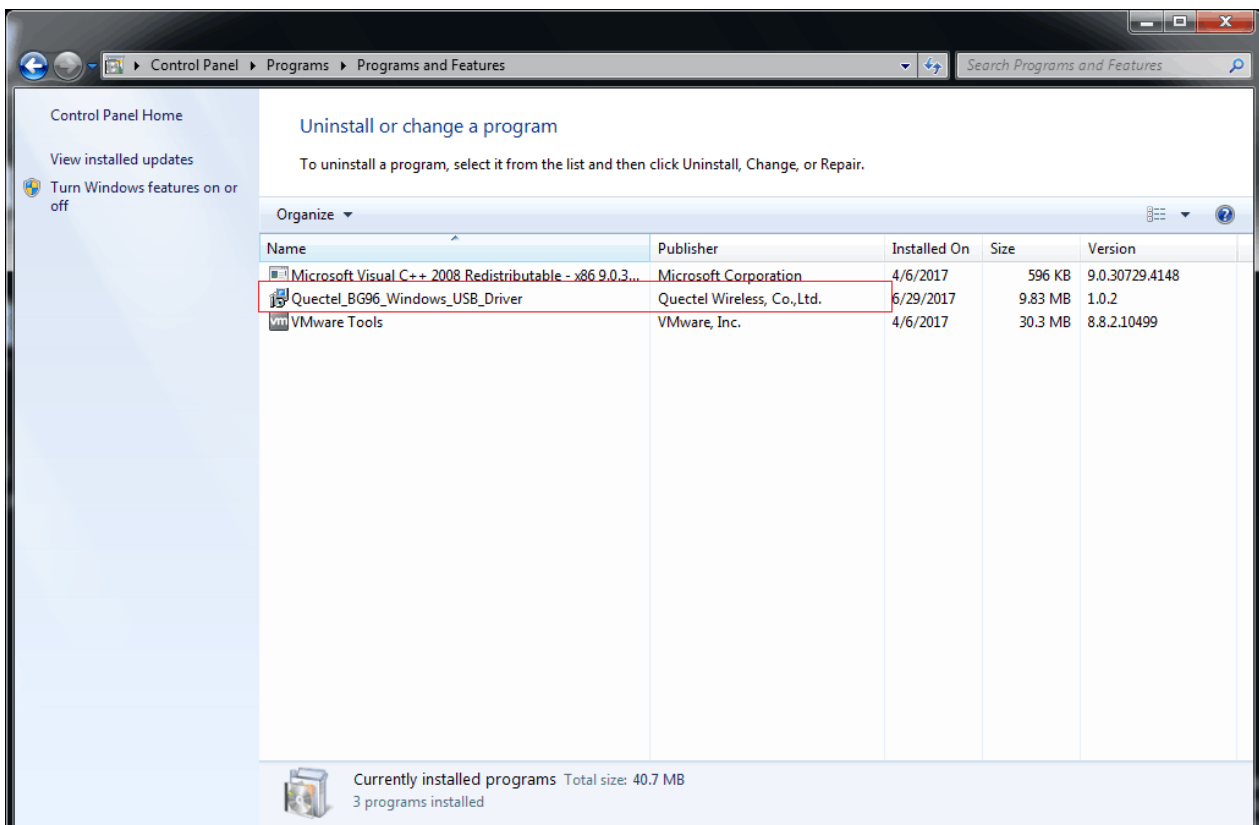


Figure 9: Choose the Installed USB Driver

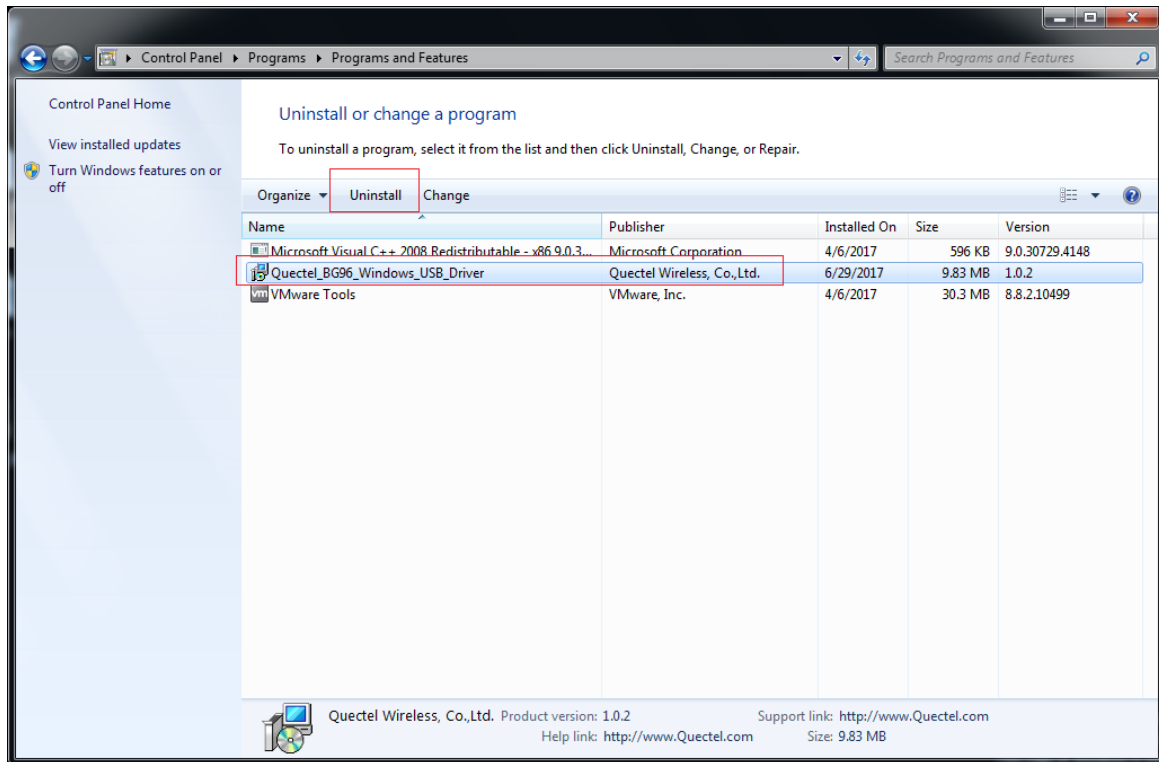


Figure 10: Uninstall the USB Driver

2. Check Uninstallation Setting

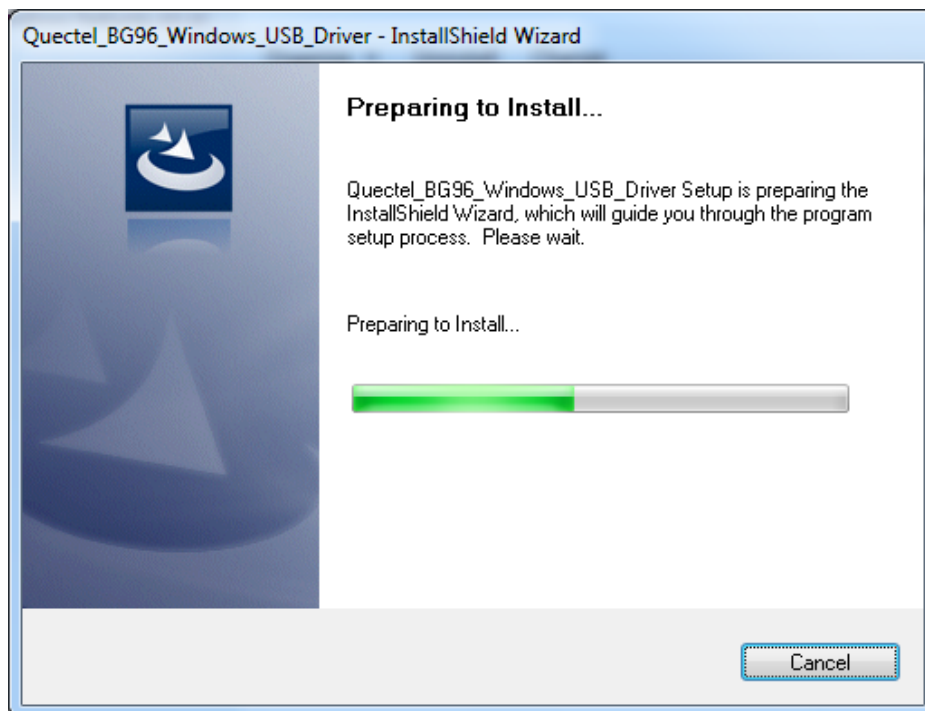


Figure 11: Check Uninstallation Setting

3. Confirm Uninstallation

Click “Yes” to confirm the uninstallation.

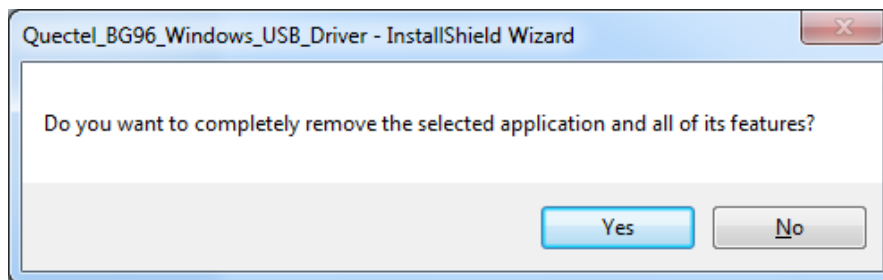


Figure 12: Confirm Uninstallation

4. Automatic Uninstallation

It may take some time to uninstall, please wait patiently for the process to complete.

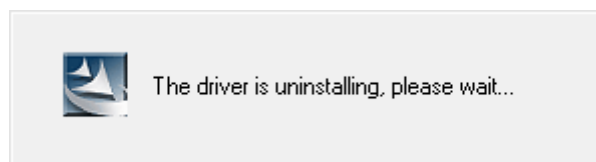


Figure 13: Automatic Uninstallation

The drivers are uninstalling now, as shown below.

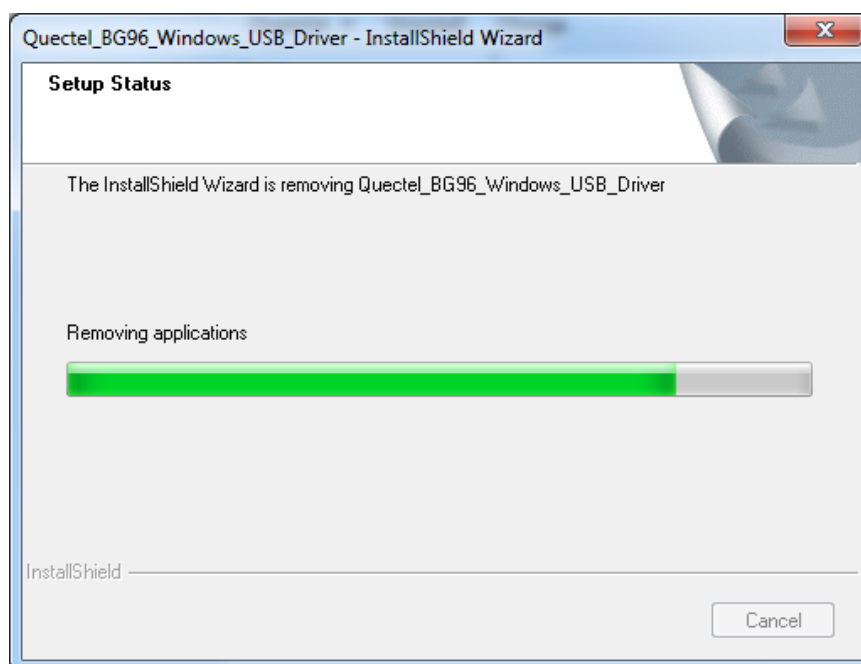


Figure 14: Removing Files

5. Complete Uninstallation

The drivers have been uninstalled completely, as shown below. Click “**Finish**” to complete uninstallation.

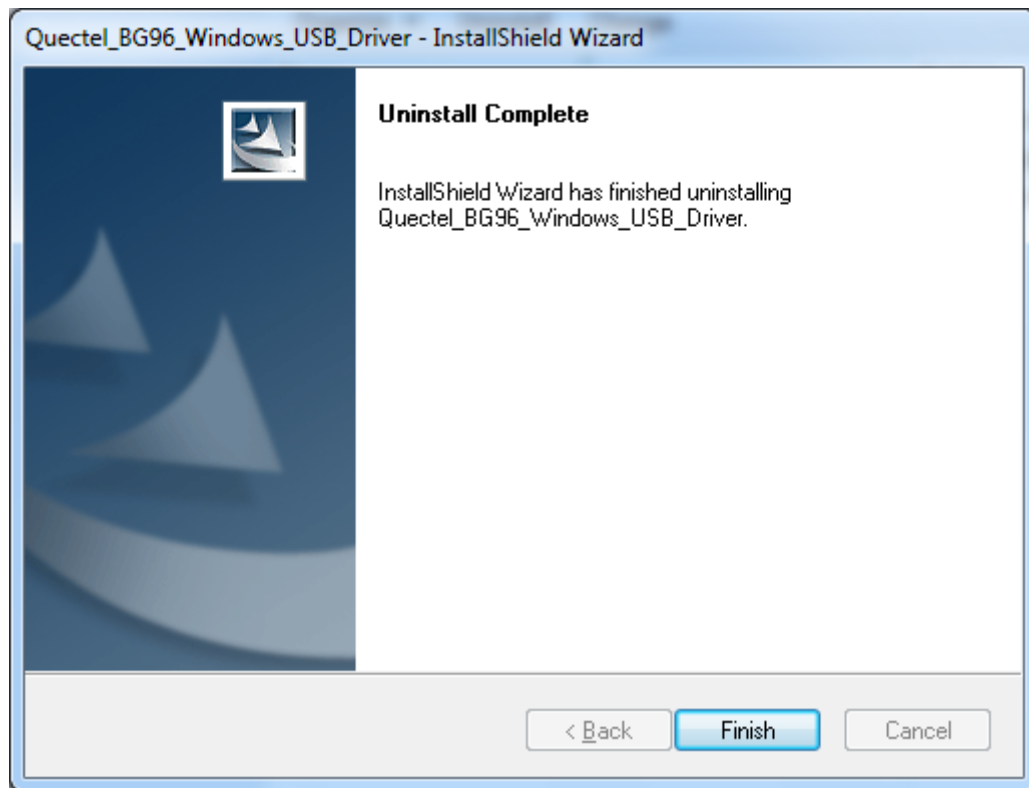


Figure 15: Complete Uninstallation

6. Check Uninstallation Result

After the USB driver has been uninstalled successfully, the device will switch to uninstalled status. Customers can check whether the driver has been uninstalled successfully or not through “Computer Management”, as illustrated below.

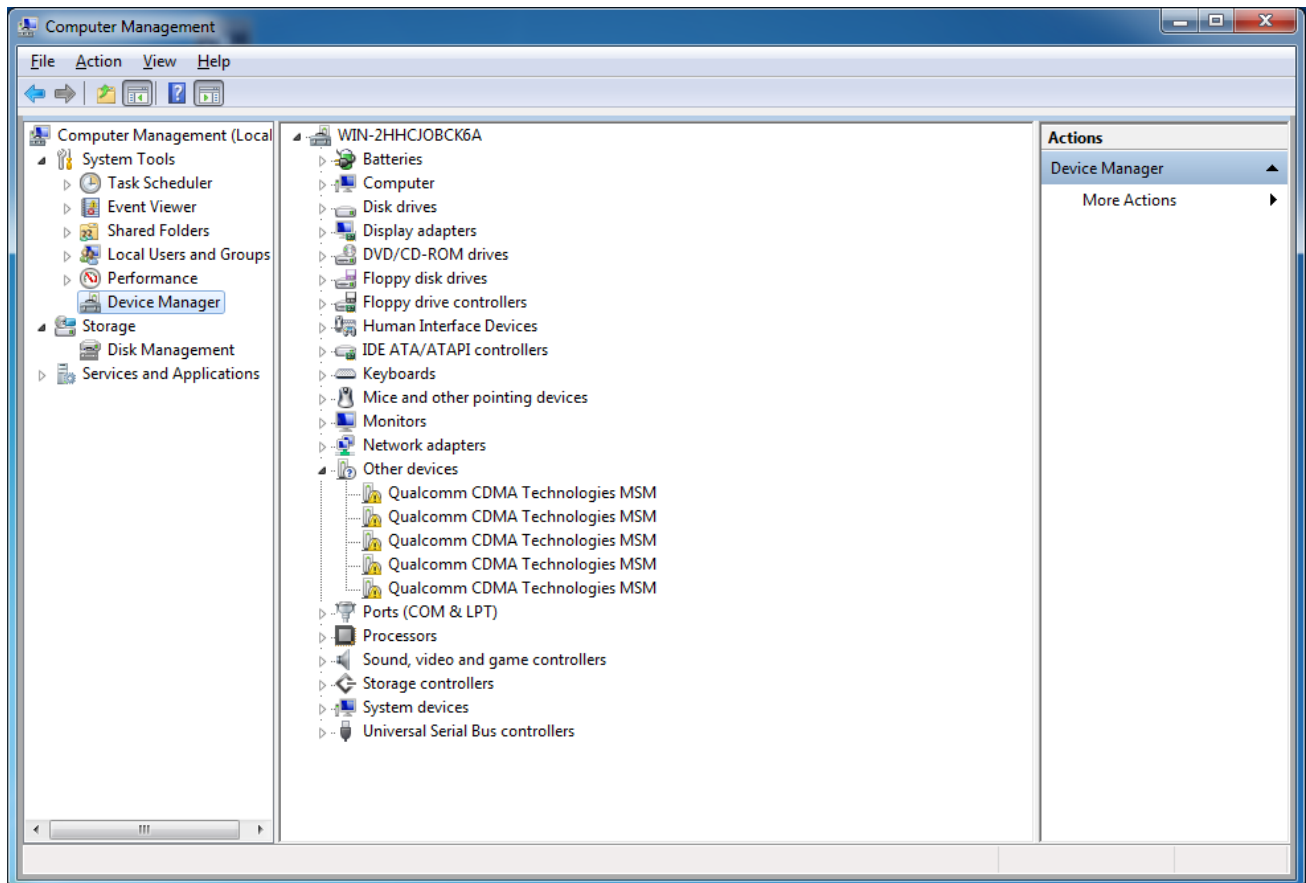


Figure 16: Check Uninstallation Result for BG96 USB Driver