



Setting up the Firmware for the K64F

When you're setting up make sure you make this change so that you will be able to connect to the K64F.


Click the gear in the pop-up menu from the **bottom right corner** by clicking "**FixedStepAuto**" (might have a different name initially).

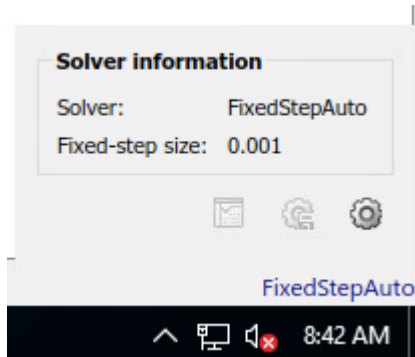


Click "**Hardware Implementation**" then the underlined blue text "**Change firmware options**". This will change windows.

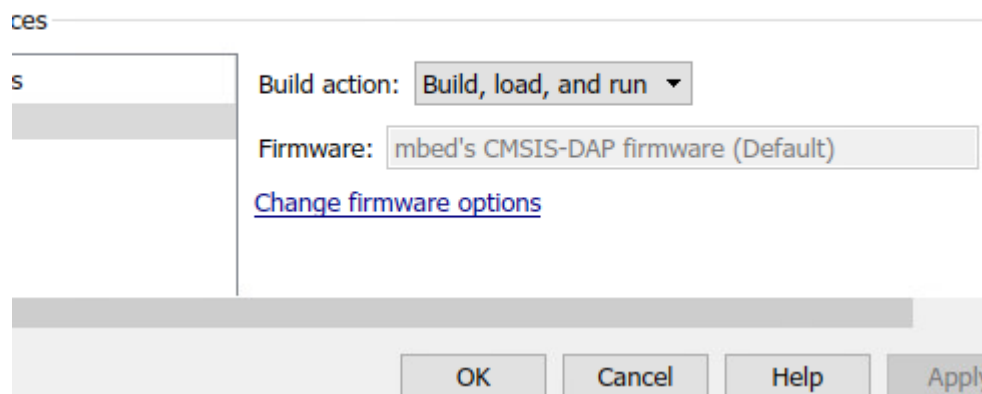

Below is the window you should see initially, this is called the “Support Package Installer”

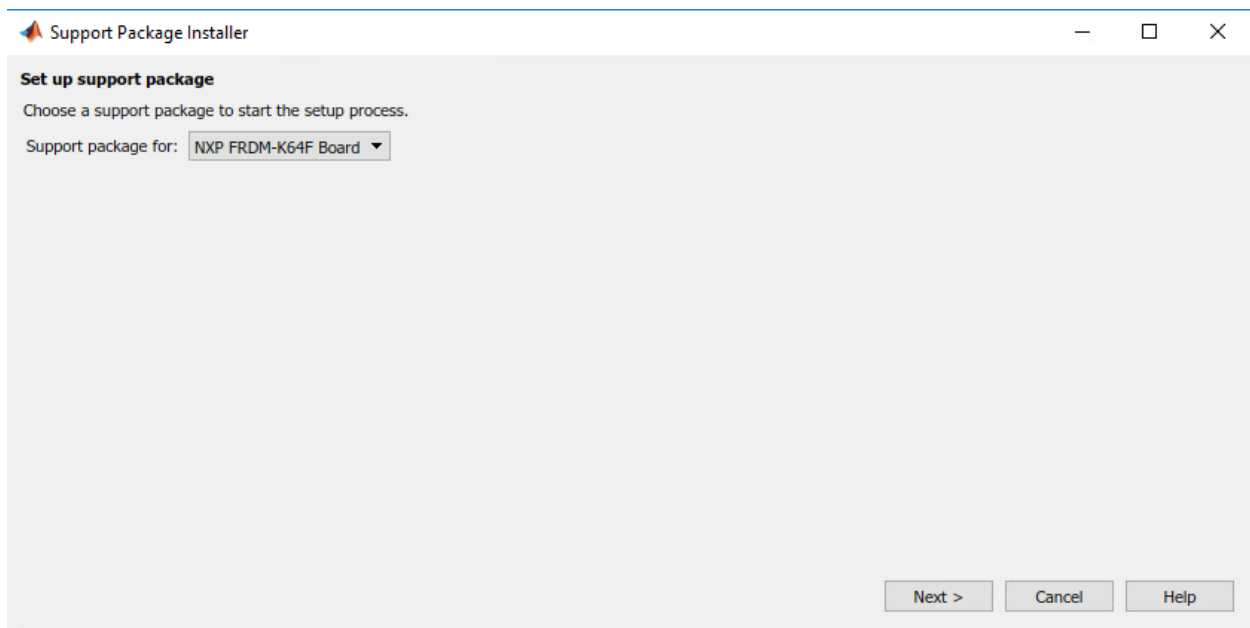


Once in the “Support Package Installer” window simply click next/validate until you reach the window below. On this window ensure that you have selected “Segger’s J-Link OpenSDA V2 firmware” from the dropdown menu

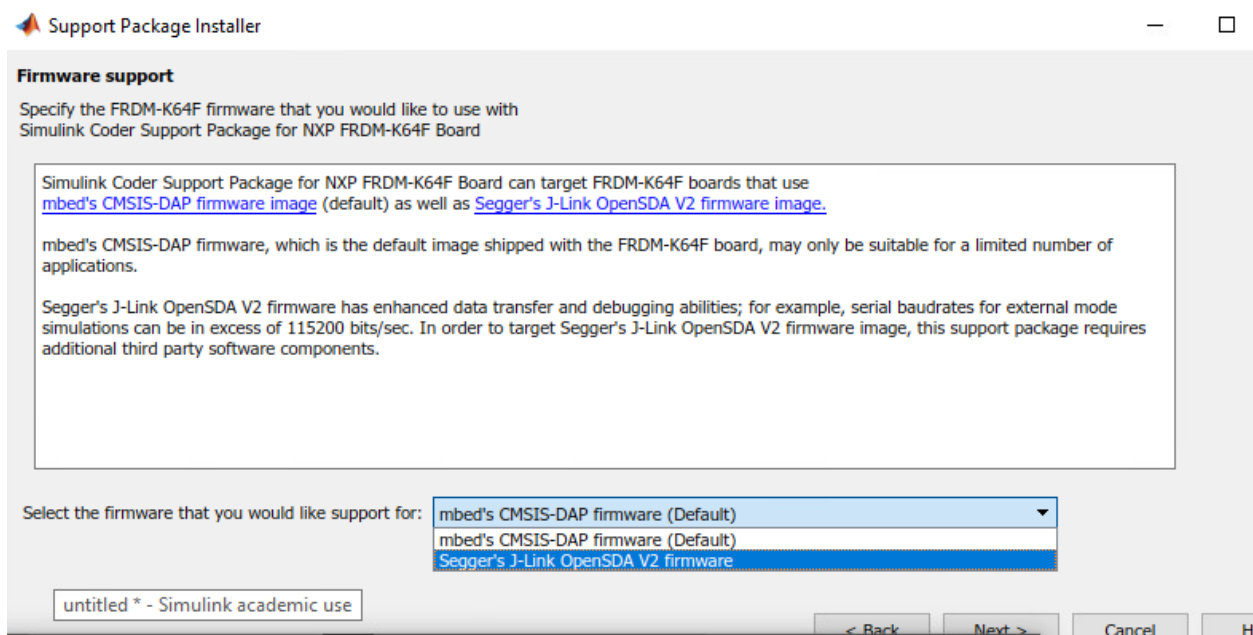


Once you've completed this step continue through the windows until you see this window below. This is where you'll have to find the actual J-Link firmware.

Click **"Browse..."** which will open up the file explorer, follow these steps ...

C >> Program Files (x86) >> SEGGER >> JLink_V620a >> *click Select Folder*

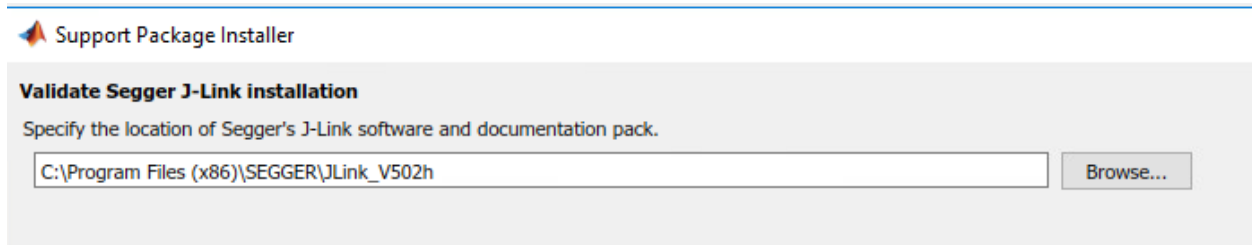

Click next/confirm/validate until you've reached the final page (below). **Unclick the box and click finish**

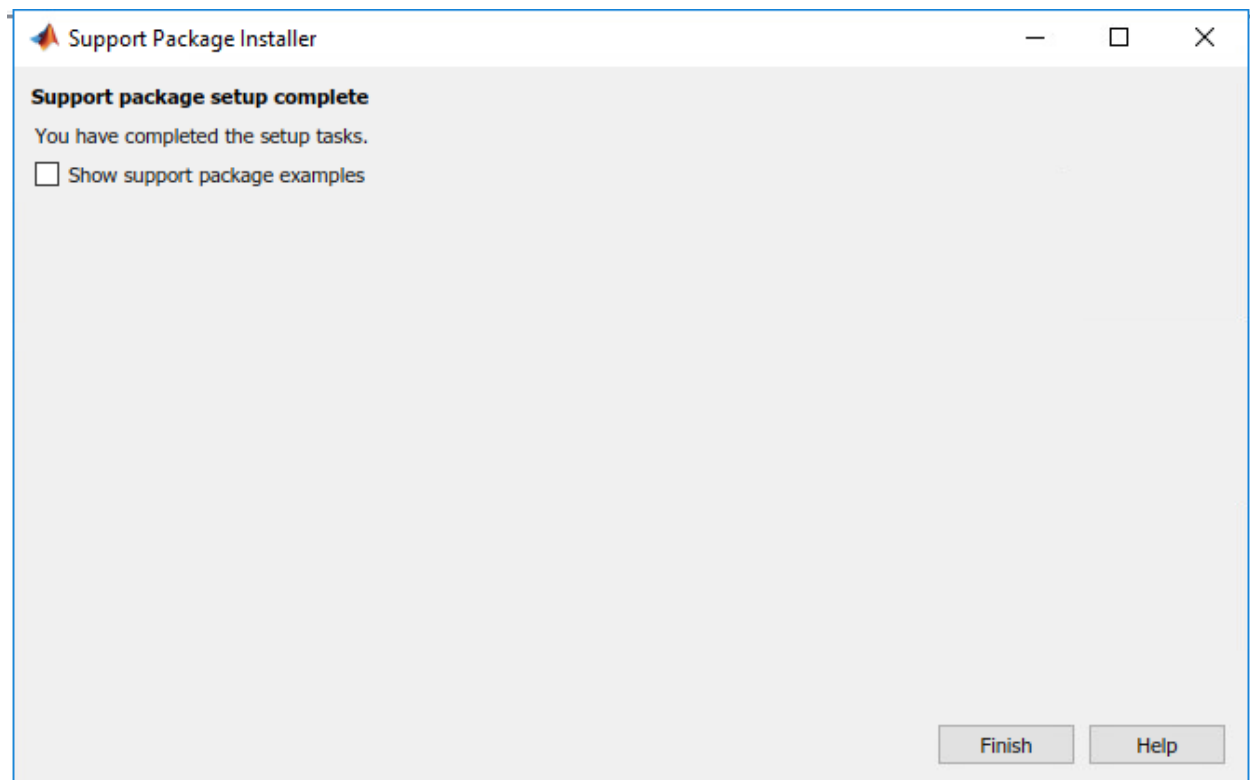

Your board will now be able to connect to the computer. When you connect the board ensure that it is connected to the **OpenSDA USB** input on the K64F!

