

**Wash/Move Button**  
This is an anus washing function. Move function may be used together. The nozzle operates front and back to make even washing regardless of build.


**Washing Position Adjustment Button**  
Adjust the location of the nozzles so the "washing" and "bidet" nozzle fits the build of user.

**Water Pressure/ Warm Wind Control**  
When wash or bidet function is working, press this button can adjust the water pressure, 4 levels.

When dry function is working, press this button can adjust the warm wind temperature, 4 levels.  
1st step: Room temperature  
2nd step: about 40°C  
3rd step: about 50°C  
4th step: about 55°C

**Energy Saving Button**

**Anion Deodorant Button**  
The deodorizing can be activated or cancelled, and stopped automatically after 2.5 minutes.

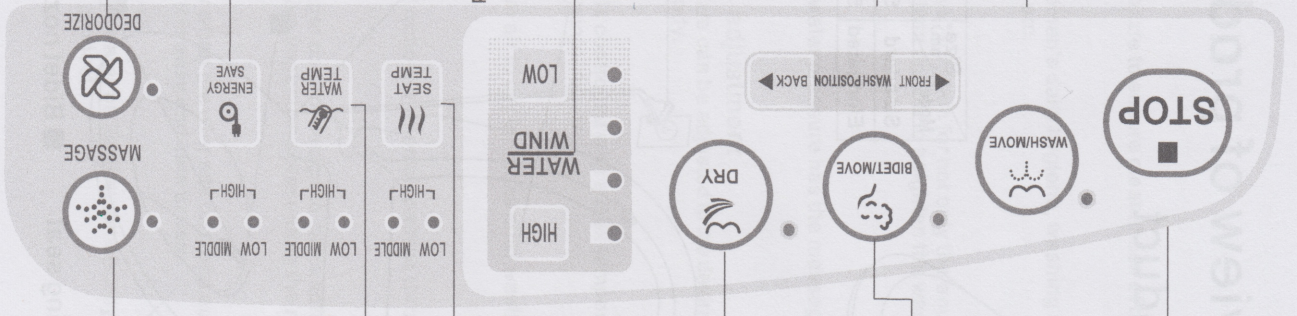

**Stop Button**  
It is used to stop when washing/bidet/dry/move/massage function.

**Bidet/Move Button**  
This is a washing function exclusively for women. Move function may be used together. The nozzle operates front and back to make even washing regardless of the build.

**Dry Button**  
After washing, it dries clearly with the warm wind, and it stops automatically after 3 minutes.


**Seat Temperature Button**  
The temperature of the seat can be controlled in 4-step.

1st step: Room temperature  
2nd step: about 34°C  
3rd step: about 37°C  
4th step: about 40°C

**Warm Water Temperature Button**

The warm water temperature of washing water can be controlled appropriately and may be selected in 4-step.  
1st step: Room temperature  
2nd step: about 34°C  
3rd step: about 37°C  
4th step: about 40°C

**Massage Washing Button**  
Alternating water pressure during washing provides a massage effect. It may be operated during the washing, bidet motion and moving motion.

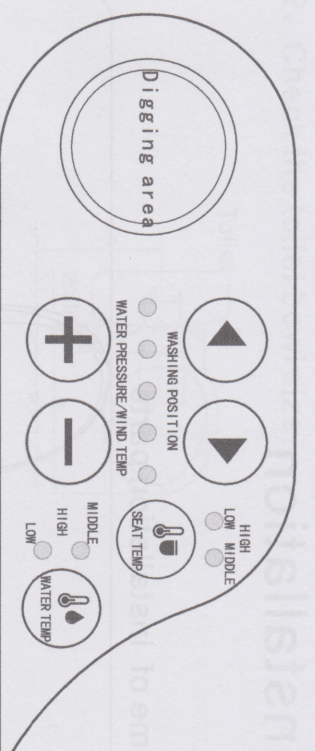

**Water Pressure Wind Temperature Button** **Water Temperature Button**

a. Adjust water pressure at 5 levels in wash and bidet.  
b. Adjust wind temperature at 5 levels in air dry.  
1st step: Room temperature  
2nd step: about 40°C  
3rd step: about 45°C  
4th step: about 50°C  
5th step: about 55°C

**Position Button**

Moving forward or backward in accordance with user's demands for wash and bidet positions.

**Seat Temperature Button**

Seat temperature could be adjusted. No heating in 1st level, 34°C in 2nd level, 37°C in 3rd level, 40°C in 4th level.

**KNOB FUNCTIONS.**

The knob has integration functions of wash/movement, air dry, stop, power, bidet, bidet/movement, and it could cooperate with the panel in controlling.

**KNOB FUNCTION INSTRUCTIONS**

- 1. POWER.** Press the knob for 6 seconds in open or close the seat.
  - 2. STOP AND DRY.** After seated, short pressing of knob is stop or dry function. (Bidet or wash function closed, it is the start of air dry. Bidet or wash function opened, it is the stop).
  - 3. BIDE/Move.** After seated, rotate the knob in clockwise to open the bidet function. If the bidet running, it is the controller for the sprayer movement.
  - 4. WASH.** After seated, rotate the knob in clockwise to open the wash function. If the wash running, it is the controller for the sprayer movement.
- Water temperature and pressure, wind temperature, position movement can be adjusted on the panel in using wash or bidet or air dry.