

Intex Technologies (India) Ltd Warranty Card

Thank you for purchasing Intex product and we are sure you will enjoy it. In the unlikely event of your product requiring services please contact the nearest Intex Testing and Repair Center (TRC) / Designated Intex Care Partner (ICP). In case there is no such service center in your city, please contact our Toll Free No. (1860-208-5555) for assistance. We advise that you to read the instruction manual carefully before using the product.

Intex Technologies (India) limited (hereafter called "Intex") warrantee the product to be free from manufacturing defects for a period of 1 year, from the time of its original purchase. This non-transferable warranty is only for you, the first end user. If during this period of warranty of the product proves to be defective due to improper material or workmanship, Intex TRC/ICP will repair / replace the product free of charge subject to the terms and conditions mentioned below.

Terms and Conditions:

1. Warranty will be valid only when the warranty card along with the original invoice of sale receipt Indicating the date of purchase, model no. and dealer's name is presented together with defective product.
2. Intex reserves the right to decline warranty service, if the above documents cannot be presented or if the information contained is incomplete or tampered.
3. This warranty shall not cover any damage resulting from adaptation or adjustments which may be made to the product.
4. This warranty will not apply if the type or serial no. on the product has been altered, remove or defaced.
5. This warranty does not extend to any accessories defined in the operating instruction manual supplied with this Intex product.
6. This warranty does not cover the damage cause to the product due to improper installation by customer and / or connecting the product to the equipment not approved by INTEx and deficiency in the product performance due to signal reception.
7. This warranty does not cover the risk to the product caused by accident, lightning, water, fire, other acts of God, improper ventilation, dropping or excessive shock or any external caused beyond INTEx's control.
8. This warranty does not affect the consumer's statutory rights under applicable Indian Law, nor the consumer's rights against the dealer arising from their sales / purchase contract.

This Warranty is not applicable in any of the following case:

1. Installation of Hardware, Software and Networking.
2. External accessories are not covered under warranty.
3. Intex is not responsible for the loss of any of your confidential, personal and corrupted data.

4. Configuration of Drivers, Embedded Software, System / Data Recovery.
5. No retailer has authority to vary the terms of above warranty.
6. Any repair work is carried out by person other then Intex authorized service personnel.
7. This warranty will automatically terminate on the expiry of the warranty period as specified above, even if Intex product may not be in use for any time during the warranty period for any reasons.
8. The product is installed, maintained and operated in ways other than as recommended by Intex.

How to avail services

- a) In the event of your require service assistance, Please contact Intex Customer Care Center at 1860 -208-5555 Alternatively you may visit with the product at an Intex Authorised Service Center.
- b) If the product is out of warranty, you can register the call at Intex Customer Care Center for a chargeable repair.

Product Details :

Model No. : _____

Serial No. : _____

Date of Purchase : _____

Customer Contact Details :

Name : _____

Address : _____

Telephone : _____

Email : _____

Customer Signature : _____

* On-site support shall be within municipal limit from Intex Service Center

* On-site support shall be from Monday to Saturday (10:00 AM to 06:00 PM)

TROUBLE SHOOTING

Please check the following guide for the possible cause and solution for a problem before contacting the nearest service center or dealer for the repairs.

SYMPTOMS AND SOLUTIONS

SYMPTOMS	SOLUTIONS
No Power	Check if the mains power cord is properly connected, check ON/OFF switch. Turn on the power.
No sound	Check the input & output cable. It must be connected properly.
One channel not working	Check the audio input cable, source audio output
Jarring sound coming at high volume	Reduce the volume
Main speaker is not working	Check the audio input cable
USB/SD is not working	Check the mode of USB/SD Re-plug the USB/SD device.
FM with noise or interference	1. Connect the appropriate antenna, you may need an outdoor antenna. 2. Adjust the position of the antenna. 3. Separate the antenna from other cable & appliances. 4. Turn off nearby TV, DVD & Video Deck.

"If the problems still are not solved, please contact your local dealer. Do not repair it by yourself."

If problem persists, please seek necessary assistance by dialing our Helpline No. : 1860-208-5555 or by sending an E-mail at info@intex.in

INTEx Intex Technologies (India) Limited.

E-mail: info@intex.in, Website: www.intex.in

30 Branches, 1500+ Service Touch Points

Helpline No. : 1860-208-5555

MOBILE PHONES & ACCESSORIES | CONSUMER DURABLE | IT ACCESSORIES

*This Product Falls Under e-waste (Management and Handling) Rules, 2016. For Proper disposal method, visit our website.

*Due to regular Update of the Product, the Picture and Specifications on the Packing box/catalogue might differ from the actual Product. *All brand name and trademarks are Property of their respective owners.



INTEx

IT-2616 SUF OS

COMPUTER MULTIMEDIA SPEAKER 4.1



USER MANUAL



FEATURES

1. 4.1 Channel multimedia speaker with USB/TF/FM/AUX.
2. AUX audio input Compatible with DVD/PC/TV.
3. Fully functional remote control.
4. Digital FM Playability.
5. Power indicator LED.
6. Mode indicator LED.
7. Wide range SMPS based power supply.
8. Analog Controls : Volume, Bass knob.
9. Digital Controls : Play/Pause, Mode, Next/Tune+, Previous/Tune-.

TECHNICAL SPECIFICATIONS


Power Output	15W + 10W x 4
Speaker Size	Main unit : 10.16cm (4) satellite: 6.35cm (2.5)
Impedance	Main unit : 8Ω, Satellite : 4Ω
Frequency Response	Main Unit : 20Hz ~ 200Hz, Satellite : 200Hz ~ 20KHz
S/N Ratio	≥ 55dB
Separation	≥ 35dB
Sensitivity	≤ 500mV rms @ 1KHz
FM Frequency Receiver	88MHz to 180MHz
Power Supply	AC 140V ~ 280V / 50Hz

ACCESSORIES

- | | | | |
|----------------------|------|----------------|------|
| 1. Main Unit | : 1U | 4. Audio Cable | : 1U |
| 2. Satellite Speaker | : 4U | 5. AAA Battery | : 2U |
| 3. User Manual | : 1U | 6. Remote | : 1U |

***WARRANTY:** The warranty period for Intex Computer Multimedia Speaker is 1 year. Conditions apply. For more details, visit our website.

REMOTE DESCRIPTION

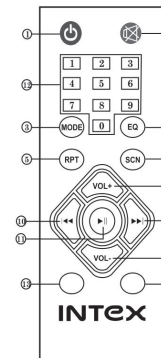

1. **POWER KEY** : Press for stand by mode.
2. **MUTE KEY** : Press once to Mute the set & press again for release the Mute.
3. **MODE KEY** : Press to select all the modes AUX/USB/SD/ FM. Default setting in AUX mode.
4. **EQ KEY** : Press to select the sound effect for playing song in USB/SD mode. 5 kinds of EQ (Normal, Rock, Jazz, Bass, classic) available for sound performance.
5. **RPT KEY** : Press to repeat the playing song in USB/SD mode. Press again to repeat the all song in USB/SD mode.
6. **SCAN KEY** : Press to auto scan the channels in FM mode and scanned FM channels stored by default.
7. **VOL- KEY** : Press to decrease the volume level in all modes.
8. **VOL+ KEY** : Press to increase the volume level in all modes.
9. **NEXT KEY** : Press to select the next song in USB/SD mode. Press to select the next stored CH in FM mode.
10. **PREVIOUS KEY** : Press to select the previous song in USB/SD mode. Press to select the previous stored CH in FM mode.
11. **PLAY/PAUSE KEY** : Press to Play / Pause the playing song in USB/SD mode. Press for 3 seconds to auto scan the channels in FM mode and scanned FM channels stored by default.
12. **0 TO 9 NUMERIC KEYS** : Press numeric key to select the song directly in USB/SD mode. In FM mode to select the stored channels directly (for 94.2 MHz FM channel, Press numeric keys 9 4 2).
13. The function is unavailable.

MAIN UNIT CONTROL OPERATIONS

1. **VOLUME KNOB** : Rotate clockwise for Volume level+ & anti clockwise for Volume level-.
2. **BASS KNOB** : Rotate clockwise for Bass level+ & anti clockwise for Bass level-.
3. **PLAY/PAUSE** : Press to Play/Pause the playing song in USB/SD mode. Press for 3 seconds to auto scanning in FM mode.
4. **MODE** : Press to select the All Modes (AUX/USB/SD/FM). Default setting in AUX mode.
5. **NEXT/TUNE+** : Press to select the next song in USB/SD mode. In FM mode Press shortly for TUNE+ and press for 3 second to select the next channel.
6. **PREVIOUS/TUNE-** : Press to select the previous song in USB/SD mode. In FM mode press shortly for TUNE- and press for 3 second to select the previous channel.

Intex Technologies (India) Ltd.

Message from Marketing Desk

Dear Valued Customer,

Congratulations on becoming a proud owner of INTEx product. You have now joined the fraternity of millions of satisfied INTEx consumers.

Intex Technologies (India) Ltd., incorporated in the year 1996 is one of the major players in India in mobile handsets, consumer durables and IT accessories. The company's flagship brand is INTEx.

The trust built by brand INTEx in the industry is borne out by the increasing demand for its products. The Brand exhibits an exhaustive portfolio of 16 product categories ranging from mobile handsets, mobile accessories, multimedia speakers, LED TVs, washing machines and wearables.

The company has witnessed a fairly high growth in the last few years. With a CAGR of 81% over the past 3 financial years, the company has reached a turnover of almost INR 6400 crore in FY 15-16. Mobile business has been a key driver of growth: Intex became the No-1 Indian mobile handset brand as per IDC market share data of Q3 2015.

Intex has diversified in the sports management sector and has recently acquired the IPL team - Gujarat Lions.

The company's presence has a wide geographical spread through its network comprising 30 stock and sales offices and over 1500+ service touch points. Sales are routed through a distribution network comprising 1800+ distributors and 80,000+ dealers spread across the country. Intex also has retail presence in the country through its standalone brand stores - Intex Smart World. In addition products are available at more than 250 dedicated counters of reputed chains of hyper markets and specialty stores across the country, on TV shopping channels and e-commerce sites.

The company has Design and Development facilities in India and China that are well-equipped with modern equipment and are managed by qualified and experienced professionals looking after product design & development. These facilities ensure products are offered in line with latest global standards. The company has a strength of 11,000 employees across the country.

Intex started domestic manufacturing in 2004 and currently operates four manufacturing facilities that are based in Jammu, Bado (Himachal Pradesh) and Noida manufacturing diverse products. The company has created local employment and training opportunities for youth living in the hinterland of its factories and also developed local vendors.

The company's operations are managed on a world-class collaborative business solution - SAP on a Virtual Private Network. Intex is an ISO 9001:2008 certified company.

Hope you will consider using more Intex products in future.

Intex Technologies (India) Ltd.
D-18/2, Okhla Industrial Area, Phase - II, New Delhi - 110 020.
Tel : +91-011-41610224-6
Email: info@intex.in
Website: www.intex.in
Helpline No. : 1860-208-5555

Note: Our Company devotes every efforts for improving the technology and product specifications. This manual is subject to change without notice.