

## ANNUNCIATIONS AND ALERTS

The Alerting System conveys alerts using the following:

- **CAS Window:** The CAS Window displays abbreviated annunciation text. Text color is based on alert levels described in the CAS Messages section. The CAS Window is on the lower left side of the MFD on the EIS display. In Reversionary Mode, the CAS Window is displayed on the right side of the PFD. A white horizontal line separates annunciations that are acknowledged from annunciations that are not yet acknowledged. Higher priority annunciations are displayed towards the top of the window.
- **Alerts Window:** The Alerts Window displays text messages for up to 64 prioritized alert messages. Pressing the **Message** Softkey displays the Alerts Window. Pressing the **Message** Softkey a second time removes the Alerts Window from the display; the softkey then returns to the previous **Alerts** label. When the Alerts Window is displayed, the **FMS** Knob can be used to scroll through the alert message list.
- **System Annunciations:** Typically, a large red 'X' appears over instruments whose information is supplied by a failed Line Replaceable Unit (LRU).

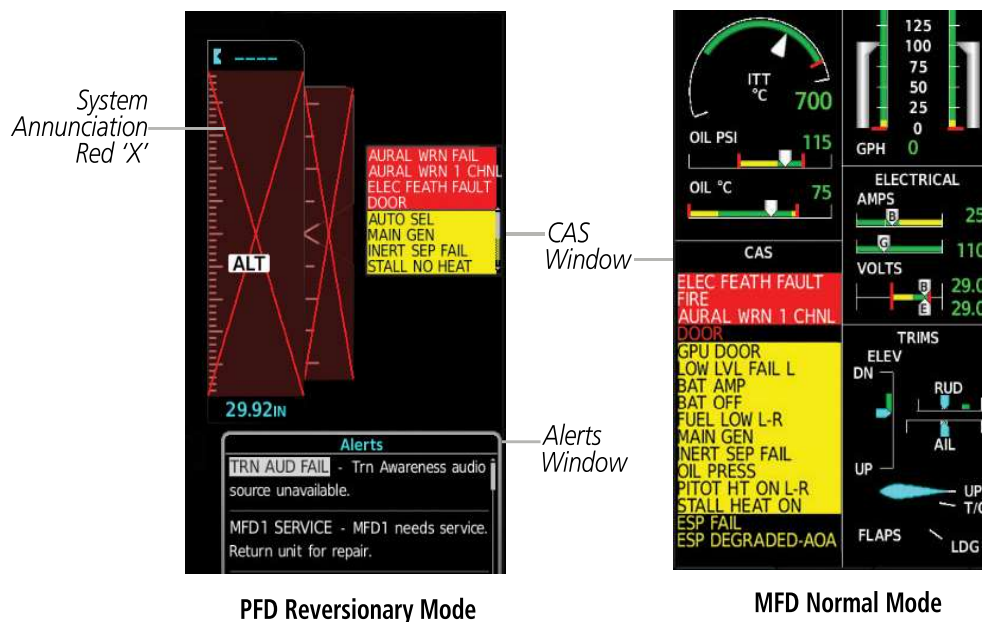


Figure A-1 CAS Message Displays and Alerts Window