



You do not need to write any code to install your PIR sensor, just follow these steps.

Step 1 select add new device/widget, now click sensors, e escolha Motion

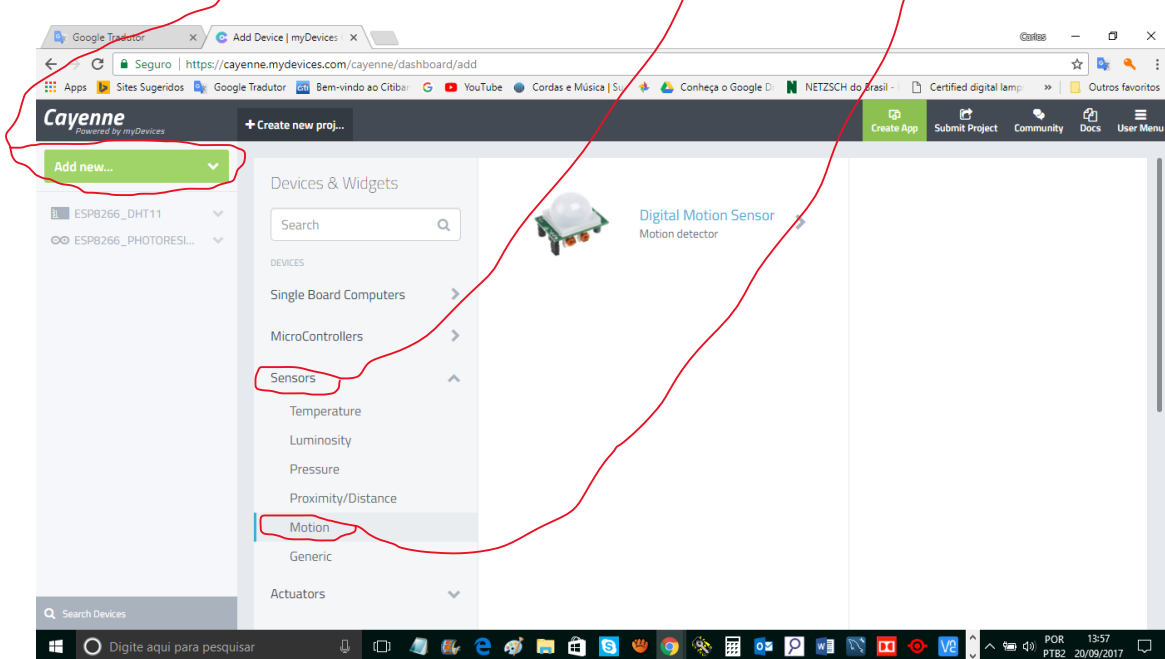


Click the figure of the sensor

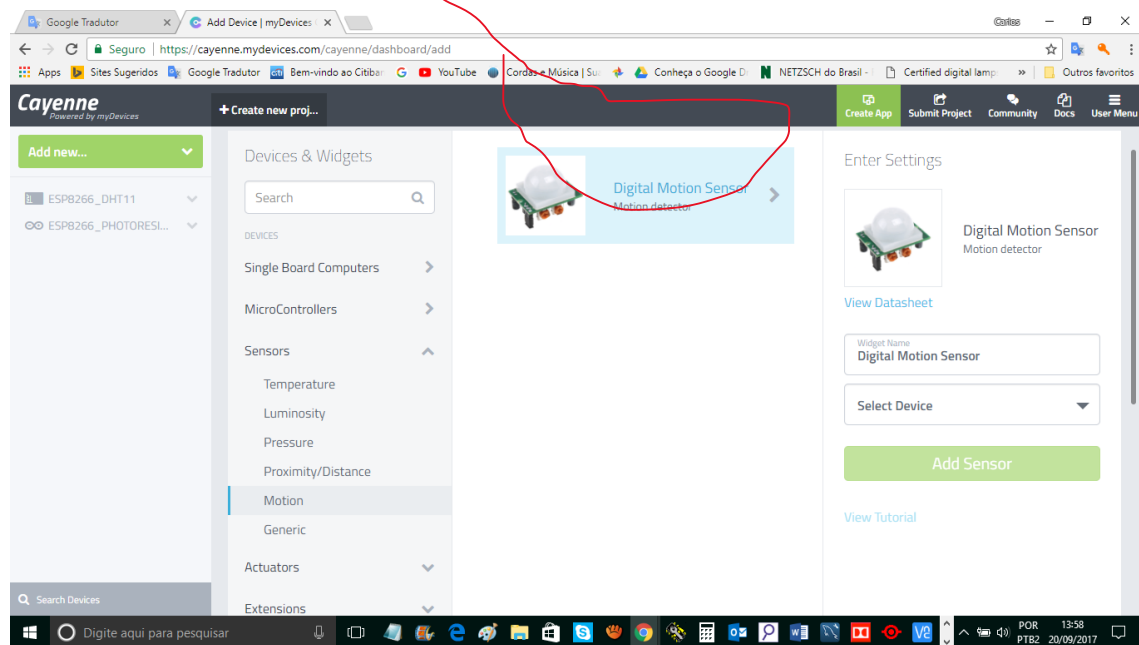

Now configure the parameters of your port, etc.

And finish by clicking

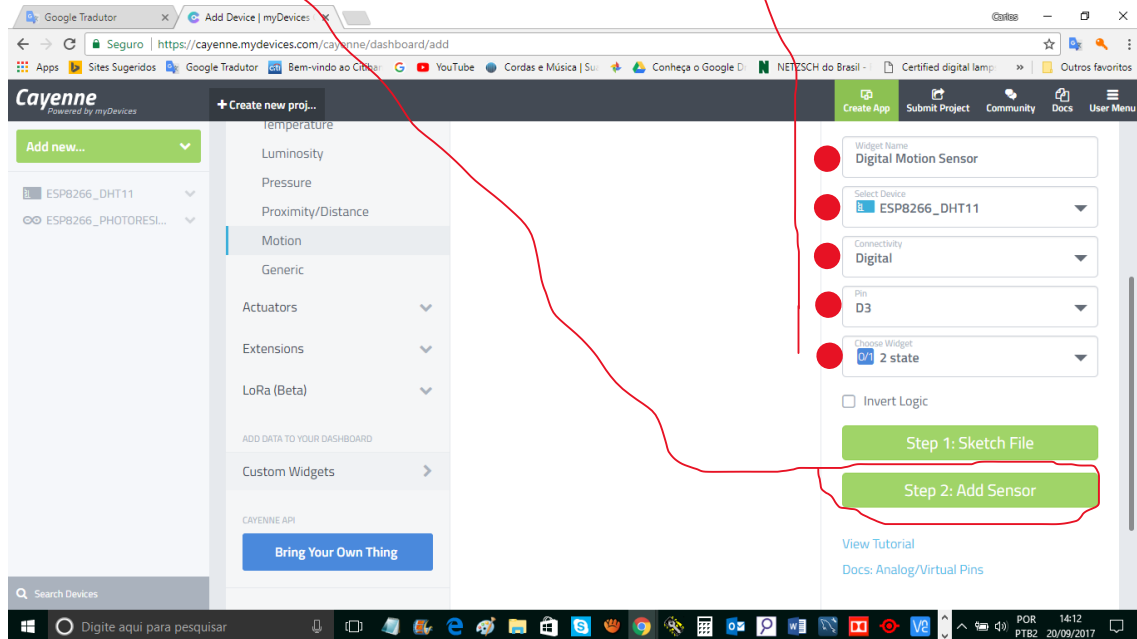

Now select in the Dashboard the widget state, and you will see the status of your PIR sensor, if 1 is active, if 0 is inactive.

In trigger choose what to do for each state, 1 do this, if 0 does something else.

I hope I have helped.

Cheers!

Carlos kwiek