

User Manual

for S32 CAN Driver

Document Number: UM11CANASR4.4 Rev0000R4.0.0 Rev. 1.0

1 Revision History	2
2 Introduction	3
2.1 Supported Derivatives	3
2.2 Overview	4
2.3 About This Manual	4
2.4 Acronyms and Definitions	5
2.5 Reference List	5
3 Driver	6
3.1 Requirements	6
3.2 Driver Design Summary	6
3.3 Hardware Resources	7
3.4 Deviations from Requirements	7
3.5 Driver Limitations	36
3.6 Driver usage and configuration tips	37
3.6.1 Driver APIs usage	37
3.6.2 Can Hardware Object Handle (HOH) configuration	38
3.6.3 Legacy Rx FIFO Configuration	38
3.6.4 RxFifo Configuration with DMA support	39
3.7 Runtime errors	43
3.8 Symbolic Names Disclaimer	44
4 Tresos Configuration Plug-in	45
4.1 Module Can	49
4.2 Container CanGeneral	49
4.3 Parameter CanDevErrorDetect	49
4.4 Parameter CanEnableUserModeSupport	50
4.5 Parameter CanMulticoreSupport	50
4.6 Parameter CanVersionInfoApi	51
4.7 Parameter CanIndex	51
4.8 Parameter CanMainFunctionBusoffPeriod	52
4.9 Parameter CanMainFunctionWakeupPeriod	52
4.10 Parameter CanMainFunctionModePeriod	54
4.11 Parameter CanMultiplexedTransmission	54
4.12 Parameter CanTimeoutMethod	55
4.13 Parameter CanTimeoutDuration	56
4.14 Parameter CanLPduReceiveCalloutFunction	56
4.15 Parameter CanMBCountExtensionSupport	57
4.16 Parameter CanApiEnableMbAbort	57
4.17 Parameter CanSetBaudrateApi	58

4.18 Parameter CanEnableDualClockMode	58
4.19 Parameter CanListenOnlyModeApi	59
4.20 Parameter CanPublicIcomSupport	59
4.21 Reference CanEcucPartitionRef	60
4.22 Reference CanOsCounterRef	60
4.23 Reference CanSupportTTCANRef	61
4.24 Container CanTimeStamp	61
4.25 Parameter MBTSBASE	61
4.26 Parameter TimestampTimeSource	62
4.27 Parameter HRTimeStampCapturePoint	62
4.28 Parameter TimestampHRTimeSource	63
4.29 Parameter CanRxTimestampNotification	64
4.30 Parameter CanTxTimestampNotification	64
4.31 Container CanMainFunctionRWPeriods	65
4.32 Parameter CanMainFunctionPeriod	65
4.33 Container CanIcomGeneral	66
4.34 Parameter CanIcomLevel	66
4.35 Parameter CanIcomVariant	66
4.36 Container CanConfigSet	67
4.37 Container CanController	67
4.38 Parameter CanHwChannel	68
4.39 Parameter CanControllerActivation	68
4.40 Parameter CanControllerBaseAddress	69
4.41 Parameter CanControllerId	69
4.42 Parameter CanRxProcessing	70
4.43 Parameter CanTxProcessing	70
4.44 Parameter CanBusoffProcessing	71
4.45 Parameter CanWakeupFunctionalityAPI	71
4.46 Parameter CanWakeupProcessing	72
4.47 Parameter CanWakeupSupport	72
4.48 Parameter CanLoopBackMode	73
4.49 Parameter CanAutoBusOffRecovery	73
4.50 Parameter CanTrippleSamplingEnable	74
4.51 Parameter CanControllerPrExcEn	74
4.52 Parameter CanControllerEdgeFilter	75
4.53 Parameter CanControllerFdISO	75
4.54 Parameter CanClockFromBus	76
4.55 Parameter CanErrorNotification	76
4.56 Parameter CanFDErrorNotification	77
4.57 Reference CanControllerDefaultBaudrate	77

4.58 Reference CanControllerEcucPartitionRef	78
4.59 Reference CanCpuClockRef	78
4.60 Reference CanCpuClockRefAlternate	79
4.61 Reference CanWakeupSourceRef	79
4.62 Container CanControllerBaudrateConfig	80
4.63 Parameter CanBaudrateTypeSuport	80
4.64 Parameter CanAdvancedSetting	81
4.65 Parameter CanBusLength	81
4.66 Parameter CanPropDelayTranceiver	82
4.67 Parameter CanTxArbitrationStartDelay	83
4.68 Parameter CanControllerPrescaller	83
4.69 Parameter CanControllerPrescallerAlternate	84
4.70 Parameter CanControllerBaudRateConfigID	84
4.71 Parameter CanControllerBaudRate	85
4.72 Parameter CanControllerSyncSeg	85
4.73 Parameter CanControllerPropSeg	86
4.74 Parameter CanControllerSeg1	86
4.75 Parameter CanControllerSeg2	87
4.76 Parameter CanControllerSyncJumpWidth	87
4.77 Container CanControllerFdBaudrateConfig	88
4.78 Parameter CanControllerFdBaudRate	88
4.79 Parameter CanControllerFdSyncSeg	89
4.80 Parameter CanControllerPropSeg	89
4.81 Parameter CanControllerSeg1	90
4.82 Parameter CanControllerSeg2	90
4.83 Parameter CanControllerSyncJumpWidth	91
4.84 Parameter CanControllerSspOffset	91
4.85 Parameter CanControllerFdPrescaller	92
4.86 Parameter CanControllerPrescallerAlternateFd	92
4.87 Parameter CanControllerTxBitRateSwitch	93
4.88 Container CanTTController	93
4.89 Parameter CanTTControllerApplWatchdogLimit	94
4.90 Parameter CanTTControllerCycleCountMax	94
4.91 Parameter CanTTControllerExpectedTxTrigger	95
4.92 Parameter CanTTControllerExternalClockSynchronisation	95
4.93 Parameter CanTTControllerGlobalTimeFiltering	96
4.94 Parameter CanTTControllerInitialRefOffset	96
4.95 Parameter CanTTControllerInterruptEnable	96
4.96 Parameter CanTTControllerLevel2	97
4.97 Parameter CanTTControllerNTUConfig	97

4.98 Parameter CanTTControllerOperationMode	98
4.99 Parameter CanTTControllerSyncDeviation	98
4.100 Parameter CanTTControllerTURRestore	99
4.101 Parameter CanTTControllerTimeMaster	99
4.102 Parameter CanTTControllerTimeMasterPriority	100
4.103 Parameter CanTTControllerTxEnableWindowLength	100
4.104 Parameter CanTTControllerWatchTriggerGapTimeMark	101
4.105 Parameter CanTTControllerWatchTriggerTimeMark	101
4.106 Parameter CanTTIRQProcessing	102
4.107 Reference CanTTControllerEcucPartitionRef	102
4.108 Container CanRamBlock	103
4.109 Container CanRxFifo	103
4.110 Container CanHardwareObject	103
4.111 Parameter CanFdPaddingValue	104
4.112 Parameter CanHandleType	104
4.113 Parameter CanIdType	105
4.114 Parameter CanObjectId	106
4.115 Parameter CanObjectType	106
4.116 Parameter CanHardwareObjectUsesPolling	107
4.117 Parameter CanTriggerTransmitEnable	107
4.118 Parameter CanHwObjectUsesBlock	107
4.119 Parameter CanHwObjectCount	108
4.120 Parameter CanTimeStampEnable	108
4.121 Reference CanControllerRef	109
4.122 Reference CanMainFunctionRWPeriodRef	109
4.123 Container CanHwFilter	110
4.124 Parameter CanHwFilterCode	111
4.125 Parameter CanHwFilterMask	111
4.126 Container CanTTHardwareObjectTrigger	112
4.127 Parameter CanTTHardwareObjectBaseCycle	112
4.128 Parameter CanTTHardwareObjectCycleRepetition	112
4.129 Parameter CanTTHardwareObjectTimeMark	113
4.130 Parameter CanTTHardwareObjectTriggerId	113
4.131 Parameter CanTTHardwareObjectTriggerType	114
4.132 Container CanIcom	114
4.133 Container CanIcomConfig	115
4.134 Parameter CanIcomConfigId	115
4.135 Parameter CanIcomWakeOnBusOff	116
4.136 Container CanIcomWakeupCauses	116
4.137 Container CanIcomRxMessage	117

4.138 Parameter CanIcomCounterValue	117
4.139 Parameter CanIcomMessageIdType	118
4.140 Parameter CanIcomMessageId	118
4.141 Parameter CanIcomIdOperation	119
4.142 Parameter CanIcomMessageIdMask	119
4.143 Parameter CanIcomMissingMessageTimerValue	120
4.144 Parameter CanIcomPayloadLengthError	121
4.145 Parameter CanPayloadFilter	121
4.146 Reference CanIcomDefaultBaudrate	121
4.147 Container CanIcomRxMessageSignalConfig	122
4.148 Parameter CanIcomSignalMask	122
4.149 Parameter CanIcomSignalOperation	123
4.150 Parameter CanIcomSignalValue	124
4.151 Parameter DLCLowValue	124
4.152 Parameter DLCHighValue	125
4.153 Reference CanIcomSignalRef	125
4.154 Container CommonPublishedInformation	126
4.155 Parameter ArReleaseMajorVersion	126
4.156 Parameter ArReleaseMinorVersion	126
4.157 Parameter ArReleaseRevisionVersion	127
4.158 Parameter ModuleId	127
4.159 Parameter SwMajorVersion	128
4.160 Parameter SwMinorVersion	128
4.161 Parameter SwPatchVersion	129
4.162 Parameter VendorApiInfix	129
4.163 Parameter VendorId	130
5 Module Index	132
5.1 Software Specification	132
6 Module Documentation	133
6.1 CAN_DRIVER	133
6.1.1 Detailed Description	133
6.1.2 Data Structure Documentation	134
6.1.3 Macro Definition Documentation	138
6.1.4 Enum Reference	138
6.1.5 Function Reference	140
6.2 FlexCAN	148
6.2.1 Detailed Description	148
6.2.2 Data Structure Documentation	155
6.2.3 Macro Definition Documentation	160

6.2.4 Types Reference	185
6.2.5 Enum Reference	186
6.2.6 Function Reference	192
6.3 Controller Area Network with Flexible Data Rate (FlexCAN)	214
6.4 FlexCAN_driver	216



Chapter 1

Revision History

Revision	Date	Author	Description
1.0	31.10.2022	NXP RTD Team	Prepared for release S32 RTD AUTOSAR 4.4 Version 4.0.0 Release

Chapter 2

Introduction

- [Supported Derivatives](#)
- [Overview](#)
- [About This Manual](#)
- [Acronyms and Definitions](#)
- [Reference List](#)

This User Manual describes NXP Semiconductor AUTOSAR CAN for S32. AUTOSAR CAN driver configuration parameters and deviations from the specification are described in Driver chapter of this document. AUTOSAR CAN driver requirements and APIs are described in the AUTOSAR CAN driver software specification document.

2.1 Supported Derivatives

The software described in this document is intended to be used with the following microcontroller devices of NXP Semiconductors:

- s32g274a_bga525
- s32g254a_bga525
- s32g233a_bga525
- s32g234m_bga525
- s32g378a_bga525
- s32g379a_bga525
- s32g398a_bga525
- s32g399a_bga525
- s32g338m_bga525
- s32g339m_bga525
- s32g358a_bga525
- s32g359a_bga525
- s32r45_bga780

All of the above microcontroller devices are collectively named as S32.

2.2 Overview

AUTOSAR (AUTomotive Open System ARchitecture) is an industry partnership working to establish standards for software interfaces and software modules for automobile electronic control systems.

AUTOSAR:

- paves the way for innovative electronic systems that further improve performance, safety and environmental friendliness.
- is a strong global partnership that creates one common standard: "Cooperate on standards, compete on implementation".
- is a key enabling technology to manage the growing electrics/electronics complexity. It aims to be prepared for the upcoming technologies and to improve cost-efficiency without making any compromise with respect to quality.
- facilitates the exchange and update of software and hardware over the service life of the vehicle.

2.3 About This Manual

This Technical Reference employs the following typographical conventions:

- **Boldface** style: Used for important terms, notes and warnings.
- *Italic* style: Used for code snippets in the text. Note that C language modifiers such "const" or "volatile" are sometimes omitted to improve readability of the presented code.

Notes and warnings are shown as below:

Note

This is a note.

Warning

This is a warning

2.4 Acronyms and Definitions

Term	Definition
API	Application Programming Interface
ASM	Assembler
BSMI	Basic Software Make file Interface
CAN	Controller Area Network
C/CPP	C and C++ Source Code
CS	Chip Select
CTU	Cross Trigger Unit
DEM	Diagnostic Event Manager
DET	Development Error Tracer
DMA	Direct Memory Access
ECU	Electronic Control Unit
FIFO	First In First Out
LSB	Least Significant Bit
MCU	Micro Controller Unit
MIDE	Multi Integrated Development Environment
MSB	Most Significant Bit
N/A	Not Applicable
RAM	Random Access Memory
SIU	Systems Integration Unit
SWS	Software Specification
VLE	Variable Length Encoding
XML	Extensible Markup Language

2.5 Reference List

#	Title	Version
1	Specification of CAN Driver	AUTOSAR Release 4.4.0
2	S32G Reference Manual	S32G2 Reference Manual, Rev 5, May 2022
		S32G3 Reference Manual, Rev.2 Draft C, June 2022
3	S32R45 Reference Manual	S32R45 Reference Manual, Rev. 3, 12/2021
4	S32G2 Errata	Mask Set Errata for Mask 0P77B, Rev. 2.4
5	S32G3 Errata	Mask Set Errata for Mask 0P72B, Rev. 1.1
6	S32R45 Errata	Mask Set Errata for Mask P57D, Rev. 2.0
7	S32G2 DataSheet	S32G2 Data Sheet, Rev 5, May 2022
8	S32G3 DataSheet	S32G3 Data Sheet, Rev 2, Draft B, June 2022
9	S32R45 DataSheet	S32R45 Data Sheet, Rev. 2 — 12/2021
10	VR5510 DataSheet	VR5510 Data Sheet, Rev 5, April 2022

Chapter 3

Driver

- [Requirements](#)
- [Driver Design Summary](#)
- [Hardware Resources](#)
- [Deviations from Requirements](#)
- [Driver Limitations](#)
- [Driver usage and configuration tips](#)
- [Runtime errors](#)
- [Symbolic Names Disclaimer](#)

3.1 Requirements

Requirements for this driver are detailed in the Autosar Driver Software Specification document (See [Table Reference List](#)).

It has vendor-specific requirements and implementation.

3.2 Driver Design Summary

The S32G2XX, S32G3 and S32R45 contains up to 8 Controller Area Network (CAN) blocks. Which supportvCAN FD.

Each IPV_FlexCAN module is a full implementation of the CAN protocol specification,the CAN with Flexible Data rate (CAN FD) protocol and the CAN 2.0 version B protocol. The CAN protocol interface (CPI) sub-module manages the serial communication on the CAN bus, requesting RAM access for receiving and transmitting message frames, validating received messages and performing error handling. The message buffer management (MBM) sub-module handles message buffer selection for reception and transmission, taking care of arbitration and ID matching algorithms. The bus interface unit (BIU) sub-module controls the access to and from the internal interface bus, to establish connection to the CPU and other blocks. The IPV_FlexCAN has these major features:

- 128 flexible message buffers (MBs) of zero to eight bytes data length.With CAN_FD, this length is from 0 to 64 bytes. Some platform has support the selecting ISO/none-ISO.

- Individual Rx mask registers per message buffer.
- Powerful Legacy Rx FIFO ID filtering, capable of matching incoming IDs against either 128 Extended, 256 Standard, or 512 Partial (8 bits) IDs, with 128 individual masking capability.
- ListenOnly capability.
- Programmable loop-back mode supporting self-test operation.
- Maskable interrupts.
- Low power modes.
- Transceiver Delay Compensation feature when transmitting CAN FD messages at faster data rates.
- Timestamp of the Messages sent or received
- Enhanced Rx Fifo for FD Messages support with a powerful filtering capable of setting ID with Masking, Range and Double Standard or Extended IDs
- Rx Fifo Supports DMA transfers depend on the Fifo type support single or multiple message transfer.

3.3 Hardware Resources

The CAN controller number mapping between Reference Manual/microcontroller and our XDM configuration can be done by using the following: • Reference Manual naming = Configuration Naming

For S32G2XX, S32G3 and S32R45 :

- FlexCAN_0 = FlexCAN_0
- FlexCAN_1 = FlexCAN_1
- FlexCAN_2 = FlexCAN_2
- FlexCAN_3 = FlexCAN_3

For S32R45 only :

- FlexCAN_4 = FlexCAN_4
- FlexCAN_5 = FlexCAN_5
- FlexCAN_6 = FlexCAN_6
- FlexCAN_7 = FlexCAN_7

3.4 Deviations from Requirements

The driver deviates from the AUTOSAR CAN Driver software specification in some places. The table below identifies the AUTOSAR requirements that are not implemented or out of scope for the CAN Driver.

Term	Definition
N/S	Out of scope
N/I	Not implemented
N/F	Not fully implemented

Below table identifies the AUTOSAR requirements that are not fully implemented, implemented differently or out of scope for the CAN driver.

Requirement	Status	Description	Notes
SWS_Can_00362	N/S	If development error detection for the Can module is enabled: The function Can_CheckWakeup shall raise the error CAN_E_UNINIT if the driver is not yet initialized.	The external application shall call Can_CheckWakeup function only after driver initialization.
SWS_Can_00363	N/S	If development error detection for the Can module is enabled: The function Can_CheckWakeup shall raise the error CAN_E_PARAM←_CONTROLLER if the parameter Controller is out of range.	Platform does not support a WA←KE UP mode.
SWS_Can_00447	N/S	Icu_DisableNotification shall be called when "external" Can controllers have been transitioned to STOPPED state.	All controllers are on chip. Our SoC does not support wakeup portde
SWS_CAN_00475	N/S	If development error detection for CanDrv is enabled, then function Can_SetIcomConfiguration() shall report the development error CAN_E_ICOM_CONFIG←INVALID if it is called with an invalid ConfigurationId (i.e. neither 0 nor any of the configured Can←IcomConfigId).	This is a HW limitation, some paltform dose not support Pretended Networking feature.
SWS_Can_00240	N/S	The Mcu module (SPAL see [REF]) shall configure register settings that are 'shared' with other modules.	Not a requirement for CAN module
SWS_Can_00242	N/S	If an off-chip CAN controller is used[3], the Can module shall use services of other MCAL drivers (e.g. SPI).	All current controllers are onchip.
SWS_Can_00244	N/S	The Can module shall use the synchronous APIs of the underlying MCAL drivers and shall not provide callback functions that can be called by the MCAL drivers.	All current controllers are onchip.←No callaback can be called by other drivers.
SWS_Can_00257	N/S	When the CAN hardware supports sleep mode and is triggered to transition into SLEEP state, the Can module shall set the controller to the SLEEP state from which the hardware can be woken over CAN Bus.	Controller not support sleep mode.
SWS_Can_00270	N/S	On hardware wakeup (triggered by a wake-up event from CAN bus), the CAN controller shall transition into the state STOPPED.	Platform does not support a WA←KE UP mode.

Requirement	Status	Description	Notes
SWS_Can_00271	N/S	On hardware wakeup (triggered by a wake-up event from CAN bus), the Can module shall call the function EcuM_CheckWakeup either in interrupt context or in the context of Can_MainFunction_Wakeup.	Platform does not support a Wakeup mode.
SWS_Can_00269	N/S	The Can module shall not further process the L-PDU that caused a wake-up.	Platform does not support a Wakeup mode.
SWS_Can_00048	N/S	In case of a CAN bus wake-up during sleep transition, the function Can_SetControllerMode(CAN_CS_STOPPED) shall return E_NOT_OK.	For HW not support on-chip wakeup, this event will not occur.
SWS_Can_00274	N/S	The Can module shall disable or suppress automatic bus-off recovery.	It is replaced by CPR_RTD_00061: The CAN driver configuration shall allow automatic and also manual CAN bus-off recovery.
SWS_CAN_00490	N/S	Controllers that do not support a hardware FIFO often provide the capabilities to implement a shadow buffer mechanism, where additional hardware objects take over when the primary hardware object is busy. The number of hardware objects is configured via "CanHwObjectCount".	Hardware support FIFO, so this requirement is not applicable.
SWS_Can_00299	N/S	The Can module shall copy the L-SDU in a shadow buffer after reception, if the RX buffer cannot be protected (locked) by CAN Hardware against overwriting by a newly received message.	The HW support lock of the received Buffers
SWS_Can_00300	N/S	The Can module shall copy the L-SDU in a shadow buffer, if the CAN Hardware is not globally accessible.	Message buffers are globally accessible are located in system ram.
SWS_Can_00364	N/S	If the ISR for wakeup events is called, it shall call EcuM_CheckWakeup in turn. The parameter passed to EcuM_CheckWakeup shall be the ID of the wakeup source referenced by the CanWakeupSourceRef configuration parameter.	Only for platform support wake up
SWS_CAN_00497	N/S	The CAN driver shall deactivate Pretended Networking after initialization of the CAN controller.	This is a HW limitation, some platform do not support Pretended Networking feature.
SWS_CAN_00462	N/S	Pretended Networking shall be activated by calling Can_SetIcomConfiguration() with a configuration ID not set to 0.	This is a HW limitation, some platform do not support Pretended Networking feature.

Requirement	Status	Description	Notes
SWS_CAN_00464	N/S	CanDrv is responsible to perform reconfiguration of the CAN Controller (incl. ICOM) according to the CanIcomConfig parameters for the selected configuration (Can←IcomConfigId).	This is a HW limitation, some palt-form dose not support Pretended Networking feature.
SWS_CAN_00467	N/S	If activation was successful then CanIf_CurrentIcomConfiguration shall be called with the parameter Error set to ICOM_SWITCH_E←_OK referring to the corresponding CAN controller with the abstract CanIf ControllerId. If activation was not successful then CanIf_←CurrentIcomConfiguration shall be called with the parameter Error set to ICOM_SWITCH_E_FAILED referring to the corresponding CAN controller with the abstract CanIf ControllerId.	This is a HW limitation, some palt-form dose not support Pretended Networking feature.
SWS_CAN_00468	N/S	If Pretended Networking is activated CanDrv shall call CanIf_←RxIndication() if and only if the received message matches the wakeup conditions of the CanIcomConfig (see CanIcomWakeupCauses).	This is a HW limitation, some palt-form dose not support Pretended Networking feature.
SWS_CAN_00470	N/S	If Pretended Networking is activated CanDrv shall reject Can_Write() requests with return value CAN_BUSY.	This is a HW limitation, some palt-form dose not support Pretended Networking feature.
SWS_CAN_00498	N/S	The CAN driver shall deactivate Pretended Networking before the CAN Controller is started by SetControllerMode(CAN_CS←_STARTED)	This is a HW limitation, some palt-form dose not support Pretended Networking feature.
SWS_CAN_00471	N/S	Pretended Networking shall be deactivated (i.e. CanDrv shall behave as when it is configured without Pretended Networking support) by calling Can_SetIcom←Configuration() with a configuration ID = 0.	This is a HW limitation, some palt-form dose not support Pretended Networking feature.
SWS_CAN_00472	N/S	If Pretended Networking is deactivated CanDrv shall process the messages normally as configured in the normal configuration.	This is a HW limitation, some palt-form dose not support Pretended Networking feature.

Requirement	Status	Description	Notes
SWS_CAN_00474	N/S	CAN driver shall inform CanIf about a configuration switch by calling CanIf_CurrentIcomConfiguration referring to the corresponding CAN controller with the abstract CanIf ControllerId. The error parameter is set to ICOM_SWITCH_E_OK if deactivation is successful and to ICOM_SWITCH_E_FAILED otherwise.	This is a HW limitation, some platform dose not support Pretended Networking feature.
SWS_CAN_00499	N/S	The CAN driver shall deactivate Pretended Networking before the CAN Controller is stopped by SetControllerMode(CAN_CS_STOPPED).	This is a HW limitation, some platform dose not support Pretended Networking feature.
SWS_CAN_00477	N/S	Autonomous sending of messages in Pretended Networking mode shall be supported only if additional ICOM hardware is available. A configuration parameter defines if there is hardware support or not (Refer to CanIcomVariant).	This is a HW limitation, some platform dose not support Pretended Networking feature.
SWS_CAN_00478	N/S	If the ICOM is implemented in software the controller shall not send messages in Pretended Networking mode.	This is a HW limitation, some platform dose not support Pretended Networking feature.
SWS_CAN_00479	N/S	CanDriver shall forward all received messages received during Pretended Networking Mode to CanIf.	This is a HW limitation, some platform dose not support Pretended Networking feature.
SWS_Can_00294	N/S	The function Can_SetControllerMode shall disable the wake-up interrupt, while checking the wake-up status.	Platform does not support a WAKE UP mode.
SWS_Can_00360	N/S	Service name: - Can_CheckWakeup - Syntax: - Std_ReturnType Can_CheckWakeup(uint8 Controller) - Service ID[hex]: - 0x0b - Sync/Async: - Synchronous - Reentrancy: - Non Reentrant - Parameters (in): - Controller - Controller to be checked for a wakeup. - Parameters (inout): - None - Parameters (out): - None - Return value: - Std_ReturnType - E_OK: API call has been accepted E_NOT_OK: API call has not been accepted - Description: - This function checks if a wakeup has occurred for the given controller. - Available via: - Can.h -	The external application shall assure that Can_CheckWakeup does not preempt and is not preempted by any other CAN driver API using the same controller parameter. The external application shall assure that Can_CheckWakeup does not preempt itself.

Requirement	Status	Description	Notes
SWS_Can_00361	N/S	The function Can_CheckWakeup shall check if the requested CAN controller has detected a wakeup. If a wakeup event was successfully detected, reporting shall be done to EcuM via API EcuM_SetWakeupEvent.	Platform does not support a Wake UP mode.
SWS_CAN_00485	N/S	The function Can_CheckWakeup shall be pre compile time configurable On/Off by the configuration parameter: CanWakeupFunctionalityAPI	This requirement can only apply for platform support on-chip wakeup. Otherwise, it will be always Off.
SWS_Can_00445	N/S	Can driver shall use the following APIs provided by Icu driver, to enable and disable the wakeup event notification: Icu_EnableNotification Icu_DisableNotification	Not implemented for OnChip platform
SWS_Can_00446	N/S	Icu_EnableNotification shall be called when "external" Can controllers have been transitioned to SLEEP state.	Not implemented for OnChip platform
SWS_Can_00110	N/S	There is no requirement regarding the execution order of the CAN main processing functions.	this is not a requirement
SWS_Can_00228	N/S	Service name: - Can_MainFunction_Wakeup - Syntax: - void Can_MainFunction_Wakeup(void) - Service ID[hex]: - 0x0a - Description: - This function performs the polling of wake-up events that are configured statically as 'to be polled'. - Available via: - SchM_Can.h -	Not implemented for platform not support hardware wake-up
SWS_Can_00112	N/S	The function Can_MainFunction_Wakeup shall perform the polling of wake-up events that are configured statically as 'to be polled'.	Not implemented for platform not support hardware wake-up
SWS_Can_00185	N/S	The Can module may implement the function Can_MainFunction_Wakeup as empty define in case no polling at all is used.	Not implemented for platform not support hardware wake-up
SWS_CAN_00480	N/S	The interface Can_SetIcomConfiguration() shall activate or deactivate Pretended Networking and load the requested ICOM configuration for a given controller.	Pretended Networking feature.

Requirement	Status	Description	Notes
SWS_CAN_00481	N/S	If the requested ConfigurationId is not 0, the function Can_SetIcomConfiguration() shall re-configure the controller with the ICOM configuration parameters of the CanIcomConfig container which CanIcomConfigId matches the requested ConfigurationId.	Pretended Networking feature.
SWS_CAN_00495	N/S	Can_SetIcomConfiguration() shall be pre compile time configurable ON/OFF by the configuration parameter CAN_PUBLIC_ICOM_SUPPORT.	Pretended Networking feature.
SWS_Can_00999	N/S	These requirements are not applicable to this specification.	this is not a requirement
ECUC_Can_00357	N/S	Name - CanMainFunctionWakeupPeriod - Parent Container - CanGeneral - Description - This parameter describes the period for cyclic call to Can_MainFunctionWakeup. Unit is seconds. - Multiplicity - 0..1 - Type - EcucFloatParamDef - Range -]0 .. INF[- - Default value - - - Post-Build Variant Multiplicity - false - Post-Build Variant Value - false - Multiplicity Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - -	Shall be supported only by platforms which include hardware wake-up supported
ECUC_Can_00483	N/S	Name - CanPublicIcomSupport - Parent Container - CanGeneral - Description - Selects support of Pretended Network features in Can driver.True: EnabledFalse: Disabled - Multiplicity - 1 - Type - EcucBooleanParamDef - Default value - false - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECU -	Pretended Networking feature.

Requirement	Status	Description	Notes
ECUC_Can_00430	N/S	Name - CanSupportTTCANRef - Parent Container - CanGeneral - Description - The parameter refers to CanIfSupportTTCAN parameter in the CAN Interface Module configuration. The CanIfSupportTTCAN parameter defines whether TTCAN is supported. - Multiplicity - 1 - Type - Reference to [CanIfPrivateCfg] - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECU -	This is a HW limitation, some platform does not support TTCAN feature.
ECUC_Can_00382	N/S	Name - CanControllerBaseAddress - Parent Container - CanController - Description - Specifies the CAN controller base address. - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 4294967295 - - Default value - - - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: local -	Controller base address is taken from Base module
ECUC_Can_00466	N/S	Name - CanWakeupFunctionality API - Parent Container - CanController - Description - Adds / removes the service Can_CheckWakeup() from the code. True: Can_CheckWakeup can be used. False: Can_CheckWakeup cannot be used. - Multiplicity - 1 - Type - EcucBooleanParamDef - Default value - false - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: local dependency - : H/W should support the wakeup functionality to enable this parameter. -	Shall be supported only by platforms which include hardware wake-up supported

Requirement	Status	Description	Notes
ECUC_Can_00319	N/S	Name - CanWakeupProcessing - Parent Container - CanController - Description - Enables / disables A↔PI Can_MainFunction_Wakeup() for handling wakeup events in polling mode. - Multiplicity - 1 - Type - EcucEnumerationParamDef - Range - INTERRUPT - Interrupt Mode of operation. - POLLING - Polling Mode of operation. - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: local -	This parameter shall be hardcoded always to unchecked(disable) for following all platforms which does not include hardware wake-up supported.
ECUC_Can_00330	N/S	Name - CanWakeupSupport - Parent Container - CanController - Description - CAN driver support for wakeup over CAN Bus. - Multiplicity - 1 - Type - EcucBoolean↔ParamDef - Default value - - - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - -	Shall be supported only by platforms which include hardware wake-up supported. Always has value = false
ECUC_Can_00359	N/S	Name - CanWakeupSourceRef - Parent Container - CanController - Description - This parameter contains a reference to the Wakeup Source for this controller as defined in the ECU State Manager.↔Implementation Type: reference to EcuM_WakeupSourceType - Multiplicity - 0..1 - Type - Symbolic name reference to [EcuMWakeup↔Source] - Post-Build Variant Multiplicity - false - Post-Build Variant Value - false - Multiplicity Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: local -	This requirement is only applicable for platform support HW wake up.
ECUC_Can_00440	N/S	Container Name - CanIcom - Description - This container contains the parameters for configuring pretended networking - Configuration Parameters -	Pretended Networking feature.

Requirement	Status	Description	Notes
ECUC_Can_00459	N/S	Container Name - CanIcomConfig - Description - This container contains the configuration parameters of the ICOM Configuration. - Configuration Parameters -	Pretended Networking feature.
ECUC_Can_00441	N/S	Name - CanIcomConfigId - Parent Container - CanIcomConfig - Description - This parameter identifies the ID of the ICOM configuration. - Multiplicity - 1 - Type - Ecuc↔IntegerParamDef - Range - 1 .. 255 - - Default value - - - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECU -	Pretended Networking feature.
ECUC_Can_00442	N/S	Name - CanIcomWakeOnBusOff - Parent Container - CanIcomConfig - Description - This parameter defines that the MCU shall wake if the bus off is detected or not. - Multiplicity - 1 - Type - Ecuc↔BooleanParamDef - Default value - true - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECU -	Pretended Networking feature.
ECUC_Can_00444	N/S	Container Name - CanIcomGeneral - Description - This container contains the general configuration parameters of the ICOM Configuration. - Configuration Parameters -	Pretended Networking feature.

Requirement	Status	Description	Notes
ECUC_Can_00445	N/S	Name - CanIcomLevel - Parent Container - CanIcomGeneral - Description - Defines the level of Pretended Networking. This parameter is reserved for future implementations (Pretended Networking level 2). - Multiplicity - 0..1 - Type - EcucEnumerationParamDef - Range - CAN_ICOM_LEVEL ← ONE - - - CAN_ICOM_LEVEL ← TWO - - - Default value - - Post-Build Variant Multiplicity - false - Post-Build Variant Value - false - Multiplicity Configuration Class - Pre-compile time - X - All Variants - Link time - - - Post-build time - - - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - Post-build time - - - Scope / Dependency - scope: ECU -	Pretended Networking feature.
ECUC_Can_00446	N/S	Name - CanIcomVariant - Parent Container - CanIcomGeneral - Description - Defines the variant, which is supported by this CanController - Multiplicity - 1 - Type - EcucEnumerationParamDef - Range - CAN_ICOM_VARIANT ← HW - - - CAN_ICOM_VARIANT ← NONE - - - CAN_ICOM_VARIANT ← SW - - - Default value - - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - Post-build time - - - Scope / Dependency - scope: ECU -	Pretended Networking feature.
ECUC_Can_00447	N/S	Container Name - CanIcomRxMessage - Description - This container contains the configuration parameters for the wakeup causes for matching received messages. It has to be configured as often as received messages are defined as wakeup cause.constraint: For all CanIcomRxMessage instances the Message IDs which are defined in CanIcomMessageId and in CanIcomRxMessageIdMask shall not overlap. - Configuration Parameters -	Pretended Networking feature.

Requirement	Status	Description	Notes
ECUC_Can_00448	N/S	Name - CanIcomCounterValue - Parent Container - CanIcomRx← Message - Description - This parameter defines that the MCU shall wake if the message with the ID is received n times on the communication channel. - Multiplicity - 0..1 - Type - EcucIntegerParam← Def - Range - 1 .. 65536 - - Default value - - - Post-Build Variant Multiplicity - false - Post-Build Variant Value - false - Multiplicity Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECU -	Pretended Networking feature.
ECUC_Can_00449	N/S	Name - CanIcomMessageId - Parent Container - CanIcom← RxMessage - Description - This parameter defines the message ID the wakeup causes of this CanIcomRxMessage are configured for. In addition a mask (CanIcomMessageIdMask) can be defined, in that case it is possible to define a range of rx messages, which can create a wakeup condition. - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 536870912 - - Default value - - - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECU -	Pretended Networking feature.

Requirement	Status	Description	Notes
ECUC_Can_00465	N/S	<p>Name - CanIcomMessageIdMask - Parent Container - CanIcomRxMessage - Description - Describes a mask for filtering of CAN identifiers. The CAN identifiers of incoming messages are masked with this CanIcomMessageIdMask. If the masked identifier matches the masked value of CanIcomMessageId, it can create a wakeup condition for this CanIcomRxMessage. Bits holding a 0 mean don't care, i.e. do not compare the message's identifier in the respective bit position. The mask shall be build by filling with leading 0. - Multiplicity - 0..1 - Type - EcucIntegerParamDef - Range - 0 .. 536870912 - Default value - - - Post-Build Variant Multiplicity - false - Post-Build Variant Value - false - Multiplicity Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECUDependency: CanIcomMessageIdMask and CanIcomRxMessageSignalConfig shall not be defined together. -</p>	Pretended Networking feature.
ECUC_Can_00450	N/S	<p>Name - CanIcomMissingMessageTimerValue - Parent Container - CanIcomRxMessage - Description - This parameter defines that the MCU shall wake if the message with the ID is not received for a specific time in s on the communication channel. - Multiplicity - 0..1 - Type - EcucFloatParamDef - Range - [-INF .. INF] - - Default value - - - Post-Build Variant Multiplicity - false - Post-Build Variant Value - false - Multiplicity Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECU -</p>	Pretended Networking feature.

Requirement	Status	Description	Notes
ECUC_Can_00451	N/S	Name - CanIcomPayloadLength↔ Error - Parent Container - Can↔ IcomRxMessage - Description - This parameter defines that the MCU shall wake if a payload er- ror occurs - Multiplicity - 1 - Type - EcucBooleanParamDef - Default value - false - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - Post- build time - - - Scope / Depen- dency - scope: ECU -	Pretended Networking feature.
ECUC_Can_00452	N/S	Container Name - CanIcomRx↔ MessageSignalConfig - Description - This container contains the config- uration parameters for the wakeup causes for matching signals.It has to be configured as often as a sig- nal is defined as wakeup cause. If at least one Signal conditions defined in a CanIcomRxMessage↔ SignalConfig evaluates to true or if no CanIcomRxMessageSignal↔ Config are defined, the whole wakeup condition is considered to be true. All instances of this con- tainer refer to the same frame/pdu (see CanIcomMessageId). - Config- uration Parameters -	Pretended Networking feature.
ECUC_Can_00487	N/S	Name - CanIcomSignalMask - Parent Container - CanIcomRx↔ MessageSignalConfig - Description - This parameter shall be used to mask a signal in the payload of a CAN message.The mask is binary AND with the signal pay- load. The result will be used in combination of the operations de- fined in CanIcomSignalOperation with the CanIcomSignalValue. - Multiplicity - 1 - Type - Ecuc↔ IntegerParamDef - Range - 0 .. 18446744073709551615 - - Default value - - - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - Post-build time - - - - Scope / Dependency - scope: local -	Pretended Networking feature.

Requirement	Status	Description	Notes
ECUC_Can_00462	N/S	<p>Name - CanIcomSignalOperation - Parent Container - CanIcomRx← MessageSignalConfig - Description - This parameter defines the operation, which shall be used to verify the signal value creates a wakeup condition. - Multiplicity - 1 - Type - EcucEnumerationParam← Def - Range - AND - The received signal value masked by CanIcom← SignalMask has at least one bit set in common with CanIcom← SignalValue (binary AND). - E← QUAL - The received signal value masked by CanIcomSignalMask is equal to CanIcomSignalValue. - GREATER - The received signal value masked by CanIcomSignal← Mask is strictly greater than Can← IcomSignalValue. Values are interpreted as unsigned integers. - SMALLER - The received signal value masked by CanIcomSignal← Mask is strictly smaller than Can← IcomSignalValue. Values are interpreted as unsigned integers. - XOR - The received signal value masked by CanIcomSignalMask then XO← Red to CanIcomSignalValue is not null. - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECU -</p>	Pretended Networking feature.
ECUC_Can_00488	N/S	<p>Name - CanIcomSignalValue - Parent Container - CanIcomRx← MessageSignalConfig - Description - This parameter shall be used to define a signal value which shall be compared (CanIcom← SignalOperation) with the masked CanIcomSignalMask value of the received signal (CanIcomSignal← Ref). - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 18446744073709551615 - - Default value - - - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: local -</p>	Pretended Networking feature.

Requirement	Status	Description	Notes
ECUC_Can_00456	N/S	Name - CanIcomSignalRef - Parent Container - CanIcomRxMessage← SignalConfig - Description - This parameter defines a reference to the signal which shall be checked additional to the message id (Can← IcomMessageId).This reference is used for documentation to define which ComSignal originates this filter setting. All signals being referred by this reference shall point to the same PDU. - Multiplicity - 0..1 - Type - Reference to [ComSignal] - Post-Build Variant Multiplicity - false - Post← Build Variant Value - false - Multiplicity Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - Scope / Dependency - scope: ECUdependency: The signal referenced by CanIcomSignal← Ref shall be included in a Com← IPdu which matches with the current CAN Controller and the C← AN Identifier (CanIcomMessage← Id) configured for this CanIcom← RxMessage. -	Pretended Networking feature.
ECUC_Can_00443	N/S	Container Name - CanIcom← WakeupCauses - Description - This container contains the configuration parameters of the wakeup causes to leave the power saving mode. - Configuration Parameters -	Pretended Networking feature.
ECUC_Can_00001	N/S	Container Name - CanTT← Controller - Description - Can← TTController is specified in the SWS TTCAN and contains the configuration parameters of the TTCAN controller(s) (which are needed in addition to the configuration parameters of the CAN controller(s)).This container is only included and valid if TTCAN is supported by the controller, enabled (see CanSupportTTCANRef, ECUC_Can_00430), and used. - Configuration Parameters -	This is a HW limitation, some paltform dose not support TTCan feature.

Requirement	Status	Description	Notes
ECUC_Can_00139	N/S	Name - CanTTControllerAppl↔ WatchdogLimit - Parent Container - CanTTController - Description - Defines the maximum time period (unit is 256 times NTU) after which the application has to serve the watchdog. - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 255 - - Default value - - - Post-Build Variant Value - true - Value Con- figuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: ECU -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00138	N/S	Name - CanTTControllerCycle↔ CountMax - Parent Container - CanTTController - Description - Defines the value for cycle_count↔ _max. Allowed values:0x00: 1 ba- sic cycle0x01: 2 basic cycles0x03↔ : 4 basic cycles0x07: 8 basic cycles0x0F: 16 basic cycles0x1F: 32 basic cycles0x3F: 64 basic cycles - Multiplicity - 1 - Type - Ecuc↔ IntegerParamDef - Range - 0 .. 63 - - Default value - - - Post-Build Variant Value - true - Value Con- figuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: ECU -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00136	N/S	Name - CanTTController↔ ExpectedTxTrigger - Parent Container - CanTTController - De- scription - Number of expected↔ _tx_trigger. - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 255 - - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: local -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.

Requirement	Status	Description	Notes
ECUC_Can_00135	N/S	<p>Name - CanTTController↵ ExternalClockSynchronisation - Parent Container - Can↵ TTController - Description - Enables/disables the external clock synchronization.TRUE↵ :External clock synchronization enabled.FALSE:External clock synchronization disabled.This pa- rameter shall only be configurable if parameter CanTTController↵ Level2 equals TRUE. - Multiplicity - 1 - Type - EcucBooleanParamDef - Default value - - - Post-Build Variant Value - true - Value Con- figuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: EC↵ Udependency: CanTTController↵ Level2 (ECUC_Can_00131) -</p>	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00134	N/S	<p>Name - CanTTControllerGlobal↵ TimeFiltering - Parent Container - CanTTController - Description - Enables/disables the global time filtering.TRUE:Global time filter- ing enabled.FALSE:Global time filtering disabled.This parameter shall only be configurable if param- eter CanTTControllerLevel2 equals TRUE. - Multiplicity - 1 - Type - EcucBooleanParamDef - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIAN↵ T-PRE-COMPILE - Link time - - - - Post-build time - X - VARIAN↵ T-POST-BUILD - Scope / Depen- dency - scope: localdependency↵ : CanTTControllerLevel2 (ECU↵ C_Can_00131) -</p>	This is a HW limitation, some palt- form dose not support TTCan fea- ture.

Requirement	Status	Description	Notes
ECUC_Can_00128	N/S	Name - CanTTControllerInitial← RefOffset - Parent Container - CanTTController - Description - Defines the initial value for ref trig- ger offset. - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 127 - - Default value - - - Post-Build Variant Value - true - Value Con- figuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: ECU -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00140	N/S	Name - CanTTController← InterruptEnable - Parent Container - CanTTController - Description - Enables/disables the respective interrupts.Bit Position set to 1: Enable respective interrupt.Bit Position set to 0: Disable re- spective interrupt.Bit Position / Interrupt Source: 10: Application Watchdog. 9: Watch Trigger reached. 8: Initialization Watch Trigger reached. 7: Change of Error Level. 6: Tx Overflow. 5: Tx Underflow. 4: Global Time Error. 3: Gap. 2: Start of Cycle. 1: Time Discontinuity. 0: Master State Change.Bit position "1: Time Discontinuity" and "4: Global Time Error" shall only be configurable if parameter CanTTControllerLevel2 equals TRUE. - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 1023 - - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIANT- PRE-COMPILE - Link time - - - - Post-build time - X - VARIAN← T-POST-BUILD - Scope / Depen- dency - scope: localdependency: CanTTControllerLevel2 (ECUC← _Can_00131) -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.

Requirement	Status	Description	Notes
ECUC_Can_00131	N/S	Name - CanTTCControllerLevel2 - Parent Container - CanTTCController - Description - Defines whether Level 2 or Level 1 is used. TRUE: Level 2.FALSE: Level 1.If this parameter is set to FALSE then all parameters with dependency to CanTTCControllerLevel2 need not be configured. - Multiplicity - 1 - Type - EcucBooleanParamDef - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: local -	This is a HW limitation, some platform dose not support TTCan feature.
ECUC_Can_00141	N/S	Name - CanTTCControllerNTU Config - Parent Container - CanTTCController - Description - Defines the config value for NTU (network time unit).Value given in microseconds. The value configured shall be greater than 0.Together with the local oscillator period, the TUR (time unit ratio) can be derived from the NTU. This parameter shall only be configurable if parameter CanTTCControllerLevel2 equals TRUE. - Multiplicity - 1 - Type - EcucFloatParamDef - Range - [0 .. 100] - - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: ECUC - Udependency: CanTTCControllerLevel2 (ECUC_Can_00131) -	This is a HW limitation, some platform dose not support TTCan feature.

Requirement	Status	Description	Notes
ECUC_Can_00127	N/S	<p>Name - CanTTController←</p> <p>OperationMode - Parent Container</p> <p>- CanTTController - Description - Defines the operation mode. - Multiplicity - 1 - Type</p> <p>- EcucEnumerationParamDef - Range - CAN_TT_EVENT_←</p> <p>SYNC_TIME_TRIGGERED - Event-synchronized time triggered operation - CAN_TT_EVENT_←</p> <p>_TRIGGERED - Event triggered operation (normal can operation without time schedule) - CAN_←</p> <p>TT_TIME_TRIGGERED - Time triggered operation - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time</p> <p>- X - VARIANT-PRE-COMPILE</p> <p>- Link time - - - Post-build time</p> <p>- X - VARIANT-POST-BUILD</p> <p>Scope / Dependency - scope: ECU</p> <p>-</p>	This is a HW limitation, some palt-form dose not support TTCan feature.
ECUC_Can_00132	N/S	<p>Name - CanTTControllerSync←</p> <p>Deviation - Parent Container - CanTTController - Description - Defines the maximum synchronization deviation:Given as a percentage value of the NTU (network time unit). The value configured shall be greater than 0.This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE. - Multiplicity - 1 - Type</p> <p>- EcucFloatParamDef - Range - [0 .. 100] - - Default value - - -</p> <p>Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIANT-←</p> <p>PRE-COMPILE - Link time - - -</p> <p>- Post-build time - X - VARIAN←</p> <p>T-POST-BUILD - Scope / Dependency - scope: localdependency←</p> <p>: CanTTControllerLevel2 (ECU←</p> <p>C_Can_00131) -</p>	This is a HW limitation, some palt-form dose not support TTCan feature.

Requirement	Status	Description	Notes
ECUC_Can_00129	N/S	Name - CanTTControllerTime← Master - Parent Container - Can← TTController - Description - De- fines whether the controller acts as a potential time master. TRUE← : Potential time master. FALSE: Time slave. - Multiplicity - 1 - Type - EcucBooleanParamDef - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIAN← T-PRE-COMPILE - Link time - - - - Post-build time - X - VARIAN← T-POST-BUILD - Scope / Depen- dency - scope: ECU -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00130	N/S	Name - CanTTControllerTime← MasterPriority - Parent Container - CanTTController - Description - Defines the time master priority. - Multiplicity - 1 - Type - Ecuc← IntegerParamDef - Range - 0 .. 7 - - Default value - - - Post-Build Variant Value - true - Value Con- figuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: ECU -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00133	N/S	Name - CanTTControllerTUR← Restore - Parent Container - Can← TTController - Description - En- ables/disables the TUR restore.← Note that the value configured for TUR can be derived from the value configured for NTU and the local oscillator preperiod.TRUE:TUR re- store enabled. FALSE:TUR restore disabled.This parameter shall only be configurable if parameter Can← TTControllerLevel2 equals TRUE. - Multiplicity - 1 - Type - Ecuc← BooleanParamDef - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre- compile time - X - VARIANT-P← RE-COMPILE - Link time - - - - Post-build time - X - VARIAN← T-POST-BUILD - Scope / Depen- dency - scope: localdependency← : CanTTControllerLevel2 (ECU← C_Can_00131) -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.

Requirement	Status	Description	Notes
ECUC_Can_00137	N/S	Name - CanTTControllerTxEnableWindowLength - Parent Container - CanTTController - Description - Length of the tx enable window given in CAN bit times. Definition parameter "CanTTControllerTxEnableWindowlength" is used such that: Length of enable window = CanTTControllerTxEnableWindowLength + 1 - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 1 .. 16 - - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: ECU -	This is a HW limitation, some platform dose not support TTCan feature.
ECUC_Can_00158	N/S	Name - CanTTControllerWatchTriggerGapTimeMark - Parent Container - CanTTController - Description - watch trigger time mark after a gap - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 65535 - - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: local -	This is a HW limitation, some platform dose not support TTCan feature.
ECUC_Can_00157	N/S	Name - CanTTControllerWatchTriggerTimeMark - Parent Container - CanTTController - Description - watch trigger time mark - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 65535 - - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: local -	This is a HW limitation, some platform dose not support TTCan feature.

Requirement	Status	Description	Notes
ECUC_Can_00142	N/S	Name - CanTTIRQProcessing - Parent Container - CanTT← Controller - Description - Enables / disables API Can_Main← Function_BusOff() for handling busoff events in polling mode. - Multiplicity - 1 - Type - Ecuc← EnumerationParamDef - Range - INTERRUPT - Interrupt Mode of operation. - POLLING - Polling Mode of operation. - Post-Build Variant Value - true - Value Con- figuration Class - Pre-compile time - X - VARIANT-PRE-COMPILE - Link time - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: ECU -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00002	N/S	Container Name - CanTT← HardwareObjectTrigger - Descrip- tion - CanTTHardwareObject← Trigger is specified in the SWS TTCAN and contains the config- uration (parameters) of TTCAN triggers for Hardware Objects, which are additional to the con- figuration (parameters) of CAN Hardware Objects.This container is only included and valid if TTCAN is supported by the controller and, enabled (see CanSupportTTCA← NRef, ECUC_Can_00430), and used. - Configuration Parameters -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00147	N/S	Name - CanTTHardwareObject← BaseCycle - Parent Container - CanTTHardwareObjectTrigger - Description - Defines the cycle_← offset. CanTTHardwareObject← BaseCycle must be not greater than cycle_count_max. - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 63 - - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VA← RIANT-PRE-COMPILE - Link time - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: ECU -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.

Requirement	Status	Description	Notes
ECUC_Can_00148	N/S	Name - CanTTHardwareObject↔ CycleRepetition - Parent Container - CanTTHardwareObjectTrigger - Description - Defines the repeat↔ _factor.CanTTHardwareObject↔ CycleRepetition shall be a power of two (2), greater than cycle_offset but not greater than cycle_count↔ _max + 1. - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 1 .. 64 - - Default value - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VA↔ RIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: ECU -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00146	N/S	Name - CanTTHardwareObject↔ TimeMark - Parent Container - CanTTHardwareObjectTrigger - Description - Defines the point in time, when the trigger will be activated.Value is given in cycle time. - Multiplicity - 1 - Type - EcucIntegerParamDef - Range - 0 .. 65535 - - Default value - - - - Post-Build Variant Value - true - Value Configuration Class - Pre-compile time - X - VA↔ RIANT-PRE-COMPILE - Link time - - - - Post-build time - X - VARIANT-POST-BUILD - Scope / Dependency - scope: local -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.
ECUC_Can_00155	N/S	Name - CanTTHardwareObject↔ TriggerId - Parent Container - CanTTHardwareObjectTrigger - Description - Sequential number which allows separation of different TTCAN triggers configured for one and the same hardware object. - Multiplicity - 1 - Type - Ecuc↔ IntegerParamDef (Symbolic Name generated for this parameter) - Range - 0 .. 63 - - Default value - - - Post-Build Variant Value - false - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - - Post-build time - - - - - Scope / Dependency - scope: local -	This is a HW limitation, some palt- form dose not support TTCan fea- ture.

Requirement	Status	Description	Notes
ECUC_Can_00145	N/S	<p>Name - CanTTHardwareObject←</p> <p>TriggerType - Parent Container</p> <p>- CanTTHardwareObjectTrigger</p> <p>- Description - Defines the type of the trigger associated with the hardware object. This parameter depends on plain CAN parameter CAN_OBJECT_TYPE.If CAN_OBJECT_TYPE equals RECEIVE then this parameter is fixed to CAN_TT_RX_TRIGGER.If CAN_OBJECT_TYPE equals TRANSMIT then one of the following literals is configurable←</p> <p>:CAN_TT_TX_REF_TRIGGER←</p> <p>ER,CAN_TT_TX_REF_TRIG←</p> <p>IGGER_GAP,CAN_TT_TX←</p> <p>_TRIGGER_MERGED,CAN←</p> <p>_TT_TX_TRIGGER_SING←</p> <p>LE,CAN_TT_TX_TRIGGER←</p> <p>_EXCLUSIVE. - Multiplicity - 1 -</p> <p>Type - EcucEnumerationParamDef</p> <p>- Range - CAN_TT_RX_TRI←</p> <p>IGGER - Trigger for verifying the successful reception of messages. -</p> <p>CAN_TT_TX_REF_TRIGGER</p> <p>- Trigger for transmitting the reference message. - CAN_T←</p> <p>T_TX_REF_TRIGGER_GAP</p> <p>- Trigger for transmitting the reference message in case no event occurs after a gap. - CAN_TT←</p> <p>_TX_TRIGGER_EXCLUSIVE -</p> <p>Trigger for transmitting a message in an exclusive time window. Note, that messages in an exclusive window are transmitted continuously, i.e. regardless whether the same message has been transmitted before, the message, which is currently available, will be transmitted every time the tx trigger occurs. -</p> <p>CAN_TT_TX_TRIGGER_M←</p> <p>ERGED - Trigger for transmitting a message inside a merged arbitration window (the last tx trigger in a merged arbitration window is of type CAN_TT_←</p> <p>TX_TRIGGER_SINGLE). Note, that messages in an arbitration window are transmitted only, if new data is available. When the transmission was not successful, it will be repeated at the next tx trigger for this message. When the transmission was successful, this</p>	This is a HW limitation, some paltform dose not support TTCan feature.
32		<p>message will not be transmitted again at the next tx triggers until</p> <p>S32 CAN Driver</p>	<p>NXP Semiconductors</p>

Requirement	Status	Description	Notes
ECUC_Can_00493	N/S	Name - CanTTControllerEcuc← PartitionRef - Parent Container - CanTTController - Description - Maps the Time triggered CAN controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the CAN driver is mapped to.Tags: atp.Status=draft - Multiplicity - 0..1 - Type - Reference to [EcucPartition] - Post-← Build Variant Multiplicity - false - Post-Build Variant Value - true - Multiplicity Configuration Class - Pre-compile time - X - All Variants - Link time - - - Post-build time - - - Value Configuration Class - Pre-compile time - X - All Variants - Link time - - - Post-build time - - - Scope / Dependency - scope: ECU -	This is a HW limitation, some platform does not support TTCan feature.
SWS_CAN_91001	N/S	Service name: Can_SetIcom← Configuration Syntax: Std← _ReturnType Can_SetIcom← Configuration(uint8 Controller, IcomConfigIdType Configuration← Id) Service ID[hex]: 0x21 Sync/Async: Asynchronous Reentrancy: Reentrant only for different controller Ids Parameters (in): Controller - CAN controller for which the status shall be changed. ConfigurationId - Requested Configuration Parameters (inout):None Parameters (out): None Return value: Std_← ReturnType: E_OK: CAN driver succeeded in setting a configuration with a valid Configuration id. E_NOT_OK: CAN driver failed to set a configuration with a valid Configuration id. Description:This service shall change the Icom Configuration of a CAN controller to the requested one. Available via: Can.h	This is a HW limitation, some platform dose not support Pretended Networking feature.
FLEXCAN_IP_072_001	N/S	The type of Flexcan_Ip_Pn← ConfigType shall be a structure that will allow the Pretended Network Configuration	Applies only for platfroms supporting pretended networking feature.

Requirement	Status	Description	Notes
FLEXCAN_IP_073_001	N/S	"A function FlexCAN_Ip_↵ ConfigPN shall allow to enable\disable and Configuration of Pretended Network functionality The prototype of the function shall be: Flexcan_Ip_StatusType FlexCAN_Ip_ConfigPN(uint8 u8Instance, boolean bEnable, const Flexcan_Ip_PnConfigType * pPnConfig); Sync/Async: Sync Reentrancy: Reentrant where↵ : [in] u8Instance A FlexCAN instance number [in] bEnable Enable\Disable the Pretended Network Mode functionality [in] pPnConfig Pointer to the configuration structure for Pretended Network Return: FLEXCAN_↵ _STATUS_SUCCESS, FLE↵ XCAN_STATUS_TIMEOUT, FLEXCAN_STATUS_ERROR"	Applies only for platfroms supporting pretended networking feature.
FLEXCAN_IP_073_002	N/S	The function FlexCAN_Ip_↵ ConfigPN shall report FLEX↵ CAN_STATUS_ERROR if the interface selected don't support Pretended Network feature.	Applies only for platfroms supporting pretended networking feature.
FLEXCAN_IP_074_001	N/S	"A function FlexCAN_Ip_GetW↵ MB shall allow to read the Wake↵ Up Message Buffer to a specified location. The prototype of the function shall be: void FlexCAN_Ip_↵ _GetWMB(uint8 u8Instance, uint8 u8WmbIndex, Flexcan_Ip_Msg↵ BuffType * pWmb); Sync/Async↵ : Sync Reentrancy: Reentrant where: [in] u8Instance A FlexC↵ AN instance number [in] bEnable Enable\Disable the Pretended Network Mode functionality [in] u8↵ WmbIndex Index of the Wakeup Message Buffer Return: Nothing"	Applies only for platfroms supporting pretended networking feature.
SWS_Can_00265	N/F	The function Can_SetController↵ Mode(CAN_CS_SLEEP) shall set the controller into sleep mode.	Only applicable for platform support hardware wake-up. Otherwise, only logical sleep is implemented.
SWS_Can_00398	N/F	The function Can_SetController↵ Mode shall use the system service GetCounterValue for timeout monitoring to avoid blocking functions.	Can Driver uses system services(Get - CounterValue,..) indirectly from OsIf Driver.

Requirement	Status	Description	Notes
CPR_RTD_00581.can	N/S	Service name: Can_GetCurrent← Time Syntax: Std_ReturnType Can_GetCurrentTime(uint8 ControllerId, Can_TimeStamp← Type* timeStampPtr) Service ID[hex]: 0x13 Sync/Async: Syn- chronous Reentrancy: Non Reen- trant Parameters (in): ControllerId Index of the addresses CAN controller. Parameters (out): timeStampPtr current time stamp Return value: Std_ReturnType E_OK: successful E_NOT_OK: failed Description: Shall return current timestamp for the CAN controller	This requirement is for Autosar Version 21-11
CPR_RTD_00582.can	N/S	Service name: Can_Enable← EgressTimeStamp Syntax: void Can_EnableEgressTimeStamp (Can_HwHandleType Hth) Ser- vice ID[hex]: 0x14 Sync/Async: Synchronous Reentrancy: Non Reentrant Parameters (in)← : Hth HW-transmit handle used for enabling the time stamp. Description: Shall activate egress time stamping on a dedicated HTH.	This requirement is for Autosar Version 21-11
CPR_RTD_00583.can	N/S	Service name: Can_GetEgress← TimeStamp Syntax: Std_Return← Type Can_GetEgressTimeStamp (PduIdType TxPduId, Can_← HwHandleType Hth, Can_← TimeStampType* timeStampPtr) Service ID[hex]: 0x15 Sync/← Async: Synchronous Reentrancy: Non Reentrant for the same TxPduId. Parameters (in): Tx← PduId L-PDU handle of CAN L-PDU for returned timestamp Hth HW-transmit handle for the retrieved egress timestamp Pa- rameters (out): timeStampPtr current timestamp Return value: Std_ReturnType E_OK: success E_NOT_OK: failed to read times- tamp. Description: Shall read back the egress timestamp on a dedicated message object. This function has to be called within the TxConfirmation() function.	This requirement is for Autosar Version 21-11

Requirement	Status	Description	Notes
CPR_RTD_00584.can	N/S	Service name: Can_GetIngressTimestamp Syntax: Std_ReturnType Can_GetIngressTimestamp (Can_HwHandleType Hrh, CanTimestampType* timeStampPtr) Service ID[hex]: 0x16 Sync/Async: Synchronous Reentrancy: Non Reentrant for the same Hrh, Reentrant for different Hrh Parameters (in): Hrh HW-receive handle for the retrieved ingress timestamp Parameters (out): timeStampPtr current time stamp Return value: Std_ReturnType E_OK: success E_NOT_OK: failed to read time stamp. Description: Shall read back the ingress timestamp on a dedicated message object and needs to be called within the RxIndication() function.	This requirement is for Autosar Version 21-11
CPR_RTD_00585.can	N/S	Name: CanGlobalTimeSupport Parent Container CanGeneral Description Shall enable/disable the Global Time APIs used when hardware timestamping is supported by CAN controller. Multiplicity 1 Type EcucBooleanParamDef Default value – Post-Build Variant Value false Value Configuration Class Pre-compile time X All Variants Link time Post-build time – Scope / Dependency scope: local	This requirement is for Autosar Version 21-11

3.5 Driver Limitations

- FlexCAN has two FIFO options, Legacy Rx FIFO and Enhanced Rx FIFO. However, they cannot be enabled at the same time.
- It is a hardware limitation that the Legacy FIFO feature must not be enabled when the CAN FD feature is enabled. It means the two features must not be used at the same time.
- The Can driver supports the reception Legacy FIFO engine whose size is fixed as 6-message deep due to the hardware limitation.
- The Can driver only supports ten the API name of Can_MainFunction_Write() for processing transmitted MBs.
The APIs obey the following pattern: Can_MainFunction_Write_0(), Can_MainFunction_Write_1(), Can_MainFunction_Write_2(), Can_MainFunction_Write_3(), ... and until Can_MainFunction_Write_10().

- The Can driver only supports ten the API name of Can_MainFunction_Read() for processing received MBs. The APIs obey the following pattern:
Can_MainFunction_Read_0(), Can_MainFunction_Read_1(), Can_MainFunction_Read_2(), Can_MainFunction_Read_3(), ... and until Can_MainFunction_Read_10().
- The driver does not distinguish between “Extended” and “Mixed” MB types for receiving way: All Rx MBs configured as MIXED type will be converted to EXTENDED type. For transmission the CanIf will prepare the message ID with MSB bit set and based on this fact the Can module will send the message as STANDARD or EXTENDED type.
- CanOsCounterRef is not used anymore, the using of OsCounter is done by selecting CanTimeoutMethod to OSIF_COUNTER_SYSTEM.
- The base address for the controllers is not user input
- if DMA is used, the User need to input exactly Can Dma callback function name (detailed in the description of CanEnhanceFiFoDmaRef node) and select exactly corresponding dma hardware channel in Mcl driver.
- Overflow notification is not supported for Enhanced RxFifo Dma.
- Overflow, warning notifications are not supported for Legacy RxFifo Dma.
- The width of Rx fifo legacy timestamp value is always 16 bits even when High resolution timestamp feature enabled (lower 16 bits of high resolution timer, hardware limitation).
- For Errata050630, The workaround was disabling all interrupts to make reading Message Buffer to be performed as 'critical code section'. The user responsibility is that should configure clock fast enough(consider enabling Caches) to avoid missing timestamp value. For details please refer to errata document.

3.6 Driver usage and configuration tips

This chapter describes how to configure for advanced features which are not (fully) described by AUTOSAR SWS (i.e NON-ASR features).

3.6.1 Driver APIs usage

- Can_AbortMb() API (Non Autosar) is defined if this feature is enabled by CanApiEnableMbAbort from the Tresos plugin.
- Multiplex transmission which is supported by Can_Write() API means to send a message from any Tx MB that is free to be used, in the range of the same HWObjectID. This means that several Hardware Objects can have the same HWObjectID. This feature can be used only if it's enabled by CanMultiplexedTransmission from the Tresos Plugin.
- Can driver support loop back mode to verify driver internally. In this case, it is necessary to configure filter in order to receive the transmit message.
- Can driver support listen only mode switch in order only to receive messages and don't be able to transmit, this can be activate at runtime by call Can_ListenOnlyMode() with state **LISTEN_ONLY_MODE**, in order to revert to normal transmission mode need to call Can_ListenOnlyMode() with state **NORMAL_MODE**.

3.6.2 Can Hardware Object Handle (HOH) configuration The CanHardwareObject container in Tresos plugin is used to configure the operating for Rx and Tx MBs. The elements of this container is detailed in the chapter Can HardwareObject.

For Tx MBs (HTHs) the difference between Standard and Extended mode is done by the most significant bit of the Can ID.

For Rx MBs (HRHs) the MIXED message buffer type is handled as EXTENDED type. The platform support Legacy FIFO engine with 6 receive buffers storage scheme. This section describes the configuration in the advanced features.

3.6.3 Legacy Rx FIFO Configuration The receive-only FIFO is enabled for specific controller by asserting the FEN bit in the MCR register. The Legacy Rx Fifo configuration in the Tresos plugin is implemented by selection CanRxFiFo tab to CanLegacyFiFo in CanRxFiFo container.

When the Fifo is enabled, the memory region normally occupied by the first 6 MBs is normally reserved for use of the Fifo engine. The CPU can read the received frames sequentially, in the order they were received, by repeatedly accessing the MB0 structure.

The interrupts corresponding to MB0 to 5 have a different behavior when Rx Fifo is enabled. Bit 7 of the IFLAG1 becomes the “Fifo Overflow” flag, bit 6 becomes the “Fifo Warning” flag, bit 5 becomes the “Frame Available in Rx Fifo” flag and bits 4 to 0 are unused. If Legacy Rx Fifo is enabled for a specific controller, the user shall configure at least 1 hardware object which use that controller.

NOTE

The filters of Legacy Rx Fifo are configured in the CanHwFilter list in the first HOH referring to the controller enabling Legacy Rx Fifo.

The number of MBs used by Legacy Rx Fifo = 6 + (Number of Legacy FiFo Filter elements / 4)

Number of Legacy FiFo Filter elements depend on type of Id Acceptance Mode:

- FORMAT A: each 1 element of CanHwFilter list correspond to one Filter elements
- FORMAT B: each 2 consecutive elements of CanHwFilter list correspond to one Filter elements
- FORMAT C: each 4 consecutive elements of CanHwFilter list correspond to one Filter elements

The remain MBs of the controller = total MBs supported by the controller - (The number of MBs used by Legacy Rx Fifo)

If Legacy Rx Fifo is enabled the user can define proper handlers for overflow and warnings notification events. Below is presented an example of a mapping between hardware objects and message buffers for a driver configuration which use multiple controllers and the Legacy Rx Fifo feature is enabled for all of them:

HRH0 id 0, controller A -> Legacy rx fifo of controller A

HRH1 id 1, controller A -> MB8

HRH2 id 2, controller A -> MB9

HRH3 id 3, controller B -> Legacy rx fifo of controller B

HRH4 id 4, controller B -> MB8
 HRH5 id 5, controller B -> MB9
 HTH0 id 6, controller A -> MB10
 HTH1 id 7, controller B -> MB10

In order to understand the differences, below is presented an example of a mapping between hardware objects and message buffers for a driver configuration which use multiple controllers and the RxFifo feature is NOT enabled for any controller:

HRH0 id 0, controller A -> MB0
 HRH1 id 1, controller A -> MB1
 HRH2 id 2, controller A -> MB2
 HRH3 id 3, controller B -> MB0
 HRH4 id 4, controller B -> MB1
 HRH5 id 5, controller B -> MB2
 HTH0 id 6, controller A -> MB3
 HTH1 id 7, controller B -> MB4

3.6.4 RxFifo Configuration with DMA support The CAN driver support DMA over Rx Fifo, this is supported together with MCL module. The Tresos project them must contain both plugins MCL and CAN. The CPU can be used only to configure the transmission and to process end of sequence notification (DMA_Can_↔ Callback), the transfer itself is triggered and done by the FlexCAN and DMA Hardware.

- **Step 1** Config DMA in the MCL module

To activate the DMA transfer from the RxFifo the user should configure the MCL module. By selecting adding a DMA Logic Instance inside which will configure a DMA Logic Channel. The configuration of DMA Logic Channel is done by selecting the Hardware Instance and Hardware Channel the same as the ones selected in the DMA Logic Instance. Then link the Interrupt and Error Interrupt Callback with the Can designed Interrupt. The interrupt name should be DMA_Can_Callback<InstanceIndex>, example DMA_Can_Callback0 for FlexCAN0, DMA_Can_Callback1 for FlexCAN1

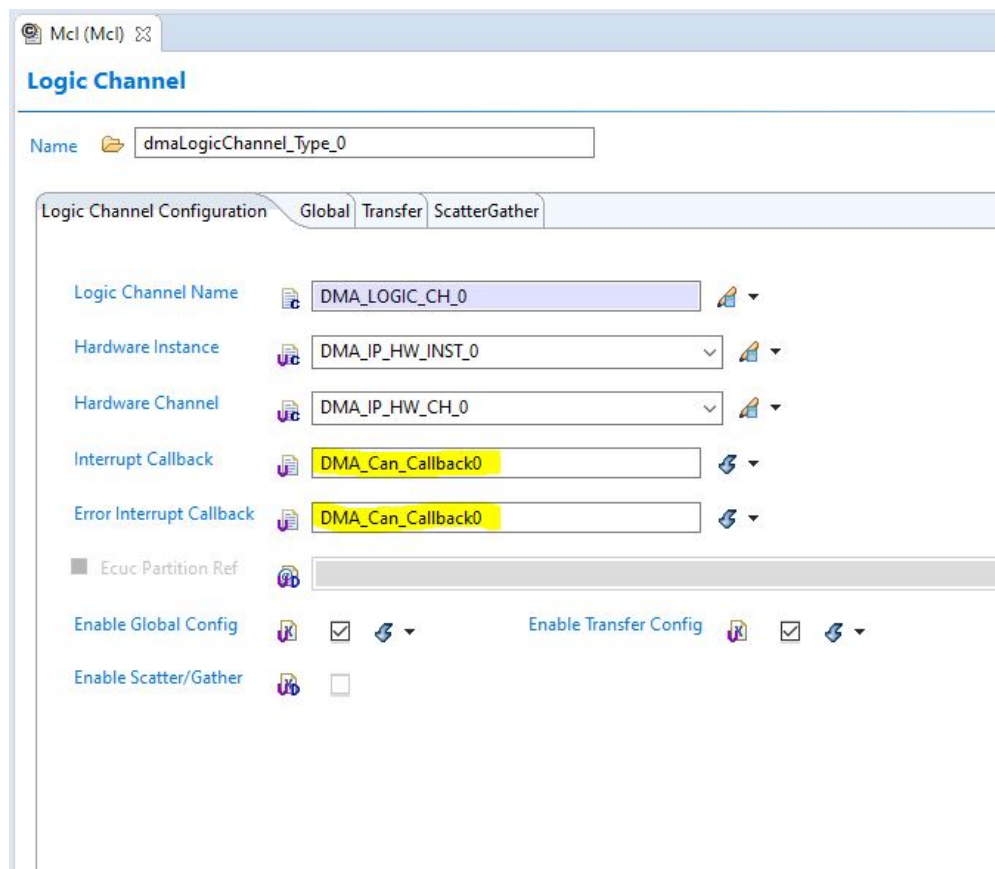


Figure 3.1 MCL Logic Channel Config

Then selection of the DMA Trigger Source of peripheral as FlexCAN instance need to be done on the Global Tab of Logic Channel. The DMAMUX0 Source field must select the peripheral desired from which to transfer the data messages, the user should enable the Enable Error Interrupt, Enable DMAMUX Source and disable the Enable DMA Request, Enable DMAMUX Trigger.

The screenshot shows the 'Mcl (Mcl)' application window with the 'Logic Channel' tab selected. The configuration is organized into several expandable sections:

- dmaLogicChannel_GlobalConfigType**: Contains a 'Name' field set to 'dmaLogicChannel_GlobalConfigType'.
- Control**: Contains a 'Name' field set to 'dmaLogicChannelConfig_GlobalControlType'. It includes checkboxes for 'Enable Master Id Replication' and 'Enable Buffered Writes', both currently disabled.
- Request**: Contains a 'Name' field set to 'dmaLogicChannelConfig_GlobalRequestType'. It includes checkboxes for 'Enable DMAMUX Trigger' and 'Enable DMA Request', both disabled. It also features dropdown menus for 'DMAMUX0 Source' (set to 'DMA_IP_REQ_MUX0_FLEXCAN0') and 'DMAMUX1 Source' (set to 'DMA_IP_REQ_MUX1_DISABLED').
- Interrupt**: Contains a 'Name' field set to 'dmaLogicChannelConfig_GlobalInterruptType'. It includes a checkbox for 'Enable Error Interrupt', which is checked.
- Priority**: Contains a 'Name' field set to 'dmaLogicChannelConfig_GlobalPriorityType'. It includes dropdown menus for 'Group Priority' (set to 'DMA_IP_GROUP_PRIO0') and 'Level Priority' (set to 'DMA_IP_LEVEL_PRIO0'). It also includes checkboxes for 'Enable Preemption' and 'Disable Preempt', both disabled.

Figure 3.2 MCL Logic Channel Global

- **Step 2** Configure CanRxFiFo in the CAN module

For the usage of Enhanced CanRxFiFo In order to activate this feature inside Controller specific by selecting CanRxFiFo Tab and on the CanRxFiFo selection need to be set CanEnhanceFifo from dropdown list, another parameter that need to be selected from this tab is CanEnhanceFiFoDmaEnable as true. Then the field CanEnhanceFiFoDmaRef should allow to select of MCL configured DMA Logic Channel previous configured at Step 1.

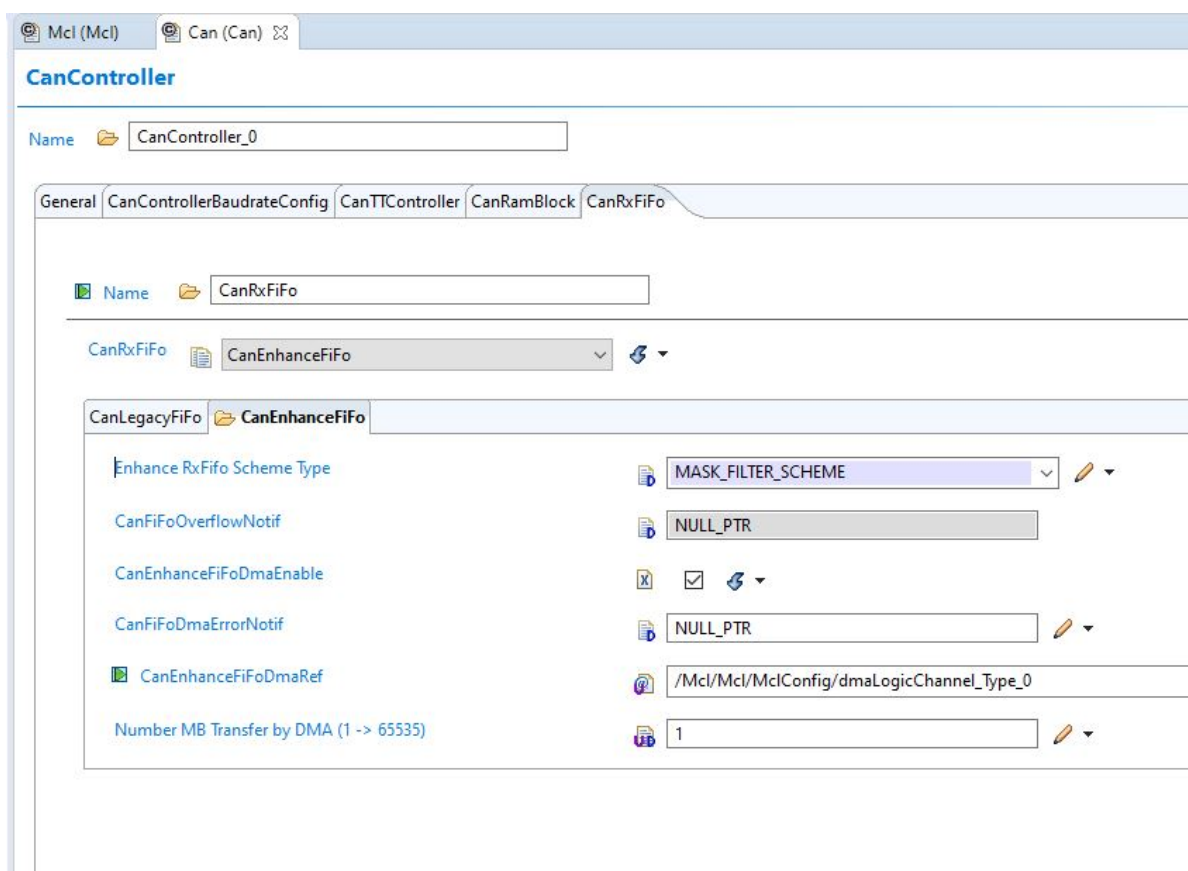


Figure 3.3 Enhanced CanRxFiFo Config

For the usage of Legacy CanRxFifo In order to activate this feature inside Controller specific by selecting CanRxFifo Tab and on the CanRxFifo selection need to be set CanLegacyFiFo from dropdown list, another parameter that need to be selected from this tab is CanLegacyFiFoDmaEnable as true. Then the field CanLegacyFiFoDmaRef should allow to select of MCL configured DMA Logic Channel previous configured at Step 1.

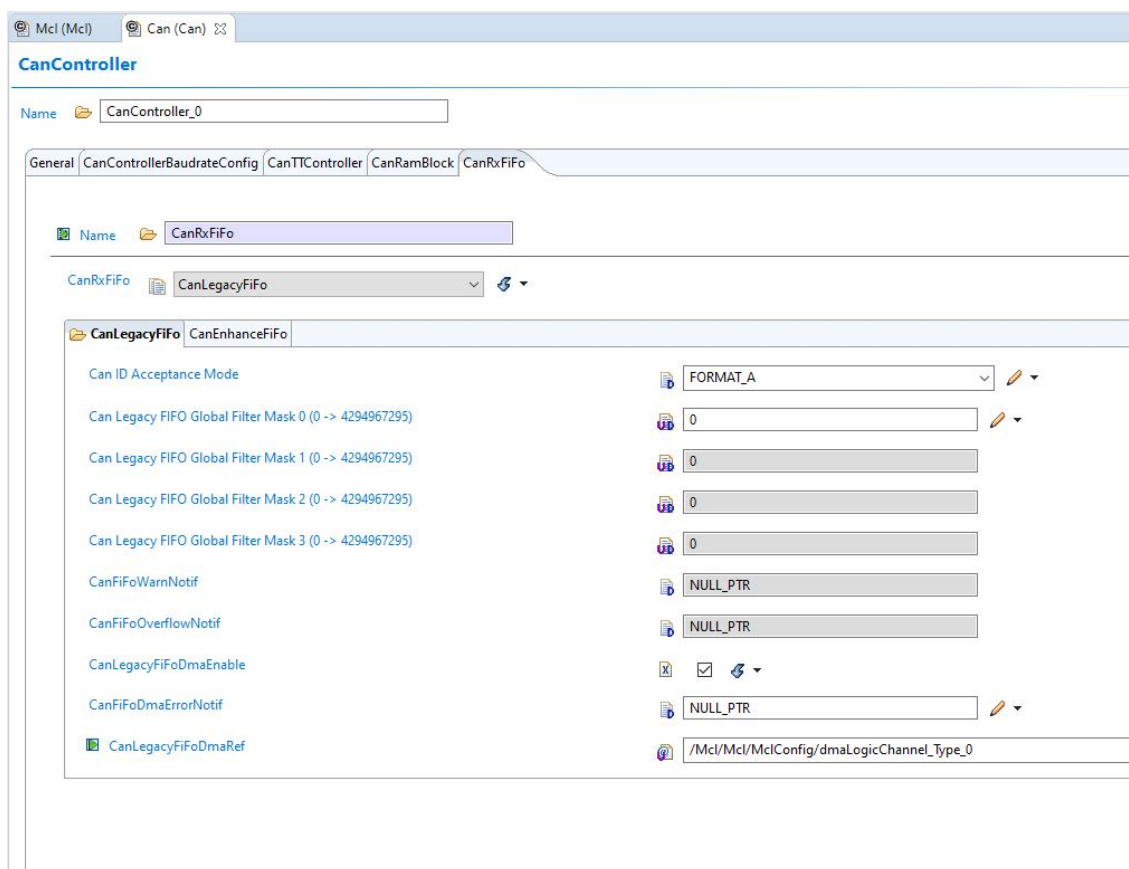


Figure 3.4 Legacy CanRxFiFo Config

3.7 Runtime errors

The driver generates the following DET errors at runtime.

Function	Error Code	Condition triggering the error
Can_GetVersionInfo, Can_↔ GetControllerErrorState, Can_↔ GetControllerMode, Can_Get↔ ControllerRxErrorCounter, Can↔ _GetControllerTxErrorCounter, Can_Write	CAN_E_PARAM_POINTER	API Service called with wrong parameter
Can_Write, Can_AbortMb	CAN_E_PARAM_HANDLE	API Service called with wrong parameter
Can_Write	CAN_E_PARAM_DATA_LENGTH	The length is exceeded Message Buffer's length

Function	Error Code	Condition triggering the error
Can_SetBaudrate, Can_SetControllerMode, Can_ListenOnlyMode, Can_DisableControllerInterrupts, Can_EnableControllerInterrupts, Can_GetControllerErrorState, Can_GetControllerMode, Can_GetControllerRxErrorCounter, Can_GetControllerTxErrorCounter	CAN_E_PARAM_CONTROLLER	The parameter Controller is out of range
All functions except main Functions	CAN_E_UNINIT	The driver is not yet initialized
Can_Init, Can_DeInit, Can_SetControllerMode, Can_SetClockMode	CAN_E_TRANSITION	Invalid transition for the current mode
Can_SetBaudrate	CAN_E_PARAM_BAUDRATE	Parameter Baudrate has an invalid value
Can_Init	CAN_E_INIT_FAILED	Invalid transition for the current mode
Can_MainFunction_Read	CAN_E_DATA_LOST	Received CAN message is lost

3.8 Symbolic Names Disclaimer

All containers having symbolicNameValue set to TRUE in the AUTOSAR schema will generate defines like:

```
#define <Mip>Conf_<Container_ShortName>_<Container_ID>
```

For this reason it is forbidden to duplicate the names of such containers across the RTD configurations or to use names that may trigger other compile issues (e.g. match existing #ifdefs arguments).

Chapter 4

Tresos Configuration Plug-in

This chapter describes the Tresos configuration plug-in for the driver. All the parameters are described below.

- Module [Can](#)
 - Container [CanGeneral](#)
 - * Parameter [CanDevErrorDetect](#)
 - * Parameter [CanEnableUserModeSupport](#)
 - * Parameter [CanMulticoreSupport](#)
 - * Parameter [CanVersionInfoApi](#)
 - * Parameter [CanIndex](#)
 - * Parameter [CanMainFunctionBusoffPeriod](#)
 - * Parameter [CanMainFunctionWakeupPeriod](#)
 - * Parameter [CanMainFunctionModePeriod](#)
 - * Parameter [CanMultiplexedTransmission](#)
 - * Parameter [CanTimeoutMethod](#)
 - * Parameter [CanTimeoutDuration](#)
 - * Parameter [CanLPduReceiveCalloutFunction](#)
 - * Parameter [CanMBCountExtensionSupport](#)
 - * Parameter [CanApiEnableMbAbort](#)
 - * Parameter [CanSetBaudrateApi](#)
 - * Parameter [CanEnableDualClockMode](#)
 - * Parameter [CanListenOnlyModeApi](#)
 - * Parameter [CanPublicIcomSupport](#)
 - * Reference [CanEcucPartitionRef](#)
 - * Reference [CanOsCounterRef](#)
 - * Reference [CanSupportTTCANRef](#)
 - * Container [CanTimeStamp](#)
 - Parameter [MBTSBASE](#)
 - Parameter [TimestampTimeSource](#)
 - Parameter [HRTimeStampCapturePoint](#)
 - Parameter [TimestampHRTimeSource](#)
 - Parameter [CanRxTimeStampNotification](#)
 - Parameter [CanTxTimeStampNotification](#)

- * Container [CanMainFunctionRWPeriods](#)
 - Parameter [CanMainFunctionPeriod](#)
- * Container [CanIcomGeneral](#)
 - Parameter [CanIcomLevel](#)
 - Parameter [CanIcomVariant](#)
- Container [CanConfigSet](#)
 - * Container [CanController](#)
 - Parameter [CanHwChannel](#)
 - Parameter [CanControllerActivation](#)
 - Parameter [CanControllerBaseAddress](#)
 - Parameter [CanControllerId](#)
 - Parameter [CanRxProcessing](#)
 - Parameter [CanTxProcessing](#)
 - Parameter [CanBusoffProcessing](#)
 - Parameter [CanWakeupFunctionalityAPI](#)
 - Parameter [CanWakeupProcessing](#)
 - Parameter [CanWakeupSupport](#)
 - Parameter [CanLoopBackMode](#)
 - Parameter [CanAutoBusOffRecovery](#)
 - Parameter [CanTrippleSamplingEnable](#)
 - Parameter [CanControllerPrExcEn](#)
 - Parameter [CanControllerEdgeFilter](#)
 - Parameter [CanControllerFdISO](#)
 - Parameter [CanClockFromBus](#)
 - Parameter [CanErrorNotification](#)
 - Parameter [CanFDErrorNotification](#)
 - Reference [CanControllerDefaultBaudrate](#)
 - Reference [CanControllerEcucPartitionRef](#)
 - Reference [CanCpuClockRef](#)
 - Reference [CanCpuClockRefAlternate](#)
 - Reference [CanWakeupSourceRef](#)
 - Container [CanControllerBaudrateConfig](#)
 - Parameter [CanBaudrateTypeSuport](#)
 - Parameter [CanAdvancedSetting](#)
 - Parameter [CanBusLength](#)
 - Parameter [CanPropDelayTranceiver](#)
 - Parameter [CanTxArbitrationStartDelay](#)
 - Parameter [CanControllerPrescaller](#)
 - Parameter [CanControllerPrescallerAlternate](#)
 - Parameter [CanControllerBaudRateConfigID](#)
 - Parameter [CanControllerBaudRate](#)
 - Parameter [CanControllerSyncSeg](#)
 - Parameter [CanControllerPropSeg](#)
 - Parameter [CanControllerSeg1](#)
 - Parameter [CanControllerSeg2](#)
 - Parameter [CanControllerSyncJumpWidth](#)
 - Container [CanControllerFdBaudrateConfig](#)

- Parameter [CanControllerFdBaudRate](#)
- Parameter [CanControllerFdSyncSeg](#)
- Parameter [CanControllerPropSeg](#)
- Parameter [CanControllerSeg1](#)
- Parameter [CanControllerSeg2](#)
- Parameter [CanControllerSyncJumpWidth](#)
- Parameter [CanControllerSspOffset](#)
- Parameter [CanControllerFdPrescaler](#)
- Parameter [CanControllerPrescalerAlternateFd](#)
- Parameter [CanControllerTxBitRateSwitch](#)
- Container [CanTTController](#)
 - Parameter [CanTTControllerApplWatchdogLimit](#)
 - Parameter [CanTTControllerCycleCountMax](#)
 - Parameter [CanTTControllerExpectedTxTrigger](#)
 - Parameter [CanTTControllerExternalClockSynchronisation](#)
 - Parameter [CanTTControllerGlobalTimeFiltering](#)
 - Parameter [CanTTControllerInitialRefOffset](#)
 - Parameter [CanTTControllerInterruptEnable](#)
 - Parameter [CanTTControllerLevel2](#)
 - Parameter [CanTTControllerNTUConfig](#)
 - Parameter [CanTTControllerOperationMode](#)
 - Parameter [CanTTControllerSyncDeviation](#)
 - Parameter [CanTTControllerTURRestore](#)
 - Parameter [CanTTControllerTimeMaster](#)
 - Parameter [CanTTControllerTimeMasterPriority](#)
 - Parameter [CanTTControllerTxEnableWindowLength](#)
 - Parameter [CanTTControllerWatchTriggerGapTimeMark](#)
 - Parameter [CanTTControllerWatchTriggerTimeMark](#)
 - Parameter [CanTTIRQProcessing](#)
 - Reference [CanTTControllerEcucPartitionRef](#)
- Container [CanRamBlock](#)
- Container [CanRxFifo](#)
- * Container [CanHardwareObject](#)
 - Parameter [CanFdPaddingValue](#)
 - Parameter [CanHandleType](#)
 - Parameter [CanIdType](#)
 - Parameter [CanObjectId](#)
 - Parameter [CanObjectType](#)
 - Parameter [CanHardwareObjectUsesPolling](#)
 - Parameter [CanTriggerTransmitEnable](#)
 - Parameter [CanHwObjectUsesBlock](#)
 - Parameter [CanHwObjectCount](#)
 - Parameter [CanTimeStampEnable](#)

- Reference [CanControllerRef](#)
- Reference [CanMainFunctionRWPeriodRef](#)
- Container [CanHwFilter](#)
- Parameter [CanHwFilterCode](#)
- Parameter [CanHwFilterMask](#)
- Container [CanTTHardwareObjectTrigger](#)
- Parameter [CanTTHardwareObjectBaseCycle](#)
- Parameter [CanTTHardwareObjectCycleRepetition](#)
- Parameter [CanTTHardwareObjectTimeMark](#)
- Parameter [CanTTHardwareObjectTriggerId](#)
- Parameter [CanTTHardwareObjectTriggerType](#)
- * Container [CanIcom](#)
 - Container [CanIcomConfig](#)
 - Parameter [CanIcomConfigId](#)
 - Parameter [CanIcomWakeOnBusOff](#)
 - Container [CanIcomWakeupCauses](#)
 - Container [CanIcomRxMessage](#)
 - Parameter [CanIcomCounterValue](#)
 - Parameter [CanIcomMessageIdType](#)
 - Parameter [CanIcomMessageId](#)
 - Parameter [CanIcomIdOperation](#)
 - Parameter [CanIcomMessageIdMask](#)
 - Parameter [CanIcomMissingMessageTimerValue](#)
 - Parameter [CanIcomPayloadLengthError](#)
 - Parameter [CanPayloadFilter](#)
 - Reference [CanIcomDefaultBaudrate](#)
 - Container [CanIcomRxMessageSignalConfig](#)
 - Parameter [CanIcomSignalMask](#)
 - Parameter [CanIcomSignalOperation](#)
 - Parameter [CanIcomSignalValue](#)
 - Parameter [DLCLowValue](#)
 - Parameter [DLCHighValue](#)
 - Reference [CanIcomSignalRef](#)
- Container [CommonPublishedInformation](#)
 - * Parameter [ArReleaseMajorVersion](#)
 - * Parameter [ArReleaseMinorVersion](#)
 - * Parameter [ArReleaseRevisionVersion](#)
 - * Parameter [ModuleId](#)
 - * Parameter [SwMajorVersion](#)
 - * Parameter [SwMinorVersion](#)
 - * Parameter [SwPatchVersion](#)
 - * Parameter [VendorApiInfix](#)
 - * Parameter [VendorId](#)

4.1 Module Can

This container holds the configuration of a single CAN Driver.

Included containers:

- [CanGeneral](#)
- [CanConfigSet](#)
- [CommonPublishedInformation](#)

Property	Value
type	ECUC-MODULE-DEF
lowerMultiplicity	1
upperMultiplicity	Infinite
postBuildVariantSupport	true
supportedConfigVariants	VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

4.2 Container CanGeneral

This container holds the parameters related each CAN Driver Unit.

Included subcontainers:

- [CanTimeStamp](#)
- [CanMainFunctionRWPeriods](#)
- [CanIcomGeneral](#)

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A

4.3 Parameter CanDevErrorDetect

ECUC_Can_00064: Switches the Development Error Detection and Notification: ON or OFF.

When this option is OFF code size is reduced, but no error detection is available.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
default Value	false

4.4 Parameter CanEnableUserModeSupport

When this parameter is enabled, the CAN module will adapt to run from User Mode, with the following measures:

(if applicable) a) configuring REG_PROT for the Can Controllers so that the registers under protection can be accessed from user mode by setting UAA bit in REG_PROT_GCR to 1

(if applicable) b) using 'call trusted function' stubs for all internal function calls that access registers requiring supervisor mode.

(if applicable) c) other module specific measures for more information, please see chapter 5.7 User Mode Support in IM

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PRE-COMPILE
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	false

4.5 Parameter CanMulticoreSupport

Enable Maps Can driver to multiple EcuC partitions to make the modules API

available in this partition. The Can driver will operate as an independent instance in each of the partitions.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PRE-COMPILE
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	false

4.6 Parameter CanVersionInfoApi

ECUC_Can_00106. Switches the Can_GetVersionInfo() API: ON or OFF.

When this option is ON driver supports API for getting Version information for the Driver.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.7 Parameter CanIndex

ECUC_Can_00320. Specifies the InstanceId of this module instance.

If only one instance is present it shall have the Id 0.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0
max	255
min	0

4.8 Parameter CanMainFunctionBusoffPeriod

ECUC_Can_00355. This parameter describes the period for cyclic call to Can_MainFunction_Busoff.

Unit is seconds.

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0.001
max	65.535
min	0.0

4.9 Parameter CanMainFunctionWakeupPeriod

ECUC_Can_00357. This parameter describes the period for cyclic call to Can_MainFunction_Wakeup.

Unit is seconds.

This field is editable if CanConfigSet/CanController/CanWakeupSupport is 'true'.

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0.001
max	65.535
min	0.0

4.10 Parameter CanMainFunctionModePeriod

ECUC_Can_00376. This parameter describes the period for cyclic call to Can_MainFunction_Mode.

Unit in seconds.

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0.001
max	65.535
min	0.0

4.11 Parameter CanMultiplexedTransmission

ECUC_Can_00095. Specifies if Multiplexed Transmission shall be supported: ON or OFF.

Multiplex transmission means to search for a free MB, that has the same ObjectId with the one transmitted to Can_Write,

if current Hth MB is busy.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
default Value	true

4.12 Parameter CanTimeoutMethod

CanTimeoutMethod

Configures the timeout method.

Based on this selection a certain timeout method from OsIf will be used in the driver.

Note: If SystemTimer or CustomTimer are selected make sure the corresponding timer is enabled in OsIf General configuration.

Note: Implementation Specific Parameter.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
default Value	OSIF_COUNTER_DUMMY
literals	['OSIF_COUNTER_DUMMY', 'OSIF_COUNTER_SYSTEM', 'OSIF_COUNTER_CUSTOM']

4.13 Parameter CanTimeoutDuration

ECUC_Can_00113. Specifies the maximum time for blocking function until a timeout is detected. Unit is seconds.

This Timeout is used to detect the Hardware Errors/ Production Errors.

When Hardware registers like Controller Register (CTRL) or Module Control Register(MCR) are configured, the Hardware take some time to take effect of these new settings CANuested.

Once timeout has been occured and if hardware could not take effect of the CANu settings, then Error is reported.

So this timeout is used to allow hardware to take effect of the Hardware settings.

For OSIF_COUNTER_DUMMY method, CanTimeoutDuration may not reflect exactly in seconds (but in the terms of loops, 1 us : 1 loop).

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	1.0
max	65.535
min	1.0E-6

4.14 Parameter CanLPduReceiveCalloutFunction

ECUC_Can_00434:This parameter defines the existence and the name of a callout function that is called after a successful reception of a received CAN Rx L-PDU. If this parameter is omitted no callout shall take place.

Property	Value
type	ECUC-FUNCTION-NAME-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

Property	Value
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	NULL_PTR

4.15 Parameter CanMBCountExtensionSupport

Enables support of more than 255 Can Hardware Objects.

Some platforms have a bigger number of Can controllers and the sum of total MBS for all controllers is bigger than uint8 size (as HTH/HRH is specified in Autosar).

This option should not be enabled for platforms that have a number of MBs smaller than 256 (summing all Can controllers from the platform).

NoteImplementation Specific parameter.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	true

4.16 Parameter CanApiEnableMbAbort

Vendor specific: Can_AbortMb shall be supported if the parameter set to true.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1

Property	Value
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.17 Parameter CanSetBaudrateApi

If the parameter is set to true the Can_SetBaudrate Api shall be supported.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.18 Parameter CanEnableDualClockMode

Enables support for dual clock API. When this parameter is true will generate CAN_DUAL_CLOCK_MODE = STD_ON.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false

Property	Value
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.19 Parameter CanListenOnlyModeApi

Vendor specific: Can_ListenOnlyMode shall be supported if the parameter set to true.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.20 Parameter CanPublicIcomSupport

Selects support of Pretended Network features in Can driver. True: Enabled False: Disabled

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.21 Reference CanEcucPartitionRef

ECUC_Can_00491. Maps the CAN driver to zero or multiple ECUC partitions to make the modules API available in this partition. The CAN driver will operate as an independent instance in each of the partitions.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	0
upperMultiplicity	Infinite
postBuildVariantMultiplicity	true
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcucDefs/EcuC/EcucPartitionCollection/EcucPartition

4.22 Reference CanOsCounterRef

ECUC_Can_00431. This parameter contains a reference to the counter, which is used by the CAN driver.

Note: This node is unused, the using of OsCounter is done by selecting CanTimeoutMethod to OSIF_COUNTER_SYSTEM.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcucDefs/Os/OsCounter

4.23 Reference CanSupportTTCANRef

ECUC_Can_00430: The parameter refers to CanIfSupportTTCAN parameter in the CAN Interface Module configuration. The CanIfSupportTTCAN parameter defines whether TTCAN is supported

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcucDefs/CanIf/CanIfPrivateCfg

4.24 Container CanTimeStamp

This container contains the parameters for configuration the Timestamp feature.

Included subcontainers:

- None

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.25 Parameter MBTSBASE

This field selects which time base is used for capturing the 16-bit TIME_STAMP field of the Message Buffer register.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP
symbolicNameValue	False
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	FLEXCAN_MSGBUFFTIMESTAMP_TIMER
literals	['FLEXCAN_MSGBUFFTIMESTAMP_TIMER']

4.26 Parameter TimestampTimeSource

Selects TimeStamp Time Tick Source for Free Running Time(Message Buffer TimeStamp only).

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP
symbolicNameValue	False
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	FLEXCAN_ONCHIP_CLK_TIMESTAMP_SRC
literals	['FLEXCAN_CAN_CLK_TIMESTAMP_SRC', 'FLEXCAN_ONCHIP_CLK_TIMESTAMP_SRC']

4.27 Parameter HRTimeStampCapturePoint

When this field is select as FLEXCAN_TIMESTAMPCAPTURE_DISABLE the FlexCAN Message Buffer timestamp 16 bits is select else 32 HR timestamp is select.

This field configures the point in time when a 32-bit time base is captured during a CAN frame and stored in the high resolution time stamp register.

Selection :

TimeStamp Capture Point	Classical CAN Frame	CAN FD Frame	
-----	-----	-----	
FLEXCAN_TIMESTAMPCAPTURE_DISABLE High Resolution Timer Disabled High Resolution Timer Disabled			
FLEXCAN_TIMESTAMPCAPTURE_START	Start of frame bit	Start of frame bit	
FLEXCAN_TIMESTAMPCAPTURE_END	End of frame bit	End of frame bit	
FLEXCAN_TIMESTAMPCAPTURE_FD	Start of frame bit	Res bit	

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP
symbolicNameValue	False
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE VARIANT-POST-BUILD: POST-BUILD
defaultValue	FLEXCAN_TIMESTAMPCAPTURE_START
literals	['FLEXCAN_TIMESTAMPCAPTURE_DISABLE', 'FLEXCAN_TIMESTAMPCAPTURE_START', 'FLEXCAN_TIMESTAMPCAPTURE_END', 'FLEXCAN_TIMESTAMPCAPTURE_FD']

4.28 Parameter TimestampHRTimeSource

Selects TimeStamp HR Timer Tick Source for Message Buffer HR TimeStamp only.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP
symbolicNameValue	False
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE

Property	Value
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	FLEXCAN_HRTIMERSRC_GMAC0
literals	['FLEXCAN_HRTIMERSRC_GMAC0', 'FLEXCAN_HRTIMERSRC_STM7', 'FLEXCAN_HRTIMERSRC_PFE', 'FLEXCAN_HRTIMERSRC_VALUE0']

4.29 Parameter CanRxTimestampNotification

Set here the name of the handler for Rx Message Buffer Notification.

NoteImplementation Specific parameter

Property	Value
type	ECUC-FUNCTION-NAME-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE VARIANT-POST-BUILD: POST-BUILD
defaultValue	NULL_PTR

4.30 Parameter CanTxTimestampNotification

Set here the name of the handler for Tx Message Buffer Notification.

NoteImplementation Specific parameter

Property	Value
type	ECUC-FUNCTION-NAME-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE VARIANT-POST-BUILD: POST-BUILD
defaultValue	NULL_PTR

4.31 Container CanMainFunctionRWPeriods

ECUC_Can_00437. This container contains the parameter for configuring the period for cyclic call to Can_MainFunction_Read or Can_MainFunction_Write depending on the referring item.

Included subcontainers:

- None

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	Infinite
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.32 Parameter CanMainFunctionPeriod

ECUC_Can_00484. This parameter describes the period for cyclic call to Can_MainFunction_Read or Can_MainFunction_Write depending on the referring item. Unit is seconds.

Different poll-cycles will be configurable if more than one CanMainFunctionPeriod is configured.

In this case multiple Can_MainFunction_Read() or Can_MainFunction_Write() will be provided by the CAN Driver module.

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PRE-COMPILE
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0.001
max	65.535
min	0.001

4.33 Container CanIcomGeneral

This container contains the general configuration parameters of the ICOM Configuration

Included subcontainers:

- None

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.34 Parameter CanIcomLevel

Defines the level of Pretended Networking. This parameter is reserved for future implementations (Pretended Networking level 2).

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	CAN_ICOM_LEVEL_ONE
literals	['CAN_ICOM_LEVEL_ONE', 'CAN_ICOM_LEVEL_TWO']

4.35 Parameter CanIcomVariant

Defines the variant, which is supported by this CanController

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	CAN_ICOM_VARIANT_NONE
literals	['CAN_ICOM_VARIANT_HW', 'CAN_ICOM_VARIANT_NONE', 'CAN_ICOM_VARIANT_SW']

4.36 Container CanConfigSet

ECUC_Can_00343. This is the multiple configuration set container for CAN Driver.

Included subcontainers:

- [CanController](#)
- [CanHardwareObject](#)
- [CanIcom](#)

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A

4.37 Container CanController

ECUC_Can_00354. This container contains the configuration parameters of the CAN controller(s).

Included subcontainers:

- [CanControllerBaudrateConfig](#)

- [CanTTController](#)
- [CanRamBlock](#)
- [CanRxFiFo](#)

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	1
upperMultiplicity	Infinite
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.38 Parameter CanHwChannel

Specifies which one of the on-chip FlexCAN interfaces is associated with this controller ID.

NoteImplementation Specific parameter. Not AutoSar Required.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	FLEXCAN_0
literals	['FLEXCAN_0', 'FLEXCAN_1', 'FLEXCAN_2', 'FLEXCAN_3']

4.39 Parameter CanControllerActivation

ECUC_Can_00315. Defines if a CAN controller is used in the configuration.

Deactivation of a particular CAN controller is equivalent to a CAN controller not used in the configuration.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF

Property	Value
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	true

4.40 Parameter CanControllerBaseAddress

ECUC_Can_00382. Specifies the CAN controller base address.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0
max	4294967295
min	0

4.41 Parameter CanControllerId

ECUC_Can_00316: This parameter provides the controller ID which is unique in a given CAN Driver.

The value for this parameter starts with 0 and continue without any gaps.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	true

Property	Value
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	1
max	255
min	0

4.42 Parameter CanRxProcessing

ECUC_Can_00317. Enables/Disables API Can_MainFunction_Read() for handling PDU reception events in POLLING mode.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	POLLING
literals	['INTERRUPT', 'POLLING', 'MIXED']

4.43 Parameter CanTxProcessing

ECUC_Can_00318. Enables/Disables API Can_MainFunction_Write() for handling PDU transmission events in POLLING mode

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1

Property	Value
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	POLLING
literals	['INTERRUPT', 'POLLING', 'MIXED']

4.44 Parameter CanBusoffProcessing

ECUC_Can_00314. Enables/Disables API Can_MainFunction_BusOff() for handling busoff events in POLLING mode.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	POLLING
literals	['INTERRUPT', 'POLLING']

4.45 Parameter CanWakeupFunctionalityAPI

Adds / removes the service Can_CheckWakeup() from the code.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A

Property	Value
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PRE-COMPILE
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	false

4.46 Parameter CanWakeupProcessing

ECUC_Can_00319. Enables/Disables API Can_MainFunction_Wakeup() for handling wakeup events in POLLING mode.

Note This option is enabled only if global parameter <CanController/CanWakeupSupport> is 'true'.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
default Value	POLLING
literals	['INTERRUPT', 'POLLING']

4.47 Parameter CanWakeupSupport

ECUC_Can_00330. CAN driver support for wakeup over CAN Bus.

Every WakeUp process will be ignore if this checkbox is not set to ON.

This parameter enables Internal Wakeup (using controller registers) and External Wakeup (using WKUP module).

This is enabled only if internal Wakeup is supported by the platform.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC

Property	Value
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.48 Parameter CanLoopBackMode

Vendor specific: Enables CAN to operate in Loop Back Mode.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	false

4.49 Parameter CanAutoBusOffRecovery

Enable/Disable automatic BusOff recovery (CTRL[BOFF_REC] bit).

0(Checked) = Automatic recovering from Bus Off state occurs according to the CAN Specification 2.0B.

1(Unchecked) = Automatic recovering from Bus Off is disabled and the module remains in Bus Off state until the bit is negated(zero) by the user.

NoteImplementation specific Parameter. Not AutoSar Required.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF

Property	Value
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	false

4.50 Parameter CanTrippleSamplingEnable

Vendor specific: Defines the sampling mode of CAN bits at the Rx input.

True - Three samples are used to determine the value of the received bit.

False - Just one sample is used to determine the bit value.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	false

4.51 Parameter CanControllerPrExcEn

Vendor specific: The protocol exception feature.(See Protocol exception event in the CAN Protocol standard (ISO 11898-1) for details)

True - Enable Feature.

False - Disable Feature.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	false

4.52 Parameter CanControllerEdgeFilter

Vendor specific: The Edge Filter feature. (See Bus Integration state in the CAN Protocol standard (ISO 11898-1) for details)

True - Enable Feature.

False - Disable Feature.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	false

4.53 Parameter CanControllerFdISO

Vendor specific: Specifies Can FD protocol according to ISO or non-ISO (FlexCAN is able to transmit FD frame format according to CAN Protocol standard (ISO11898-1))

True - Controller operates using the ISO CAN FD protocol (ISO 11898-1).

False - Controller operates using the non-ISO CAN FD protocol.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	true

4.54 Parameter CanClockFromBus

Switches the source clock for the module to the system bus (rather than crystal).

1 = The CAN engine clock source is the bus clock.(from MCU)

0 = The CAN engine clock source is the oscillator clock.

NoteImplementation specific Parameter. Not AutoSar Required.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
default Value	true

4.55 Parameter CanErrorNotification

Enable error interrupt.

notify errors detected in all frames.

Property	Value
type	ECUC-FUNCTION-NAME-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	NULL_PTR

4.56 Parameter CanFDErrorNotification

notify errors detected in FD frames only.

Property	Value
type	ECUC-FUNCTION-NAME-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	NULL_PTR

4.57 Reference CanControllerDefaultBaudrate

ECUC_Can_00435. Reference to baudrate configuration container configured for the Can Controller.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	1
upperMultiplicity	1

Property	Value
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcucDefs/Can/CanConfigSet/CanController/CanController↔ BaudrateConfig

4.58 Reference CanControllerEcucPartitionRef

ECUC_Can_00492. Maps the CAN controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the CAN driver is mapped to.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	true
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcucDefs/EcuC/EcucPartitionCollection/EcucPartition

4.59 Reference CanCpuClockRef

ECUC_Can_00313. Reference to the CPU clock configuration, which is set in the MCU driver configuration. MCU plugin need to be added and then give the reference to it.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC

Property	Value
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcuDefs/Mcu/McuModuleConfiguration/McuClockSetting↔ Config/McuClockReferencePoint

4.60 Reference CanCpuClockRefAlternate

Vendor specific: Alternative reference to the CPU clock configuration, which is set in the MCU driver configuration.

MCU plugin need to be added and then give the reference to it.

Note: CanEnableDualClockMode must be true to use this node.

Property	Value
type	ECUC-REFERENCE-DEF
origin	NXP
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcuDefs/Mcu/McuModuleConfiguration/McuClockSetting↔ Config/McuClockReferencePoint

4.61 Reference CanWakeupSourceRef

ECUC_Can_00359. This parameter contains a reference to the Wakeup Source for this controller as defined in the ECU State Manager.

Type: reference to EcuM_WakeupSourceType

EcuM plugin need to be added and then give the reference to it.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	true
destination	/AUTOSAR/EcuDefs/EcuM/EcuMConfiguration/EcuMCommon↔ Configuration/EcuMWakeupSource

4.62 Container CanControllerBaudrateConfig

This container contains bit timing related configuration parameters of the CAN controller(s)

Included subcontainers:

- [CanControllerFdBaudrateConfig](#)

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	1
upperMultiplicity	Infinite
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.63 Parameter CanBaudrateTypeSuport

NORMAL_CBT: This values are stored in CTRL1 or CBT register (default)

ENHANCE_CBT: Provide a higher bit timing resolution are stored in ENCBT, EDCBT and EPRS registers.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP

Property	Value
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	NORMAL_CBT
literals	['NORMAL_CBT', 'ENHANCE_CBT']

4.64 Parameter CanAdvancedSetting

If TRUE initiates the derivation of the CAN bit timing values from the CanControllerBaudRate parameter.

When this option is True the CanControllerPropSeg, CanControllerSeg1, CanControllerSeg2, CanControllerSyncJumpWidth are disabled because are background calculated.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	false

4.65 Parameter CanBusLength

Specifies the CAN Bus length in meters.

This parameter is used for PROPSEG parameter calculation when "CanAdvancedSetting" control is set to true.

NoteImplementation specific Parameter.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
default Value	40
max	5000
min	1

4.66 Parameter CanPropDelayTranceiver

Propogation delay of Tranceiver used in nanoseconds.

NoteImplementation specific Parameter.

The calculation for the CAN bit timing is implemented in the code template.

The Formulas used in the code template for calculation are as follows.

Physical delay of bus = Bus length * Bus propagation delay.

$t_{PROP_SEG} = 2(\text{Physical delay of bus} + \text{CanPropDelayTranceiver})$.

$PROP_SEG = \text{ROUND_UP}(t_{PROP_SEG} / \text{Bus propagation delay})$.

Based on these calculations implemented in the Code template the consistency check is maintained for CanPropDelayTranceiver parameter.

The PROP_SEG parameter need to be a integral value and not fractional value.

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
default Value	150.0
max	5000.0

4.67 Parameter CanTxArbitrationStartDelay

This 5-bit field indicates how many CAN bits the Tx arbitration process start point can be delayed from the first bit of CRC field on CAN bus.

See Reference Manual to have a calculation method for the optimal T ASD value.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	0
max	31
min	0

4.68 Parameter CanControllerPrescaler

Specifies the prescaler for the controller .

The calculation of the resulting CanControllerTimeQuanta value depending on module clocking and prescaler shall be done offline.

$\text{Prescaler} = \text{FreqCanClk} / \text{FreqTq}; \text{FreqTq} = 1 / \text{CanControllerTimeQuanta}$.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	10
max	1024
min	1

4.69 Parameter CanControllerPrescalerAlternate

Vendor specific: Specifies the alternate prescaler for the controller .

The calculation of the resulting CanControllerTimeQuanta_Alternate value depending on module clocking and prescaler shall be done offline.

$\text{Prescaler} = \text{FreqCanClk} / \text{FreqTq}; \text{FreqTq} = 1 / \text{CanControllerTimeQuanta} .$

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	10
max	1024
min	1

4.70 Parameter CanControllerBaudRateConfigID

Uniquely identifies a specific baud rate configuration. This ID is used by

SetBaudrate API

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	0
max	65535
min	0

4.71 Parameter CanControllerBaudRate

ECUC_Can_00005. Specifies the buadrate of the controller in kbps.

CAN maximum speed is 1Mbps.

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	20.0
max	2000.0
min	0.0

4.72 Parameter CanControllerSyncSeg

The Synchronization Segment or SYNC_SEG time interval is used to synchronize all the nodes across the network.

The SYNC_SEG time interval has a fixed period of one Time Quantum (TQ).

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	1
max	1
min	1

4.73 Parameter CanControllerPropSeg

ECUC_Can_00073. It is used to compensate the physical delay within the CAN network.

when disable extended CAN bit timing:

The CanControllerPropSeg valid values are 1-8 Tq.

when enable extended CAN bit timing:

The CanControllerPropSeg valid values are 1-64 Tq.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	5
max	255
min	0

4.74 Parameter CanControllerSeg1

ECUC_Can_00074. Specifies the Phase Segment 1 in time quantas.

when disable extended CAN bit timing:

The CanControllerSeg1 valid values are 1-8 Tq.

when enable extended CAN bit timing:

The CanControllerSeg1 valid values are 1-32 Tq.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1

Property	Value
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	5
max	255
min	0

4.75 Parameter CanControllerSeg2

Specifies the Phase Segment 1 in time quantas.

when disable extended CAN bit timing:

The CanControllerSeg2 valid values are 2-8 Tq.

when enable extended CAN bit timing:

The CanControllerSeg2 valid values are 2-32 Tq.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	6
max	255
min	0

4.76 Parameter CanControllerSyncJumpWidth

when disable extended CAN bit timing:

The CanControllerSyncJumpWidth valid values are 1-4 Tq.

when enable extended CAN bit timing:

The CanControllerSyncJumpWidth valid values are 1-32 Tq.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE VARIANT-POST-BUILD: POST-BUILD
defaultValue	1
max	255
min	0

4.77 Container CanControllerFdBaudrateConfig

This optional container contains bit timing related configuration parameters of the CAN controller(s) for payload and CRC of a CAN FD frame. If this container exists the controller supports CAN FD frames.

Included subcontainers:

- None

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE VARIANT-POST-BUILD: PRE-COMPILE

4.78 Parameter CanControllerFdBaudRate

ECUC_Can_00481.Specifies the data segment baud rate of the controller in kbps.

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
default Value	250.0
max	8000.0
min	0.0

4.79 Parameter CanControllerFdSyncSeg

The Synchronization Segment or SYNC_SEG time interval is used to synchronize all the nodes across the network.

The SYNC_SEG time interval has a fixed period of one Time Quantum (TQ).

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
default Value	1
max	1
min	1

4.80 Parameter CanControllerPropSeg

ECUC_Can_00476.Specifies propagation delay in time quantas.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	1
max	255
min	0

4.81 Parameter CanControllerSeg1

ECUC_Can_00477.Specifies phase segment 1 in time quantas.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	1
max	255
min	0

4.82 Parameter CanControllerSeg2

ECUC_Can_00478.Specifies phase segment 2 in time quantas.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC

Property	Value
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	2
max	255
min	0

4.83 Parameter CanControllerSyncJumpWidth

ECUC_Can_00479.Specifies the synchronization jump width for the controller in time quantas.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	1
max	255
min	0

4.84 Parameter CanControllerSspOffset

ECUC_Can_00494 .Specifies the Transmitter Delay Compensation Offset in minimum time quanta

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0

Property	Value
upperMultiplicity	1
postBuildVariantMultiplicity	true
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	0
max	255
min	0

4.85 Parameter CanControllerFdPrescaler

Fd Prescaler Option overwrite the Can Controller Prescaler

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	true
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	1
max	1024
min	1

4.86 Parameter CanControllerPrescalerAlternateFd

Vendor specific: Specifies the alternate prescaler for the controller .

The calculation of the resulting CanControllerTimeQuanta_Alternate value depending on module clocking and prescaler shall be done offline.

$\text{Prescaler} = \text{FreqCanClk} / \text{FreqTq}$; $\text{FreqTq} = 1 / \text{CanControllerTimeQuanta}$.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
default Value	10
max	1024
min	1

4.87 Parameter CanControllerTxBitRateSwitch

Specifies if the bit rate switching shall be used for transmissions.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	true

4.88 Container CanTTController

This container is only included and valid if TTCAN SWS is used and TTCAN is enabled.

Included subcontainers:

- None

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.89 Parameter CanTTControllerApplWatchdogLimit

Defines the maximum time period (unit is 256 times NTU) after which the application has to serve the watchdog.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	255
min	0

4.90 Parameter CanTTControllerCycleCountMax

Defines the value for cycle_count_max.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true

Property	Value
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	63
min	0

4.91 Parameter CanTTControllerExpectedTxTrigger

Number of expected_tx_trigger.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	255
min	0

4.92 Parameter CanTTControllerExternalClockSynchronisation

Enables/disables the external clock synchronization.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	false

4.93 Parameter CanTTControllerGlobalTimeFiltering

Enables/disables the global time filtering.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	false

4.94 Parameter CanTTControllerInitialRefOffset

Defines the initial value for ref trigger offset.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	0
max	127
min	0

4.95 Parameter CanTTControllerInterruptEnable

Enables/disables the respective interrupts.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	1023
min	0

4.96 Parameter CanTTControllerLevel2

Defines whether Level 2 or Level 1 is used.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	false

4.97 Parameter CanTTControllerNTUConfig

Defines the config value for NTU (network time unit).

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false

Property	Value
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0.0
max	100.0
min	0.0

4.98 Parameter CanTTControllerOperationMode

Defines the operation mode.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	CAN_TT_EVENT_SYNC_TIME_TRIGGERED
literals	['CAN_TT_EVENT_SYNC_TIME_TRIGGERED', 'CAN_TT_EVENT_↔ TRIGGERED', 'CAN_TT_TIME_TRIGGERED']

4.99 Parameter CanTTControllerSyncDeviation

Defines the maximum synchronization deviation:

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1

Property	Value
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0.0
max	100.0
min	0.0

4.100 Parameter CanTTControllerTURRestore

Enables/disables the TUR restore.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	false

4.101 Parameter CanTTControllerTimeMaster

Defines whether the controller acts as a potential time master.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A

Property	Value
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	false

4.102 Parameter CanTTControllerTimeMasterPriority

Defines the time master priority.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	7
min	0

4.103 Parameter CanTTControllerTxEnableWindowLength

Length of the tx enable window given in CAN bit times.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	1

Property	Value
max	16
min	1

4.104 Parameter CanTTControllerWatchTriggerGapTimeMark

watch trigger time mark after a gap

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	65535
min	0

4.105 Parameter CanTTControllerWatchTriggerTimeMark

watch trigger time mark

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	65535
min	0

4.106 Parameter CanTTIRQProcessing

Enables / disables API Can_MainFunction_BusOff() for handling busoff events in POLLING mode.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	POLLING
literals	['INTERRUPT', 'POLLING']

4.107 Reference CanTTControllerEcucPartitionRef

ECUC_Can_00493. Maps the Time triggered CAN controller to zero or one ECUC

partitions. The ECUC partition referenced is a subset of the ECUC

partitions where the CAN driver is mapped to.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcucDefs/EcuC/EcucPartitionCollection/EcucPartition

4.108 Container CanRamBlock

Vendor specific: Specify Data size of ram block.

Included choices:

- CanRamBlockUnified
- CanRamBlockSpecified

Property	Value
type	ECUC-CHOICE-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.109 Container CanRxFiFo

Vendor specific: Specify the FIFO used.

Legacy FIFO can't be used if FD is activated! Please deactivate CanControllerFdBaudrateConfig optional field if Legacy FIFO is needed.

Included choices:

- CanLegacyFiFo
- CanEnhanceFiFo

Property	Value
type	ECUC-CHOICE-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.110 Container CanHardwareObject

SWS 324. This container contains the configuration (parameters) of CAN Hardware Objects.

Tresos Configuration Plug-in

This configuration element is used as information for the CAN Interface only.

The relevant CAN driver configuration is done with the filter mask and identifier.

Included subcontainers:

- [CanHwFilter](#)
- [CanTTHardwareObjectTrigger](#)

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	1
upperMultiplicity	Infinite
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.111 Parameter CanFdPaddingValue

MBCS[PRI0]: This value it is the padding value when FD it is used.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	true
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	0
max	255
min	0

4.112 Parameter CanHandleType

ECUC_Can_00323. Specifies the type (Full-CAN or Basic-CAN) of a hardware object.

NoteAll controllers which the Fifo is enabled shall define at least 1 RECEIVE hardware object.

First RECEIVE hardware object defined for a controller which have the Fifo enabled is configured by CONVENTION to receive data from Fifo.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	BASIC
literals	['BASIC', 'FULL']

4.113 Parameter CanIdType

ECUC_Can_00065. Specifies whether the IdValue is of type

- standard identifier (ID - 11 bits length)
- extended identifier (ID - 29 bits length)
- mixed mode (standard or extended)

NoteMBs configured as MIXED standard and RECEIVE type will be treated as EXTENDED.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	STANDARD
literals	['EXTENDED', 'MIXED', 'STANDARD']

4.114 Parameter CanObjectId

ECUC_Can_00326. Holds the handle ID of HRH or HTH.

The value of this parameter is unique in a given CAN Driver, and it should start with 0 and continue without any gaps.

The HRH and HTH Ids are defined under two different name-spaces.

Example: HRH0-0, HRH1-1, HTH0-2, HTH1-3

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	true
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0
max	65535
min	0

4.115 Parameter CanObjectType

ECUC_Can_00327. Specifies if the HardwareObject is used as Transmit or as Receive object.

NoteMBs configured as MIXED standard and RECEIVE type will be treated as EXTENDED.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	RECEIVE
literals	['RECEIVE', 'TRANSMIT']

4.116 Parameter CanHardwareObjectUsesPolling

Enables polling of this hardware object. This node shall exist if CanRxProcessing/CanTxProcessing is set to MIXED.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-POST-BUILD: PRE-COMPILE
	VARIANT-PRE-COMPILE: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PRE-COMPILE
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	false

4.117 Parameter CanTriggerTransmitEnable

This parameter defines if or if not Can supports the trigger-transmit API for this handle.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-POST-BUILD: PRE-COMPILE
	VARIANT-PRE-COMPILE: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PRE-COMPILE
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	false

4.118 Parameter CanHwObjectUsesBlock

Vendor specific: Selects the Block which Hw Object take into.

This field is meaningless for first HRH of controller enabling Enhance FIFO (Enhance FIFO object).

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP
symbolicNameValue	False
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	CAN_RAM_BLOCK_0
literals	['CAN_RAM_BLOCK_0', 'CAN_RAM_BLOCK_1', 'CAN_RAM_BLOCK_2', 'CAN_RAM_BLOCK_3', 'CAN_RAM_BLOCK_4', 'CAN_RAM_BLOCK_5', 'CAN_RAM_BLOCK_6', 'CAN_RAM_BLOCK_7']

4.119 Parameter CanHwObjectCount

Number of hardware objects used to implement one HOH. In case of a HRH this parameter defines the number of elements in the hardware FIFO or the number of shadow buffers, in case of a HTH it defines the number of hardware objects used for multiplexed transmission or for a hardware FIFO used by a FullCAN HTH

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	1
max	65535
min	1

4.120 Parameter CanTimeStampEnable

Enable Timestamp for the Hoh

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
default Value	false

4.121 Reference CanControllerRef

ECUC_Can_00322. Reference to CAN Controller to which the HOH is associated to.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcucDefs/Can/CanConfigSet/CanController

4.122 Reference CanMainFunctionRWPeriodRef

ECUC_Can_00438. Reference to CAN Controller to which the HOH is associated to.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	true

Property	Value
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcuDefs/Can/CanGeneral/CanMainFunctionRWPeriods

4.123 Container CanHwFilter

ECUC_Can_00468 : This container is only valid for HRHs and contains the configuration (parameters) of one hardware filter.

If the HRH is used for Legacy FIFO, CanHwFilterCode must be considered as below:

Can ID Acceptance Mode :

FORMAT_A :

- STANDARD : All bits (in the total of 11 bits) are used for frame identification
- EXTENDED : All bits (in the total of 29 bits) are used for frame identification

FORMAT_B :

- STANDARD : All bits (in the total of 11 bits) are used for frame identification
- EXTENDED : Only 14 most significant bits (in the total of 29 bits) used for frame identification

FORMAT_C :

- STANDARD : Only 8 most significant bits (in the total of 11 bits) used for frame identification
- EXTENDED : Only 8 most significant bits (in the total of 29 bits) used for frame identification

User need to provide the entire id.

For example: for FORMAT_C, Frame type is STANDARD, user must provide all 11 bits instead of 8 most significant bits only.

Included subcontainers:

- None

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	Infinite
postBuildVariantMultiplicity	false

4.124 Parameter CanHwFilterCode

ECUC_Can_00325. Specifies (together with the filter mask)- the identifiers range that passes the hardware filter for of RX objects.

Parameter ranges from 0 to 0x7FF (11 bits) for Standard IDs and 0 to 0x1FFFFFFF (29 bits) for Extended IDs.

User can assign any code to this parameter, but must to respect the above rule related to Standard/Extended IDs.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	0
max	4294967295
min	0

4.125 Parameter CanHwFilterMask

ECUC_Can_00469 : Specifies (together with the filter mask) the identifiers range that passes the hardware filter.

EN:

This value is used as acceptance masks for ID filtering in RX MBs and the FIFO.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	0
max	4294967295
min	0

4.126 Container CanTTHardwareObjectTrigger

This container is only included and valid if TTCAN SWS is used and TTCAN is enabled.

Included subcontainers:

- None

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	Infinite
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.127 Parameter CanTTHardwareObjectBaseCycle

Defines the cycle_offset.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	63
min	0

4.128 Parameter CanTTHardwareObjectCycleRepetition

Defines the repeat_factor.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	1
max	64
min	1

4.129 Parameter CanTTHardwareObjectTimeMark

Defines the point in time, when the trigger will be activated.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	65535
min	0

4.130 Parameter CanTTHardwareObjectTriggerId

Sequential number which allows separation of different TTCAN triggers configured for one and the same hardware object.

Property	Value
type	ECUC-INTEGER-PARAM-DEF

Property	Value
origin	AUTOSAR_ECUC
symbolicNameValue	true
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PRE-COMPILE
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	0
max	63
min	0

4.131 Parameter CanTTHardwareObjectTriggerType

Defines the type of the trigger associated with the hardware object. This parameter depends on plain CAN parameter CAN_OBJECT_TYPE.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	true
valueConfigClasses	VARIANT-POST-BUILD: POST-BUILD
	VARIANT-PRE-COMPILE: PRE-COMPILE
defaultValue	CAN_TT_RX_TRIGGER
literals	['CAN_TT_RX_TRIGGER', 'CAN_TT_TX_REF_TRIGGER', 'CAN_TT_TX_REF_TRIGGER_GAP', 'CAN_TT_TX_TRIGGER_EXCLUSIVE', 'CAN_TT_TX_TRIGGER_MERGED', 'CAN_TT_TX_TRIGGER_SINGLE']

4.132 Container CanIcom

This container contains the parameters for configuring pretended networking

Included subcontainers:

- [CanIcomConfig](#)

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.133 Container CanIcomConfig

This container contains the general configuration parameters of the ICOM Configuration

Included subcontainers:

- [CanIcomWakeupCauses](#)

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	1
upperMultiplicity	256
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.134 Parameter CanIcomConfigId

This parameter identifies the ID of the ICOM configuration.

In order prevent the issue when have multiple configuration for ICom, Please configure the ConfigID follow the order.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false

Property	Value
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	1
max	255
min	1

4.135 Parameter CanIcomWakeOnBusOff

This parameter defines that the MCU shall wake if the bus off is detected or not.

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.136 Container CanIcomWakeupCauses

This container contains the configuration parameters of the wakeup causes to leave the power saving mode.

Included subcontainers:

- [CanIcomRxMessage](#)

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A

4.137 Container CanIcomRxMessage

This container contains the configuration parameters for the wakeup causes for matching received messages. It has to be configured as often as received messages are defined as wakeup cause. constraint: For all CanIcomRxMessage instances the Message IDs which are defined in CanIcomMessageId and in CanIcomRxMessageIdMask shall not overlap.

Included subcontainers:

- [CanIcomRxMessageSignalConfig](#)

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	1
upperMultiplicity	Infinite
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.138 Parameter CanIcomCounterValue

This parameter defines that the MCU shall wake if the message with the ID is received n times on the communication channel.

NOTE: The ASR421 require 16 bit for this field, but hardware only support 8 bit for this feild. So the limitation value of this feild is 256.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	1
max	255
min	1

4.139 Parameter CanIcomMessageIdType

Specifies whether the CanIcomMessageIdType is of type

- standard identifier (ID - 11 bits length)
- extended identifier (ID - 29 bits length)

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	STANDARD
literals	['EXTENDED', 'STANDARD']

4.140 Parameter CanIcomMessageId

This parameter defines the message ID the wakeup causes of this CanIcomRxMessage are configured for. In addition a mask (CanIcomMessageIdMask) can be defined, in that case it is possible to define a range of rx messages, which can create a wakeup condition.

when CanIcomIdOperation is selected to INSIDE_RANGE, this node contains lower limit value.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0
max	536870911
min	0

4.141 Parameter CanIcomIdOperation

This is a non-autosar parameter. It is generated in order support for selection the ID filter type.

The Platform support 4 option in order ID filter wake-up message:

EXACTLY

SMALLER

GREATER

INSIDE_RANGE

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	NXP
symbolicNameValue	False
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	EXACTLY
literals	['EXACTLY', 'GREATER_MINNUM', 'SMALLER_MAXNUM', 'INSIDE_RANGE']

4.142 Parameter CanIcomMessageIdMask

Describes a mask for filtering of CAN identifiers. The CAN identifiers of incoming messages are masked with this CanIcomMessageIdMask. If the masked identifier matches the masked value of CanIcomMessageId, it can create a wakeup condition for this CanIcomRxMessage. Bits holding a 0 mean don't care, i.e. do not compare the message's identifier in the respective bit position. The mask shall be build by filling with leading 0.

This contains the upper limit value in ID

range detection. Also, when exact ID filtering criteria is selected, this register is used to

store the ID mask. Otherwise, this node is unused.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC

Property	Value
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0
max	536870911
min	0

4.143 Parameter CanIcomMissingMessageTimerValue

This parameter defines that the MCU shall wake if the message with the ID is not received for a specific time in s on the communication channel.

NOTE: The '0' value have the meaning that the wake-up by timer disable, When you want to disable the wake-up by timer, you should disable this object.

The internal timer is incremented based on periodic time ticks, which period is 64 times the CAN Bit Time unit. Need to enable CanIcomDefaultBaudrate to calculate the ticks written to hardware

Property	Value
type	ECUC-FLOAT-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0.0
max	65535.0
min	0.0

4.144 Parameter CanIcomPayloadLengthError

This parameter defines that the MCU shall wake if a payload error occurs

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.145 Parameter CanPayloadFilter

This parameter defines enable filter payload of messages in Pretended Networking or not

Property	Value
type	ECUC-BOOLEAN-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	false

4.146 Reference CanIcomDefaultBaudrate

Reference to baudrate configuration container configured for the Can Controller to calculate CanIcomMissingMessageTimerValue

Property	Value
type	ECUC-REFERENCE-DEF

Property	Value
origin	NXP
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcuDefs/Can/CanConfigSet/CanController/CanController↔ BaudrateConfig

4.147 Container CanIcomRxMessageSignalConfig

This container contains the configuration parameters for the wakeup causes for matching signals.

It has to be configured as often as a signal is defined as wakeup cause. If at least one Signal conditions defined in a CanIcomRxMessageSignalConfig evaluates to true or if no CanIcomRxMessageSignalConfig are defined, the whole wakeup condition is considered to be true. All instances of this container refer to the same frame/pdu (see CanIcomMessageId).

Included subcontainers:

- None

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	0
upperMultiplicity	Infinite
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE

4.148 Parameter CanIcomSignalMask

This parameter shall be used to mask a signal in the payload of a CAN message. The mask is binary AND with the signal payload. The result will be used in combination of the operations defined in CanIcomSignalOperation with the CanIcomSignalValue.

the ASR request for full 64 bit with Integers type. but in the Tresos tool, the Integers only has 63 bit, So in the fact, the greatest value is 0x7fffffffffffff.

User should provide all bits to this node for payload filtering.

example: when the node is 0x0011223344556677, the byte0 of incoming message is masked by 0x00 (no mask), the byte 1 is masked by 0x11 and so on.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	0
max	9223372036854775807
min	0

4.149 Parameter CanIcomSignalOperation

This parameter defines the operation, which shall be used to verify the signal value creates a wakeup condition.

NOTE: Hardware doesn't support a XOR type, when XOR type selected, it's converted to a RANGE type supported by Hardware.

When XOR type selected (RANGE):

- CanIcomSignalValue specifies the lower limit.
- CanIcomSignalMask specifies the upper limit.

Property	Value
type	ECUC-ENUMERATION-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
defaultValue	EQUAL
literals	['AND', 'EQUAL', 'GREATER', 'SMALLER', 'XOR']

4.150 Parameter CanIcomSignalValue

This parameter shall be used to define a signal value which shall be compared (CanIcomSignalOperation) with the masked CanIcomSignalMask value of the received signal (CanIcomSignalRef).

User should provide all bits to this node for payload filtering.

example: when the node is 0x0011223344556677, the byte0 of incoming message is masked by 0x00 (no mask), the byte 1 is masked by 0x11 and so on.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	AUTOSAR_ECUC
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
default Value	0
max	9223372036854775807
min	0

4.151 Parameter DLCLowValue

This is a non-autosar object. It is used to configure the lowest value for the "CAN_FLT_DLC" register.

That value is number data byte lowest of messages wake-up.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	False
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
default Value	0
max	8
min	0

4.152 Parameter DLCHighValue

This is a non-autosar object. It is used to configure the highest value for the "CAN_FLT_DLC" register.

That value is number data byte highest of messages wake-up.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	False
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: POST-BUILD
defaultValue	0
max	8
min	0

4.153 Reference CanIcomSignalRef

This parameter defines a reference to the signal which shall be checked additional to the message id (CanIcomMessageId). This reference is used for documentation to define which ComSignal originates this filter setting. All signals being referred by this reference shall point to the same PDU.

Property	Value
type	ECUC-REFERENCE-DEF
origin	AUTOSAR_ECUC
lowerMultiplicity	0
upperMultiplicity	1
postBuildVariantMultiplicity	false
multiplicityConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
postBuildVariantValue	false
valueConfigClasses	VARIANT-PRE-COMPILE: PRE-COMPILE
	VARIANT-POST-BUILD: PRE-COMPILE
requiresSymbolicNameValue	False
destination	/AUTOSAR/EcucDefs/Com/ComConfig/ComSignal

4.154 Container CommonPublishedInformation

Common container, aggregated by all modules.

It contains published information about vendor and versions.

Included subcontainers:

- None

Property	Value
type	ECUC-PARAM-CONF-CONTAINER-DEF
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A

4.155 Parameter ArReleaseMajorVersion

Major version number of AUTOSAR specification on which the appropriate implementation is based on.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PUBLISHED-INFORMATION
	VARIANT-PRE-COMPILE: PUBLISHED-INFORMATION
defaultValue	4
max	4
min	4

4.156 Parameter ArReleaseMinorVersion

Minor version number of AUTOSAR specification on which the appropriate implementation is based on.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PUBLISHED-INFORMATION
	VARIANT-PRE-COMPILE: PUBLISHED-INFORMATION
defaultValue	4
max	4
min	4

4.157 Parameter ArReleaseRevisionVersion

Revision version number of AUTOSAR specification on which the appropriate implementation is based on.

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PUBLISHED-INFORMATION
	VARIANT-PRE-COMPILE: PUBLISHED-INFORMATION
defaultValue	0
max	0
min	0

4.158 Parameter ModuleId

Module ID of this module from Module List.

Note: Implementation Specific Parameter

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PUBLISHED-INFORMATION
	VARIANT-PRE-COMPILE: PUBLISHED-INFORMATION
defaultValue	80
max	80
min	80

4.159 Parameter SwMajorVersion

Major version number of the vendor specific implementation of the module. The numbering is vendor specific.

Note: Implementation Specific Parameter

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PUBLISHED-INFORMATION
	VARIANT-PRE-COMPILE: PUBLISHED-INFORMATION
defaultValue	4
max	4
min	4

4.160 Parameter SwMinorVersion

Minor version number of the vendor specific implementation of the module. The numbering is vendor specific.

Note: Implementation Specific Parameter

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PUBLISHED-INFORMATION
	VARIANT-PRE-COMPILE: PUBLISHED-INFORMATION
defaultValue	0
max	0
min	0

4.161 Parameter SwPatchVersion

Patch level version number of the vendor specific implementation of the module. The numbering is vendor specific.

Note: Implementation Specific Parameter

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PUBLISHED-INFORMATION
	VARIANT-PRE-COMPILE: PUBLISHED-INFORMATION
defaultValue	0
max	0
min	0

4.162 Parameter VendorApiInfix

In driver modules which can be instantiated several times on a single ECU, BSW00347 requires that the name of APIs is extended by the VendorId and a vendor specific name.

This parameter is used to specify the vendor specific name. In total, the Implementation specific name is generated as follows:

<ModuleName>__>VendorId>__<VendorApiInfix>.

E.g. assuming that the VendorId of the implementor is 123 and the implementer chose a VendorApiInfix of "v11r456" a api name

Can_Write defined in the SWS will translate to Can_123_v11r456Write.

This parameter is mandatory for all modules with upper multiplicity >

1. It shall not be used for modules with upper multiplicity =1.

Note: Implementation Specific Parameter

Property	Value
type	ECUC-STRING-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PUBLISHED-INFORMATION VARIANT-PRE-COMPILE: PUBLISHED-INFORMATION
defaultValue	FLEXCAN

4.163 Parameter VendorId

Vendor ID of the dedicated implementation of this module according to the AUTOSAR vendor list.

Note: Implementation Specific Parameter

Property	Value
type	ECUC-INTEGER-PARAM-DEF
origin	NXP
symbolicNameValue	false
lowerMultiplicity	1
upperMultiplicity	1
postBuildVariantMultiplicity	N/A
multiplicityConfigClasses	N/A
postBuildVariantValue	false
valueConfigClasses	VARIANT-POST-BUILD: PUBLISHED-INFORMATION

Property	Value
	VARIANT-PRE-COMPILE: PUBLISHED-INFORMATION
defaultValue	43
max	43
min	43



Chapter 5

Module Index

5.1 Software Specification

Here is a list of all modules:

CAN_DRIVER	133
FlexCAN	148
FlexCAN_driver	216
Controller Area Network with Flexible Data Rate (FlexCAN)	214

Chapter 6

Module Documentation

6.1 CAN_DRIVER

6.1.1 Detailed Description

Data Structures

- struct [Can_ConfigType](#)
Can Configuration. [More...](#)
- struct [Can_HwFilterType](#)
Can Hardware Filter. [More...](#)
- struct [Can_HwObjectConfigType](#)
Can Hardware Object. [More...](#)
- struct [Can_TimeSegmentType](#)
Can Bit Rate. [More...](#)
- struct [Can_BaudrateConfigType](#)
Can Baudrate. [More...](#)
- struct [Can_ControllerConfigType](#)
Can Controller. [More...](#)

Macros

- [#define CAN_E_DATALOST](#)
Runtime Error ID for "Received CAN message is lost".
- [#define CAN_SID_MAIN_FUNCTION_READ](#)
Service ID of Can_MainFunction_Read.

Enum Reference

- enum [Can_HwObjectType](#)
Can Hardware Object Handle.
- enum [Can_IdMessageType](#)
Can Id Message.
- enum [Can_MbType](#)
Message Buffer Type: TX, RX, RX FIFO.
- enum [Can_LegacyFIFOAcceptanceModeType](#)
Legacy FIFO ID Acceptance Mode.

Function Reference

- void [Can_Init](#) (const [Can_ConfigType](#) *Config)
Initialize the CAN driver. SID is 0x00.
- void [Can_DeInit](#) (void)
De-initialize the CAN driver. SID is 0x10.
- Std_ReturnType [Can_SetControllerMode](#) (uint8 Controller, Can_ControllerStateType Transition)
Put the controller into a required state. SID is 0x03.
- void [Can_DisableControllerInterrupts](#) (uint8 Controller)
Disable INTs. SID is 0x04.
- void [Can_EnableControllerInterrupts](#) (uint8 Controller)
Enable INTs. SID is 0x05.
- Std_ReturnType [Can_GetControllerErrorState](#) (uint8 ControllerId, Can_ErrorStateType *ErrorStatePtr)
Obtains the error state of the CAN controller.. SID is 0x11.
- Std_ReturnType [Can_GetControllerMode](#) (uint8 Controller, Can_ControllerStateType *ControllerModePtr)
Reports about the current status of the requested CAN controller. SID is 0x12.
- Std_ReturnType [Can_GetControllerRxErrorCounter](#) (uint8 ControllerId, uint8 *RxErrorCounterPtr)
Return the Rx error counter for a CAN controller.
- Std_ReturnType [Can_GetControllerTxErrorCounter](#) (uint8 ControllerId, uint8 *TxErrorCounterPtr)
Return the Tx error counter for a CAN controller.
- Std_ReturnType [Can_Write](#) (Can_HwHandleType Hth, const Can_PduType *PduInfo)
Transmit information on CAN bus. SID is 0x06.

6.1.2 Data Structure Documentation

6.1.2.1 struct Can_ConfigType

Can Configuration.

Definition at line 228 of file Can.h.

Data Fields

Type	Name	Description
const uint32	Can_u32CoreID	Configuration Core ID.
const Can_HwHandleType	Can_uHthFirstIndex	The first Hth after Hrh consecutive.
const uint8 *	Can_pCtrlOffsetToCtrlIDMap	Mapping Controller ID to Controller hardware offset.
const uint8 *	Can_pHwObjIDToCtrlIDMap	Mapping Controller ID to Hardware Object ID.
const Can_HwObjectConfigType *	Can_pHwObjectConfig	Pointer to Can Hardware Object Config.
const Can_ControllerConfigType * *const *	Can_ppController	Pointer to Can Controller Config.

6.1.2.2 struct Can_HwFilterType

Can Hardware Filter.

Definition at line 314 of file Can_Flexcan_Types.h.

Data Fields

Type	Name	Description
const uint32	Can_u32HwFilterCode	Specifies (together with the filter mask) the identifiers range that passes the hardware filter.
const uint32	Can_u32HwFilterMask	Describes a mask for hardware-based filtering of CAN identifiers.

6.1.2.3 struct Can_HwObjectConfigType

Can Hardware Object.

Definition at line 321 of file Can_Flexcan_Types.h.

Data Fields

Type	Name	Description
const Can_HwHandleType	Can_HwObjectID	Can Hardware Object ID.
const Can_HwObjectHandleType	Can_HohType	Specifies Hardware Object is used as Transmit or as Receive Object.
const Can_IdMessageType	Can_IdMessage	Specifies the type of Message ID: STANDARD, EXTENDED, MIXED.
const boolean	Can_bHwObjectUsesPolling	Specifies the processing of HOH is Polling or Interrupt.
const boolean	Can_bTriggerTransmit	Specifies the Hw object is enable/disable Trigger Transmit.

Data Fields

Type	Name	Description
const uint8	Can_u8ObjectCount	Number of Hardware Objects used to implement one HOH.
const uint8	Can_MainFuncPeriodIndex	Can MainFunction RW period reference.
const uint8	Can_u8PayloadLength	Specifies the Max data length of Hw Object.
const uint8	Can_u8PaddingValue	Specifies the value which is used to pad unspecified data.
const uint8	Can_u8HwFilterCount	The number of Can Hw Filter Config.
const Can_HwFilterType *	Can_pHwFilterConfig	Pointer to Hw Filter Config.
const Can_MbType	Can_eReceiveType	Specifies the Message Buffer is TX, RX or RX FIFO.
const uint8	Can_u8HwBufferIndex	Buffer Index in Message buffer ram.
const uint32 *	Can_pHwBufferAddr	Pointer to Hw Buffer Address.

6.1.2.4 struct Can_TimeSegmentType

Can Bit Rate.

Definition at line 358 of file Can_Flexcan_Types.h.

Data Fields

Type	Name	Description
const uint8	Can_u8PropSeg	Propagation Segment.
const uint8	Can_u8PhaseSeg1	Phase Segment 1.
const uint8	Can_u8PhaseSeg2	Phase Segment 2.
const uint16	Can_u16Prescaler	Prescaler Divider.
const uint8	Can_u8ResyncJumpWidth	Synchronization Jump Width.

6.1.2.5 struct Can_BaudrateConfigType

Can Baudrate.

Definition at line 377 of file Can_Flexcan_Types.h.

Data Fields

Type	Name	Description
const boolean	Can_bEnhanceCBTEnable	enhance CBT support
const boolean	Can_bBitRateSwitch	Tx Bit Rate Switch.
const boolean	Can_bFDFrame	Can FD support.

Data Fields

Type	Name	Description
const Can_TimeSegmentType	Can_NominalBitRate	Nominal Bit Rate.
const Can_TimeSegmentType	Can_DataBitRate	Data Bit Rate (using when support FD and Bit Rate Swith is set)
const uint8	Can_u8TxArbitrationStartDelay	Specifies the Transmission Arbitration start delay.
const boolean	Can_bTrcvDelayEnable	Transmitter Delay Compensation Enable.
const uint8	Can_u8TrcvDelayCompOffset	Specifies the Transmitter Delay Compensation Offset.

6.1.2.6 struct Can_ControllerConfigType

Can Controller.

Definition at line 398 of file Can_Flexcan_Types.h.

Data Fields

Type	Name	Description
const uint8	Can_u8AbstControllerID	Abstracted CanIf Controller ID.
const uint8	Can_u8ControllerID	Controller ID.
const uint8	Can_u8ControllerOffset	Controller Offset.
const uint32	Can_u32BaseAddress	Controller Base Address.
const boolean	Can_bActivation	Define Controller is used in Config.
const boolean	Can_bBusOffUsesPolling	Bus Off uses Polling.
const uint32	Can_u32LegacyGlobalMask	Specifies the Global mask of Legacy FIFO.
const Can_LegacyFIFOAcceptanceModeType	Can_eLegacyAcceptanceMode	ID Acceptance Mode.
const Can_NotifyType	Can_pLegacyFiFoWarnNotif	Legacy FIFO Warning Notification.
const Can_NotifyType	Can_pLegacyFiFoOvfNotif	Legacy FIFO Overflow Notification.
const Can_NotifyType	Can_pEnhanceFiFoOvfNotif	Enhance FIFO Overflow Notification.
const boolean	bErrEn	Error Interrupt enable.
const Can_NotifyType	Can_pErrNotif	Error Notification.
const Can_NotifyType	Can_pFDErrNotif	Error FD Notification.
const uint16	Can_u16DefaultBaudrateID	Default Baudrate ID.
const uint16	Can_u16BaudrateConfigCount	Number of Baurate Configured.
const Can_BaudrateConfigType *	Can_pBaudrateConfig	Pointer to Baudrate Config.
const Can_Ipw_HwChannelConfigType *	HwChannelIpConfig	Pointer to Controller config.
const uint8	Can_u8HwObjectRefCount	The number of Hw Objects referred to Controller.
const Can_HwObjectConfigType *const *	Can_ppHwObject	Pointer point to Pointer to Hw Object that refer to Controller.

6.1.3 Macro Definition Documentation

6.1.3.1 CAN_E_DATALOST

```
#define CAN_E_DATALOST
```

Runtime Error ID for "Received CAN message is lost".

Definition at line 175 of file Can_Flexcan_Types.h.

6.1.3.2 CAN_SID_MAIN_FUNCTION_READ

```
#define CAN_SID_MAIN_FUNCTION_READ
```

Service ID of Can_MainFunction_Read.

Definition at line 239 of file Can_Flexcan_Types.h.

6.1.4 Enum Reference

6.1.4.1 Can_HwObjectHandleType

```
enum Can_HwObjectHandleType
```

Can Hardware Object Handle.

Enumerator

CAN_RECEIVE	Specifies the HardwareObject is used as Receive.
CAN_TRANSMIT	Specifies the HardwareObject is used as Transmit.

Definition at line 263 of file Can_Flexcan_Types.h.

6.1.4.2 Can_IdMessageType

```
enum Can_IdMessageType
```

Can Id Message.

Enumerator

CAN_STANDARD	All the CANIDs are of type standard only (11bit).
CAN_EXTENDED	All the CANIDs are of type extended only (29 bit)
CAN_MIXED	All the CANIDs are of type extended only (29 bit)

Definition at line 270 of file Can_Flexcan_Types.h.

6.1.4.3 Can_MbType

enum `Can_MbType`

Message Buffer Type: TX, RX, RX FIFO.

Enumerator

CAN_RX_NORMAL	Specifies the HardwareObject is used as Normal Receive Object.
CAN_RX_LEGACY_FIFO	Specifies the HardwareObject is used as Legacy FIFO Receive Object.
CAN_RX_ENHANCED_FIFO	Specifies the HardwareObject is used as Enhanced FIFO Receive Object.
CAN_TX_NORMAL	Specifies the HardwareObject is used as Normal Transmit Object.

Definition at line 278 of file Can_Flexcan_Types.h.

6.1.4.4 Can_LegacyFIFOAcceptanceModeType

enum `Can_LegacyFIFOAcceptanceModeType`

Legacy FIFO ID Acceptance Mode.

Enumerator

CAN_LEGACY_FIFO_FORMAT_A	One full ID (standard and extended) per ID filter table element.
CAN_LEGACY_FIFO_FORMAT_B	Two full standard IDs or two partial 14-bit (standard and extended) IDs per ID filter table element.
CAN_LEGACY_FIFO_FORMAT_C	Four partial 8-bit standard IDs per ID filter table element.

Definition at line 287 of file Can_Flexcan_Types.h.

6.1.5 Function Reference

6.1.5.1 Can_Init()

```
void Can_Init (
    const Can_ConfigType * Config )
```

Initialize the CAN driver. SID is 0x00.

Initialize all the controllers. The CAN module shall be initialized by Can_Init(<&Can_Configuration>) service call during the start-up. This routine is called by:

- CanIf or an upper layer according to Autosar requirements.

Parameters

in	<i>Config</i>	Pointer to driver configuration.
----	---------------	----------------------------------

Returns

void

Precondition

Can_Init shall be called at most once during runtime.

Postcondition

Can_Init shall initialize all the controllers and set the driver in READY state.

6.1.5.2 Can_DeInit()

```
void Can_DeInit (
    void )
```

De-initialize the CAN driver. SID is 0x10.

De-initialize all the controllers. The CAN module shall be de-initialized by Can_DeInit() service call during the start-up. This routine is called by:

- CanIf or an upper layer according to Autosar requirements.

Parameters

in	<i>None</i>	
----	-------------	--

Returns

void

Precondition

Before controller de-initialization, the driver must be initialized and the controllers must be not in Start state.

Postcondition

Can_DeInit shall de-initialize all the controllers and set the driver in UNINIT state.

6.1.5.3 Can_SetControllerMode()

```
Std_ReturnType Can_SetControllerMode (
    uint8 Controller,
    Can_ControllerStateType Transition )
```

Put the controller into a required state. SID is 0x03.

Switch the controller from one state to another. This routine is called by:

- CanIf or an upper layer according to Autosar requirements.

Parameters

in	<i>Controller</i>	- Can controller for which the status shall be changed - based on configuration order list (CanControllerId).
in	<i>Transition</i>	- Possible transitions (CAN_CS_STOPPED , CAN_CS_STARTED , CAN_CS_SLEEP)

Returns

Std_ReturnType Result of the transition.

Return values

<i>E_OK</i>	request accepted.
<i>E_NOT_OK</i>	request not accepted, a development error occurred.

Precondition

Before changing the controller state the driver must be initialized.

Postcondition

After the transition to the new state the interrupts required for that state must be enebaled.

6.1.5.4 Can_DisableControllerInterrupts()

```
void Can_DisableControllerInterrupts (  
    uint8 Controller )
```

Disable INTs. SID is 0x04.

Switch OFF the controller's interrupts. This routine is called by:

- CanIf or an upper layer according to Autosar requirements.

Parameters

in	<i>Controller</i>	Can controller for which interrupts shall be disabled - based on configuration order list (CanControllerId).
----	-------------------	--

Returns

void

Precondition

Driver must be initalzied before changing the interrupts state (en or dis).

Postcondition

Controller must not respond to any interrupt assertion.

6.1.5.5 Can_EnableControllerInterrupts()

```
void Can_EnableControllerInterrupts (  
    uint8 Controller )
```

Enable INTs. SID is 0x05.

Switch ON the controller's interrupts. This routine is called by:

- CanIf or an upper layer according to Autosar requirements.

Parameters

in	<i>Controller</i>	Can controller for which interrupts shall be disabled - based on configuration order list (CanControllerId).
----	-------------------	--

Returns

void

Precondition

Driver must be initialized before changing the interrupts state (en or dis).

Postcondition

Controller must respond to interrupt assertion.

6.1.5.6 Can_GetControllerErrorState()

```
Std_ReturnType Can_GetControllerErrorState (
    uint8 ControllerId,
    Can_ErrorStateType * ErrorStatePtr )
```

Obtains the error state of the CAN controller.. SID is 0x11.

This routine is called by:

- CanIf or an upper layer according to Autosar requirements.

Parameters

in	<i>ControllerId</i>	Abstracted CanIf ControllerId which is assigned to a CAN controller, which is requested for ErrorState.
out	<i>ErrorStatePtr</i>	Pointer to a memory location, where the error state of the CAN controller will be stored.

Returns

Std_ReturnType Result of the transition.

Return values

<i>E_OK</i>	: Error state request has been accepted.
<i>E_NOT_OK</i>	: Error state request has not been accepted.

Precondition

Postcondition

6.1.5.7 Can_GetControllerMode()

```
Std_ReturnType Can_GetControllerMode (
    uint8 Controller,
    Can_ControllerStateType * ControllerModePtr )
```

Reports about the current status of the requested CAN controller. SID is 0x12.

This routine is called by:

- CanIf or an upper layer according to Autosar requirements.

Parameters

in	<i>Controller</i>	CAN controller for which the status shall be requested.
out	<i>ControllerModePtr</i>	Pointer to a memory location, where the current mode of the CAN controller will be stored.

Returns

Std_ReturnType Result of the transition.

Return values

<i>E_OK</i>	: Controller mode request has been accepted.
<i>E_NOT_OK</i>	: Controller mode request has not been accepted.

Precondition

Postcondition

6.1.5.8 Can_GetControllerRxErrorCounter()

```
Std_ReturnType Can_GetControllerRxErrorCounter (
    uint8 ControllerId,
    uint8 * RxErrorCounterPtr )
```

Return the Rx error counter for a CAN controller.

Return the Rx error counter for a CAN controller. This value might not be available for all CAN controller, in which case `E_NOT_OK` would be returned. Please note that the value of the counter might not be correct at the moment the API returns it, because the Rx counter is handled asynchronously in hardware. Applications should not trust this value for any assumption about the current bus state.

Parameters

in	<i>ControllerId</i>	CAN controller, whose current Rx error counter shall be acquired.
out	<i>RxErrorCounterPtr</i>	Pointer to a memory location, where the current Rx error counter of the CAN controller will be stored.

Returns

Std_ReturnType Result of the transition.

Return values

<i>E_OK</i>	Rx error counter available.
<i>E_NOT_OK</i>	Wrong ControllerId, or Rx error counter not available.

Precondition

Postcondition

6.1.5.9 Can_GetControllerTxErrorCounter()

```
Std_ReturnType Can_GetControllerTxErrorCounter (
    uint8 ControllerId,
    uint8 * TxErrorCounterPtr )
```

Return the Tx error counter for a CAN controller.

Return the Tx error counter for a CAN controller. This value might not be available for all CAN controller, in which case E_NOT_OK would be returned. Please note that the value of the counter might not be correct at the moment the API returns it, because the Tx counter is handled asynchronously in hardware. Applications should not trust this value for any assumption about the current bus state.

Parameters

in	<i>ControllerId</i>	CAN controller, whose current Tx error counter shall be acquired.
out	<i>TxErrorCounterPtr</i>	Pointer to a memory location, where the current Tx error counter of the CAN controller will be stored.

Returns

Std_ReturnType Result of the transition.

Return values

<i>E_OK</i>	Tx error counter available.
<i>E_NOT_OK</i>	Wrong ControllerId, or Tx error counter not available.

Precondition

Postcondition

6.1.5.10 Can_Write()

```
Std_ReturnType Can_Write (
    Can_HwHandleType Hth,
    const Can_PduType * PduInfo )
```

Transmit information on CAN bus. SID is 0x06.

Can_Write checks if hardware transmit object that is identified by the HTH is free. Can_Write checks if another Can_Write is ongoing for the same HTH. a) hardware transmit object is free: The mutex for that HTH is set to 'signaled' the ID, DLC and SDU are put in a format appropriate for the hardware (if necessary) and copied in the appropriate hardware registers or buffers. All necessary control operations to initiate the transmit are done. The mutex for that HTH is released. The function returns with E_OK. b) hardware transmit object is busy with another transmit request. The function returns with CAN_BUSY. c) A preemptive call of Can_Write has been issued, that could not be handled reentrant (i.e. a call with the same HTH). The function returns with CAN_BUSY the function is non blocking d) The hardware transmit object is busy with another transmit request for an L-PDU that has lower priority than that for the current request The transmission of the previous L-PDU is cancelled (asynchronously). The function returns with CAN_BUSY. This routine is called by:

- CanIf or an upper layer according to Autosar requirements.

Parameters

in	<i>Hth</i>	Information which HW-transmit handle shall be used for transmit. Implicitly this is also the information about the controller to use because the Hth numbers are unique inside one hardware unit.
in	<i>PduInfo</i>	Pointer to SDU user memory, DLC and Identifier.

Returns

Std_ReturnType Result of the write operation.

Return values

<i>E_OK</i>	Write command has been accepted.
<i>E_NOT_OK</i>	Development error occurred.
<i>CAN_BUSY</i>	No of TX hardware buffer available or preemptive call of Can_Write() that can't be implemented reentrant.

Precondition

Driver must be initialized and MB must be configured for Tx.

Postcondition

The data can be transmitted or rejected because of another data with a higher priority.

6.2 FlexCAN

6.2.1 Detailed Description

Modules

- [FlexCAN_driver](#)

Data Structures

- struct [Flexcan_Ip_MsbuffCodeStatusType](#)
FlexCAN Message Buffer code and status for transmit and receive. [More...](#)
- struct [Flexcan_Ip_TimeSegmentType](#)
FlexCAN bitrate related structures. [More...](#)
- struct [Flexcan_Ip_PayloadSizeType](#)
FlexCAN Blocks payload sizes structure. [More...](#)
- struct [Flexcan_Ip_MsgBuffType](#)
FlexCAN message buffer structure. [More...](#)
- struct [Flexcan_Ip_MBhandleType](#)
Information needed for internal handling of a given MB. [More...](#)
- struct [Flexcan_Ip_StateType](#)
Internal driver state information. [More...](#)
- struct [Flexcan_Ip_ConfigType](#)
FlexCAN configuration. [More...](#)
- struct [Flexcan_Ip_IdTableType](#)
FlexCAN Rx FIFO ID filter table structure. [More...](#)
- struct [Flexcan_Ip_DataInfoType](#)
FlexCAN data info from user. [More...](#)

Macros

- `#define FlexCAN_Ip_Init(Flexcan_Ip_u8Instance, Flexcan_Ip_pState, Flexcan_Ip_pData)`
Initializes the FlexCAN peripheral.
- `#define FlexCAN_Ip_ConfigRxFifo(instance, id_format, id_filter_table)`
FlexCAN Rx FIFO field configuration.
- `#define FlexCAN_Ip_SetRxIndividualMask(instance, mb_idx, mask)`
Sets the FlexCAN Rx individual mask.
- `#define FlexCAN_Ip_SetRxMbGlobalMask(instance, mask)`
Sets the FlexCAN Rx MB global mask.
- `#define FlexCAN_Ip_SetRxFifoGlobalMask(instance, mask)`
Sets the FlexCAN Rx FIFO global mask. This mask is applied to all filters ID regardless the ID Filter format.
- `#define FlexCAN_Ip_MainFunctionBusOff(instance)`
Check a bus-off event.
- `#define FlexCAN_Ip_EnterFreezeMode(instance)`

- *Enter FlexCAN Module in Freeze Mode.*
- #define [FlexCAN_Ip_ExitFreezeMode\(instance\)](#)
- *Exit FlexCAN Module from Freeze Mode.*
- #define [FlexCAN_Ip_Deinit\(instance\)](#)
- *DeInitilize the FlexCAN instance driver.*
- #define [FlexCAN_Ip_GetStartMode\(instance\)](#)
- *Get Start Mode Status.*
- #define [FlexCAN_Ip_SetStartMode\(instance\)](#)
- *Set the FlexCAN instance in START mode.*
- #define [FlexCAN_Ip_SetStopMode\(instance\)](#)
- *Set the FlexCAN instance in STOP mode.*
- #define [FlexCAN_Ip_SetListenOnlyMode\(instance, listenonlystate\)](#)
- *Enable\Disable listen Only Mode.*
- #define [FlexCAN_Ip_SetRxMaskType\(instance, type\)](#)
- *Set RX masking type.*
- #define [FlexCAN_Ip_SetRxMb14Mask\(instance, mask\)](#)
- *Set Rx14Mask filter for message buffer 14.*
- #define [FlexCAN_Ip_SetRxMb15Mask\(instance, mask\)](#)
- *Set Rx15Mask filter for message buffer 15.*
- #define [FlexCAN_Ip_SetBitrate\(instance, bitrate, enhExt\)](#)
- *Sets the FlexCAN bit rate for standard frames or the arbitration phase of FD frames.*
- #define [FlexCAN_Ip_EnableInterrupts\(u8Instance\)](#)
- *Enable all interrupts configured.*
- #define [FlexCAN_Ip_DisableInterrupts\(u8Instance\)](#)
- *Disable all interrupts.*
- #define [FlexCAN_Ip_SetErrorInt\(u8Instance, type, enable\)](#)
- *Enable\Disable Error or BusOff Interrupt.*
- #define [FlexCAN_Ip_GetStopMode\(instance\)](#)
- *Get Stop Mode Status.*
- #define [FLEXCAN_IP_MCR_DEFAULT_VALUE_U32](#)
- *Default value for the MCR register.*
- #define [FLEXCAN_IP_CTRL1_DEFAULT_VALUE_U32](#)
- *Default value for the CTRL1 register.*
- #define [FLEXCAN_IP_TIMER_DEFAULT_VALUE_U32](#)
- *Default value for the TIMER register.*
- #define [FLEXCAN_IP_ECR_DEFAULT_VALUE_U32](#)
- *Default value for the ECR register.*
- #define [FLEXCAN_IP_ESR1_DEFAULT_VALUE_U32](#)
- *Default value for the ESR1 register.*
- #define [FLEXCAN_IP_IMASK_DEFAULT_VALUE_U32](#)
- *Default value for the IMASKx register.*
- #define [FLEXCAN_IP_IFLAG_DEFAULT_VALUE_U32](#)
- *Default value for the IFLAG4 register.*
- #define [FLEXCAN_IP_CTRL2_DEFAULT_VALUE_U32](#)
- *Default value for the CTRL2 register.*
- #define [FLEXCAN_IP_CBT_DEFAULT_VALUE_U32](#)
- *Default value for the CTRL2 register.*

- `#define FLEXCAN_IP_MECR_DEFAULT_VALUE_U32`
Default value for the MECR register.
- `#define FLEXCAN_IP_ERRIAR_DEFAULT_VALUE_U32`
Default value for the ERRIAR register.
- `#define FLEXCAN_IP_ERRIDPR_DEFAULT_VALUE_U32`
Default value for the ERRIDPR register.
- `#define FLEXCAN_IP_ERRIPPR_DEFAULT_VALUE_U32`
Default value for the ERRIPPR register.
- `#define FLEXCAN_IP_ERRSR_DEFAULT_VALUE_U32`
Default value for the ERRSR register.
- `#define FLEXCAN_IP_FDCTRL_DEFAULT_VALUE_U32`
Default value for the FDCTRL register.
- `#define FLEXCAN_IP_FDCBT_DEFAULT_VALUE_U32`
Default value for the FDCBT register.
- `#define FLEXCAN_IP_ERFCR_DEFAULT_VALUE_U32`
Default value for the ERFCR register.
- `#define FLEXCAN_IP_ERFIER_DEFAULT_VALUE_U32`
Default value for the ERFIER register.
- `#define FLEXCAN_IP_ERFSR_DEFAULT_VALUE_U32`
Default value for the ERFSR register.
- `#define FLEXCAN_IP_EPRS_DEFAULT_VALUE_U32`
Default value for the EPRS register.
- `#define FLEXCAN_IP_ENCBT_DEFAULT_VALUE_U32`
Default value for the ENCBT register.
- `#define FLEXCAN_IP_EDCBT_DEFAULT_VALUE_U32`
Default value for the EDCBT register.
- `#define FLEXCAN_IP_ETDC_DEFAULT_VALUE_U32`
Default value for the ETDC register.
- `#define FLEXCAN_0_BASE`
- `#define FLEXCAN_1_BASE`
- `#define FLEXCAN_2_BASE`
- `#define FLEXCAN_3_BASE`
- `#define FLEXCAN_IP_FEATURE_RAM_OFFSET`
FlexCAN Embedded RAM address offset.
- `#define FLEXCAN_IP_ALL_INT`
- `#define FLEXCAN_IP_BUS_OFF_INT`
- `#define FLEXCAN_IP_ERROR_INT`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATAB_RTR_SHIFT`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATAB_IDE_SHIFT`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_RTR_SHIFT`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_IDE_SHIFT`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_EXT_MASK`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_EXT_SHIFT`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_STD_MASK`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_STD_SHIFT`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_MASK`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_SHIFT1`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_SHIFT2`

- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_STD_MASK`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_STD_SHIFT1`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_STD_SHIFT2`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_CMP_SHIFT`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_EXT_MASK`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_STD_MASK`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT1`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT2`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT3`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT4`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_EXT_CMP_SHIFT`
- `#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_STD_CMP_SHIFT`
- `#define FLEXCAN_IP_REM_STORE_U32`
Remote Request Store enable.
- `#define FLEXCAN_IP_THREE_SAMPLES_U32`
Three samples to determine the value of received bit.
- `#define FLEXCAN_IP_BUSOFF_RECOVERY_U32`
Define how controller recover from bus off state.
- `#define FLEXCAN_IP_PROTOCOL_EXCEPTION_U32`
Protocol Exception.
- `#define FLEXCAN_IP_EDGE_FILTER_U32`
Edge Filter.
- `#define FLEXCAN_IP_ISO_U32`
CAN FD protocol according to ISO specification (ISO 11898-1)
- `#define FLEXCAN_IP_EACEN_U32`
Entire Frame Arbitration Field Comparison.

Types Reference

- `typedef void(* FlexCAN_Ip_CallbackType) (uint8 instance, Flexcan_Ip_EventType eventType, uint32 buff←Idx, const Flexcan_Ip_StateType *flexcanState)`
FlexCAN Driver callback function type.
- `typedef void(* FlexCAN_Ip_ErrorCallbackType) (uint8 instance, Flexcan_Ip_EventType eventType, uint32 u32ErrStatus, const Flexcan_Ip_StateType *flexcanState)`
FlexCAN Driver error callback function type.

Enum Reference

- `enum`
FlexCAN message buffer CODE for Rx buffers.
- `enum`
FlexCAN message buffer CODE FOR Tx buffers.
- `enum flexcan_int_type_t`
FlexCAN error interrupt types.
- `enum Flexcan_Ip_RxFifoTransferType`
The type of the RxFIFO transfer (interrupts/DMA).

- enum [Flexcan_Ip_RxFifoIdFilterNumType](#)
FlexCAN Rx FIFO filters number.
- enum [Flexcan_Ip_RxMaskType](#)
FlexCAN Rx mask type.
- enum [Flexcan_Ip_FdPayloadSizeType](#)
FlexCAN payload sizes.
- enum [Flexcan_Ip_ModesType](#)
FlexCAN operation modes.
- enum [Flexcan_Ip_MbStateType](#)
The state of a given MB (idle/Rx busy/Tx busy).
- enum [Flexcan_Ip_EventType](#)
The type of the event which occurred when the callback was invoked.
- enum [Flexcan_Ip_ErrorIntType](#)
FlexCAN error interrupt types.
- enum [Flexcan_Ip_MsgBuffIdType](#)
FlexCAN Message Buffer ID type.
- enum [Flexcan_Ip_RxFifoIdElementFormatType](#)
ID formats for Rx FIFO.
- enum [Flexcan_Ip_StatusType](#)
The status used and reported by FlexCAN Ip driver.

Function Reference

- [Flexcan_Ip_StatusType FlexCAN_Ip_Send](#) (uint8 instance, uint8 mb_idx, const [Flexcan_Ip_DataInfoType](#) *tx_info, uint32 msg_id, const uint8 *mb_data)
Sends a CAN frame using the specified message buffer.
- [Flexcan_Ip_StatusType FlexCAN_Ip_SendBlocking](#) (uint8 instance, uint8 mb_idx, const [Flexcan_Ip_DataInfoType](#) *tx_info, uint32 msg_id, const uint8 *mb_data, uint32 timeout_ms)
Sends a CAN frame using the specified message buffer, in a blocking manner.
- [Flexcan_Ip_StatusType FlexCAN_Ip_Receive](#) (uint8 instance, uint8 mb_idx, [Flexcan_Ip_MsgBuffType](#) *data, boolean isPolling)
Receives a CAN frame using the specified message buffer.
- [Flexcan_Ip_StatusType FlexCAN_Ip_RxFifo](#) (uint8 instance, [Flexcan_Ip_MsgBuffType](#) *data)
Receives a CAN frame using the message FIFO.
- [Flexcan_Ip_StatusType FlexCAN_Ip_RxFifoBlocking](#) (uint8 instance, [Flexcan_Ip_MsgBuffType](#) *data, uint32 timeout)
Receives a CAN frame using the message FIFO, in a blocking manner.
- [Flexcan_Ip_StatusType FlexCAN_Ip_ConfigRxMb](#) (uint8 instance, uint8 mb_idx, const [Flexcan_Ip_DataInfoType](#) *rx_info, uint32 msg_id)
FlexCAN receive message buffer field configuration.
- void [FlexCAN_Ip_MainFunctionRead](#) (uint8 instance, uint8 mb_idx)
Check a receive event.
- void [FlexCAN_Ip_MainFunctionWrite](#) (uint8 instance, uint8 mb_idx)
Check a Transmission event.
- [Flexcan_Ip_StatusType FlexCAN_Ip_GetTransferStatus](#) (uint8 instance, uint8 mb_idx)
Returns whether the previous FlexCAN transfer has finished.

- uint32 [FlexCAN_Ip_GetErrorStatus](#) (uint8 instance)
Get Error Status of FlexCAN.
- uint8 [FlexCAN_Ip_GetControllerTxErrorCounter](#) (uint8 instance)
Get Transmit error counter of FlexCAN.
- uint8 [FlexCAN_Ip_GetControllerRxErrorCounter](#) (uint8 instance)
Get Receive error counter of FlexCAN.
- void [FlexCAN_Ip_ClearErrorStatus](#) (uint8 instance, uint32 error)
Clear Error Status of FlexCAN.
- boolean [FlexCAN_Ip_GetBtrRate](#) (uint8 instance, [Flexcan_Ip_TimeSegmentType](#) *btrRate)
Gets the FlexCAN bit rate for standard frames or the arbitration phase of FD frames.
- boolean [FlexCAN_Ip_GetBuffStatusFlag](#) (uint8 instance, uint8 msgBuffIdx)
Get the Status of Message Buffer.
- void [FlexCAN_Ip_ClearBuffStatusFlag](#) (uint8 instance, uint8 msgBuffIdx)
Clear Message Buffer Status Flag.
- [Flexcan_Ip_StatusType](#) [FlexCAN_Ip_AbortTransfer](#) (uint8 u8Instance, uint8 mb_idx)
Ends a non-blocking FlexCAN transfer early.
- boolean [FlexCAN_Ip_GetListenOnlyMode](#) (uint8 instance)
Get the Status of Listen Only Mode.
- [Flexcan_Ip_StatusType](#) [FlexCAN_Ip_ReceiveBlocking](#) (uint8 instance, uint8 mb_idx, [Flexcan_Ip_MsgBuffType](#) *data, boolean isPolling, uint32 u32TimeoutMs)
Receives a CAN frame using the specified message buffer, in a blocking manner.
- [Flexcan_Ip_StatusType](#) [FlexCAN_Ip_ConfigRemoteResponseMb](#) (uint8 instance, uint8 mb_idx, const [Flexcan_Ip_DataInfoType](#) *tx_info, uint32 msg_id, const uint8 *mb_data)
Configures a transmit message buffer for remote frame response.
- [Flexcan_Ip_StatusType](#) [FlexCAN_Ip_ManualBusOffRecovery](#) (uint8 Instance)
Recover manually from bus-off if possible.
- void [FlexCAN_SetRxFifoFilter](#) ([FLEXCAN_Type](#) *base, [Flexcan_Ip_RxFifoIdElementFormatType](#) id←Format, const [Flexcan_Ip_IdTableType](#) *idFilterTable)
Sets the FlexCAN Rx FIFO fields.
- void [FlexCAN_ReadRxFifo](#) (const [FLEXCAN_Type](#) *base, [Flexcan_Ip_MsgBuffType](#) *rxFifo)
Gets the FlexCAN Rx FIFO data.
- [Flexcan_Ip_StatusType](#) [FlexCAN_ExitFreezeMode](#) ([FLEXCAN_Type](#) *base)
Un freezes the FlexCAN module.
- void [FlexCAN_LockRxMsgBuff](#) (const [FLEXCAN_Type](#) *base, uint32 msgBuffIdx)
Locks the FlexCAN Rx message buffer.
- [Flexcan_Ip_StatusType](#) [FlexCAN_SetMsgBuffIntCmd](#) ([FLEXCAN_Type](#) *base, uint8 u8Instance, uint32 msgBuffIdx, boolean enable, boolean bIsIntActive)
Enables/Disables the FlexCAN Message Buffer interrupt.
- void [FlexCAN_DisableInterrupts](#) ([FLEXCAN_Type](#) *pBase)
Disable all interrupts.
- void [FlexCAN_EnableInterrupts](#) ([FLEXCAN_Type](#) *pBase, uint8 u8Instance)
Enable all interrupts configured.
- void [FlexCAN_SetTxMsgBuff](#) (volatile uint32 *const pMbAddr, const [Flexcan_Ip_MsbuffCodeStatusType](#) *cs, uint32 msgId, const uint8 *msgData, const boolean isRemote)
Sets the FlexCAN message buffer fields for transmitting.
- [Flexcan_Ip_StatusType](#) [FlexCAN_EnableRxFifo](#) ([FLEXCAN_Type](#) *base, uint32 numOfFilters)
Enables the Rx FIFO.

- [Flexcan_Ip_StatusType FlexCAN_SetMaxMsgBuffNum](#) (FLEXCAN_Type *base, uint32 maxMsgBuffNum)
Sets the maximum number of Message Buffers.
- void [FlexCAN_SetRxMsgBuff](#) (const FLEXCAN_Type *base, uint32 msgBuffIdx, const [Flexcan_Ip_MsbuffCodeStatusType](#) *cs, uint32 msgId)
Sets the FlexCAN message buffer fields for receiving.
- uint32 [FlexCAN_GetMsgBuffTimestamp](#) (const FLEXCAN_Type *base, uint32 msgBuffIdx)
Gets the message buffer timestamp value.
- void [FlexCAN_GetMsgBuff](#) (const FLEXCAN_Type *base, uint32 msgBuffIdx, [Flexcan_Ip_MsgBuffType](#) *msgBuff)
Gets the FlexCAN message buffer fields.
- uint8 [FlexCAN_GetMbPayloadSize](#) (const FLEXCAN_Type *base, uint32 maxMsgBuffNum)
Gets the payload size of the MBs.
- [Flexcan_Ip_StatusType FlexCAN_Init](#) (FLEXCAN_Type *base)
Initializes the FlexCAN controller.
- uint32 [FlexCAN_GetMaxMbNum](#) (const FLEXCAN_Type *base)
Get The Max no of MBs allowed on CAN instance.
- void [FlexCAN_SetOperationMode](#) (FLEXCAN_Type *base, [Flexcan_Ip_ModesType](#) mode)
Set operation mode.
- volatile uint32 * [FlexCAN_GetMsgBuffRegion](#) (const FLEXCAN_Type *base, uint32 msgBuffIdx)
Sets the FlexCAN message buffer fields for transmitting.
- void [FlexCAN_ConfigCtrlOptions](#) (FLEXCAN_Type *pBase, uint32 u32Options)
configure controller depending on options.
- void [FlexCAN_ResetImaskBuff](#) (uint8 Instance)
Reset Imask Buffers.
- [Flexcan_Ip_StatusType FlexCAN_Ip_Init_Privileged](#) (uint8 Flexcan_Ip_u8Instance, [Flexcan_Ip_StateType](#) *Flexcan_Ip_pState, const [Flexcan_Ip_ConfigType](#) *Flexcan_Ip_pData)
Initializes the FlexCAN peripheral.
- [Flexcan_Ip_StatusType FlexCAN_Ip_ConfigRxFifo_Privileged](#) (uint8 instance, [Flexcan_Ip_RxFifoIdElementFormatType](#) id_format, const [Flexcan_Ip_IdTableType](#) *id_filter_table)
FlexCAN Rx Legacy FIFO filter configuration.
- [Flexcan_Ip_StatusType FlexCAN_Ip_MainFunctionBusOff_Privileged](#) (uint8 instance)
Check a bus-off event.
- boolean [FlexCAN_Ip_GetStopMode_Privileged](#) (uint8 instance)
Check if the FlexCAN instance is STOPPED.
- boolean [FlexCAN_Ip_GetStartMode_Privileged](#) (uint8 instance)
Check if the FlexCAN instance is STARTED.
- [Flexcan_Ip_StatusType FlexCAN_Ip_EnterFreezeMode_Privileged](#) (uint8 instance)
Enter FlexCAN Module in Freeze Mode.
- [Flexcan_Ip_StatusType FlexCAN_Ip_ExitFreezeMode_Privileged](#) (uint8 instance)
Exit FlexCAN Module from Freeze Mode.
- [Flexcan_Ip_StatusType FlexCAN_Ip_SetRxFifoGlobalMask_Privileged](#) (uint8 instance, uint32 mask)
Set RxFifo Global Mask.
- [Flexcan_Ip_StatusType FlexCAN_Ip_Deinit_Privileged](#) (uint8 instance)
DeInitilize the FlexCAN instance driver.
- [Flexcan_Ip_StatusType FlexCAN_Ip_SetStartMode_Privileged](#) (uint8 instance)
Set the FlexCAN instance in START mode.
- [Flexcan_Ip_StatusType FlexCAN_Ip_SetStopMode_Privileged](#) (uint8 instance)

Set the FlexCAN instance in STOP mode.

- [Flexcan_Ip_StatusType FlexCAN_Ip_SetRxMaskType_Privileged](#) (uint8 instance, [Flexcan_Ip_RxMaskType](#) type)

Set RX masking type.

- [Flexcan_Ip_StatusType FlexCAN_Ip_SetBtrRate_Privileged](#) (uint8 instance, const [Flexcan_Ip_TimeSegmentType](#) *btrRate, boolean enhExt)

Sets the FlexCAN bit rate for standard frames or the arbitration phase of FD frames.

- [Flexcan_Ip_StatusType FlexCAN_Ip_EnableInterrupts_Privileged](#) (uint8 u8Instance)

Enable all mb interrupts configured.

- [Flexcan_Ip_StatusType FlexCAN_Ip_DisableInterrupts_Privileged](#) (uint8 u8Instance)

Disable all mb interrupts configured.

- [Flexcan_Ip_StatusType FlexCAN_Ip_SetErrorInt_Privileged](#) (uint8 u8Instance, [Flexcan_Ip_ErrorIntType](#) type, boolean enable)

Enable\Disable Error or BusOff Interrupt.

- [Flexcan_Ip_StatusType FlexCAN_Ip_SetListenOnlyMode_Privileged](#) (uint8 instance, const boolean enable)

Set FlexCAN Listen Only.

6.2.2 Data Structure Documentation

6.2.2.1 struct Flexcan_Ip_MsbuffCodeStatusType

FlexCAN Message Buffer code and status for transmit and receive.

Definition at line 315 of file FlexCAN_Ip_HwAccess.h.

Data Fields

Type	Name	Description
uint32	code	MB code for TX or RX buffers.
Flexcan_Ip_MsgBuffIdType	msgIdType	Defined by flexcan_mb_code_rx_t and flexcan_mb_code_tx_t Type of message ID (standard or extended)
uint32	dataLen	Length of Data in Bytes
boolean	fd_enable	
uint8	fd_padding	
boolean	enable_brs	

6.2.2.2 struct Flexcan_Ip_TimeSegmentType

FlexCAN bitrate related structures.

Definition at line 356 of file FlexCAN_Ip_Types.h.

Data Fields

Type	Name	Description
uint32	propSeg	Propagation segment
uint32	phaseSeg1	Phase segment 1
uint32	phaseSeg2	Phase segment 2
uint32	preDivider	Clock prescaler division factor
uint32	rJumpwidth	Resync jump width

6.2.2.3 struct Flexcan_Ip_PayloadSizeType

FlexCAN Blocks payload sizes structure.

Definition at line 368 of file FlexCAN_Ip_Types.h.

Data Fields

Type	Name	Description
Flexcan_Ip_FdPayloadSizeType	payloadBlock0	Payload for Ram Block 0

6.2.2.4 struct Flexcan_Ip_MsgBuffType

FlexCAN message buffer structure.

Definition at line 388 of file FlexCAN_Ip_Types.h.

Data Fields

Type	Name	Description
uint32	cs	Code and Status
uint32	msgId	Message Buffer ID
uint8	data[64]	Data bytes of the FlexCAN message
uint8	dataLen	Length of data in bytes
uint8	id_hit	Identifier Acceptance Filter Hit Indicator
uint32	time_stamp	Free-Running Counter Time Stamp

6.2.2.5 struct Flexcan_Ip_MBhandleType

Information needed for internal handling of a given MB.

Definition at line 400 of file FlexCAN_Ip_Types.h.

Data Fields

Type	Name	Description
Flexcan_Ip_MsgBuffType *	pMBmessage	The FlexCAN MB structure
volatile Flexcan_Ip_MbStateType	state	The state of the current MB (idle/Rx busy/Tx busy)
boolean	isPolling	True if the transfer is Polling Mode
boolean	isRemote	True if the frame is a remote frame
uint32	time_stamp	TimeStamp of the Message

6.2.2.6 struct Flexcan_Ip_StateType

Internal driver state information.

Note

The contents of this structure are internal to the driver and should not be modified by users. Also, contents of the structure are subject to change in future releases.

Definition at line 420 of file FlexCAN_Ip_Types.h.

Data Fields

- [Flexcan_Ip_MBhandleType](#) mbs [FLEXCAN_IP_FEATURE_MAX_MB_NUM]
- void(* [callback](#))(uint8 instance, [Flexcan_Ip_EventType](#) eventType, uint32 buffIdx, const struct FlexCAN↵State *driverState)
- void * [callbackParam](#)
- void(* [error_callback](#))(uint8 instance, [Flexcan_Ip_EventType](#) eventType, uint32 u32ErrStatus, const struct FlexCANState *driverState)
- void * [errorCallbackParam](#)
- [Flexcan_Ip_RxFifoTransferType](#) transferType
- boolean [bIsLegacyFifoEn](#)
- uint32 [u32MaxMbNum](#)
- boolean [isIntActive](#)

6.2.2.6.1 Field Documentation**6.2.2.6.1.1 mbs** [Flexcan_Ip_MBhandleType](#) mbs [FLEXCAN_IP_FEATURE_MAX_MB_NUM]

Array containing information related to each MB

Definition at line 422 of file FlexCAN_Ip_Types.h.

6.2.2.6.1.2 callback `void(* callback) (uint8 instance, Flexcan_Ip_EventType eventType, uint32 buffIdx, const struct FlexCANState *driverState)`

IRQ handler callback function.

Definition at line 428 of file FlexCAN_Ip_Types.h.

6.2.2.6.1.3 callbackParam `void* callbackParam`

Parameter used to pass user data when invoking the callback function.

Definition at line 433 of file FlexCAN_Ip_Types.h.

6.2.2.6.1.4 error_callback `void(* error_callback) (uint8 instance, Flexcan_Ip_EventType eventType, uint32 u32ErrStatus, const struct FlexCANState *driverState)`

Error IRQ handler callback function.

Definition at line 436 of file FlexCAN_Ip_Types.h.

6.2.2.6.1.5 errorCallbackParam `void* errorCallbackParam`

Parameter used to pass user data when invoking the error callback function.

Definition at line 442 of file FlexCAN_Ip_Types.h.

6.2.2.6.1.6 transferType `Flexcan_Ip_RxFifoTransferType transferType`

Type of RxFIFO transfer.

Definition at line 451 of file FlexCAN_Ip_Types.h.

6.2.2.6.1.7 bIsLegacyFifoEn `boolean bIsLegacyFifoEn`

This controls whether the Rx FIFO feature is enabled or not.

Definition at line 452 of file FlexCAN_Ip_Types.h.

6.2.2.6.1.8 u32MaxMbNum uint32 u32MaxMbNum

The maximum number of Message Buffers.

Definition at line 456 of file FlexCAN_Ip_Types.h.

6.2.2.6.1.9 isIntActive boolean isIntActive

Save status of enabling/disabling interrupts in runtime.

Definition at line 457 of file FlexCAN_Ip_Types.h.

6.2.2.7 struct Flexcan_Ip_ConfigType

FlexCAN configuration.

Definition at line 482 of file FlexCAN_Ip_Types.h.

Data Fields

Type	Name	Description
uint32	max_num_mb	The maximum number of Message Buffers
Flexcan_Ip_RxFifoIdFilterNumType	num_id_filters	The number of RX FIFO ID filters needed
boolean	is_rx_fifo_needed	1 if needed; 0 if not. This controls whether the Rx FIFO feature is enabled or not.
Flexcan_Ip_ModesType	flexcanMode	User configurable FlexCAN operation modes.
uint32	ctrlOptions	Use of different features support like ISO-FD, EDGE_FILTER, AUTO_BussOffRecovery, Protocol_Exception.
Flexcan_Ip_PayloadSizeType	payload	The payload size of the mailboxes specified in bytes for every partition block
boolean	fd_enable	Enable/Disable the Flexible Data Rate feature.
boolean	enhCbtEnable	The use of enhanced bit time segments format from ExCBT register, instead of CTRL1 or CBT register
boolean	bitRateSwitch	Enable of BitRate Switch support for FD frames
Flexcan_Ip_TimeSegmentType	bitrate	The bitrate used for standard frames or for the arbitration phase of FD frames.
Flexcan_Ip_TimeSegmentType	bitrate_cbt	The bitrate used for the data phase of FD frames.
Flexcan_Ip_RxFifoTransferType	transfer_type	Specifies if the Rx FIFO uses interrupts or DMA.
FlexCAN_Ip_CallbackType	Callback	The Callback for Rx or Tx DMA Events
FlexCAN_Ip_ErrorCallbackType	ErrorCallback	The ErrorCallback for Error Events

6.2.2.8 struct Flexcan_Ip_IdTableType

FlexCAN Rx FIFO ID filter table structure.

Structure Used to configure and add filters to Legacy RxFIFO

Definition at line 531 of file FlexCAN_Ip_Types.h.

Data Fields

Type	Name	Description
boolean	isRemoteFrame	Remote frame
boolean	isExtendedFrame	Extended frame
uint32	id	Rx FIFO ID filter element

6.2.2.9 struct Flexcan_Ip_DataInfoType

FlexCAN data info from user.

This structure defines the members used to configure the Frame Parameters used to be Send or Receive. Some parameters are available based on configuration of driver like: fd_enable, fd_padding, enable_brs.

Definition at line 545 of file FlexCAN_Ip_Types.h.

Data Fields

Type	Name	Description
Flexcan_Ip_MsgBuffIdType	msg_id_type	Type of message ID (standard or extended)
uint32	data_length	Length of Data in Bytes
boolean	is_remote	Specifies if the frame is standard or remote
boolean	is_polling	Specifies if the MB is in polling mode

6.2.3 Macro Definition Documentation

6.2.3.1 FlexCAN_Ip_Init

```
#define FlexCAN_Ip_Init(  
    Flexcan_Ip_u8Instance,  
    Flexcan_Ip_pState,  
    Flexcan_Ip_pData )
```

Initializes the FlexCAN peripheral.

This function will config FlexCAN module and will leave the module in freeze mode.

Parameters

in	<i>Flexcan_Ip_u8Instance</i>	A FlexCAN instance number
	<i>[in]</i>	

Definition at line 212 of file FlexCAN_Ip.h.

6.2.3.2 FlexCAN_Ip_ConfigRxFifo

```
#define FlexCAN_Ip_ConfigRxFifo(
    instance,
    id_format,
    id_filter_table )
```

FlexCAN Rx FIFO field configuration.

Each element in the ID filter table specifies an ID to be used as acceptance criteria for the FIFO as follows:

- for format A: In the standard frame format, bits 10 to 0 of the ID are used for frame identification. In the extended frame format, bits 28 to 0 are used.
- for format B: In the standard frame format, bits 10 to 0 of the ID are used for frame identification. In the extended frame format, only the 14 most significant bits (28 to 15) of the ID are compared to the 14 most significant bits (28 to 15) of the received ID.
- for format C: In both standard and extended frame formats, only the 8 most significant bits (7 to 0 for standard, 28 to 21 for extended) of the ID are compared to the 8 most significant bits (7 to 0 for standard, 28 to 21 for extended) of the received ID.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>id_format</i>	The format of the Rx FIFO ID Filter Table Elements
in	<i>id_filter_table</i>	The ID filter table elements which contain RTR bit, IDE bit, and Rx message ID

Returns

FLEXCAN_STATUS_SUCCESS if successful;
 FLEXCAN_STATUS_ERROR if fail to set;
 FLEXCAN_STATUS_TIMEOUT if fail to configure in configured timeout value.

Note

The number of elements in the ID filter table is defined by the following formula:

- for format A: the number of Rx FIFO ID filters
- for format B: twice the number of Rx FIFO ID filters
- for format C: four times the number of Rx FIFO ID filters The user must provide the exact number of elements in order to avoid any misconfiguration. This function should be called from StopMode or FreezeMode.

Definition at line 304 of file FlexCAN_Ip.h.

6.2.3.3 FlexCAN_Ip_SetRxIndividualMask

```
#define FlexCAN_Ip_SetRxIndividualMask(  
    instance,  
    mb_idx,  
    mask )
```

Sets the FlexCAN Rx individual mask.

This function will set directly the mask value as is provided.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	Index of the message buffer
in	<i>mask</i>	Mask value

Note

This function should be called from StopMode or FreezeMode.

Returns

FLEXCAN_STATUS_SUCCESS if successful;
FLEXCAN_STATUS_BUFF_OUT_OF_RANGE if the index of a message buffer is invalid.

Definition at line 409 of file FlexCAN_Ip.h.

6.2.3.4 FlexCAN_Ip_SetRxMbGlobalMask

```
#define FlexCAN_Ip_SetRxMbGlobalMask(  
    instance,  
    mask )
```

Sets the FlexCAN Rx MB global mask.

This function will set directly the mask value as is provided.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mask</i>	Mask value

Note

This function should be called from StopMode or FreezeMode.

Returns

FLEXCAN_STATUS_SUCCESS if successful;
FLEXCAN_STATUS_ERROR if fail to set;
FLEXCAN_STATUS_TIMEOUT if fail to configure in configured timeout value.

Definition at line 423 of file FlexCAN_Ip.h.

6.2.3.5 FlexCAN_Ip_SetRxFifoGlobalMask

```
#define FlexCAN_Ip_SetRxFifoGlobalMask(  
    instance,  
    mask )
```

Sets the FlexCAN Rx FIFO global mask. This mask is applied to all filters ID regardless the ID Filter format.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mask</i>	Mask Value.

Note

This function should be called from StopMode or FreezeMode.

Returns

FLEXCAN_STATUS_SUCCESS if successful;
FLEXCAN_STATUS_ERROR if fail to set;
FLEXCAN_STATUS_TIMEOUT if fail to configure in configured timeout value.

Definition at line 437 of file FlexCAN_Ip.h.

6.2.3.6 FlexCAN_Ip_MainFunctionBusOff

```
#define FlexCAN_Ip_MainFunctionBusOff(  
    instance )
```

Check a bus-off event.

This function will check bus activity of FlexCAN module and if a bus off event is detected will suspend the future bus activities by setting module in stop mode.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

FLEXCAN_STATUS_SUCCESS if successful busoff and set on stop;
 FLEXCAN_STATUS_ERROR if no busoff event detected;
 FLEXCAN_STATUS_TIMEOUT if fail to configure in the configured timeout value.

Definition at line 469 of file FlexCAN_Ip.h.

6.2.3.7 FlexCAN_Ip_EnterFreezeMode

```
#define FlexCAN_Ip_EnterFreezeMode(  
    instance )
```

Enter FlexCAN Module in Freeze Mode.

This function will suspend bus activity of FlexCAN module and set it to Freeze Mode to allow module configuration.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

FLEXCAN_STATUS_SUCCESS if successful;
 FLEXCAN_STATUS_TIMEOUT if fail to configure in the configured timeout value.

Definition at line 481 of file FlexCAN_Ip.h.

6.2.3.8 FlexCAN_Ip_ExitFreezeMode

```
#define FlexCAN_Ip_ExitFreezeMode(  
    instance )
```

Exit FlexCAN Module from Freeze Mode.

This function will allow FlexCAN module to participate to the BUS activity and restore normal operation of the driver.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Note

This function should be called from FreezeMode.

Returns

FLEXCAN_STATUS_SUCCESS if successful;
FLEXCAN_STATUS_TIMEOUT if fail to configure in the configured timeout value.

Definition at line 494 of file FlexCAN_Ip.h.

6.2.3.9 FlexCAN_Ip_Deinit

```
#define FlexCAN_Ip_Deinit(  
    instance )
```

DeInitialize the FlexCAN instance driver.

This function will make future operations of FlexCAN instance impossible and will restore its state to default value as before initialization.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

FLEXCAN_STATUS_SUCCESS if successful;
FLEXCAN_STATUS_TIMEOUT if fail to configure in configured timeout value.

Definition at line 506 of file FlexCAN_Ip.h.

6.2.3.10 FlexCAN_Ip_GetStartMode

```
#define FlexCAN_Ip_GetStartMode(  
    instance )
```

Get Start Mode Status.

Return if the instance is in Start Mode

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

True instance is in START Mode False instance is not in START Mode

Definition at line 517 of file FlexCAN_Ip.h.

6.2.3.11 FlexCAN_Ip_SetStartMode

```
#define FlexCAN_Ip_SetStartMode(  
    instance )
```

Set the FlexCAN instance in START mode.

Set the FlexCAN instance in START mode, allowing to participate to bus transfers.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

FLEXCAN_STATUS_SUCCESS if successful;
FLEXCAN_STATUS_TIMEOUT if fail to configure in configured timeout value.

Definition at line 527 of file FlexCAN_Ip.h.

6.2.3.12 FlexCAN_Ip_SetStopMode

```
#define FlexCAN_Ip_SetStopMode(  
    instance )
```

Set the FlexCAN instance in STOP mode.

Set the FlexCAN instance in START mode, this will prevent instance to participate to bus transactions and disable module clocks.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

- FLEXCAN_STATUS_SUCCESS if successful;
- FLEXCAN_STATUS_TIMEOUT if fail to configure in configured timeout value.

Definition at line 539 of file FlexCAN_Ip.h.

6.2.3.13 FlexCAN_Ip_SetListenOnlyMode

```
#define FlexCAN_Ip_SetListenOnlyMode(  
    instance,  
    listenonlystate )
```

Enable\Disable listen Only Mode.

This function will Enable or Disable listen Only Mode.

Note

This function should be called from StopMode or FreezeMode.

Parameters

in	<i>u8Instance</i>	A FlexCAN instance number
in	<i>listenonlystate</i>	Enable\Disable interrupt selected

Returns

FLEXCAN_STATUS_SUCCESS if successful;
FLEXCAN_STATUS_ERROR if fail to set;

Definition at line 552 of file FlexCAN_Ip.h.

6.2.3.14 FlexCAN_Ip_SetRxMaskType

```
#define FlexCAN_Ip_SetRxMaskType(  
    instance,  
    type )
```

Set RX masking type.

This function will set RX masking type as RX global mask or RX individual mask

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>type</i>	FlexCAN Rx mask type

Note

This function should be called from StopMode or FreezeMode.

Returns

FLEXCAN_STATUS_SUCCESS if successful
FLEXCAN_STATUS_ERROR if controller is not in freeze mode

Definition at line 623 of file FlexCAN_Ip.h.

6.2.3.15 FlexCAN_Ip_SetRxMb14Mask

```
#define FlexCAN_Ip_SetRxMb14Mask(  
    instance,  
    mask )
```

Set Rx14Mask filter for message buffer 14.

This function will set directly the mask value as is provided.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mask</i>	The value applied for mask

Note

This function should be called from StopMode or FreezeMode.

Returns

FLEXCAN_STATUS_SUCCESS if successful

FLEXCAN_STATUS_ERROR if controller is not in freeze mode

Definition at line 636 of file FlexCAN_Ip.h.

6.2.3.16 FlexCAN_Ip_SetRxMb15Mask

```
#define FlexCAN_Ip_SetRxMb15Mask(  
    instance,  
    mask )
```

Set Rx15Mask filter for message buffer 15.

This function will set directly the mask value as is provided.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mask</i>	The value applied for mask

Note

This function should be called from StopMode or FreezeMode.

Returns

FLEXCAN_STATUS_SUCCESS if successful

FLEXCAN_STATUS_ERROR if controller is not in freeze mode

Definition at line 649 of file FlexCAN_Ip.h.

6.2.3.17 FlexCAN_Ip_SetBtrRate

```
#define FlexCAN_Ip_SetBtrRate(
    instance,
    bitrate,
    enhExt )
```

Sets the FlexCAN bit rate for standard frames or the arbitration phase of FD frames.

This function request the FlexCAN module to be in Stop Mode or in Freeze Mode.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>bitrate</i>	A pointer to the FlexCAN bit rate settings.
in	<i>enhExt</i>	The time segments used are set in Enhanced Time Seg Registers

Returns

FLEXCAN_STATUS_SUCCESS if successful;
 FLEXCAN_STATUS_ERROR if fail to set;
 FLEXCAN_STATUS_TIMEOUT if fail to configure in configured timeout value.

Definition at line 674 of file FlexCAN_Ip.h.

6.2.3.18 FlexCAN_Ip_EnableInterrupts

```
#define FlexCAN_Ip_EnableInterrupts(
    u8Instance )
```

Enable all interrupts configured.

Enable all interrupts configured.

Parameters

in	<i>u8Instance</i>	A FlexCAN instance number
----	-------------------	---------------------------

Returns

FLEXCAN_STATUS_SUCCESS if successful
 FLEXCAN_STATUS_ERROR if fail to set

Definition at line 791 of file FlexCAN_Ip.h.

6.2.3.19 FlexCAN_Ip_DisableInterrupts

```
#define FlexCAN_Ip_DisableInterrupts(  
    u8Instance )
```

Disable all interrupts.

Disable all interrupts.

Parameters

in	<i>u8Instance</i>	A FlexCAN instance number
----	-------------------	---------------------------

Returns

FLEXCAN_STATUS_SUCCESS if successful
FLEXCAN_STATUS_ERROR if fail to set

Definition at line 801 of file FlexCAN_Ip.h.

6.2.3.20 FlexCAN_Ip_SetErrorInt

```
#define FlexCAN_Ip_SetErrorInt(  
    u8Instance,  
    type,  
    enable )
```

Enable\Disable Error or BusOff Interrupt.

This function will set Error or BusOff interrupt, Error Fast is available only if FD CAN support is active. @Note This function should be called from StopMode or FreezeMode. When an error interrupt is set and error callback function is installed, The error callback function will be invoked with a respective event occurred and status of ESR1 register: In the callback, if another event(got from ESR1 register) recognized(Error, Error Fast, Bus Off, Tx/Rx warning) Then it should be cleared by FlexCAN_Ip_ClearErrorStatus with a respective mask to avoid duplication.

Parameters

in	<i>u8Instance</i>	A FlexCAN instance number
in	<i>type</i>	Interrupt Type
in	<i>enable</i>	Enable\Disable interrupt selected

Returns

FLEXCAN_STATUS_SUCCESS if successful;
 FLEXCAN_STATUS_ERROR if fail to set;
 FLEXCAN_STATUS_TIMEOUT if fail to configure in configured timeout value.

Definition at line 821 of file FlexCAN_Ip.h.

6.2.3.21 FlexCAN_Ip_GetStopMode

```
#define FlexCAN_Ip_GetStopMode(  
    instance )
```

Get Stop Mode Status.

Return if the instance is in Stop Mode

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

True instance is in STOP Mode False instance is not in STOP Mode

Definition at line 856 of file FlexCAN_Ip.h.

6.2.3.22 FLEXCAN_IP_MCR_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_MCR_DEFAULT_VALUE_U32
```

Default value for the MCR register.

Definition at line 98 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.23 FLEXCAN_IP_CTRL1_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_CTRL1_DEFAULT_VALUE_U32
```

Default value for the CTRL1 register.

Definition at line 103 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.24 FLEXCAN_IP_TIMER_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_TIMER_DEFAULT_VALUE_U32
```

Default value for the TIMER register.

Definition at line 108 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.25 FLEXCAN_IP_ECR_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ECR_DEFAULT_VALUE_U32
```

Default value for the ECR register.

Definition at line 113 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.26 FLEXCAN_IP_ESR1_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ESR1_DEFAULT_VALUE_U32
```

Default value for the ESR1 register.

Definition at line 118 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.27 FLEXCAN_IP_IMASK_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_IMASK_DEFAULT_VALUE_U32
```

Default value for the IMASKx register.

Definition at line 123 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.28 FLEXCAN_IP_IFLAG_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_IFLAG_DEFAULT_VALUE_U32
```

Default value for the IFLAG4 register.

Definition at line 128 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.29 FLEXCAN_IP_CTRL2_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_CTRL2_DEFAULT_VALUE_U32
```

Default value for the CTRL2 register.

Definition at line 133 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.30 FLEXCAN_IP_CBT_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_CBT_DEFAULT_VALUE_U32
```

Default value for the CTRL2 register.

Definition at line 138 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.31 FLEXCAN_IP_MECR_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_MECR_DEFAULT_VALUE_U32
```

Default value for the MECR register.

Definition at line 143 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.32 FLEXCAN_IP_ERRIAR_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ERRIAR_DEFAULT_VALUE_U32
```

Default value for the ERRIAR register.

Definition at line 148 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.33 FLEXCAN_IP_ERRIDPR_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ERRIDPR_DEFAULT_VALUE_U32
```

Default value for the ERRIDPR register.

Definition at line 153 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.34 FLEXCAN_IP_ERRIPPR_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ERRIPPR_DEFAULT_VALUE_U32
```

Default value for the ERRIPPR register.

Definition at line 158 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.35 FLEXCAN_IP_ERRSR_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ERRSR_DEFAULT_VALUE_U32
```

Default value for the ERRSR register.

Definition at line 163 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.36 FLEXCAN_IP_FDCTRL_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_FDCTRL_DEFAULT_VALUE_U32
```

Default value for the FDCTRL register.

Definition at line 168 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.37 FLEXCAN_IP_FDCBT_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_FDCBT_DEFAULT_VALUE_U32
```

Default value for the FDCBT register.

Definition at line 173 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.38 FLEXCAN_IP_ERFCR_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ERFCR_DEFAULT_VALUE_U32
```

Default value for the ERFCR register.

Definition at line 178 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.39 FLEXCAN_IP_ERFIER_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ERFIER_DEFAULT_VALUE_U32
```

Default value for the ERFIER register.

Definition at line 183 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.40 FLEXCAN_IP_ERFSR_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ERFSR_DEFAULT_VALUE_U32
```

Default value for the ERFSR register.

Definition at line 188 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.41 FLEXCAN_IP_EPRS_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_EPRS_DEFAULT_VALUE_U32
```

Default value for the EPRS register.

Definition at line 193 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.42 FLEXCAN_IP_ENCBT_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ENCBT_DEFAULT_VALUE_U32
```

Default value for the ENCBT register.

Definition at line 198 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.43 FLEXCAN_IP_EDCBT_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_EDCBT_DEFAULT_VALUE_U32
```

Default value for the EDCBT register.

Definition at line 203 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.44 FLEXCAN_IP_ETDC_DEFAULT_VALUE_U32

```
#define FLEXCAN_IP_ETDC_DEFAULT_VALUE_U32
```

Default value for the ETDC register.

Definition at line 208 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.45 FLEXCAN_0_BASE

```
#define FLEXCAN_0_BASE
```

Peripheral FLEXCAN_0 base address

Definition at line 238 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.46 FLEXCAN_1_BASE

```
#define FLEXCAN_1_BASE
```

Peripheral FLEXCAN_1 base address

Definition at line 240 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.47 FLEXCAN_2_BASE

```
#define FLEXCAN_2_BASE
```

Peripheral FLEXCAN_2 base address

Definition at line 242 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.48 FLEXCAN_3_BASE

```
#define FLEXCAN_3_BASE
```

Peripheral FLEXCAN_3 base address

Definition at line 244 of file FlexCAN_Ip_DeviceReg.h.

6.2.3.49 FLEXCAN_IP_FEATURE_RAM_OFFSET

```
#define FLEXCAN_IP_FEATURE_RAM_OFFSET
```

FlexCAN Embedded RAM address offset.

Definition at line 128 of file FlexCAN_Ip_HwAccess.h.

6.2.3.50 FLEXCAN_IP_ALL_INT

```
#define FLEXCAN_IP_ALL_INT
```

Masks for wakeup, error, bus off

Definition at line 135 of file FlexCAN_Ip_HwAccess.h.

6.2.3.51 FLEXCAN_IP_BUS_OFF_INT

```
#define FLEXCAN_IP_BUS_OFF_INT
```

Masks for busOff, Tx/Rx Warning

Definition at line 138 of file FlexCAN_Ip_HwAccess.h.

6.2.3.52 FLEXCAN_IP_ERROR_INT

```
#define FLEXCAN_IP_ERROR_INT
```

Masks for ErrorOvr, ErrorFast, Error

Definition at line 139 of file FlexCAN_Ip_HwAccess.h.

6.2.3.53 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATAB_RTR_SHIFT

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATAB_RTR_SHIFT
```

FlexCAN RX FIFO ID filter

Definition at line 186 of file FlexCAN_Ip_HwAccess.h.

6.2.3.54 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATAB_IDE_SHIFT

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATAB_IDE_SHIFT
```

format A&B RTR mask. FlexCAN RX FIFO ID filter

Definition at line 188 of file FlexCAN_Ip_HwAccess.h.

6.2.3.55 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_RTR_SHIFT

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_RTR_SHIFT
```

format A&B IDE mask. FlexCAN RX FIFO ID filter

Definition at line 190 of file FlexCAN_Ip_HwAccess.h.

6.2.3.56 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_IDE_SHIFT

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_IDE_SHIFT
```

format B RTR-2 mask. FlexCAN RX FIFO ID filter

Definition at line 192 of file FlexCAN_Ip_HwAccess.h.

6.2.3.57 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_EXT_MASK

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_EXT_MASK
```

format B IDE-2 mask. FlexCAN RX FIFO ID filter

Definition at line 194 of file FlexCAN_Ip_HwAccess.h.

6.2.3.58 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_EXT_SHIFT

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_EXT_SHIFT
```

format A extended mask. FlexCAN RX FIFO ID filter

Definition at line 196 of file FlexCAN_Ip_HwAccess.h.

6.2.3.59 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_STD_MASK

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_STD_MASK
```

format A extended shift. FlexCAN RX FIFO ID filter

Definition at line 198 of file FlexCAN_Ip_HwAccess.h.

6.2.3.60 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_STD_SHIFT

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATA_STD_SHIFT
```

format A standard mask. FlexCAN RX FIFO ID filter

Definition at line 200 of file FlexCAN_Ip_HwAccess.h.

6.2.3.61 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_MASK

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_MASK
```

format A standard shift. FlexCAN RX FIFO ID filter

Definition at line 202 of file FlexCAN_Ip_HwAccess.h.

6.2.3.62 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_SHIFT1

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_SHIFT1
```

format B extended mask1. FlexCAN RX FIFO ID filter

Definition at line 204 of file FlexCAN_Ip_HwAccess.h.

6.2.3.63 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_SHIFT2

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_SHIFT2
```

format B extended shift 1. FlexCAN RX FIFO ID filter

Definition at line 206 of file FlexCAN_Ip_HwAccess.h.

6.2.3.64 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_STD_MASK

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_STD_MASK
```

format B extended shift 2. FlexCAN RX FIFO ID filter

Definition at line 208 of file FlexCAN_Ip_HwAccess.h.

6.2.3.65 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_STD_SHIFT1

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_STD_SHIFT1
```

format B standard mask. FlexCAN RX FIFO ID filter

Definition at line 210 of file FlexCAN_Ip_HwAccess.h.

6.2.3.66 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_STD_SHIFT2

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_STD_SHIFT2
```

format B standard shift1. FlexCAN RX FIFO ID filter

Definition at line 212 of file FlexCAN_Ip_HwAccess.h.

6.2.3.67 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_CMP_SHIFT

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATB_EXT_CMP_SHIFT
```

format B standard shift2. FlexCAN RX FIFO ID filter

Definition at line 214 of file FlexCAN_Ip_HwAccess.h.

6.2.3.68 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_EXT_MASK

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_EXT_MASK
```

format B extended compare shift. FlexCAN RX FIFO ID filter

Definition at line 216 of file FlexCAN_Ip_HwAccess.h.

6.2.3.69 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_STD_MASK

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_STD_MASK
```

format C mask. FlexCAN RX FIFO ID filter

Definition at line 218 of file FlexCAN_Ip_HwAccess.h.

6.2.3.70 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT1

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT1
```

format C mask. FlexCAN RX FIFO ID filter

Definition at line 220 of file FlexCAN_Ip_HwAccess.h.

6.2.3.71 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT2

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT2
```

format C shift1. FlexCAN RX FIFO ID filter

Definition at line 222 of file FlexCAN_Ip_HwAccess.h.

6.2.3.72 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT3

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT3
```

format C shift2. FlexCAN RX FIFO ID filter

Definition at line 224 of file FlexCAN_Ip_HwAccess.h.

6.2.3.73 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT4

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_SHIFT4
```

format C shift3. FlexCAN RX FIFO ID filter

Definition at line 226 of file FlexCAN_Ip_HwAccess.h.

6.2.3.74 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_EXT_CMP_SHIFT

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_EXT_CMP_SHIFT
```

format C shift4. FlexCAN RX FIFO ID filter

Definition at line 228 of file FlexCAN_Ip_HwAccess.h.

6.2.3.75 FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_STD_CMP_SHIFT

```
#define FLEXCAN_IP_RX_FIFO_ID_FILTER_FORMATC_STD_CMP_SHIFT
```

format C extended compare shift. FlexCAN RX FIFO ID filter

Definition at line 230 of file FlexCAN_Ip_HwAccess.h.

6.2.3.76 FLEXCAN_IP_REM_STORE_U32

```
#define FLEXCAN_IP_REM_STORE_U32
```

Remote Request Store enable.

Definition at line 87 of file FlexCAN_Ip_Types.h.

6.2.3.77 FLEXCAN_IP_THREE_SAMPLES_U32

```
#define FLEXCAN_IP_THREE_SAMPLES_U32
```

Three samples to determine the value of received bit.

Definition at line 89 of file FlexCAN_Ip_Types.h.

6.2.3.78 FLEXCAN_IP_BUSOFF_RECOVERY_U32

```
#define FLEXCAN_IP_BUSOFF_RECOVERY_U32
```

Define how controller recover from bus off state.

Definition at line 91 of file FlexCAN_Ip_Types.h.

6.2.3.79 FLEXCAN_IP_PROTOCOL_EXCEPTION_U32

```
#define FLEXCAN_IP_PROTOCOL_EXCEPTION_U32
```

Protocol Exception.

Definition at line 93 of file FlexCAN_Ip_Types.h.

6.2.3.80 FLEXCAN_IP_EDGE_FILTER_U32

```
#define FLEXCAN_IP_EDGE_FILTER_U32
```

Edge Filter.

Definition at line 95 of file FlexCAN_Ip_Types.h.

6.2.3.81 FLEXCAN_IP_ISO_U32

```
#define FLEXCAN_IP_ISO_U32
```

CAN FD protocol according to ISO specification (ISO 11898-1)

Definition at line 97 of file FlexCAN_Ip_Types.h.

6.2.3.82 FLEXCAN_IP_EACEN_U32

```
#define FLEXCAN_IP_EACEN_U32
```

Entire Frame Arbitration Field Comparison.

Definition at line 99 of file FlexCAN_Ip_Types.h.

6.2.4 Types Reference**6.2.4.1 FlexCAN_Ip_CallbackType**

```
typedef void(* FlexCAN_Ip_CallbackType) (uint8 instance, Flexcan_Ip_EventType eventType, uint32 buffIdx,
const Flexcan_Ip_StateType *flexcanState)
```

FlexCAN Driver callback function type.

Definition at line 463 of file FlexCAN_Ip_Types.h.

6.2.4.2 FlexCAN_Ip_ErrorCallbackType

```
typedef void(* FlexCAN_Ip_ErrorCallbackType) (uint8 instance, Flexcan_Ip_EventType eventType, uint32
u32ErrStatus, const Flexcan_Ip_StateType *flexcanState)
```

FlexCAN Driver error callback function type.

Definition at line 472 of file FlexCAN_Ip_Types.h.

6.2.5 Enum Reference

6.2.5.1 anonymous enum

anonymous enum

FlexCAN message buffer CODE for Rx buffers.

Enumerator

FLEXCAN_RX_INACTIVE	MB is not active.
FLEXCAN_RX_FULL	MB is full.
FLEXCAN_RX_EMPTY	MB is active and empty.
FLEXCAN_RX_OVERRUN	MB is overwritten into a full buffer.
FLEXCAN_RX_BUSY	FlexCAN is updating the contents of the MB.
FLEXCAN_RX_RANSWER	The CPU must not access the MB. A frame was configured to recognize a Remote Request Frame
FLEXCAN_RX_NOT_USED	and transmit a Response Frame in return. Not used

Definition at line 274 of file FlexCAN_Ip_HwAccess.h.

6.2.5.2 anonymous enum

anonymous enum

FlexCAN message buffer CODE FOR Tx buffers.

Enumerator

FLEXCAN_TX_INACTIVE	MB is not active.
FLEXCAN_TX_ABORT	MB is aborted.
FLEXCAN_TX_DATA	MB is a TX Data Frame(MB RTR must be 0).
FLEXCAN_TX_REMOTE	MB is a TX Remote Request Frame (MB RTR must be 1).
FLEXCAN_TX_TANSWER	MB is a TX Response Request Frame from.
FLEXCAN_TX_NOT_USED	an incoming Remote Request Frame. Not used

Definition at line 288 of file FlexCAN_Ip_HwAccess.h.

6.2.5.3 flexcan_int_type_t

```
enum flexcan_int_type_t
```

FlexCAN error interrupt types.

Enumerator

FLEXCAN_INT_RX_WARNING	RX warning interrupt
FLEXCAN_INT_TX_WARNING	TX warning interrupt
FLEXCAN_INT_ERR	Error interrupt
FLEXCAN_INT_ERR_FAST	Error Fast interrupt
FLEXCAN_INT_BUSOFF	Bus off interrupt

Definition at line 301 of file FlexCAN_Ip_HwAccess.h.

6.2.5.4 Flexcan_Ip_RxFifoTransferType

```
enum Flexcan_Ip_RxFifoTransferType
```

The type of the RxFIFO transfer (interrupts/DMA).

Enumerator

FLEXCAN_RXFIFO_USING_INTERRUPTS	Use interrupts for RxFIFO.
FLEXCAN_RXFIFO_USING_POLLING	Use polling method for RxFIFO

Definition at line 107 of file FlexCAN_Ip_Types.h.

6.2.5.5 Flexcan_Ip_RxFifoIdFilterNumType

```
enum Flexcan_Ip_RxFifoIdFilterNumType
```

FlexCAN Rx FIFO filters number.

Enumerator

FLEXCAN_RX_FIFO_ID_FILTERS_8	8 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_16	16 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_24	24 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_32	32 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_40	40 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_48	48 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_56	56 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_64	64 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_72	72 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_80	80 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_88	88 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_96	96 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_104	104 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_112	112 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_120	120 Rx FIFO Filters.
FLEXCAN_RX_FIFO_ID_FILTERS_128	128 Rx FIFO Filters.

Definition at line 119 of file FlexCAN_Ip_Types.h.

6.2.5.6 Flexcan_Ip_RxMaskType

```
enum Flexcan_Ip_RxMaskType
```

FlexCAN Rx mask type.

Enumerator

FLEXCAN_RX_MASK_GLOBAL	Rx global mask
FLEXCAN_RX_MASK_INDIVIDUAL	Rx individual mask

Definition at line 142 of file FlexCAN_Ip_Types.h.

6.2.5.7 Flexcan_Ip_FdPayloadSizeType

```
enum Flexcan_Ip_FdPayloadSizeType
```

FlexCAN payload sizes.

Enumerator

FLEXCAN_PAYLOAD_SIZE_8	FlexCAN message buffer payload size in bytes
FLEXCAN_PAYLOAD_SIZE_16	FlexCAN message buffer payload size in bytes
FLEXCAN_PAYLOAD_SIZE_32	FlexCAN message buffer payload size in bytes
FLEXCAN_PAYLOAD_SIZE_64	FlexCAN message buffer payload size in bytes

Definition at line 152 of file FlexCAN_Ip_Types.h.

6.2.5.8 Flexcan_Ip_ModesType

```
enum Flexcan_Ip_ModesType
```

FlexCAN operation modes.

Enumerator

FLEXCAN_NORMAL_MODE	Normal mode or user mode
FLEXCAN_LISTEN_ONLY_MODE	Listen-only mode
FLEXCAN_LOOPBACK_MODE	Loop-back mode

Definition at line 164 of file FlexCAN_Ip_Types.h.

6.2.5.9 Flexcan_Ip_MbStateType

```
enum Flexcan_Ip_MbStateType
```

The state of a given MB (idle/Rx busy/Tx busy).

Enumerator

FLEXCAN_MB_IDLE	The MB is not used by any transfer.
FLEXCAN_MB_RX_BUSY	The MB is used for a reception.
FLEXCAN_MB_TX_BUSY	The MB is used for a transmission.

Definition at line 257 of file FlexCAN_Ip_Types.h.

6.2.5.10 Flexcan_Ip_EventType

enum `Flexcan_Ip_EventType`

The type of the event which occurred when the callback was invoked.

Enumerator

FLEXCAN_EVENT_RX_COMPLETE	A frame was received in the configured Rx MB.
FLEXCAN_EVENT_RXFIFO_COMPLETE	A frame was received in the Rx FIFO.
FLEXCAN_EVENT_RXFIFO_WARNING	Rx FIFO is almost full (5 frames).
FLEXCAN_EVENT_RXFIFO_OVERFLOW	Rx FIFO is full (incoming message was lost).
FLEXCAN_EVENT_TX_COMPLETE	A frame was sent from the configured Tx MB.
FLEXCAN_EVENT_ERROR	Errors detected in CAN frames of any format (interrupt mode only)
FLEXCAN_EVENT_BUSOFF	FlexCAN module entered Bus Off state
FLEXCAN_EVENT_RX_WARNING	The Rx error counter transitioned from less than 96 to greater than or equal to 96 (interrupt mode only)
FLEXCAN_EVENT_TX_WARNING	The Tx error counter transitioned from less than 96 to greater than or equal to 96 (interrupt mode only)

Definition at line 270 of file FlexCAN_Ip_Types.h.

6.2.5.11 Flexcan_Ip_ErrorIntType

enum `Flexcan_Ip_ErrorIntType`

FlexCAN error interrupt types.

Enumerator

FLEXCAN_IP_INT_RX_WARNING	RX warning interrupt
FLEXCAN_IP_INT_TX_WARNING	TX warning interrupt
FLEXCAN_IP_INT_ERR	Error interrupt
FLEXCAN_IP_INT_ERR_FAST	Error Fast interrupt
FLEXCAN_IP_INT_BUSOFF	Bus off interrupt

Definition at line 304 of file FlexCAN_Ip_Types.h.

6.2.5.12 Flexcan_Ip_MsgBuffIdType

enum `Flexcan_Ip_MsgBuffIdType`

FlexCAN Message Buffer ID type.

FlexCAN Id Type, Standard or Extended

Enumerator

FLEXCAN_MSG_ID_STD	Standard ID
FLEXCAN_MSG_ID_EXT	Extended ID

Definition at line 317 of file FlexCAN_Ip_Types.h.

6.2.5.13 Flexcan_Ip_RxFifoIdElementFormatType

enum `Flexcan_Ip_RxFifoIdElementFormatType`

ID formats for Rx FIFO.

Legacy RxFIFO Id Format Types

Enumerator

FLEXCAN_RX_FIFO_ID_FORMAT_A	One full ID (standard and extended) per ID Filter Table element.
FLEXCAN_RX_FIFO_ID_FORMAT_B	Two full standard IDs or two partial 14-bit (standard and extended) IDs per ID Filter Table element.
FLEXCAN_RX_FIFO_ID_FORMAT_C	Four partial 8-bit Standard IDs per ID Filter Table element.
FLEXCAN_RX_FIFO_ID_FORMAT_D	All frames rejected.

Definition at line 327 of file FlexCAN_Ip_Types.h.

6.2.5.14 Flexcan_Ip_StatusType

enum `Flexcan_Ip_StatusType`

The status used and reported by FlexCAN Ip driver.

The FlexCAN specific error codes

Enumerator

FLEXCAN_STATUS_SUCCESS	Successfull Operation Completed
------------------------	---------------------------------

Enumerator

FLEXCAN_STATUS_ERROR	Error Operation Completed
FLEXCAN_STATUS_BUSY	Busy Operation Completed
FLEXCAN_STATUS_TIMEOUT	TimeOut Operation Completed
FLEXCAN_STATUS_BUFF_OUT_OF_RANGE	The specified MB index is out of the configurable range
FLEXCAN_STATUS_NO_TRANSFER_IN_PROGRESS	There is no transmission or reception in progress

Definition at line 340 of file FlexCAN_Ip_Types.h.

6.2.6 Function Reference

6.2.6.1 FlexCAN_Ip_Send()

```
Flexcan_Ip_StatusType FlexCAN_Ip_Send (
    uint8 instance,
    uint8 mb_idx,
    const Flexcan_Ip_DataInfoType * tx_info,
    uint32 msg_id,
    const uint8 * mb_data )
```

Sends a CAN frame using the specified message buffer.

This function configure parameters form [Flexcan_Ip_DataInfoType](#), ID and sends data as CAN frame using a message buffer.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	Index of the message buffer
in	<i>tx_info</i>	Data info
in	<i>msg_id</i>	ID of the message to transmit
in	<i>mb_data</i>	Data Bytes of the FlexCAN message.

Returns

FLEXCAN_STATUS_BUFF_OUT_OF_RANGE if the index of a message buffer is invalid;
 FLEXCAN_STATUS_BUSY if the message buffer is used for other operation;
 FLEXCAN_STATUS_SUCCESS if successfull.

6.2.6.2 FlexCAN_Ip_SendBlocking()

```
Flexcan_Ip_StatusType FlexCAN_Ip_SendBlocking (
    uint8 instance,
    uint8 mb_idx,
    const Flexcan_Ip_DataInfoType * tx_info,
    uint32 msg_id,
    const uint8 * mb_data,
    uint32 timeout_ms )
```

Sends a CAN frame using the specified message buffer, in a blocking manner.

This function sends a CAN frame using a configured message buffer. The function blocks until either the frame was sent, or the specified timeout expired.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	Index of the message buffer
in	<i>tx_info</i>	Data info
in	<i>msg_id</i>	ID of the message to transmit
in	<i>mb_data</i>	Data bytes of the FlexCAN message
in	<i>timeout_ms</i>	A timeout for the transfer in milliseconds.

Returns

- FLEXCAN_STATUS_SUCCESS if successfull;
- FLEXCAN_STATUS_TIMEOUT if the timeout is reached;
- FLEXCAN_STATUS_BUFF_OUT_OF_RANGE if the index of a message buffer is invalid;
- FLEXCAN_STATUS_BUSY if the message buffer is used for other operation.

6.2.6.3 FlexCAN_Ip_Receive()

```
Flexcan_Ip_StatusType FlexCAN_Ip_Receive (
    uint8 instance,
    uint8 mb_idx,
    Flexcan_Ip_MsgBuffType * data,
    boolean isPolling )
```

Receives a CAN frame using the specified message buffer.

This function receives a CAN frame using a configured message buffer. The function returns immediately.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	Index of the message buffer
out	<i>data</i>	The FlexCAN receive message buffer data.
in	<i>isPolling</i>	If the message will be send using pooling(true) or interrupt(false).

Returns

FLEXCAN_STATUS_SUCCESS if successfull operation;
FLEXCAN_STATUS_BUFF_OUT_OF_RANGE if the index of a message buffer is invalid;
FLEXCAN_STATUS_BUSY if the message buffer is used for other operation.

6.2.6.4 FlexCAN_Ip_RxFifo()

```
Flexcan_Ip_StatusType FlexCAN_Ip_RxFifo (
    uint8 instance,
    Flexcan_Ip_MsgBuffType * data )
```

Receives a CAN frame using the message FIFO.

This function receives a CAN frame using the Rx FIFO. The function returns immediately.

Parameters

in	<i>instance</i>	A FlexCAN instance number
out	<i>data</i>	The FlexCAN receive message buffer data.

Returns

FLEXCAN_STATUS_SUCCESS if successfull operation;
FLEXCAN_STATUS_ERROR if FiFO feature wasn't enable;
FLEXCAN_STATUS_BUSY if the message buffer is used by other operation.

6.2.6.5 FlexCAN_Ip_RxFifoBlocking()

```
Flexcan_Ip_StatusType FlexCAN_Ip_RxFifoBlocking (
    uint8 instance,
    Flexcan_Ip_MsgBuffType * data,
    uint32 timeout )
```

Receives a CAN frame using the message FIFO, in a blocking manner.

This function receives a CAN frame using the Rx FIFO or Enhanced Rx FIFO (if available and enabled). If using Enhanced Rx FIFO, the size of the data array will be considered the same as the configured FIFO watermark. The function blocks until either a frame was received, or the specified timeout expired. FlexCAN_Ip_RxFifoBlocking/↔ FlexCAN_Ip_RxFifo must not be called in callback invocation while FlexCAN_Ip_RxFifoBlocking is running to avoid unexpected behaviour.

Parameters

<i>instance</i>	A FlexCAN instance number
<i>data</i>	The FlexCAN receive message buffer data.
<i>timeout</i>	A timeout for the transfer in milliseconds.

Returns

FLEXCAN_STATUS_SUCCESS if successful; FLEXCAN_STATUS_BUSY if a resource is busy; FLEXCAN_STATUS_TIMEOUT if the timeout is reached; FLEXCAN_STATUS_ERROR if other error occurred

6.2.6.6 FlexCAN_Ip_ConfigRxMb()

```
Flexcan_Ip_StatusType FlexCAN_Ip_ConfigRxMb (
    uint8 instance,
    uint8 mb_idx,
    const Flexcan_Ip_DataInfoType * rx_info,
    uint32 msg_id )
```

FlexCAN receive message buffer field configuration.

This function will config receive parameters form [Flexcan_Ip_DataInfoType](#) and the message Id, and can overwrite another MB status.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	Index of the message buffer
in	<i>rx_info</i>	Data info
in	<i>msg_id</i>	ID of the message to transmit

Returns

FLEXCAN_STATUS_SUCCESS if successful;
FLEXCAN_STATUS_BUFF_OUT_OF_RANGE if the index of a message buffer is invalid.

6.2.6.7 FlexCAN_Ip_MainFunctionRead()

```
void FlexCAN_Ip_MainFunctionRead (
    uint8 instance,
    uint8 mb_idx )
```

Check a receive event.

This will check if message is received and read the message buffer or RxFifo.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	Index of the message buffer

6.2.6.8 FlexCAN_Ip_MainFunctionWrite()

```
void FlexCAN_Ip_MainFunctionWrite (
    uint8 instance,
    uint8 mb_idx )
```

Check a Transmission event.

This function will check a specific MB have been sent of FlexCAN module and if was sent will reset the status of Mb and clear the status flag.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	message buffer number

6.2.6.9 FlexCAN_Ip_GetTransferStatus()

```
Flexcan_Ip_StatusType FlexCAN_Ip_GetTransferStatus (
    uint8 instance,
    uint8 mb_idx )
```

Returns whether the previous FlexCAN transfer has finished.

When performing an async transfer, call this function to ascertain the state of the current transfer: in progress (or busy) or complete (success).

Parameters

in	<i>instance</i>	The FlexCAN instance number.
in	<i>mb_idx</i>	The index of the message buffer.

Returns

FLEXCAN_STATUS_SUCCESS if successful; FLEXCAN_STATUS_BUSY if a resource is busy; FLEXCAN_STATUS_ERROR in case of a DMA error transfer;

6.2.6.10 FlexCAN_Ip_GetErrorStatus()

```
uint32 FlexCAN_Ip_GetErrorStatus (
    uint8 instance )
```

Get Error Status of FlexCAN.

This function will return the error status from ESR1 register. For exact mapping of errors please refer to RM(Reference Manual) on FLEXCAN ESR1 register description.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

The errors flags stored by register ESR1

6.2.6.11 FlexCAN_Ip_GetControllerTxErrorCounter()

```
uint8 FlexCAN_Ip_GetControllerTxErrorCounter (
    uint8 instance )
```

Get Transmit error counter of FlexCAN.

This function will return the Transmit error counter for all errors detected in transmitted messages from ECR register. For exact mapping of errors please refer to RM(Reference Manual) on FLEXCAN ECR register description.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

The Transmit error counter stored by TXERRCNT in register ECR

6.2.6.12 FlexCAN_Ip_GetControllerRxErrorCounter()

```
uint8 FlexCAN_Ip_GetControllerRxErrorCounter (
    uint8 instance )
```

Get Receive error counter of FlexCAN.

This function will return the Receive error counter for all errors detected in transmitted messages from ECR register. For exact mapping of errors please refer to RM(Reference Manual) on FLEXCAN ECR register description.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

The Receive error counter stored by RXERRCNT in register ECR

6.2.6.13 FlexCAN_Ip_ClearErrorStatus()

```
void FlexCAN_Ip_ClearErrorStatus (
    uint8 instance,
    uint32 error )
```

Clear Error Status of FlexCAN.

This function will clear the error status from ESR1 register. For exact mapping of errors please refer to RM(↔ Reference Manual) on FLEXCAN ESR1 register description.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>error</i>	errors flags to be cleared

6.2.6.14 FlexCAN_Ip_GetBitrate()

```
boolean FlexCAN_Ip_GetBitrate (
    uint8 instance,
    Flexcan_Ip_TimeSegmentType * bitrate )
```

Gets the FlexCAN bit rate for standard frames or the arbitration phase of FD frames.

Note

In case is used Enhanced Time Segments the PhaseSeg1 is the sum of PropSeg +1+ PhaseSeg1, and the PropSeg will be 0;

Parameters

in	<i>instance</i>	A FlexCAN instance number
out	<i>bitrate</i>	A pointer to a variable for returning the FlexCAN bit rate settings

Returns

true if Enhanced Time segments are used; false if Enhanced Time segments are not used.

6.2.6.15 FlexCAN_Ip_GetBuffStatusFlag()

```
boolean FlexCAN_Ip_GetBuffStatusFlag (
    uint8 instance,
    uint8 msgBuffIdx )
```

Get the Status of Message Buffer.

This function will return True if Message Buffer Flag is Set or False if is not set.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>msgBuffIdx</i>	Index of the message buffer

Returns

True if is set False if is clear.

6.2.6.16 FlexCAN_Ip_ClearBuffStatusFlag()

```
void FlexCAN_Ip_ClearBuffStatusFlag (
    uint8 instance,
    uint8 msgBuffIdx )
```

Clear Message Buffer Status Flag.

This function will clear the status of the message buffer

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>msgBuffIdx</i>	Index of the message buffer

6.2.6.17 FlexCAN_Ip_AbortTransfer()

```
Flexcan_Ip_StatusType FlexCAN_Ip_AbortTransfer (
    uint8 u8Instance,
    uint8 mb_idx )
```

Ends a non-blocking FlexCAN transfer early.

Full description

Parameters

in	<i>u8Instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	The index of the message buffer

Returns

FLEXCAN_STATUS_SUCCESS if successful; FLEXCAN_STATUS_NO_TRANSFER_IN_PROGRESS if no transfer was running, FLEXCAN_STATUS_TIMEOUT if fail to configure in configured timeout value.

6.2.6.18 FlexCAN_Ip_GetListenOnlyMode()

```
boolean FlexCAN_Ip_GetListenOnlyMode (
    uint8 instance )
```

Get the Status of Listen Only Mode.

This function will return True if Listen Only Mode is Enable or False if is Disable.

Parameters

in	<i>instance</i>	A FlexCAN instance number
----	-----------------	---------------------------

Returns

True if Listen Only Mode is Enable False if Listen Only Mode is Disable.

6.2.6.19 FlexCAN_Ip_ReceiveBlocking()

```
Flexcan_Ip_StatusType FlexCAN_Ip_ReceiveBlocking (
    uint8 instance,
```

```
uint8 mb_idx,
Flexcan_Ip_MsgBuffType * data,
boolean isPolling,
uint32 u32TimeoutMs )
```

Receives a CAN frame using the specified message buffer, in a blocking manner.

This function receives a CAN frame using a configured message buffer. The function blocks until either a frame was received, or the specified timeout expired.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	Index of the message buffer
out	<i>data</i>	The FlexCAN receive message buffer data.
in	<i>isPolling</i>	If the message will be send using pooling(true) or interrupt(false).
in	<i>timeout_ms</i>	A timeout for the transfer in milliseconds.

Returns

FLEXCAN_STATUS_SUCCESS if successfull operation;
 FLEXCAN_STATUS_BUFF_OUT_OF_RANGE if the index of a message buffer is invalid;
 FLEXCAN_STATUS_BUSY if the message buffer is used for other operation.
 FLEXCAN_STATUS_TIMEOUT if the timeout is reached.

6.2.6.20 FlexCAN_Ip_ConfigRemoteResponseMb()

```
Flexcan_Ip_StatusType FlexCAN_Ip_ConfigRemoteResponseMb (
    uint8 instance,
    uint8 mb_idx,
    const Flexcan_Ip_DataInfoType * tx_info,
    uint32 msg_id,
    const uint8 * mb_data )
```

Configures a transmit message buffer for remote frame response.

@Note In case of using this function as polling mode the user should call FlexCAN_Ip_MainFunctionWrite to check it. @Note In case of enable the option Remote Request Store by setting corresponding bit for FLEXCAN_IP_REM_STORE_U32 in the ctrlOptions structure member of the Flexcan platform configuration data from FlexCAN_Ip_Init function, will disable Automatic Response Request feature, in this case is not allowed use of this function.

Parameters

in	<i>instance</i>	A FlexCAN instance number
in	<i>mb_idx</i>	Index of the message buffer
in	<i>tx_info</i>	Data info
in	<i>msg_id</i>	ID of the message to transmit
in	<i>mb_data</i>	Bytes of the FlexCAN message

Returns

FLEXCAN_STATUS_SUCCESS if successful; FLEXCAN_STATUS_BUFF_OUT_OF_RANGE if the index of the message buffer is invalid

6.2.6.21 FlexCAN_Ip_ManualBusOffRecovery()

```
Flexcan_Ip_StatusType FlexCAN_Ip_ManualBusOffRecovery (
    uint8 Instance )
```

Recover manually from bus-off if possible.

Note

This function should be used when bus-off auto recovery disabled and controller is in START mode. The function FlexCAN_Ip_GetErrorStatus can be used to check FLTCONF bits to check if bus-off state is exited or not.

Parameters

in	<i>Instance</i>	The FlexCAN instance number.
----	-----------------	------------------------------

Returns

FLEXCAN_STATUS_SUCCESS if successful operation or the controller wasn't in bus-off.
FLEXCAN_STATUS_ERROR if bus-off auto recovery enabled.
FLEXCAN_STATUS_TIMEOUT if the timeout is reached.

6.2.6.22 FlexCAN_SetRxFifoFilter()

```
void FlexCAN_SetRxFifoFilter (
    FLEXCAN_Type * base,
    Flexcan_Ip_RxFifoIdElementFormatType idFormat,
    const Flexcan_Ip_IdTableType * idFilterTable )
```

Sets the FlexCAN Rx FIFO fields.

Parameters

<i>base</i>	The FlexCAN base address
<i>idFormat</i>	The format of the Rx FIFO ID Filter Table Elements
<i>idFilterTable</i>	The ID filter table elements which contain RTR bit, IDE bit, and RX message ID.

6.2.6.23 FlexCAN_ReadRxFifo()

```
void FlexCAN_ReadRxFifo (
    const FLEXCAN_Type * base,
    Flexcan_Ip_MsgBuffType * rxFifo )
```

Gets the FlexCAN Rx FIFO data.

Parameters

<i>base</i>	The FlexCAN base address
<i>rxFifo</i>	The FlexCAN receive FIFO data

6.2.6.24 FlexCAN_ExitFreezeMode()

```
Flexcan_Ip_StatusType FlexCAN_ExitFreezeMode (
    FLEXCAN_Type * base )
```

Un freezes the FlexCAN module.

Parameters

<i>base</i>	The FlexCAN base address
-------------	--------------------------

Returns

FLEXCAN_STATUS_SUCCESS successfully exit from freeze FLEXCAN_STATUS_TIMEOUT fail to exit from freeze

6.2.6.25 FlexCAN_LockRxMsgBuff()

```
void FlexCAN_LockRxMsgBuff (
    const FLEXCAN_Type * base,
    uint32 msgBuffIdx )
```

Locks the FlexCAN Rx message buffer.

Parameters

<i>base</i>	The FlexCAN base address
<i>msgBuffIdx</i>	Index of the message buffer

6.2.6.26 FlexCAN_SetMsgBuffIntCmd()

```
Flexcan_Ip_StatusType FlexCAN_SetMsgBuffIntCmd (
    FLEXCAN_Type * base,
    uint8 u8Instance,
    uint32 msgBuffIdx,
    boolean enable,
    boolean bIsIntActive )
```

Enables/Disables the FlexCAN Message Buffer interrupt.

Parameters

<i>base</i>	The FlexCAN base address
<i>msgBuffIdx</i>	Index of the message buffer
<i>enable</i>	choose enable or disable

Returns

FLEXCAN_STATUS_SUCCESS if successful; FLEXCAN_STATUS_CAN_BUFF_OUT_OF_RANGE if the index of the message buffer is invalid

6.2.6.27 FlexCAN_DisableInterrupts()

```
void FlexCAN_DisableInterrupts (
    FLEXCAN_Type * pBase )
```

Disable all interrupts.

Parameters

<i>pBase</i>	The FlexCAN base address
--------------	--------------------------

6.2.6.28 FlexCAN_EnableInterrupts()

```
void FlexCAN_EnableInterrupts (
    FLEXCAN_Type * pBase,
    uint8 u8Instance )
```

Enable all interrupts configured.

Parameters

<i>pBase</i>	The FlexCAN base address
<i>u8Instance</i>	A FlexCAN instance number

6.2.6.29 FlexCAN_SetTxMsgBuff()

```
void FlexCAN_SetTxMsgBuff (
    volatile uint32 *const pMbAddr,
    const Flexcan_Ip_MsbuffCodeStatusType * cs,
    uint32 msgId,
    const uint8 * msgData,
    const boolean isRemote )
```

Sets the FlexCAN message buffer fields for transmitting.

Parameters

<i>pMbAddr</i>	The Message buffer address
<i>cs</i>	CODE/status values (TX)
<i>msgId</i>	ID of the message to transmit
<i>msgData</i>	Bytes of the FlexCAN message
<i>isRemote</i>	Will set RTR remote Flag

Returns

FLEXCAN_STATUS_SUCCESS if successful; FLEXCAN_STATUS_CAN_BUFF_OUT_OF_RANGE if the index of the message buffer is invalid

6.2.6.30 FlexCAN_EnableRxFifo()

```
Flexcan_Ip_StatusType FlexCAN_EnableRxFifo (
    FLEXCAN_Type * base,
    uint32 numOfFilters )
```

Enables the Rx FIFO.

Parameters

<i>base</i>	The FlexCAN base address
<i>numOfFilters</i>	The number of Rx FIFO filters

Returns

The status of the operation

Return values

<i>FLEXCAN_STATUS_SUCCESS</i>	RxFIFO was successfully enabled
<i>FLEXCAN_STATUS_ERROR</i>	RxFIFO could not be enabled (e.g. the FD feature was enabled, and these two features are not compatible)

6.2.6.31 FlexCAN_SetMaxMsgBuffNum()

```
Flexcan_Ip_StatusType FlexCAN_SetMaxMsgBuffNum (
    FLEXCAN_Type * base,
    uint32 maxMsgBuffNum )
```

Sets the maximum number of Message Buffers.

Parameters

<i>base</i>	The FlexCAN base address
<i>maxMsgBuffNum</i>	Maximum number of message buffers

Returns

FLEXCAN_STATUS_SUCCESS if successful; FLEXCAN_STATUS_BUFF_OUT_OF_RANGE if the index of the message buffer is invalid

6.2.6.32 FlexCAN_SetRxMsgBuff()

```
void FlexCAN_SetRxMsgBuff (
    const FLEXCAN_Type * base,
    uint32 msgBuffIdx,
    const Flexcan_Ip_MsbuffCodeStatusType * cs,
    uint32 msgId )
```

Sets the FlexCAN message buffer fields for receiving.

Parameters

<i>base</i>	The FlexCAN base address
<i>msgBuffIdx</i>	Index of the message buffer
<i>cs</i>	CODE/status values (RX)
<i>msgId</i>	ID of the message to receive

Returns

FLEXCAN_STATUS_SUCCESS if successful; FLEXCAN_STATUS_BUFF_OUT_OF_RANGE if the index of the message buffer is invalid

6.2.6.33 FlexCAN_GetMsgBuffTimestamp()

```
uint32 FlexCAN_GetMsgBuffTimestamp (
    const FLEXCAN_Type * base,
    uint32 msgBuffIdx )
```

Gets the message buffer timestamp value.

Parameters

<i>base</i>	The FlexCAN base address
<i>msgBuffIdx</i>	Index of the message buffer

Returns

value of timestamp for selected message buffer.

6.2.6.34 FlexCAN_GetMsgBuff()

```
void FlexCAN_GetMsgBuff (
    const FLEXCAN_Type * base,
    uint32 msgBuffIdx,
    Flexcan_Ip_MsgBuffType * msgBuff )
```

Gets the FlexCAN message buffer fields.

Parameters

<i>base</i>	The FlexCAN base address
<i>msgBuffIdx</i>	Index of the message buffer
<i>msgBuff</i>	The fields of the message buffer

6.2.6.35 FlexCAN_GetMbPayloadSize()

```
uint8 FlexCAN_GetMbPayloadSize (
```

```
const FLEXCAN_Type * base,  
uint32 maxMsgBuffNum )
```

Gets the payload size of the MBs.

Parameters

<i>base</i>	The FlexCAN base address
-------------	--------------------------

Returns

The payload size in bytes

6.2.6.36 FlexCAN_Init()

```
Flexcan_Ip_StatusType FlexCAN_Init (  
    FLEXCAN_Type * base )
```

Initializes the FlexCAN controller.

Parameters

<i>base</i>	The FlexCAN base address
-------------	--------------------------

6.2.6.37 FlexCAN_GetMaxMbNum()

```
uint32 FlexCAN_GetMaxMbNum (  
    const FLEXCAN_Type * base )
```

Get The Max no of MBs allowed on CAN instance.

Parameters

<i>base</i>	The FlexCAN base address
-------------	--------------------------

Returns

The Max No of MBs on the CAN instance;

6.2.6.38 FlexCAN_SetOperationMode()

```
void FlexCAN_SetOperationMode (
    FLEXCAN_Type * base,
    Flexcan_Ip_ModesType mode )
```

Set operation mode.

Parameters

<i>base</i>	The FlexCAN base address
<i>mode</i>	Set an operation mode

6.2.6.39 FlexCAN_GetMsgBuffRegion()

```
volatile uint32* FlexCAN_GetMsgBuffRegion (
    const FLEXCAN_Type * base,
    uint32 msgBuffIdx )
```

Sets the FlexCAN message buffer fields for transmitting.

Parameters

<i>base</i>	The FlexCAN base address
<i>msgBuffIdx</i>	Index of the message buffer

Returns

Pointer to the beginning of the MBs space address

6.2.6.40 FlexCAN_ConfigCtrlOptions()

```
void FlexCAN_ConfigCtrlOptions (
    FLEXCAN_Type * pBase,
    uint32 u32Options )
```

configure controller depending on options.

Parameters

<i>pBase</i>	The FlexCAN base address.
<i>u32Options</i>	Controller Options.

6.2.6.41 FlexCAN_ResetImaskBuff()

```
void FlexCAN_ResetImaskBuff (
    uint8 Instance )
```

Reset Imask Buffers.

Parameters

<i>Instance</i>	The FlexCAN instance
-----------------	----------------------

6.2.6.42 FlexCAN_Ip_Init_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_Init_Privileged (
    uint8 Flexcan_Ip_u8Instance,
    Flexcan_Ip_StateType * Flexcan_Ip_pState,
    const Flexcan_Ip_ConfigType * Flexcan_Ip_pData )
```

Initializes the FlexCAN peripheral.

6.2.6.43 FlexCAN_Ip_ConfigRxFifo_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_ConfigRxFifo_Privileged (
    uint8 instance,
    Flexcan_Ip_RxFifoIdElementFormatType id_format,
    const Flexcan_Ip_IdTableType * id_filter_table )
```

FlexCAN Rx Legacy FIFO filter configuration.

6.2.6.44 FlexCAN_Ip_MainFunctionBusOff_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_MainFunctionBusOff_Privileged (
    uint8 instance )
```

Check a bus-off event.

6.2.6.45 FlexCAN_Ip_GetStopMode_Privileged()

```
boolean FlexCAN_Ip_GetStopMode_Privileged (
    uint8 instance )
```

Check if the FlexCAN instance is STOPPED.

6.2.6.46 FlexCAN_Ip_GetStartMode_Privileged()

```
boolean FlexCAN_Ip_GetStartMode_Privileged (
    uint8 instance )
```

Check if the FlexCAN instance is STARTED.

6.2.6.47 FlexCAN_Ip_EnterFreezeMode_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_EnterFreezeMode_Privileged (
    uint8 instance )
```

Enter FlexCAN Module in Freeze Mode.

6.2.6.48 FlexCAN_Ip_ExitFreezeMode_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_ExitFreezeMode_Privileged (
    uint8 instance )
```

Exit FlexCAN Module from Freeze Mode.

6.2.6.49 FlexCAN_Ip_SetRx Fifo Global Mask_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_SetRx Fifo Global Mask_Privileged (
    uint8 instance,
    uint32 mask )
```

Set Rx Fifo Global Mask.

6.2.6.50 FlexCAN_Ip_Deinit_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_Deinit_Privileged (
    uint8 instance )
```

DeInitialize the FlexCAN instance driver.

6.2.6.51 FlexCAN_Ip_SetStartMode_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_SetStartMode_Privileged (
    uint8 instance )
```

Set the FlexCAN instance in START mode.

6.2.6.52 FlexCAN_Ip_SetStopMode_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_SetStopMode_Privileged (
    uint8 instance )
```

Set the FlexCAN instance in STOP mode.

6.2.6.53 FlexCAN_Ip_SetRxMaskType_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_SetRxMaskType_Privileged (
    uint8 instance,
    Flexcan_Ip_RxMaskType type )
```

Set RX masking type.

6.2.6.54 FlexCAN_Ip_SetBitrate_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_SetBitrate_Privileged (
    uint8 instance,
    const Flexcan_Ip_TimeSegmentType * bitrate,
    boolean enhExt )
```

Sets the FlexCAN bit rate for standard frames or the arbitration phase of FD frames.

6.2.6.55 FlexCAN_Ip_EnableInterrupts_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_EnableInterrupts_Privileged (
    uint8 u8Instance )
```

Enable all mb interrupts configured.

6.2.6.56 FlexCAN_Ip_DisableInterrupts_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_DisableInterrupts_Privileged (
    uint8 u8Instance )
```

Disable all mb interrupts configured.

6.2.6.57 FlexCAN_Ip_SetErrorInt_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_SetErrorInt_Privileged (
    uint8 u8Instance,
    Flexcan_Ip_ErrorIntType type,
    boolean enable )
```

Enable\Disable Error or BusOff Interrupt.

6.2.6.58 FlexCAN_Ip_SetListenOnlyMode_Privileged()

```
Flexcan_Ip_StatusType FlexCAN_Ip_SetListenOnlyMode_Privileged (
    uint8 instance,
    const boolean enable )
```

Set FlexCAN Listen Only.

6.3 Controller Area Network with Flexible Data Rate (FlexCAN)

The S32 RTD provides a Peripheral Driver for the FlexCAN module of S32 devices.

6.3.0.1 Hardware background

The FlexCAN module is a communication controller implementing the CAN protocol according to the ISO 11898-1 standard and CAN 2.0 B protocol specifications. The FlexCAN module is a full implementation of the CAN protocol specification, the CAN with Flexible Data rate (CAN FD) protocol and the CAN 2.0 version B protocol, which supports both standard and extended message frames and long payloads up to 64 bytes transferred at faster rates up to 8 Mbps. The message buffers are stored in an embedded RAM dedicated to the FlexCAN module.

The FlexCAN module includes these distinctive features:

- Full implementation of the CAN with Flexible Data Rate (CAN FD) protocol specification and CAN protocol specification, Version 2.0 B (see the `FEATURE_CAN_HAS_FD` define for the availability of this feature on each platform)
 - Standard data frames
 - Extended data frames
 - Zero to sixty four bytes data length
 - Programmable bit rate (see the chip-specific FlexCAN information for the specific maximum bit rate configuration)
 - Content-related addressing
- Compliant with the ISO 11898-1 standard
- Flexible mailboxes configurable to store 0 to 8, 16, 32 or 64 bytes data length (payloads longer than 8 bytes are available only for some platforms, see the `FEATURE_CAN_HAS_FD` define)
- Each mailbox configurable as receive or transmit, all supporting standard and extended messages
- Individual Rx Mask registers per mailbox
- Transmission abort capability
- Flexible message buffers (MBs) configurable as Rx or Tx (see the `FEATURE_CAN_MAX_MB_NUM` define for the specific maximum number of message buffers configurable on each platform) define for the availability of this feature on each platform)
- RAM not used by reception or transmission structures can be used as general purpose RAM space
- Listen-Only mode capability
- Programmable Loop-Back mode supporting self-test operation
- Maskable interrupts
- Short latency time due to an arbitration scheme for high-priority messages
- Transceiver Delay Compensation feature when transmitting CAN FD messages at faster data rates (see the `FEATURE_CAN_HAS_FD` define for the availability of this feature on each platform)

- Remote request frames may be handled automatically or by software
- CAN bit time settings and configuration bits can only be written in Freeze mode
- SYNCH bit available in Error in Status 1 register to inform that the module is synchronous with CAN bus
- CRC status for transmitted message
- Rx FIFO Global Mask register
- Selectable priority between mailboxes and Rx FIFO during matching process
- Powerful Rx FIFO ID filtering, capable of matching incoming IDs against either 128 extended, 256 standard, or 512 partial (8 bit) IDs, with up to 32 individual masking capability
- 100% backward compatibility with previous FlexCAN version
- Supports detection and correction of errors in memory read accesses. Errors in one bit can be corrected and errors in 2 bits can be detected but not corrected (this feature might not be available on some platforms, see chip-specific FlexCAN information for details)
- Disable Detection and Correction of Memory Errors Feature for devices that supports it. This feature can cause Freeze Mode of CAN interface. (see `FEATURE_CAN_HAS_MEM_ERR_DET` define availability of the feature in module)
- Identifier Acceptance Filter Hit Indicator (IDHIT) register for received frames in RxFIFO
- Time stamp based on 32-bit free running timer (see `FEATURE_CAN_HAS_HR_TIMER` define availability of the feature in module)

6.4 FlexCAN_driver

6.4.0.1 How to use the FlexCAN driver in your application

In order to be able to use the FlexCAN in your application, the first thing to do is initializing it with the desired configuration. This is done by calling the **FLEXCAN_DRV_Init** function. One of the arguments passed to this function is the configuration which will be used for the FlexCAN module, specified by the **Flexcan_Ip_ConfigType** structure.

The **Flexcan_Ip_ConfigType** structure allows you to configure the following:

- the number of message buffers needed;
- the number of Rx FIFO ID filters needed;
- enable/disable the Rx FIFO feature;
- the operation mode, which can be one of the following:
 - normal mode;
 - listen-only mode;
 - loopback mode;
 - freeze mode;
 - disable mode;
- Control Options like use of different features support like ISO-FD, EDGE_FILTER, AUTO_BussOffRecovery, Protocol_Exception.
- the payload size of the message buffers:
 - 8 bytes;
 - 16 bytes (only available with the FD feature enabled);
 - 32 bytes (only available with the FD feature enabled);
 - 64 bytes (only available with the FD feature enabled);
- enable/disable the Flexible Data-rate feature;
- The use of extended bit time segments format from CBT register, instead of CTRL1 register
- Enable of BitRate Switch support for FD frames
- the bitrate used for standard frames or for the arbitration phase of FD frames;
- the bitrate used for the data phase of FD frames;
- the Rx FIFO transfer type, which can be one of the following:
 - using interrupts;
 - using DMA, only on supported platforms;
- the DMA channel number to be used for DMA transfers, only on supported platforms;

- the number of words to transfer for each Enhanced data element, only available with the Enhanced and DMA feature enabled

The bitrate is represented by a **Flexcan_Ip_TimeSegmentType** structure, with the following fields:

- propagation segment;
- phase segment 1;
- phase segment 2;
- clock prescaler division factor;
- resync jump width.

Details about these fields can be found in the reference manual.

In order to use a mailbox for reception, it should be initialized using either **FLEXCAN_DRV_ConfigRxMb**, **FLEXCAN_DRV_ConfigRxFifo**.

After having the mailbox configured, you can start sending/receiving data using the specified mailbox, by calling one of the following functions:

- FLEXCAN_Ip_Send;
- FLEXCAN_Ip_SendBlocking;
- FLEXCAN_Ip_Receive;
- FLEXCAN_Ip_RxFifo;

6.4.0.1.1 FlexCAN Rx FIFO configuration The Rx FIFO is receive-only and 6-message deep. The user can read the received messages sequentially, in the order they were received, by repeatedly reading Message Buffer 0 (zero). The Rx FIFO ID filter table (configurable from 8 to 128 table elements) specifies filtering criteria for accepting frames into the FIFO. This table is represented through a structure of **Flexcan_Ip_IdTableType** type, which specifies if Remote Frames are accepted into the FIFO if they match the target ID, whether extended or standard frames are accepted into the FIFO if they match the target ID and the target ID.

```
/* ID Filter table */
const Flexcan_Ip_IdTableType filterTable[] = {
{
.isExtendedFrame = false,
.isRemoteFrame = false,
.id = 1U
},
...
};
FlexCAN_Ip_ConfigRxFifo(INST_CANCOM1, FLEXCAN_RX_FIFO_ID_FORMAT_A, filterTable);
```

The number of elements in the ID filter table is defined by the following formula:

- for format A: the number of Rx FIFO ID filters
- for format B: twice the number of Rx FIFO ID filters
- for format C: four times the number of Rx FIFO ID filters The user must provide the exact number of elements in order to avoid any misconfiguration.

Each element in the ID filter table specifies an ID to be used as acceptance criteria for the FIFO, as follows:

- for format A: In the standard frame format, bits 10 to 0 of the ID are used for frame identification. In the extended frame format, bits 28 to 0 are used.
- for format B: In the standard frame format, bits 10 to 0 of the ID are used for frame identification. In the extended frame format, only the 14 most significant bits (28 to 15) of the ID are compared to the 14 most significant bits (28 to 15) of the received ID.
- for format C: In both standard and extended frame formats, only the 8 most significant bits (7 to 0 for standard, 28 to 21 for extended) of the ID are compared to the 8 most significant bits (7 to 0 for standard, 28 to 21 for extended) of the received ID.

6.4.0.2 Important Notes

In order to use driver in interrupt mode the user should enable and register the driver Interrupts through Interrupt Controller Module;

6.4.0.3 Integration guideline

6.4.0.3.1 Compilation units The following files need to be compiled in the project:

```
${S32RTD_PATH}\Can_TS_T40D11M40I0R0\src\FlexCAN_Ip.c  
${S32RTD_PATH}\Can_TS_T40D11M40I0R0\src\FlexCAN_Ip_HwAccess.c  
${S32RTD_PATH}\Can_TS_T40D11M40I0R0\src\FlexCAN_Ip_Irq.c
```

6.4.0.3.2 Include path The following paths need to be added to the include path of the toolchain:

```
${S32RTD_PATH}\Can_TS_T40D11M40I0R0\include\
```

6.4.0.3.3 Preprocessor symbols No special symbols are required for this component

6.4.0.3.4 Dependencies

How to Reach Us:

Home Page:

nxp.com

Web Support:

nxp.com/support

Information in this document is provided solely to enable system and software implementers to use NXP products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document. NXP reserves the right to make changes without further notice to any products herein.

NXP makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does NXP assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in NXP data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. NXP does not convey any license under its patent rights nor the rights of others. NXP sells products pursuant to standard terms and conditions of sale, which can be found at the following address: nxp.com/SalesTermsandConditions.

NXP, the NXP logo, NXP SECURE CONNECTIONS FOR A SMARTER WORLD, COOLFLUX, EMBRACE, GREENCHIP, HITAG, I2C BUS, ICODE, JCOP, LIFE VIBES, MIFARE, MIFARE CLASSIC, MIFARE DESFire, MIFARE PLUS, MIFARE FLEX, MANTIS, MIFARE ULTRALIGHT, MIFARE4MOBILE, MIGLO, NTAG, ROADLINK, SMARTLX, SMARTMX, STARPLUG, TOPFET, TRENCHMOS, UCODE, Freescale, the Freescale logo, Altivec, C-5, CodeTEST, CodeWarrior, ColdFire, ColdFire+, C-Ware, the Energy Efficient Solutions logo, Kinetis, Layerscape, MagniV, mobileGT, PEG, PowerQUICC, Processor Expert, QorIQ, QorIQ Qonverge, Ready Play, SafeAssure, the SafeAssure logo, StarCore, Symphony, VortiQa, Vybrid, Airfast, BeeKit, BeeStack, CoreNet, Flexis, MXC, Platform in a Package, QUICC Engine, SMARTMOS, Tower, TurboLink, and UMEMS are trademarks of NXP B.V. All other product or service names are the property of their respective owners. ARM, AMBA, ARM Powered, Artisan, Cortex, Jazelle, Keil, SecurCore, Thumb, TrustZone, and Vision are registered trademarks of ARM Limited (or its subsidiaries) in the EU and/or elsewhere. ARM7, ARM9, ARM11, big.LITTLE, CoreLink, CoreSight, DesignStart, Mali, mbed, NEON, POP, Sensinode, Socrates, ULINK and Versatile are trademarks of ARM Limited (or its subsidiaries) in the EU and/or elsewhere. All rights reserved. Oracle and Java are registered trademarks of Oracle and/or its affiliates. The Power Architecture and Power.org word marks and the Power and Power.org logos and related marks are trademarks and service marks licensed by Power.org.

© 2022 NXP B.V.

