


Bill Recycle Module

Replacing the differentiation section module

- ▶ Replacing the differentiation section module
Refer to “Replacing the front module”

Replacing the rear module

- ▶ Replacing the rear module
 1. Separate the CON11, CON12 connector of motor cable TM002, TM003 cable.
 2. Separate the frame ground cable from the main frame.
 3. Remove the M4x8 screw (2ea) from the left and right of rear module and demount it in the upper direction.

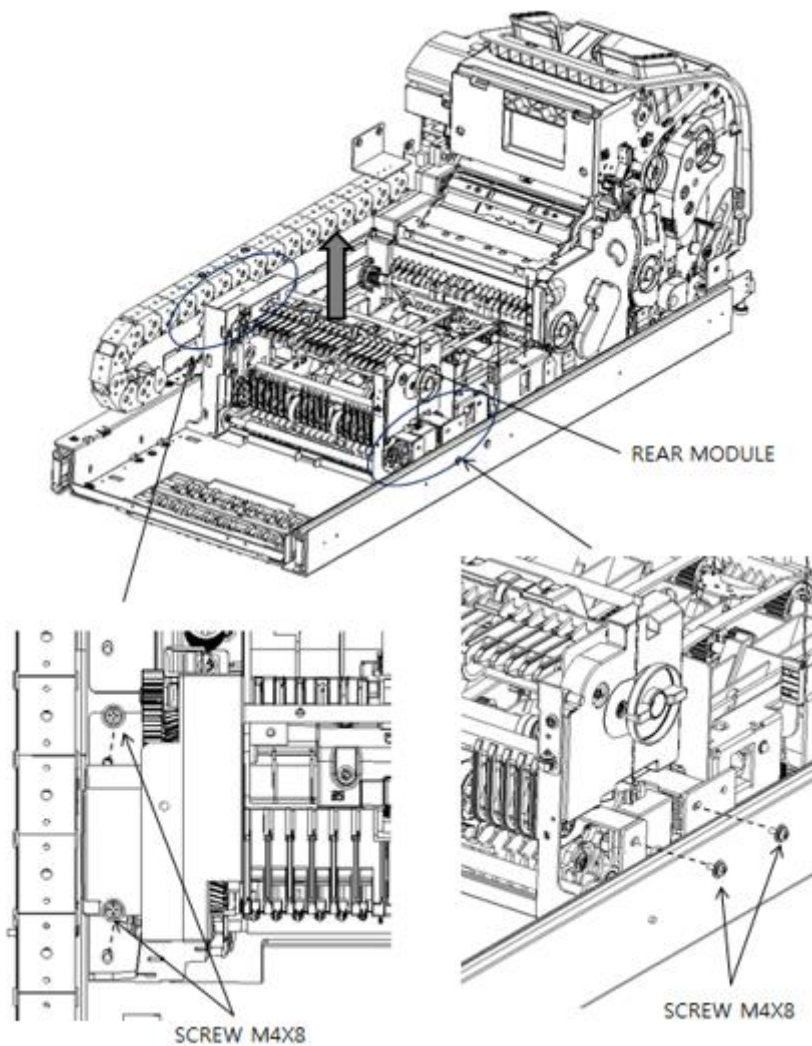

4. Use the reverse order of disassembling to assemble again.