


Bill Recycle Module

Replacing the BMD Module

1. Replacing the BMD RBU_BOARD Module.

- Open the system door and take out the BMD.
 - Disassemble a M3 screw (1) / M3 screw (2) (2ea) and separate the cover PCB.
 - Disassemble the M3 screws (3) (2ea) and separate the cover cable up.
 - Disassemble the M3 screws (4) (2ea) and separate the cover cable down.
 - Disassemble the M3 screws (7ea) fixing RBU_Board and separate the RBU board.
- Be careful for the disconnection / being stabbed of all cables when separating the cover kind.

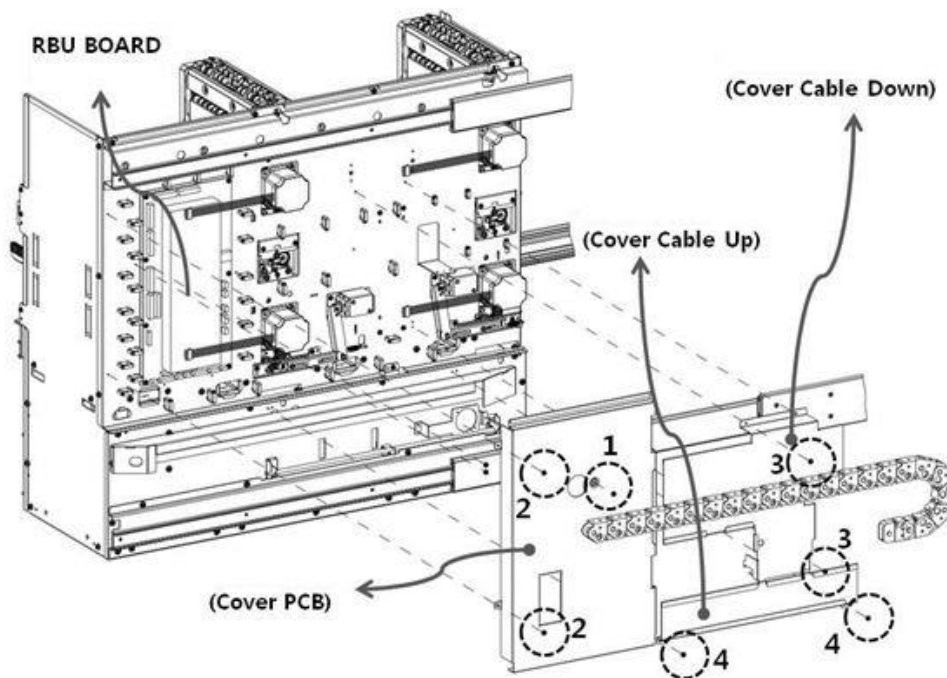

- Use the reverse order of disassembling to assemble again.