


Bill Recycle Module

Replacing the CSM Stack Module

- ▶ Replacing the CSM Stack Module
 1. Disassemble the CSM Separation Module. (Refer to “Replacing CSM Separation Module)
 2. Perform disassembling in the same method of CSM Module Replacement. (Refer to “Replacing CSM Module”)
 3. Use the reverse order of disassembling to assemble again.


Replacing Front Module

- ▶ Replacing Front Module
 1. Upper Assembly Drawing of BRM30

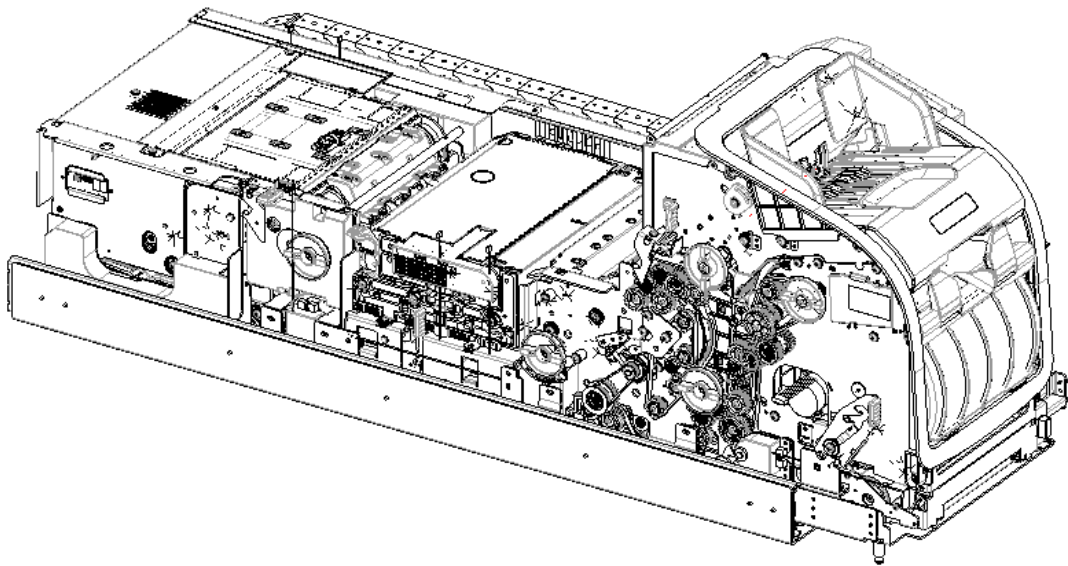


Bill Recycle Module

2. Disassemble the cover main board and remove the cable
- Press the CSM Module Lock in the direction of arrow.
 - Open the Module Lock and lift up the handle.

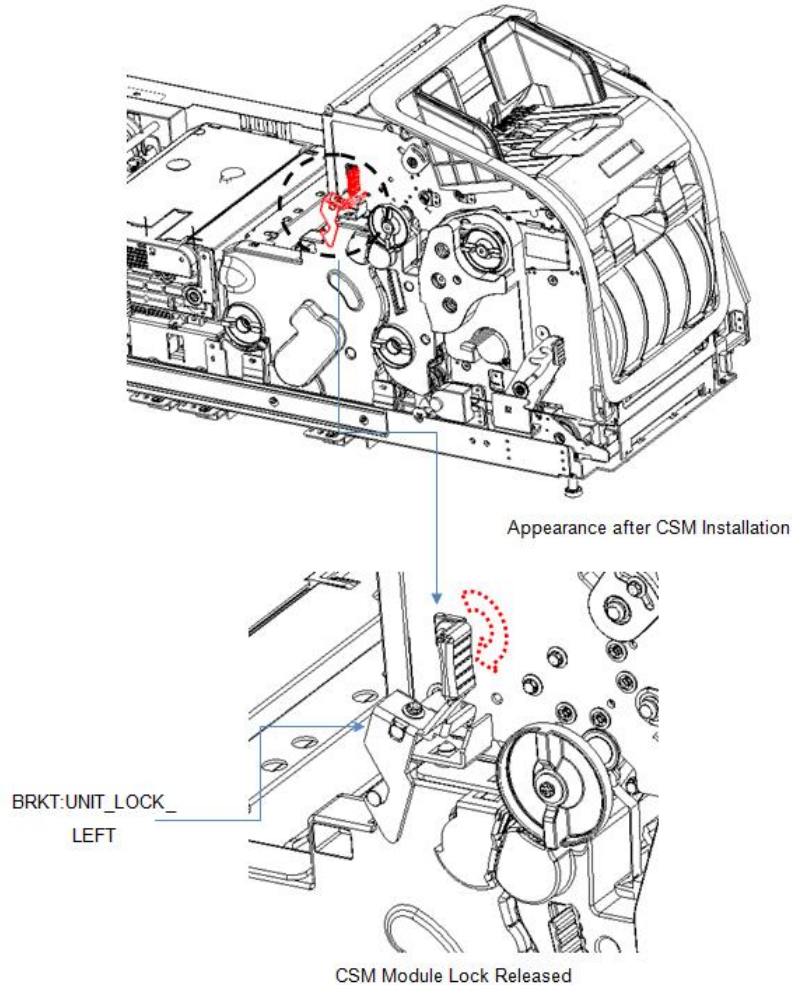


Bill Recycle Module

- Lift up the CSM Module
- Disassemble the Cover Main B/D and Bracket_Cable_Holder.

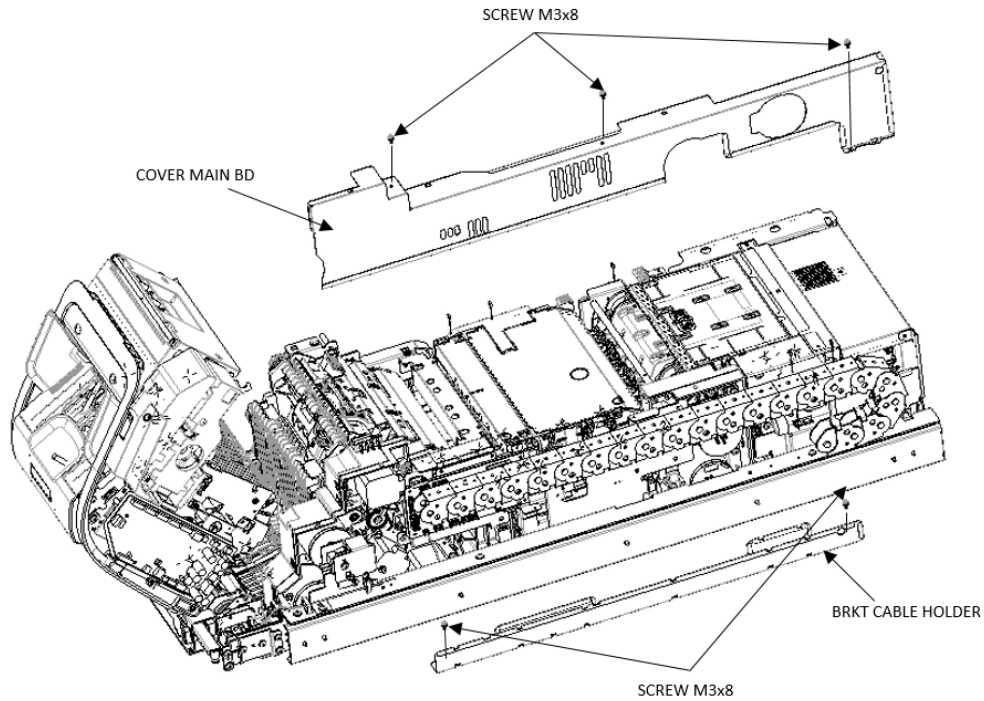


- Disassemble the BC (7000000396)

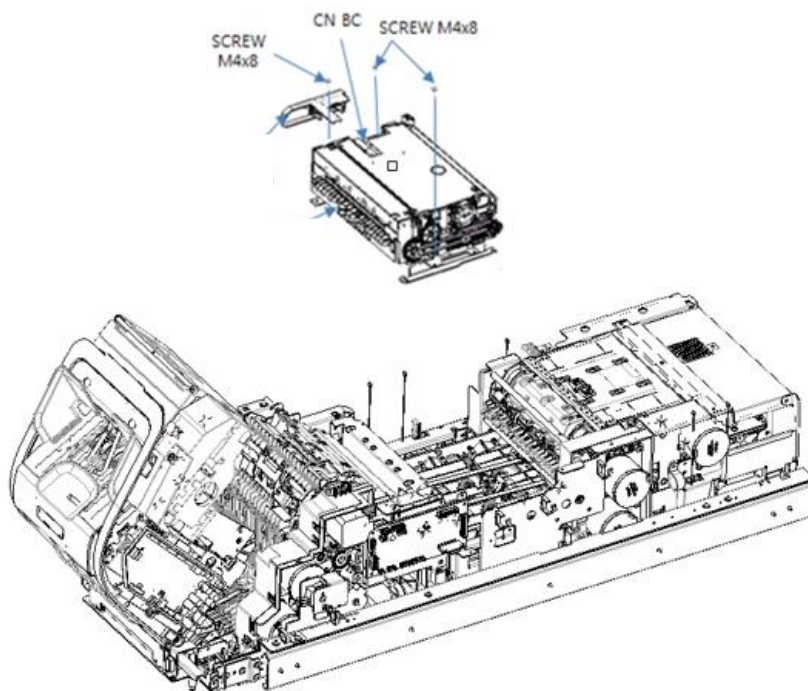


Bill Recycle Module

- Disassemble the connection cable.
- Connection Cable Number of Assy Front: TG0005, CON14B, FRT1, FRT2, CN26, CN33, CN25, CN16

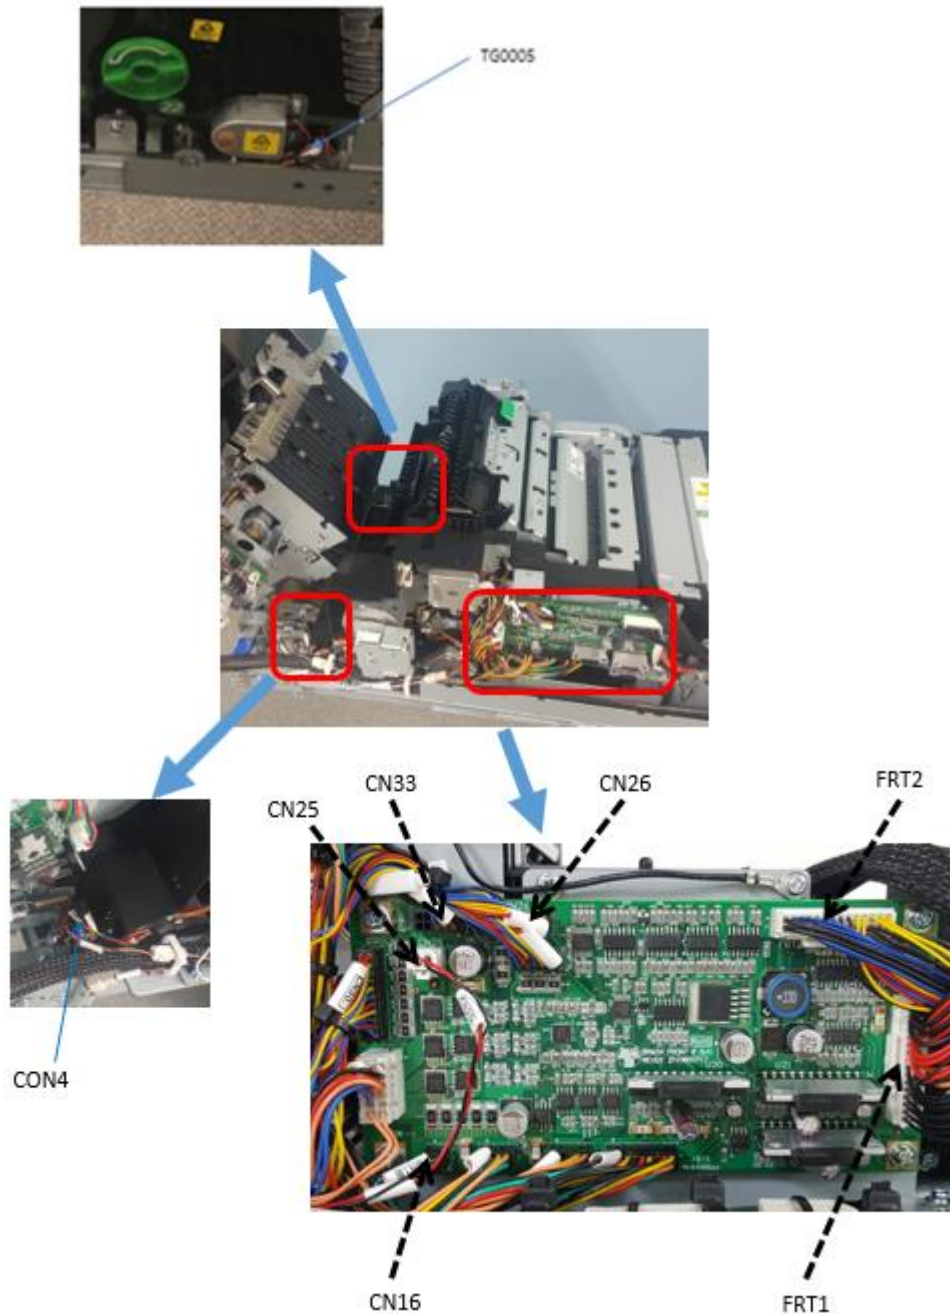

Bill Recycle Module

- Disassemble the Front Module.

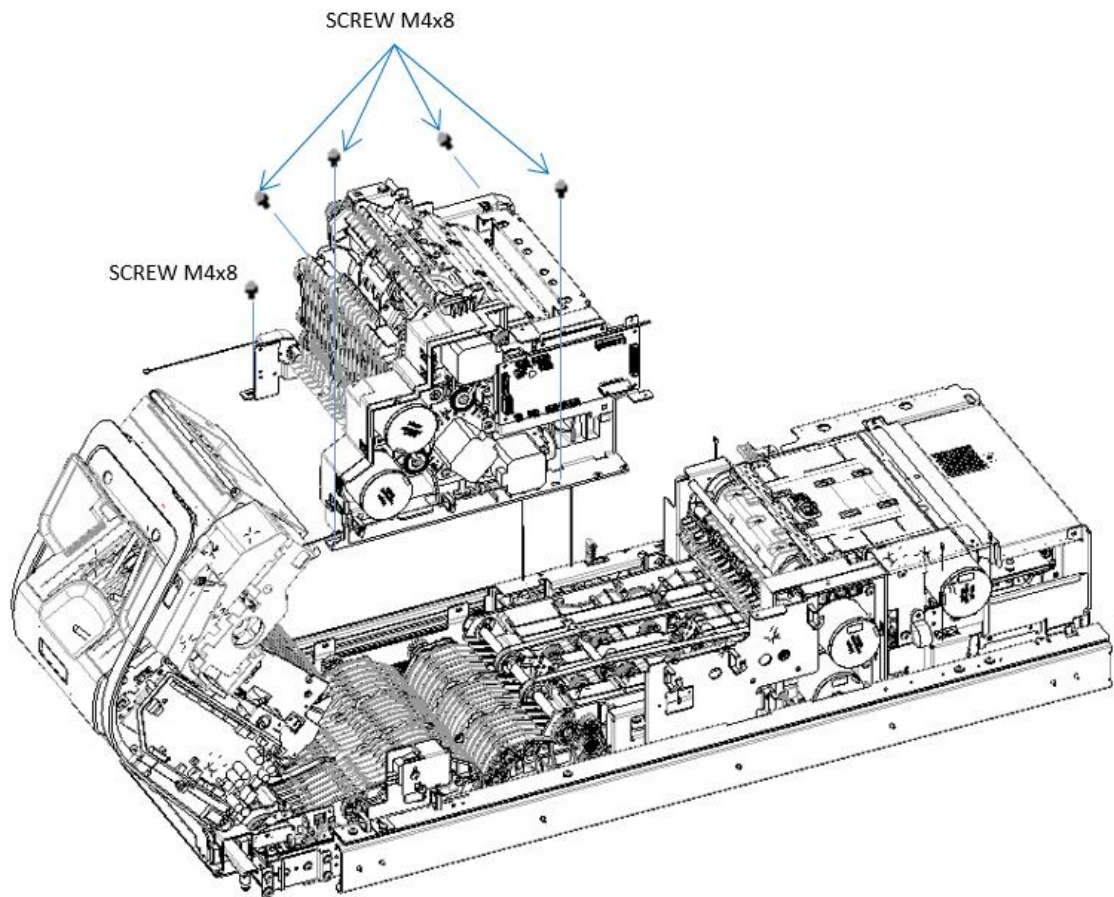

3. Use the reverse order of disassembling to assemble again.