

**Canon**

**EOS  
300**

**EOS  
REBEL  
2000**

## Accessories

These are some of the accessories available for the EOS 300 / EOS REBEL 2000 to make picture-taking easier and more enjoyable.



**Speedlite 220EX**

High-performance, compact flash unit compatible with the E-TTL autoflash system. A balanced exposure between the flash illumination and existing light is obtained automatically in all picture-taking modes. Also, High-speed synchro, lets you take beautiful portraits allowing fill-flash outdoors under a wide variety of conditions.



**Eyeiece Extender EP-EX15**

This extends the eyepiece by 15 mm from the camera body. It relieves your nose from pressing against the camera back.



**Remote Switch RS-60E3**

This is a 60cm cable release for macro shots and long exposures (bulb) when the camera is mounted on a tripod.



**Battery Pack BP-200**

External battery pack which enables the camera to be powered by widely-available size-AA batteries instead of lithium batteries. It also has a vertical-grip shutter button.





# EOS 300 / EOS REBEL 2000 System Accessories

## Speedlites



### Speedlite 220EX

High-performance, compact flash unit. Maximum Guide No. 22 (at ISO 100 in meters).



### Speedlite 380EX

Compact, zoom flash unit with high flash output. Maximum Guide No. 38 (at ISO 100 in meters).



### Macro Ring Lite ML-3

Flash unit dedicated to close-up flash photography with macro lenses. Guide No. 11 (at ISO 100 in meters). A mini lamp for focusing is built-in.

## Viewfinder Accessories



### Eyepiece Extender EP-EX15

Extends the eyepiece by 15 mm.





### Angle Finder B

Convenient for low-angle shots.



### Magnifier S

This magnifies the center of the image area by 2.5 times to make focusing easier.

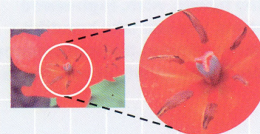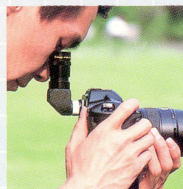

### Viewfinder image with Magnifier S

Since the center of the image is magnified, focusing close-up subjects is easier.

## Power Packs and Grips



### Battery Pack BP-200

External battery pack which uses size-AA batteries. A vertical-grip shutter button is also provided. The battery contacts are covered automatically when the battery pack is detached from the camera.



### Hand Strap E1

Lets you securely hold the camera with one hand when using the Battery Pack BP-200.

## Remote Control Accessories



### Remote Switch RS-60E3

Dedicated remote switch to prevent camera shake. For use with a tripod-mounted camera.

