




Haynes
shows you how

BMW 3-Series 320i & 320xi (12-14), 325i, 325xi, 330i & 330xi (06) & 328i & 328xi (07-14) Haynes Online Manual

8 Mass Air Flow/Intake Air Temperature (MAF/IAT) sensor - replacement

1 The MAF/IAT sensor is located on top of the air duct/charge air cooler, near the air filter housing (see illustration) .

8.1 Carefully remove the mounting screws and the MAF sensor from the air filter duct – 3.0L engine models shown

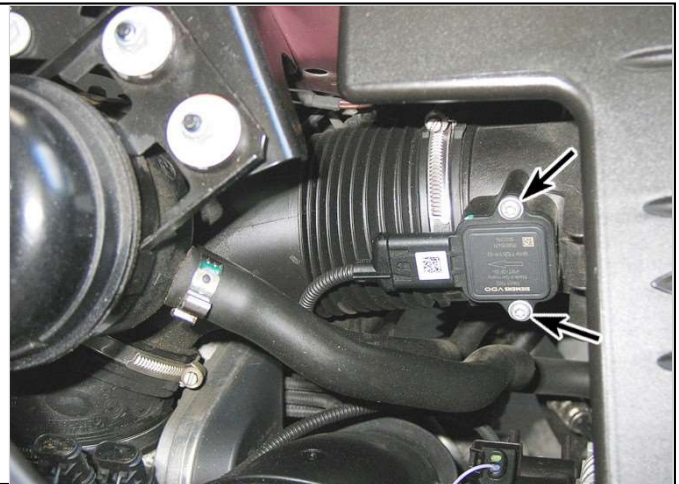

2 Disconnect the electrical connector from the MAF/IAT sensor.

3 Remove the screws securing the sensor and remove it slowly from the air duct. **Caution:** *Handle the sensor carefully, as it is fragile* .

4 Installation is the reverse of removal. Inspect the O-ring seals and replace if necessary.

© 2024 Haynes Manuals, Inc. Contact us