




Haynes
shows you how

BMW 3-Series (92-98) & Z3 (96-98) Haynes Online Manual

2 Manual transmission oil level check

- 1 To improve access, jack up the vehicle and support on axle stands. Ensure that the vehicle is level.
- 2 Unscrew the transmission oil level/filler plug from the right-hand side of the transmission casing (see illustration) .

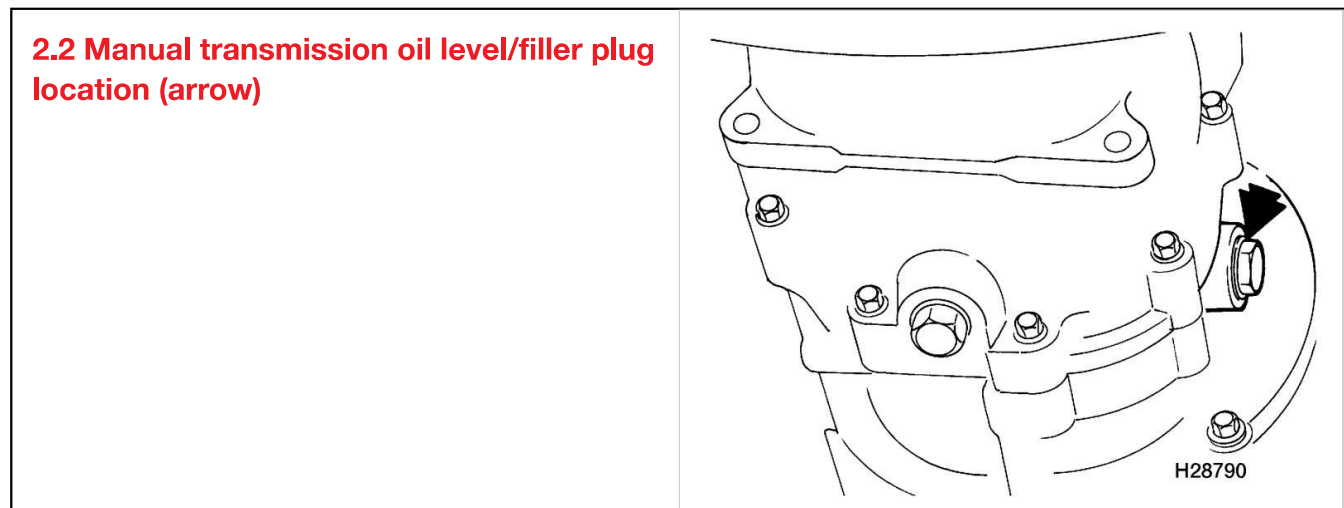

- 3 The oil level should be up to the bottom of the level/filler plug hole.
- 4 If necessary, top-up the oil level, using the specified type of fluid (see Chapter1) until the oil overflows from the filler/level plug hole.
- 5 Wipe away any spilled oil, then install the filler/level plug and tighten to the specified torque.
- 6 Lower the vehicle to the ground.

© 2024 Haynes Manuals, Inc. Contact us