

Colour codes

WS	White	RT	Red
BL	Blue	GN	Green
GR	Grey	VI	Violet
GE	Yellow	SW	Black
BR	Brown	OR	Orange

* From 03/2007
** From 09/2007


Key to items

- | | | |
|-----------------------------------|----------------------------------------|-------------------------------|
| 1 Battery | 11 Stop-start button | 21 RH front wheel module |
| 2 B+ terminal luggage compartment | 12 Electric steering lock | 22 LH rear wheel module |
| 3 Jump start terminal point | 13 Stop light switch | 23 RH rear wheel module |
| 4 Starter motor | 14 Clutch switch control unit | 24 LH front wheel transmitter |
| 5 Alternator | 15 Automatic transmission control unit | 25 RH front wheel transmitter |
| 6 Battery sensor | 16 Gear indicator lighting | 26 LH rear wheel transmitter |
| 7 Luggage compartment fusebox | 17 Dynamic stability control unit | 27 RH rear wheel transmitter |
| 8 Engine management control unit | 18 Passenger compartment fusebox | 28 Diagnostic connector |
| 9 Car access system | 19 Tyre pressure control unit | |
| 10 Slide-in compartment | 20 LH front wheel module | |


Diagram 5

H47040


Typical starting & charging

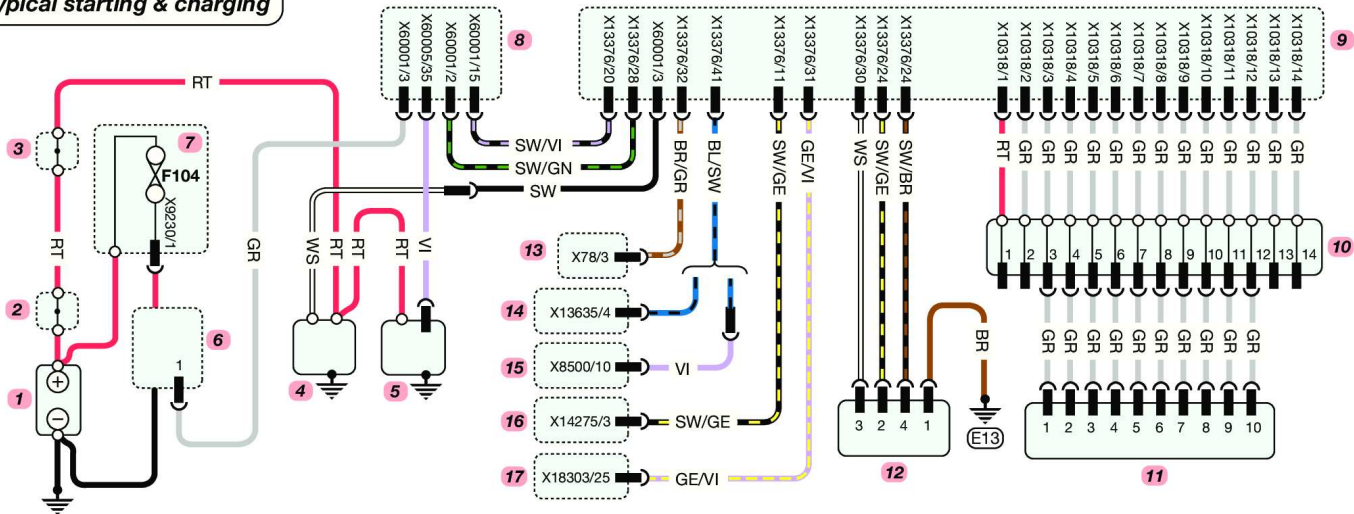

Typical tyre pressure control

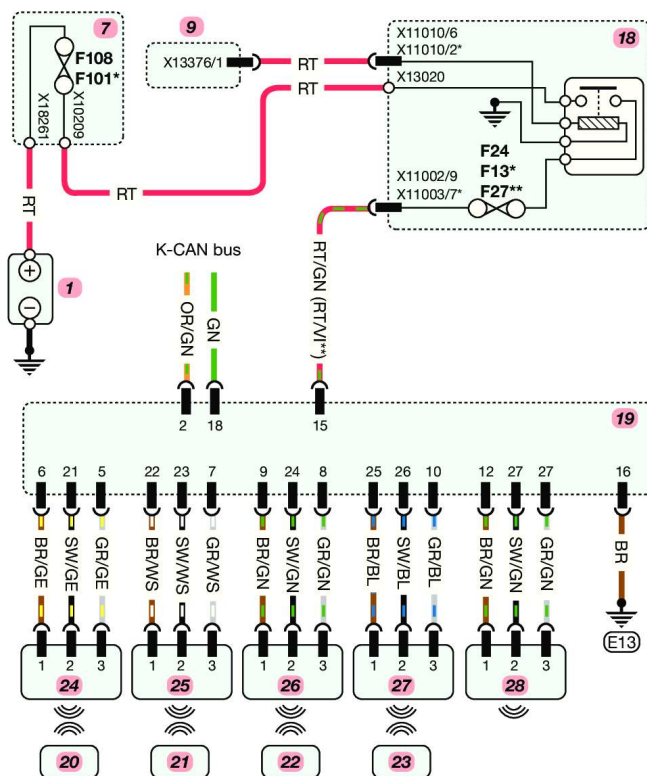

**Typical diagnostic socket (OBDII)
(up to 03/2007)**

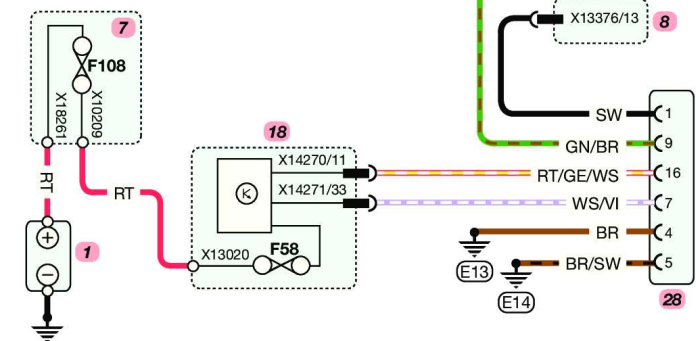

Typical diagnostic socket (OBDII)
(from 03/2007)

