



Haynes
shows you how


BMW 3-Series 320i & 320xi (12-14), 325i, 325xi, 330i & 330xi (06) & 328i & 328xi (07-14) Haynes Online Manual

18 Cabin air filter replacement (every 15,000 miles or 12 months)

1 The cabin air filter is located in the cowl on the engine side of the firewall.


2 To replace the filter, remove the bolts and remove the upper section of the filter housing (see illustration) .

18.2 Remove the mounting bolts and the cabin air filter cover

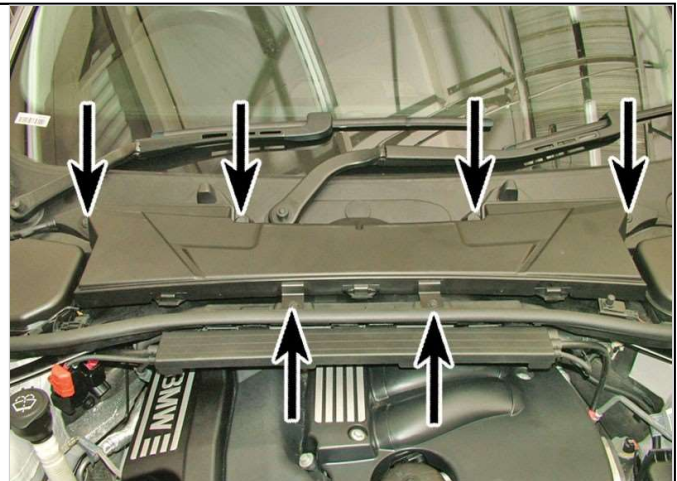

3 Release the clips at the front edge and remove the filter element (see illustration) .

18.3 Release the clips and lift out the cabin air filter element

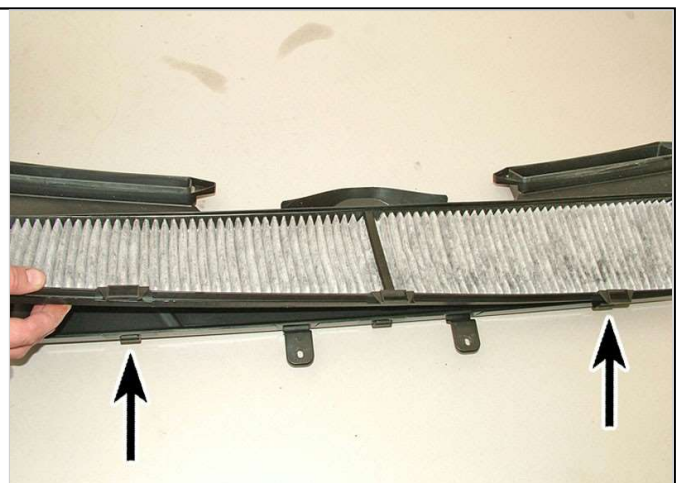

4 Install the new filter element into the housing, ensuring it's correctly seated.

5 Install the upper housing and tighten the retaining bolts.

© 2024 Haynes Manuals, Inc. Contact us